


Hisense Air Fryer

Quick Start Guide

WHAT'S IN THE BOX

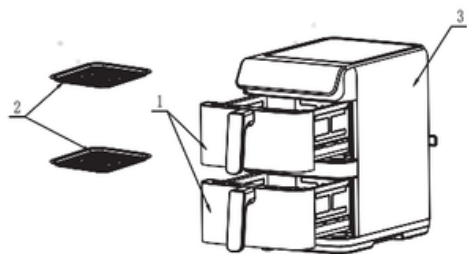

Double Stack Air Fryer

1. Frying Pot
2. Frying Rack
3. Air Fryer Unit

PREPARING FOR THE FIRST USE

Before first use:

1. Remove all packaging materials and stickers
2. Thoroughly clean the fry basket and pot with hot water, dish soap, and a non-abrasive sponge
3. Wipe the interior and exterior with a damp cloth

Preparation for use:

1. Place on a stable, heat-resistant surface
2. Insert the fry basket into the pot (do not add oil or liquids)
3. Keep the top ventilated; do not place items to block the air outlet

CONTROL PANEL INSTRUCTION



Power Key

1. Standby Activation: After installing the baskets/pots, the power light illuminates. Press the **Power** key to enter standby mode (display shows "1/2"). Select a pot (1 or 2) and press the **Start/Stop** key to start the default "Fries" cooking program.
2. Shutdown: Long-press the **Power** key during cooking to turn off the device and stop the motor.
3. Pause/Resume: Short-press the **Start/Stop** key during cooking to pause or resume.



Power



Start/Stop

Upper/Lower Pot Keys (Key 1/Key 2)

1. Pot Selection: Press the corresponding pot key (**1 or 2**). All icons light up, with default temperature (200°C) and time (15 minutes) flashing alternately, and the selected pot's digital tube blinking.
2. Cancel Settings: Press the pot key again to cancel settings and return to standby.



Upper Pot



Lower Pot

Time/Temperature Control Keys

1. Temperature: Press to adjust $\pm 5^{\circ}\text{C}$ per tap (long-press for rapid adjustment), range: 40°C–200°C (40°C for **Dehydrated** mode).
2. Time: Press to adjust ± 1 minute per tap (long-press for rapid adjustment), range: 1–60 minutes (1–6 hours for **Dehydrated** mode).




Up



Down

Flip/Shake Reminder Key

1. Activation: Select either **Pot 1** or **Pot 2**, then press the **Reminder** key. Note: This function is unavailable for cooking times shorter than 5 minutes.
2. Alert Mechanism: When half the set cooking time elapses (e.g., 7.5 minutes into a 15-minute cook), the air fryer emits 5 beeps to remind you to flip or shake the ingredients for even cooking.

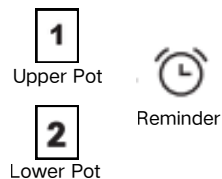

Recipe Icons

1. One-touch access to 7 preset cooking programs, each optimized with default temperature and time settings: Fries, Steak, Grill, Shrimps, Pizza, Dehydrated, Nuts.
2. Simply tap the corresponding icon to start the program.


Synchronized Cooking End Key

1. Core Function: Ensures both pots finish cooking at the same time, even if they're set with different recipes or durations.
2. Step-by-Step Operation:
 - a. Select desired recipes for both pots (each with its own time/temperature).
 - b. Press the **Sync** key—the indicator light will flash to confirm activation.
 - c. Start cooking. The pot with the shorter time will display "HOLD" until the remaining time of the longer pot matches, after which both pots cook simultaneously.
3. Cancellation: Pausing either pot at any point will disable the sync function, and the indicator light will turn off.



Basket Removal Alert

1. During Cooking: If the basket is pulled out, the display shows "OPEN", and both the heater and motor stop immediately. Cooking resumes automatically once the basket is reinserted properly.
2. In Standby Mode: Removing the basket triggers "OPEN" on the display, and the pots cannot be activated until the basket is replaced.

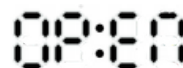


Dual Pot Pause/Stop

1. Pause: Press the **Start/Stop** key once to pause both pots—all icons will flash to indicate standby. Press **Start/Stop** again to resume cooking. If left inactive for 5 minutes, the air fryer automatically enters standby mode.
2. Stop: Long-press the **Power** key for 2 seconds to stop both pots. The display will show "OFF", and the device will return to standby mode after a prompt beep.



Single Pot Shutdown

1. To stop only one pot (while keeping the other active):
2. Press the corresponding **Pot 1** or **Pot 2** key to select the pot.
3. Long-press the **Power** key for 2 seconds. The selected pot will display "OFF" and stop working, while the device switches to single-pot mode.

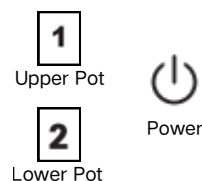

Thank you for choosing Hisense!