

订单号	KV25-0532X
名称	DYT-15说明书
尺寸	400*141.5mm
材质	90g 铜版纸
印刷颜色	单色印刷
表面处理	/
备注	印刷要清晰,风琴折, Emerson logo第一面朝上



正面
size:100*141.5mm

INDOOR FLYING INSECT FAN TRAP

OWNER'S MANUAL

ITM8110

Visit our website at www.emersonradio.com

To obtain a manual in Spanish, please download it on our website
<https://www.emersonradio.com/documents/>

UNAUTHORIZED MODIFICATIONS TO THIS DEVICE COULD VOID MANUFACTURER'S WARRANTY.

EN

FOR HOUSEHOLD USE ONLY
READ AND SAVE THESE INSTRUCTIONS

1 WARNING

Carefully read all instructions before using this appliance and retain them for future reference. If this appliance is passed to a third party, then these instructions must be included.

IMPORTANT SAFETY INSTRUCTIONS

WARNING When using electric appliances, basic precautions should always be followed, including the following:

1. Read all the instructions before using the appliance.
2. To reduce the risk of injury, close supervision is necessary when an appliance is used near children. THE APPLIANCE MUST BE KEPT OUT OF THE REACH OF CHILDREN AND PETS.
3. Do not contact moving parts.
4. ONLY use attachments recommended or sold by the manufacturer.
5. DO NOT use outdoors. This appliance is NOT designed for outdoor use.
6. To disconnect, turn all controls to the off ("O") position, then remove plug from outlet.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
9. To reduce the risk of electrical shock, do not put appliance and adapter in water or other liquid. Do not place or store appliance where it can fall or be pulled into a tub or sink.
10. Pay attention to all warnings and cautionary markings on the appliance.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. DO NOT insert fingers or any other foreign objects into the appliance.
13. Do not attempt to repair or modify this appliance yourself. Such actions may invalidate the warranty and could lead to product damage or personal injury.
14. DO NOT clean this appliance with water spray.
15. DO NOT expose this appliance to rain or moisture.
16. DO NOT use near heat sources, steam, or corrosive gases.

1

EN

17. Always plug the appliance directly into a wall outlet or receptacle. Never use it with an extension cord or power strip.
18. Unplug from outlet when not in use and before servicing, cleaning or replacing the Glue Card.
19. ONLY plug into accessible wall outlets where the appliance is well-ventilated and cannot contact bed covering or other materials.
20. Collected insects in the unit may pose a fire risk; replace the Glue Card as needed.
21. To reduce the risk of fire, electric shock, or injury, DO NOT use unauthorized replacement parts, including 3D-printed components.
22. Avoid touching the glue when inserting or replacing the Glue Card.
23. Avoid looking directly at the light source under insect trap mode for extended periods.

SAVE THESE INSTRUCTIONS

2

EN

2 PACKING LIST

Insect trap device x 1 Glue card x 3 Adapter x 1 Owner's manual x 1

3 DEVICE OVERVIEW

1. ON/OFF button
2. Mesh Basket
3. Glue Card
4. UV LED
5. Cord

3

EN

4 DIRECTIONS FOR USE

The insect trap works by using a continuous, attractive light to draw insects. Once they are enticed, they are caught by a highly effective sticky paper, preventing their escape.

INSECT TRAP MODE

1. To open the device, turn the lower section clockwise.
2. Remove the adhesive liner from the Glue Card.
3. Insert the Glue Card into the mesh basket (glue side up).
4. Close the device.
5. Connect the device to the adapter provided. Plug in the device to an indoor outlet.
6. Press the ON/OFF button. To optimize the performance, leave the unit power on continuously.
7. Replace the Glue Card when it is full of bugs, dust or debris. It is advisable to check every 2 weeks. Keep the device plugged in continuously. Once full, unplug it and replace it with a fresh glue trap.

4

EN

FOR BEST RESULTS

- Place the device in areas where flying insects are prevalent.
- Consider deploying multiple devices within a single room.
- Replace the Glue Card when it is full of bugs, dust or debris. It is advisable to check every 2 weeks.
- Make sure the glue side of the glue card is facing up.
- To optimize the performance, leave the unit powered on continuously.
- For best catch results, it is recommended to keep the unit away from competing light sources.
- The device works better at night or in dark environments.
- The device traps common household flying insects
- The level of attraction for various kinds of flying insects to light:

Level of attraction to light (for reference)

Moths	↑ High ↓ Low
Gnats	
Flies	
Fruit Flies	
Mosquitos	

5 CLEANING AND MAINTENANCE INSTRUCTIONS

CLEANING

- Gently clean the exterior with a clean, soft and slightly damp cloth to remove dust and dirt.
- Never use corrosive detergents, chemicals, wire brushes, abrasive scourers, metal or sharp utensils to clean the appliance.
- Do not immerse the appliance in water or allow liquid to contact the main unit or internal components. Wipe the appliance dry after cleaning and allow the appliance dry completely before use.

STORAGE AND MAINTENANCE

- Store the appliance in a cool and dry location when not in use. Keep away from children and pets.
- Store properly to prevent dust and dirt build-up.

5

EN

6 FCC CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

7 SPECIFICATIONS

Model	ITM8110
Ratings	5 VDC 0.4A
Power Consumption	2 W
Unit Dimensions	4.76"Wx4.76"Dx8.46"H /121x121x215 mm (Incl. glue cards)
Unit Weight	0.98 lb / 445 g (Incl. glue cards)

8 LIMITED WARRANTY

Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of ninety (90) days from date of original purchase in, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility provided the manufacturing defect is verified along with the date of purchase:

- Repair service for ninety (90) days from date of original purchase at no charge for labor and parts.

To Receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020. Have your Model number, Serial Number and dated Proof of Purchase with you when you call.

In the event the product must be returned to Emerson:

- Pack the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive their same unit back.
- Enclose your check or money order payable to Emerson Radio in the amount of \$10 to cover return shipping and handling costs.
- Enclose a note with your name, address, phone number, Return Authorization number and brief reason

6

EN

for returning the unit.

- Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase).
- Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a tracking number).

NOTE: This warranty does not cover:

- (a) Damage to equipment not properly connected to the product.
- (b) Cost incurred in the shipping of the product to and from Emerson's Return Facility.
- (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions (including cleaning instructions) provided with the product.
- (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- (e) Products not purchased in the United States.
- (f) Damage to product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE. THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU. 10-90-1402

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number: ITM8110
Serial Number:

To register your product online please visit <http://www.emersonradio.com/service/product-registration/>

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE
PLEASE CALL:
1-800-898-9020
FOR CUSTOMER SERVICE, PLEASE E-MAIL TO:
inrmt@emersonradio.com

OR WRITE TO:
Emerson Radio Corp.
Consumer Affairs Dept.
959 Route 48 East
Suite 210, 2nd Floor
Parsippany, NJ 07054

CALIFORNIA RESIDENTS ONLY-
WARNING: Cancer and Reproductive Harm - www.p65warnings.ca.gov

Emerson Part No. ITM8110-20250711-00 7 Printed in China