

User Guide

Table of Contents

1. Security	6
2. Getting Started	8
2.1. Batteries	8
2.1.1. Installing and uninstalling the battery	8
2.1.2. Charging the battery	8
2.1.3. Using the battery	9
2.1.4. Battery level indicator	9
2.2. Connecting to the Network.....	9
2.2.1. SIM card	9
2.2.2. Installing and uninstalling the SIM card	9
2.2.3. Unlock the SIM card	10
2.2.4. Connecting to the network.....	10
2.3. Standby screen and Icons	10
2.4. Key function.....	11
2.5. Text Input Method.....	11
3. Call Function	11
3.1. Phone power on/off.....	11
3.2. Dial	11
3.2.1. Direct dial	11
3.2.2. Dial from the Phonebook	12
3.2.3. Unanswered call.....	12
3.3. Answer call	12
3.4. During a phone call	12
4. Main Menu	13
5. Contacts.....	13
5.1. Contact list.....	13
5.2. Contact.....	14
6. Messaging.....	14
6.1.1 Write SMS.....	14
6.1.2 Write MMS	14
6.2. Inbox.....	15
6.3. Outbox	15

6.4.	Drafts	15
6.5.	Sent box	15
6.6.	Templates	15
6.7.	Broadcast message	15
6.8.	Voice mail server	15
6.9.	Settings	15
6.10.	Message capacity	16
7.	Call Logs	16
8.	Settings	16
8.1.	Call settings	16
8.2.	Phone settings	17
8.3.	Display	17
8.4.	Security	17
8.5.	Connections	17
9.	Audio	18
10.	Multimedia.....	18
10.1.	DV.....	18
10.2.	Video.....	18
10.3.	FM Radio	18
10.4.	Sound Recorder.....	19
10.5.	Image.....	19
11.	Games.....	19
12.	Profiles	19
13.	My files	19
14.	Application	20
14.1.	Calendar	20
14.2.	Calculator	20
14.3.	Clock	20
	Alarm	20
	World clock.....	20
	Stopwatch	20
	Timer	20
14.4.	Unit Conversion	21
14.5.	Bluetooth	21

15. Camera 21
Camera settings include:..... 21

16. Internet 21

17. Use mode..... 21

18. FAQ 22
Error Message 22
Care and maintenance 23



General Information

Thank you for selecting our 4G Feature Phone. This user guide will provide you with the general information and operation instructions.

This color screen phone is designed for the 2G/3G/4G network environment with Dual SIM Technology. Enjoy good call connecting quality and high speed data access over the network.

The package includes a chargeable battery, a charger and other accessories. Please refer to the Accessory section for details.

Note:

- Use only accessories approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.
- If the contents and displays described in this user guide do not match the actual operation of the phone set, please use the display of the actual phone set. We reserved the rights to change the mechanisms of the phone without notice.
- This user guide is subject to change without notice.

In this guide, different typing format indicates different operation:

Operation	Description	Example
Display	Normal font	0-9
Key	Bold with outline	0-9

1. Security

Emergency call

In any country, you can dial 112 (or other emergency call number) for emergency help.

Note:

- Based on the nature of cellular networking, the success of the emergency call cannot be guaranteed.

For your safety

- Switch off the phone in hospitals and aircraft. Obey any restrictions. Wireless devices can affect the medical treatment and cause interference in aircraft.
- Some medical devices such as hearing aids and pacemaker may be sensitive to external radio frequency emissions. Consult the device manufacturers or your doctor before using the phone around the medical devices.
- Pay special attention to the ring tone volume and vibration settings if you have a heart problem.
- In areas with potentially explosive atmosphere, such as gas stations, fuel or chemical transfer or storage facilities, obey all signs and instructions.
- Your phone will emit radio frequency even in the standby mode. Turn off your phone when so instructed.
- Always obey all the local laws and regulations. Do not use your phone while driving. Use Hands-free operation, if available, and give full attention to driving and to the road. Pull off the road and park before making or answering a call if driving conditions so require.
- If your phone is lost or stolen, notify your service provider immediately to stop the SIM card from being used.
- When you contact your service provider, they will need your IMEI number. It is printed on the back of your phone set (you can find it when you remove your battery), or call *#06# to look up your IMEI number. Copy this number and save it for future need.
- To prevent your phone from misuse, lock your SIM card or phone, and change passwords when necessary.
- Do not remove the battery without turning off the phone. Failure to follow this instruction may result in data loss.
- When you leave your vehicle, take the phone with you or place it in the glove compartment to avoid theft.
- Keep the phone, battery or charger out of reach of children.

Notices for your phone use

- Do not keep the phone near magcards and other object with magnetism. The phone's magnetism may clear the information stored on floppy disk, pre-paid phone card and credit card.
- Use the phone near land phone, television, radio and office automatic devices may cause interference and affect the function of the mobile phone.
- Keep the phone dry, all kinds of liquid can erode the electronic circuit.
- Keep the phone away from extreme temperatures.
- Keep the phone away from hot places where the temperature may exceed 60°C, such as the dash board, windowsill, near fire or a lighted cigarette.
- Do not paint the phone.
- Do not drop the phone or violently crush or shake the phone.
- Do not disassemble or modify your phone. This can damage the phone, cause leakage and break the internal circuit.

- Use only damp cloth or non-static cloth to clean your phone. Do not use alcohol, thinner, benzene or other chemicals or abrasive cleaner to clean your phone.
- The phone will become warm under normal use and while in battery charging.
- Do not leave the phone with battery uninstalled or with the battery empty for a long period of time. This may cause data loss.
- The metal parts of the phone may irritate your skin depending on your health condition.
- Do not put the phone in the back pocket. Sitting on it may damage the phone. Do not put the phone on the bottom of a bag. You may crush it.
- When the vibrate mode is on, place the phone carefully to avoid it being dropped from a height or being moved to a heat source due to the vibrating.
- Use only the stylus approved by the phone manufacturer. Do not press the touch screen with needles, pen point or other sharp objects, otherwise it can damage the LCD and violate the terms of the warranty.
- Handle the stylus with care. Place it back to its proper storing place when not in use. Keep it away from children.

Notice for batteries use

- Do not disassemble or modify your batteries, otherwise it can cause leakage, over heat, fire or explosion.
- Disposing battery in a fire can cause fire or explosion. Old batteries should be returned to your dealer or be disposed according to local regulations. Do not dispose the battery as household waste.
- Do not short the circuit of the battery with wires, needles or other metal objects, or store the batteries with necklace or other metal objects, otherwise it can cause leakage, over heat, fire or explosion.
- There is a risk of blinding if the liquid of the batteries gets into your eyes. In case of this, do not rub your eyes, you should rinse your eyes well with fresh water and go to the hospital immediately.
- If the leaked liquid of the battery touches the skin, it can burn the skin. Please wash your skin with fresh water and go to the hospital immediately.
- Never put the battery in your mouth. The liquid of the battery can be toxic.
- Stop using the battery when you find it became hotter, and change color and shape abnormally during use, charging or storing.
- Keep the batteries dry.
- Do not use or store batteries near fire, heater and other place with high temperature, otherwise it can result in leakage, over heat, fire or explosion. Store the battery in a cool and ventilated place without direct sun light.
- Do not charge the battery for more than 24 hours.
- The battery can be charged and discharged for hundreds of times but it will eventually wear out. The battery life is shortened with each charging.
- When replacing the battery, use only the batteries approved by the phone manufacturer. Damage resulting from using un-authorized batteries will not be covered by warranty.

Traffic safety

- Do not use your phone when driving a vehicle. Give full attention to driving and to the road. Provided there is an emergency, stop your vehicle in a safe place and then use your phone. Please obey all the local traffic laws and regulations.
- Normally the electronic systems in the vehicle should not be affected by the RF (Radio Frequency) signals from your wireless phone. However if you suspect any damage is resulting from the RF of your phone, contact your car dealer. Stop using your phone in the car until a qualified technician clears the problem.

- Only qualified technician can install your phone in your vehicle.
- If your vehicle is equipped with an air bag, do not place the phone above the air bag, or in the air bag deployment area. If in-vehicle wireless equipment is improperly stored or installed and the air bag inflates, serious injury could result.
- Turn off your phone when in the gas station or any place where using wireless equipment is prohibited. Do not place or transport your phone with inflammables or explosives, the internal sparkle may cause fire.

Airplane safety

- Power off your phone before boarding, the use of a wireless phone in an airplane will be dangerous to the operation of the airplane and disrupt the wireless telephone network and maybe illegal. Failure to observe these instructions may lead to law suit or denial of GSM cellular network service to the offender.
- Should there be an emergency situation, contact crew member.

2. Getting Started

2.1. Batteries

The battery is included in the package. It is not fully charged out of factory but it may still be able to power on your phone. Please completely use up the power of the battery and then charge it for at least 12 hours with your phone turned off. Your battery will reach its optimal state after three cycles of charge and discharge.

2.1.1. Installing and uninstalling the battery

To install the battery, remove the back cover from the phone by pressing firmly on the cover and slide it down. Align the golden contacts of the battery to the contacts in the phone, and then gently snap down the battery into place. Re-assemble the back cover.

To uninstall the battery, flip the battery out from the bottom of the battery.

2.1.2. Charging the battery

Plug the charger into the socket on the side of your phone. Connect the charger to an AC wall socket. The blinking of the battery level icon indicates the battery is being charged. When the blinking stops, it indicates the charging is finished.

During charging, the phone and charger will feel warm to the touch. This is normal.

Warning:

- The operating ambient temperature of the charger is 0°C-50°C. Do not use it when the temperature exceeds this limit.
- Use only chargers approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.

2.1.3. Using the battery

The waiting time and calling time capacities specified by the phone manufacturer are obtained under the ideal operating environment. The actual values will vary with the network condition, operating environment and operation method.

Please comply with the local regulations of disposing the battery (such as recycling). Do not dispose it as household waste.

2.1.4. Battery level indicator

When the phone is on, the battery level indicator is located at the upper right corner of the screen.

2.2. Connecting to the Network

2.2.1. SIM card

Please insert available Subscriber Identity Module (SIM) card into your phone before using it. SIM card is supplied by your network carrier.

All the information related to network connection is recorded on the SIM card, so are the contact information such as names, phone numbers and SMSs that you set to store on the SIM. You can take out the SIM card from the phone and insert it into another GSM phone to use it. Most new phones will recognize the SIM card automatically.

Do not touch the golden contacts of the SIM card and place it away from electricity and magnetism to avoid damage. You will not be able to use the phone if the SIM card is damaged.

Note:

- Before inserting and taking out the SIM card, always make sure that the phone is switched off and disconnected from any external power source; otherwise both the phone and the SIM card may be damaged.

2.2.2. Installing and uninstalling the SIM card

The SIM card usually comes attached to a special card. The metal contacts of SIM card is easily damaged by scratching, so take it out carefully before assembling it into the phone.

Switch off the phone, remove the back cover, battery and other external power source. Fit the SIM card into the SIM card slot. Align the angled corner of the SIM card with the slot. Slide in the SIM card, make sure it is in place, install the battery, and restore the back cover.

Likewise, to remove the SIM card, switch off the phone, remove the battery and then take out the SIM card.

2.2.3. Unlock the SIM card

PIN code

Your Personal Identification Number (PIN) code protects the SIM card against unauthorized use. Your PIN code is usually supplied with the SIM card. If this security function is enabled, you need to enter the PIN code every time you turn on the phone. You can also disable this function.

To unlock the SIM card, press and hold the power button to turn on the phone. Enter the PIN code. After three consecutive incorrect PIN code entries, the code is blocked, and you need the PUK code to unblock it.

PUK code

This code is required to change a locked PIN code. If the code is not supplied with the SIM card, contact your service provider. After ten consecutive incorrect PUK code entries, the SIM card can not be used any more. Please contact your service provider to buy a new SIM card. You can not edit PUK code. If it is lost, Please contact your service provider.

2.2.4. Connecting to the network

After the SIM card is unlocked, you phone will automatically search for the registered network or other local available network. Once connected, the name of the network carrier will appear on the top of the screen.

You phone is now in Standby mode, ready for making and receiving calls.

2.3. Standby screen and Icons

This phone provides a Standby screen. Through the instruction and various icons on the screen, you can have the operating information needed.

The Standby screen provides various function short-cuts via. Furthermore, this Standby screen has a Pet function. It will show different reactions when you have incoming calls and messages. Have fun with it!

2.4. Key function

Power Key **power**: Power on/off the phone

Note:

➤ In this user guide, press means press an actual button on the phone.

2.5. Text Input Method

This phone provides various text input methods that allow you to use less key strokes to input and search for text:

- English input

3. Call Function

After the setup described in the previous sections is completed, you are ready to make and receive calls using the basic information provided in this section.

Note:

➤ When you are using headset, please plug/unplug the headset gently to avoid damaging the headset jack.

3.1. Phone power on/off

Power on

Press and hold **power** to turn on the phone. If PIN code is required, please refer to the previous section in this guide.

Power off

In Standby mode, hold **power** key to turn off the phone.

.

3.2. Dial

When the network carrier is shown on the screen, your phone has entered the Standby mode and you may make or receive calls. If you have installed two SIM cards, the two network carriers will both appear on the screen.

3.2.1. Direct dial

Press any number key to enter the Dial screen.

Domestic call

Press number key to entering the phone number(add area code when calling long distance), and then press the dial key **Send** to make the phone call.

Note:

- In single card mode, both **Send** will dial out to the one card.
- In dual card mode, **Send** will dial out with card 1.

The screen will show the name and phone number of the person that you are calling. After the call goes through, the screen will show a time meter in addition to the phone number and/or the name of the person you are calling.

International call

Key in the symbol "+" by press twice ***Key** quickly, followed by the desired country code and the phone number. For example, to make a call to France, tap twice ***Key** until "+" appears then enter "33" (the country code for France) and the phone number.

3.2.2. Dial from the Phonebook

Enter Phonebook from the Main Menu. You may use alphabet, Surname Index for quick search of the names.

3.2.3. Unanswered call

If you have set up Auto Re-dial, your phone will automatically re-dial the last number that you called but unanswered.

3.3. Answer call

When there's an incoming call, the phone will notify you through vibration, ringing, vibration plus ringing, etc. The name and phone number of the caller is shown on the screen if the network supports the service. You may answer or reject the call.

If call waiting is on, (You need to apply for this service to your network carrier.) when you are on the phone and there is another incoming call, your phone will notify you with a short tone. You may answer or reject that second call. If you choose to answer the second call, the current call will be on hold.

3.4. During a phone call

When you are on the phone, the following functions can be used:

Note:

- The functions vary with the SIM card.

Connect to BT headset: Change voice to BT headset.

Adjust volume: Adjust the volume of the speaker or headset.

Contacts: Enter the phonebook and do the related operations. This function is convenient for searching phone numbers during a phone call.

Call logs: Open the call logs

Messaging: Enter the message screen and do the related functions.

Keypad: open the keypad

Hold: The current call is on hold and both you and the person you are calling will not hear each other. When the call is on hold, you may pick it up again or end the call through the Options menu.

Record: Record the phone conversation.

Mute: The microphone is turned off and the person you are calling will not hear your voice.

Hands-free: Speakerphone

End call: End the current call.

You may enter Dial or Phonebook screens to make a new phone call while the current phone call is still on-going.

Note:

- In the dual card mode, if one card is in use, the other card is under no-service state.

4. Main Menu

On the Standby screen, press **Left soft Key** to enter the Main Menu. You can then access the various functions and operations.

5. Contacts

This chapter describes the functions of the phonebook. You can use alphabet for quick search of your contacts.

Each entry in your SIM card's phonebook consists of a phone number and a name. When you change to another phone, the contact information can be transferred to your new phone with the SIM card. The total number of entries allowed in the SIM card varies with the different SIM cards.

The contact stored in the phone can include name, cell phone number, home, office numbers, others, group, picture, ring tone, company name, department name, address, website and notebook. This information will not be transferred with the SIM card to your new phone.

5.1. Contact list

The contact list is arranged in alphabetical order. You have the following options: New, Write message, Call, Delete, Delete multiple, Import/Export, Send vCard, Settings, Search.

New: Create a new contact.

Write message: Send SMS MMS to the number.

Call: Dial the current number
Delete: Delete selected entry
Delete multiple: Delete multiple contacts
Copy: Copy to SIM1, SIM2 Card or Phone
Import contacts: Import contacts from memory card.
Export contacts: Export contacts from memory card.
Send vCard: Send vCard by SMS, MMS, Bluetooth.
Other: Set speed dial or check the phone Memory status

5.2. Contact

From the contact list you can select a contact and do the following: Edit, Call, Write message, Edit before dialing, Delete, Copy, Send vCard.

Edit: Edit the contact details
Call: Dial the current number
Write message: Send SMS MMS to the number.
Edit before dialing: Edit contact information After the call
Delete: Delete selected entry
Copy: Copy to SIM1, SIM2 Card or Phone

6. Messaging

This chapter introduces the message services provided by the GSM network. Some services may not be supported by the local network.

6.1.1 Write SMS

Enter the SMS editor screen. You may use keypad to input English, digits and punctuation marks. After writing the text message, you have the follow options:

Send: Send the message.
Insert template: Please call me! Where are you now? Thank you! Wait a minute! I am busy today!
Add contact info: Add contact info to the message
Add phiz: Add phiz to the message
Save as draft: Save to Draft box.

6.1.2 Write MMS

Enter the mms editor screen. You can send the mms after you input the words and insert attachment

6.2. Inbox

The Inbox lists the received SMS and MMS. You have the following options: Reply, Delete, Delete all, Call, Lock, Move to Phone/SIM, Copy to Phone/SIM, Mark, Sort, Add sender to, Delete repeated numbers, Add to blacklist.

After you select to read a message, you have the following options: Delete, Reply, Forward, Call, Move to Phone/SIM, Copy to Phone/SIM, Add sender to and Details. The Mark function is for you to select messages for further operation, such as delete all marked messages conveniently.

6.3. Outbox

The out-going messages are listed here. Your options include: Resend, New message, Delete, Delete all, Move to draft, View details.

6.4. Drafts

Saved messages and unsent message are saved here. Options are Open, New message, Delete, Copy to Phone/SIM, Mark and View Detail.

After you select to read a message, you will enter the message editor.

6.5. Sent box

Sent messages are saved here. Your options include: Open, new message, Delete, Copy to Phone/SIM, Mark and View Details.

After you select to read a message, you have the following options: Forward, Delete, Call recipient, Save recipient, Copy to Phone/SIM, and View Detail.

6.6. Templates

You can preset frequently used sentences here to avoid repeated input when writing a message.

6.7. Broadcast message

You can choose On/Off Broadcast message, select language and Channel settings

6.8. Voice mail server

You can Edit Line number, Fax number and Data number

6.9. Settings

You can adjust the various settings of the message functions including SMS, Push message

6.10. Message capacity

This screen shows the storage status of SMS and the free space of your SIM card and your phone.

7. Call Logs

Call history function logs all recent calls including missed calls, dialed calls and answered calls. Options are:

Call logs: Call history function logs all recent calls including missed calls, dialed calls and answered calls.

Missed calls: View the Missed calls and carries on the operation

Dialed calls: View the Dialed calls and carries on the operation

Received calls: View the Received calls and carries on the operation.

Rejected calls: View the Rejected calls and carries on the operation.

delete all: delete all logs.

Call timers: call times

Gprs counter: Gprs counter

Call log

Details: Call log details

Call: Dialing the selected number

Write message: Send SMS or MMS to the selected number

Add to contacts: Add to new contact or Add to existed contact to the selected number

Delete: Delete to the selected number

Delete all: Delete all call logs

8. Settings

8.1. Call settings

Dual Sim: Standby mode, Reply by original SIM, Set SIM name

Call divert: You can set the SIM card to Call Forwarding

Call waiting: You can set the SIM card to Call waiting

Call barring: You can set the SIM card to Call barring:

Hide ID: You can set the SIM card to Hide ID

Others: Call time minute reminder, Auto redial, Auto record voice call.

8.2. Phone settings

Date& time: You can set the time, Time format, date, date format, update time setting.

Language settings: You can select display language: English and other , Writing language: English and other.

Shortcut settings: You can set the navigation key to be the shortcut key.

Auto power on/off: You can set Power on display, Power off display, Auto on/off.

Restore factory settings: Restore you phone to the factory or default settings through this option. You need to input your phone code (default is 1234) for this operation. All data will be deleted when your phone is restored to its factory settings.

8.3. Display

Wallpaper settings: you can set the Static wallpaper , More pictures .

Contrast: You can set the screen backlight brightness, a total of seven levels

Keypad backlight time: 20sec, 10secs, 5secs, Night mode, off.

Auto keypad lock: off, 15secs,30secs, 1min, 5mins.

8.4. Security

You can set Phone lock, SIM lock, and Auto keypad lock here.

PIN: Set the sim1 or sim2 pin

Modify pin2: modify sim1 or sim2 pin2

Phone locked: If you open the phone locked, you must input the correct password then you can open the mobile

Modify the privacy password: password: Modify the exists password

Privacy: You can set the password to some application

Lock screen by end key: turn on or off

Fixed dialing: Open or close the fixed dialing

Blacklist: turn on/off blacklist

8.5. Connections

Network account: Choose SIM card account on the Internet

GPRS Service: You can choose On or Off Internet Service function

Data connection settings: One SIM card you can choose: Connect when needed, Always connect, Power saving mode

Network selection: You can choose Auto select or Manual select

8.6. TTS

Dial TTS setting: turn dial TTS on/off

TTS incoming call: turn incoming TTS on/off

Main menu Read: turn Main menu read on/off

9. Audio

Upon entering the Music Player and press **Left** , Playlist will be displayed. Through All Music you can look up all the music files. Other Options are: Music list, Add, Set as ringtone, Shuffle, Repeat, Settings, Open review

After you have selected music from the Playlist, you will enter the Music Player screen and you can look up the album, name of the song, artist, play time, item number, etc.

You can press **Center** to Pause and play, press **Left** to previous, press **Right** to next, press **up** to volume up, press **down** to volume down.

10. Multimedia

10.1. DV

View video directory: View video has been saved

Dc mode: change dv mode to dc mode

Effect: Normal, B&W, Blue, Green, Yellow, Red, Sepia, Negative

Settings:

Flash: on/off.

Size: 240x320, 144x176, 128x160, 96x128.

Banding: 50Hz, 60Hz

Audio: Activate, off

Video format: avi.

Preferred Storage : Phone, Memory Card

10.2. Video

Enter the Video Player and the Video file list is displayed. Select the video and you can do the following:

You can press **Center** to Pause and play, press **Left** to previous, press **Right** to next, press **up** to volume up, press **down** to volume down.

Several functions are available by Options menu: Open, Full screen play(2), Adjust brightness(5), View, Repeat, Shuffle, Set as, Settings, Details.

10.3. FM Radio

You can receive and listen to FM radio here.

Functions are also available via the Options menu:

Auto Search and save: Automatic search and save the channel

Channel list: There are 40 channels list

Save: Save to the Channel list

Manual search: Manually enter the channel search

Open speaker: Headphones to listen to FM can open the speaker

Background play: Minimize the interface background play

Record: Record FM

Scheduled record: Open/Close timing record, Predefined time & frequency

Record file list: View or play the Record file list

Storage: Phone, Memory Card

10.4. Sound Recorder

Enter the Voice memo function, Press **Center** to start and stop recording. The memo can be played back immediately or using Option menu to do the following functions:

Start recoding: Start a new recording

Record files list: View recording documents

Storage: Phone, Memory Card

File format: AMR(Low quality), MP3(High quality), WAV(Best quality)

10.5. Image

View the saved images and into the camera

11. Games

You can play the Sokoban and Snake.

12. Profiles

Five Profiles are available: Normal Mode, Silent Mode, Meeting Mode, Outdoor Mode, and indoor Mode, You can select any of these Profiles or customize your own profile by adjusting the parameters of the Profile.

13. My files

You can view the files and folds in the memory card.

14. Application

14.1. Calendar

In addition to the western calendar. You can add, edit and look up events on different dates. Options are:

Add new schedule: The editor will be displayed. You can add an appointment or an all-day event. Available input fields are: Subject, Location, Repeat, Start date, Start time, End date, end time, alarm, description. The display and reminder will be executed according to your setting.

View schedules: View the schedule of one day

All schedules: View All schedules

Clear today's tasks: Clear the schedule of one day

Clear all: Clear All schedules

Go to date: go to the date you choose

Weekly: According to the weeks shows

Daily: According to the days shows

14.2. Calculator

A basic calculator is provided.

14.3. Clock

Alarm

You can set up to 3 alarm clocks. The Alarm Clock settings include: Title, Time, Status, Frequency and Ringtone. The frequency settings are: Once, Daily, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday and Sunday. The Alarm Clock function is on even when the phone is powered off.

Alarm Dialog will be displayed when the alarm goes off. You can stop the alarm or snooze for 5 minutes.

World clock

Add or remove time zone of the city, Set the daylight saving system

Stopwatch

Stopwatch provides 20 sets of entries with both total and lap timer functions.

Timer

You can Set the timer.

14.4. Unit Conversion

You can converse the length unit or width unit.

14.5. Bluetooth

You may do functions for your Bluetooth settings such as: Turn on/off, Paired devices, Search devices, Settings

15. Camera

Before using Camera, make sure you have inserted a memory card. The photos will be saved in JPG format to your memory card.

Note:

➤ Taking pictures in dim lighting may result in poor picture quality.

After entering the Camera, the Camera Preview screen will appear with the status icons. Press **Center** to take the picture.

Camera settings include:

Image viewer: Browse the photos

DV mode: change to the dv mode

Effect: Normal, B&W, Blue, Green, Yellow, Red, Sepia, Negative

Settings:

Flash: Activate, auto, off.

Size: 960x1280, 480x640, 240x320.

Quality: Low, Normal, Advanced.

Banding: 50Hz, 60Hz

Shutter sound: Activate, off

Auto save: Activate, off

Storage: Phone, Memory Card

16. Internet

You can use this application to browse the webpage

17. Use mode

While your phone is connected by USB, you may use your phone as storage device, the functions are plug-and-play.

Note:

- While using the above functions, the phone application will be disabled.
- When our phone is connected by USB but there is no further setting, the phone will switch into charging mode.

18. FAQ

The phone cannot be turned on

When the battery is very low, the phone may not be turned on properly. Please charge the battery.

Cannot make certain calls

Check if Call Barring is set. If it is set, you may not be able to make calls or only certain calls are allowed.

My call is picked up by another phone

Check if call divert is set. If it is set, your incoming calls may be diverted to other numbers or devices.

Error Message**Please insert SIM card**

Make sure you have inserted SIM card. If you have installed it but it cannot be detected, please try clean the golden contacts of the SIM card by using a dry cloth. If it still is not working, please contact your network carrier.

No service

If you are in an area not covered by your network, or if a physical obstacle is present, such as in an enclosed area, the message "No service" will be displayed on your Standby screen and you will not be able to make or receive calls. You can try move closer to a window for better reception.

For emergency only

When you are outside your network but inside other network, you can only make emergency call.

No Valid SIM card

Your SIM card is locked or it has an error. Please insert the right SIM card or contact your service provider.

Enter PUK code

After three consecutive incorrect PIN code entries, the code is blocked, and you need the PUK code to unblock it. Contact your service provider. After seven consecutive incorrect PUK code entries, the SIM card cannot be used any more. Please contact your service provider to buy a new SIM card.

Care and maintenance

Thank you for choosing our phone. Should you encounter any problem with the phone, please contact our dealer or qualified service provider.

Your phone is a finely designed and crafted product. Please use it with care. The following instructions will help you comply with the terms of the warranty and enjoy this product for many years:

- Keep the phone and all its parts and accessories out of the reach of children.
- Keep the phone dry, all kinds of liquid will erode the electronic circuit.
- Do not use or store the phone in a dusty place to avoid damaging the removable parts.
- Keep the phone away from hot places, high temperature can shorten the life of electronic device, warp or melt certain plastic and damage batteries.
- Do not attempt to open or disassemble the phone, non-expert handling may damage it.
- Do not drop, crush or shake the phone to avoid damaging the internal circuit board.
- Do not use harsh chemicals, cleaning solvents or strong detergent to clean the phone.
- Do not paint the phone or the paint may obstruct the removable parts and affect operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone. Do not hold the external antenna when the phone is in use. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

The above instructions apply to your phone, battery, charger and other accessories. If any of them does not work properly, please send it to a qualified service provider.

Manufacture: Shenzhen CWELL Electronic Technology Co., Ltd.

Address: 8th Floor, Building 4, Block A, Hongchuang Technology Center, Xikeng Community, Fucheng Street, Longhua District, 518110, Shenzhen, China

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each phone are performed in positions and locations as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.