

ROKU®

Pro Series TV

Quick Start Guide




Let's get started




What's included



Roku Pro Series
4K QLED TV

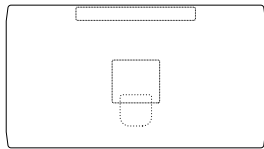

Cardboard
TV placement guide

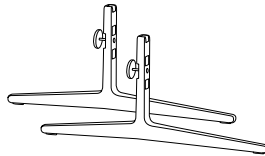


TV
stands



TV power
cable



 Remote
charging cable



Roku Voice
Remote Pro

Need help?

For setup help or support, visit or call


go.roku.com/TV

1-816-272-8106

4:00 am - 10:00 pm PT



STEP 1: Attach stands

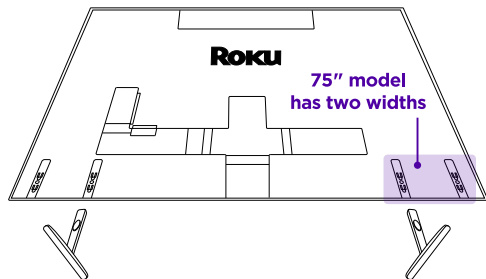


Slide stands into slots and secure with included thumbscrews


Note: Stands are adjustable. Choose from two different heights.

For mounting instructions, visit go.roku.com/TVmount

STEP 2: Turn on & pair remote

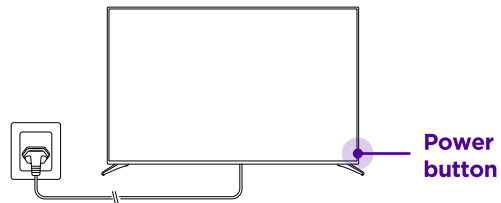


Plug it in

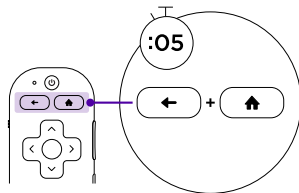

Press and hold for 5 seconds to pair


STEP 3: Activate your TV

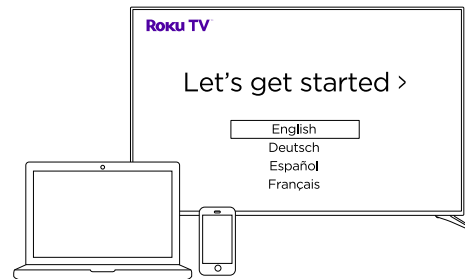

Follow on-screen setup

Note: You'll need a internet connection and a Roku Account to activate your TV.

Get to know your remote

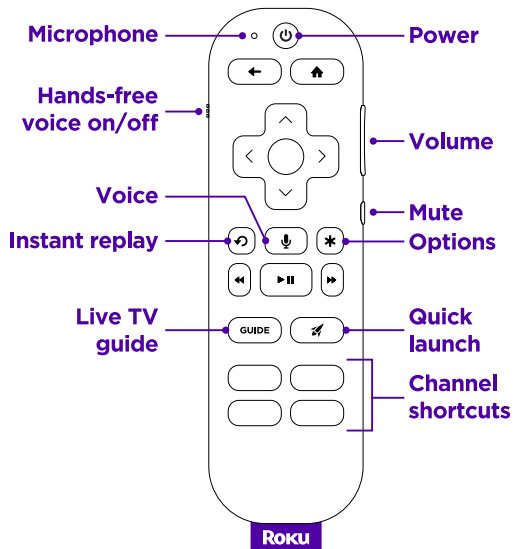

Get to know your TV

Video connections

HDMI® 1 & 2

Game consoles

HDMI 3

General video input

Antenna/Cable

Digital antenna, cable connection

Audio connections

HDMI 4 eARC (recommended)

AV receivers, soundbars

Optical

AV receivers, soundbars

Other connections


USB

Flash drive

Ethernet

Wired internet connection

Lost remote
finder button

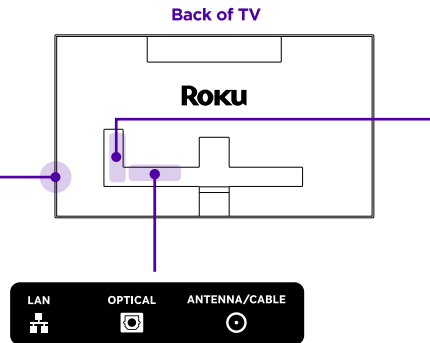



© 2025 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished works. Copyright 1992-2019 Dolby Laboratories. All rights reserved.

