 




CHEFMAN.

Fast-Boil™
Gooseneck
Kettle

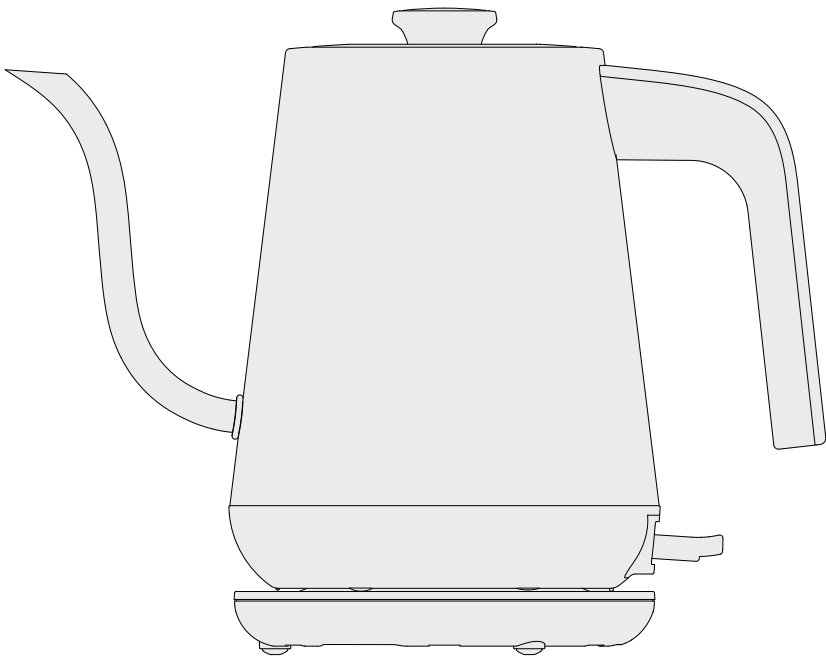

RJ11-GN-BLK-V2



Get to Know Your Kettle


1. Removable lid
2. MAX water level marking (on inside)
3. Cool-touch handle
4. ON | OFF switch with LED indicator light
5. Power base
6. Cord notch
7. Heating plate (underside of kettle)
8. Stainless-steel kettle
9. Gooseneck spout



READ ALL INSTRUCTIONS BEFORE USE

 For your safety and continued enjoyment of this product, always read the instruction manual before using.



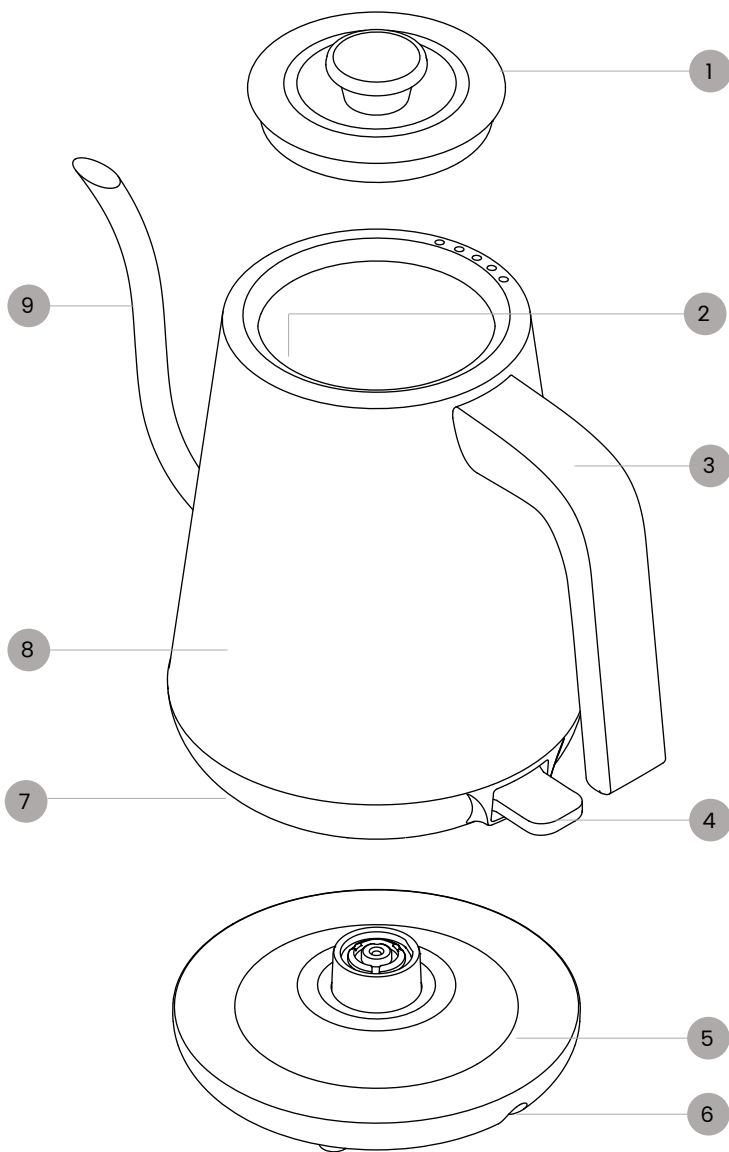



SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. **Do NOT** touch hot surfaces. Use handle or knobs.
3. To protect against fire, electric shock and injuries to persons do not immerse cord, plug charging base, or unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. If this should occur, contact Chefman Customer Support.
8. The use of accessory attachments not recommended by Chefman may result in fire, electric shock, or injury to persons.
9. **Do NOT** use outdoors.
10. **Do NOT** let cord hang over edge of table or counter, or touch hot surfaces.
11. **Do NOT** place on or near a hot gas or electric burner, or in a heated oven.
12. To disconnect, turn any control to **OFF**, then remove plug from wall outlet.
13. **Do NOT** use appliance for other than intended use.
14. Scalding may occur if lid is opened during heating cycle.
15. Ensure the lid is securely closed before serving any beverages.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY



SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

WARNING: This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way or force it into the outlet. This could result in injury or electric shock.

Short Cord Instructions

A short power-supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.



SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

Power Cord Safety Tips

1. Never pull or yank on the cord or the appliance.
2. To insert the plug, grasp it firmly and guide it into the outlet.
3. To disconnect the appliance, grasp the plug and remove it from the outlet.
4. Never use the product if the power cord shows signs of abrasion or excessive wear. Contact Chefman Customer Support for additional guidance and support.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE THE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.



Do not place the appliance on a stovetop or any other heatable surface, even if stovetop is not on. Doing so is a fire hazard.





How to Use the Gooseneck Kettle



Before First Use

For best results, follow these steps before using your kettle for the first time.

1. Remove all packaging materials, such as plastic bags and foam inserts. Check to ensure that all parts and accessories are included before throwing out packaging.
2. Read and remove any stickers on the kettle except for the rating label, which should remain on the unit.
3. Pull the power cord out from the compartment under the base and place the base on a flat surface. (Pull the power cord through the notch in the base so the unit can sit level.) Open the kettle lid by grasping the lid handle and gently pulling it up.
4. Prime the kettle before first use and clean it of any packing debris: Add $\frac{1}{2}$ cup distilled vinegar to the kettle, then fill the kettle with water up to the MAX line. Close the lid, place the kettle on the base, and plug it into an outlet.
5. Flip the switch to the ON position to bring the mixture to a boil. After the boil, allow the kettle to cool before emptying it, then refill the kettle with fresh water and bring it to a boil again.
6. Once complete, empty the kettle and rinse with clean water. It is now ready for use.

Boiling Water in the Kettle

The kettle features a gooseneck spout for an accurate, controlled pour—perfect for pour-over coffee. And it can sit on its power base from any direction, making it easy to use whether you're right- or left-handed.

1. Pull the power cord from underneath the base and place the base on a hard, flat surface.
2. Open the kettle lid by grasping the lid handle and gently pulling up.
3. Fill the kettle to no higher than the MAX (0.8L) line with cold or room-temperature water (preferably filtered or bottled). Replace the lid and make sure it is closed tightly.
4. Place the kettle onto the base and plug in the power cord.
5. Press down the switch at the base of the kettle's handle to the ON position. The blue LED will illuminate the switch and heating will begin.



How to Use the Gooseneck Kettle

6. Once the water has boiled, the blue LED light will turn off, the switch will flip to the OFF position, and the kettle will automatically power off.

CAUTION: Avoid touching the kettle itself during and after heating as its exterior will be hot to the touch. (The handle stays cool.)

7. To serve, lift the kettle off its base and pour slowly to avoid splashing.

CAUTION: Always use care when pouring hot water and do not open the lid while pouring, as this can cause hot water to splash.

Special Feature: Boil-Dry Protection

The kettle comes equipped with boil-dry protection and will automatically shut off to avoid damaging the heating element if the unit goes dry or starts without water. It will not come back on, even if you replace it on the base, until it has cooled down. You can speed up the cool-down by adding cold water to the kettle. To ensure a long life for your kettle, be sure there is ample water in it before you turn it on.





Keep It Clean

To keep your water tasting fresh and your kettle in prime condition, we recommend rinsing your kettle with water between each use and cleaning often following the instructions below.

1. Unplug the kettle and allow it to cool completely before cleaning.
2. If necessary, discard any leftover water from the kettle. Clean the interior of the kettle as needed with warm, soapy water and rinse thoroughly. Wipe the outside of the kettle with a damp cloth and the power base with a dry cloth.
CAUTION: Never immerse the kettle's power base, cord, or plug in water or any other liquid. Do not wash any part in the dishwasher or use scouring pads or abrasive cleaners; doing so can damage the unit.
3. Buildup caused by minerals commonly found in water can adversely affect brewing. To descale the kettle, follow the descaling instructions below.

How to Descal the Kettle

Minerals dissolved in both tap and bottled water may, over time, build up and form deposits on the base of the kettle and cause discoloration. To get the best performance from your kettle, descale it from time to time. The frequency will depend on the hardness of your water and how often you use the kettle. You can either use a commercial descaler, following package directions, or a mix of vinegar and water, following the directions below.

1. Add $\frac{3}{4}$ cup distilled vinegar to the kettle, then fill the kettle with water just up to the MAX line.
2. Let the solution soak in the kettle for about 1 hour, then press the ON | OFF switch to bring it to a boil. Repeat the boiling process with a cooled vinegar mixture if needed until all deposits are removed.
3. Once complete, allow the kettle to cool and discard the mixture. Thoroughly rinse out the kettle several times with fresh water.



CHEFMAN BOILS FAST





Terms & Conditions

Limited Warranty

RJ Brands, LLC d/b/a Chefman® offers a limited 1-year Warranty (the “Warranty”) available on sales through authorized distributors and retailers only. Please note that this Warranty becomes valid from the date of initial retail purchase and that the Warranty is nontransferable and applies only to the original purchaser.

This Warranty is void without proof of purchase within the United States and Canada. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Chefman®. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Chefman®. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to please submit, via email, photos and/or video of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos and/or video may also be required to determine Warranty eligibility.

We encourage you to register your product. Registering can make the Warranty process easier and can keep you informed of any updates or recalls on your product. To register, follow the directions on the Chefman® Warranty Registration page in the Chefman® User Guide. Please retain your proof of purchase even after registering. In the event that you do not have proof of your purchase date, we may declare your Warranty void or we may, at our sole discretion, apply the date of manufacture as the purchase date for purposes of this Warranty.



Terms & Conditions

What the Warranty Covers

- **Manufacturer Defects**

Chefman® products are warranted against defects in material and workmanship, under normal household use, for a period of 1 year from the date of purchase when used in accordance with the directions listed in the Chefman® User Guide. If your product does not work as it should, please contact Customer Support at support@chefman.com so that we may assist you.

This Warranty Does Not Cover

- **Misuse**

Damage that occurs from neglectful or improper use of products, including, but not limited to, damage that occurs as a result of usage with incompatible voltage, regardless of whether the product was used with a converter or adapter. See Safety Instructions in the Chefman® User Guide for information on proper use of product;

- **Poor Maintenance**

General lack of proper care. We encourage you to take care of your Chefman® products so that you may continue to enjoy them. Please see cleaning and maintenance directions in the Chefman® User Guide for information on proper maintenance;

- **Commercial Use**

Damage that occurs from commercial use;

- **Normal Wear and Tear**

Damage or degradation expected to occur due to normal use over time;

- **Altered Products**

Damage that occurs from alterations or modifications by any entity other than Chefman® such as the removal of the rating label affixed to the product;

- **Catastrophic Events**

Damage that occurs from fire, floods, or natural disasters; or

- **Loss of Interest**

Claims of loss of interest or enjoyment.



Terms & Conditions

For product information, please visit us at Chefman.com.

 
EXCEPT WHERE SUCH LIABILITY IS REQUIRED BY LAW, THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.



Warranty Registration

What do I need to register my product?

- Contact Information
- Model Number (see example below)
- Proof of Purchase (online confirmation, receipt, gift receipt)
- Date Code (see example below)
- Access Code (see example below)

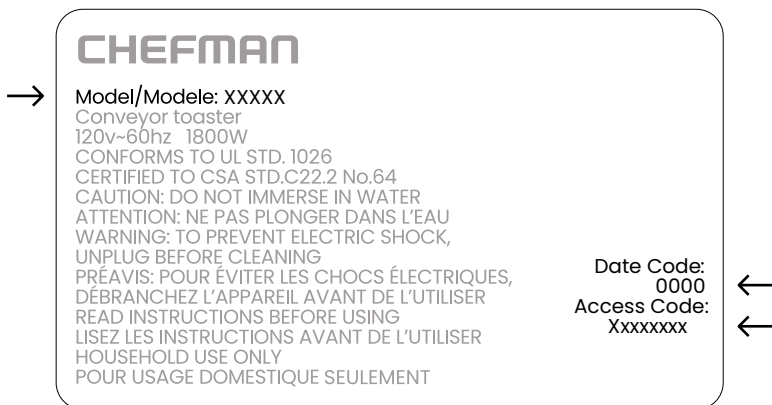

NOTE: Label depicted here is an example.

Please see label on your product for actual model/date code/access code.

How do I register my product?

All you need to do is fill out a simple Chefman® registration form. You can easily access the form in one of the two ways listed below:

- Visit Chefman.com/register.
- Scan the QR code to the right to access site.





CHEFMAN.

Fast Boil™
Gooseneck Kettle

RJ11GNBLKV2UG060126

Chefman® is a registered trademark of RJ Brands, LLC.