

Kinglucky



K38

USER MANUAL

I Product standard accessories



Host * 1



Specification * 1




Microphone* 1



Charging cable *1

II Keys & Function description

1. Button description and indicator description

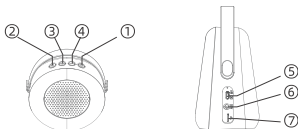

① Switch button:

long press 3S switch/short press a variety of light effect switch/double click mode switch
Mode switching (TF card - AUX-Bluetooth, boot default Bluetooth mode, rear plug priority)

② Pause playback button: Long press 3S to disconnect Bluetooth/short press to pause or play/double tap to cancel the original sound

③ Volume +: Press and hold a song/press short to add volume

④ Volume -: Long press the previous song/short press the volume to reduce

⑤ Type-C charging port

⑥ 3.5AUXmm Audio input

⑦ TF card slot

2. Function description

Bluetooth connection:

The default mode for powering on is to enter Bluetooth mode. Press and hold the mode key to switch modes, and the prompt tone will sound "Bluetooth mode". Open the Bluetooth scan on your phone, search for " K38 " and click on pairing. After successful connection, there will be a prompt tone. When pairing, the power on indicator light flashes blue, and after successful pairing, the indicator light remains blue.

TF card /U disk /Auxin mode:

Automatically identify the device that has been inserted into the interface to make playback selection, insert the TF card /U disk card into the corresponding card slot, and automatically play the file after identification (TF/U disk card supports 32G maximum) Connect any audio device with 3.5mm jack and connect to the AUX audio cable for playback.

Sound & Microphone parameters

Battery capacity: 1800mAh

Input: DC5V  1A

Speaker: 5W


Bluetooth distance: $\leq 10\text{m}$

Charging time: about 2-4h

SNR: 85dB

Product size: 140*127.5*71.5mm

Wireless microphone panel function description

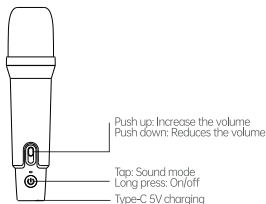

Wireless microphone technical parameters

Frequency range : 60-11KHZ	Sensitivity : -54+3dB
Battery capacity : 500mAh	Charging time : about 2h
Rated input : 5V=1A	Battery life : about 8-9H

Note: Please check the charger specifications before charging, do not use fast charge or high voltage charger to charge the machine. For hearing health, do not use at maximum volume for long periods of time. Do not use near fire or high temperature environment to avoid permanent damage to the product. Please strictly follow the instructions and do not modify or disassemble the product. Do not drop, hit, knock, squeeze or other behaviors that seriously affect the structure of the product to avoid damaging the strength and reliability of the product. If you encounter anomalies such as high temperature, deformation, and corrosion during use, please stop using immediately and contact the business for proper handling.

IV After-sales service description

Dear users, thank you very much for using our products, in order to effectively protect your rights and interests, clear distribution agents and companies should undertake product maintenance, replacement, return (hereinafter referred to as three guarantees) responsibilities and obligations, please read the following:

1. "Product Warranty Card" is the necessary certificate for our company to provide free after-sales service;
2. In accordance with the principle of who is responsible for three guarantees, if there is a quality problem with the product warranty card, contact the distributor, and the distributor provides service to the customer, and our company provides service support to the distributor;
3. The company promises, from the date of sale (the date of the valid bill shall prevail, the same below) within seven days of quality problems, customers can choose to return, replace or repair; From the date of sale from 8 to 15 days of quality problems, customers can choose to replace and repair; From the date of sale, within one year of quality problems, customers can be free maintenance; Products exceed the warranty period quality problems enjoy lifelong maintenance (each after-sales service point only charge components and materials fees); Please fill in the "Product Warranty Card" carefully with the dealer when purchasing.
4. The following circumstances do not enjoy the three guarantees service:
 - (1) Exceeding the period of three guarantees;
 - (2) Damage caused by failure to use, maintain and keep according to the requirements of the product instruction manual;
 - (3) Damage caused by disassembling the machine by the repairman who is not responsible for the three guarantees;
 - (4) The content of the "Product Warranty Card" is inconsistent with the physical identification of the product or altered;
 - (5) Damage caused by irresistible factors.

Note: The rechargeable battery inside the product, do not disassemble and replace it by yourself, should use the correct method to charge the device, do not put the device near the fire source, or exposed to direct sunlight, otherwise the battery heat will destroy the safety device and cause the battery to explode or burn.

Product model : _____

Purchase date : _____

Agent : _____

Invoice date : _____

Telephone : _____

Customer Name : _____

Postal Code : _____



Eertificate

Examination clerk

This product has been inspected
and found to be qualified