

Portable Thermal Printer User Manual

Version: 1.0

Scan to download the app



Download on the
App Store

Get it on
Google Play

Operational Video



Scan to watch the instructional video

Driver Download



<https://www.luckjingle.com/AppDriver?primaryTab=driver&type=A43&tab=download>

Scan the QR code for more language instructions.

English、Français、Deutsch、Italiano、Español、Português、日本語、한국어、Bahasa Indonesia、Bahasa Melayu、العربية、Türkçe、Русский、Dansk、Čeština、Nederlands、Svenska、Ελληνικά、Polski、Magyar、简体中文、繁體中文、தமிழ்、Tiếng Việt、Filipino、Български、Hrvatski、Suomi、Latviešu、Lietuvių、Română、Slovenčina、Slovenščina、Eesti、Bokmål



Product Information

Product model:	A43
Machine size:	285 x 62.2 x 36.5 mm
Printing mode:	Thermal Printing
Weight:	574g
Battery Capacity:	1500mAh(7.4V)
Input power:	5V $\Rightarrow$ 2A
Printing speed:	10mm/s
Interface form:	Type-C
Applicable paper size:	210mm-216mm

EN 英语

Printer Components

Paper Exit Slot

Power Button

1. Long press for 3s
2. Double-click the button to print the QR code. Scan the code with your phone to connect to the printer.

Open Cover Button

Push to open the cover

Type-C Interface

Indicator Light

Lights	Status	Meaning
Green	Steady on	Functioning/Fully charged
Green	Slow blinking	Charging
Blue	Steady on	Bluetooth connected normally / Printing in progress
Red	Steady on	No paper installed/Top Cover open/Printer over heated
Red	Slow blinking	Charging when printer is off
Red	Rapid blinking	Critical battery level

Download the App

Please search for "Luckjingle" in your mobile app store, or scan the QR code at the top of the manual to download the app. Ensure Bluetooth is enabled on your phone to connect to the printer.


How to Download and Install Drivers

1. Connect the printer to your computer using the data cable: plug one end into the computer and the other into the printer's USB port. Then turn on the printer.
2. Visit www.luckjingle.com to access the driver download page. Select the appropriate driver for your printer model and computer operating system, then follow the on-screen instructions to complete installation. For detailed guidance, scan the QR code at the top of the manual to watch an instructional video.

Folded Paper Loading Method

To identify the printable side, take a sheet of paper and scratch both surfaces with your fingernail. The side that produces a black residue is the correct side. Ensure this side is facing the print head when you insert the paper into the feed slot (see example below).

Print side up

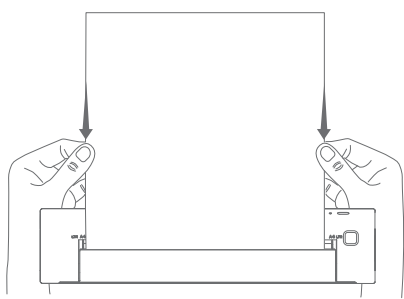

Safety and precautions

1. There is a built-in lithium battery, please do not use it in the environment with temperature higher than 40 °C; keep away from fire and other heat sources, and do not place it in the hot sun, such as closed car;
2. After full charge, please make sure to pull out the charging line in time to prevent overheating, short circuit or fire;
3. Do not put the product in fire or water to avoid battery short circuit or fire or burn;
4. If you suspect that there is a problem with the battery please contact the after-sales service center for assistance.

Charging Instructions

- 5V $\Rightarrow$ 2A input, the device has over-current protection, and it is not recommended to use a fast charger to charge the device.
- Recommend to charge the battery fully before using.
- If printer has not been used for a long time, please charge it every 3 months, to avoid long-term natural wear and tear of lithium batteries can not be charged.

Warning

- This product does not include a power adapter as standard. If charging with a power adapter, purchase and use one that is CCC-certified and meets the required standards.
- Replacing the battery pack with an incorrect model may pose a risk of explosion.
- Do not throw the battery into a fire or heating furnace, and do not dispose of it by mechanically crushing or cutting.
- Do not place the battery in extremely high-temperature or extremely low-pressure environments, as this may cause explosion or leakage of flammable liquids/gases.
- Operation of this equipment in a residential environment may cause radio interference.

FCC Statement


1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device must not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Wireless Communication Specifications

Operating Frequency Band: 2402-2480 MHz
Maximum Radio-Frequency Power: 12 dBm

ZH-CN 简体中文

打印机组件

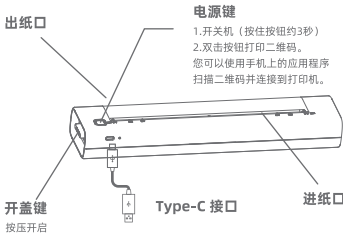

指示灯定义

指示灯	状态	状态说明
绿灯	常亮	打印机正常状态, 已充满电
绿灯	慢闪	打印机充电状态中
蓝灯	常亮	蓝牙正常连接/打印中
红灯	常亮	打印机缺纸/纸仓打开/打印头温度过高
红灯	慢闪	关机充电状态
红灯	快闪	打印机电量低

下载应用APP

请在手机应用市场中搜索: “叮当小印” 或者扫描说明书头部二维码下载APP应用, 手机蓝牙开启状态连接打印机


如何下载和安装驱动程序

1. 打印机连接到计算机, 将数据线的一端连接到电脑, 另一端连接到打印机的USB端口, 打开打印机
2. 从官网www.luckjingle.com进入驱动下载页面, 根据你的打印机型号和电脑操作系统选择对应的驱动下载, 然后按照页面指示进行安装。更多详细操作可扫描说明书头部二维码观看操作视频

折叠纸放置方式

取一张纸, 用你的指甲在纸的两面划几下, 有黑色痕迹的是打印面, 打印面对着打印头方向放入进纸口 (如下图示例)

打印面朝上

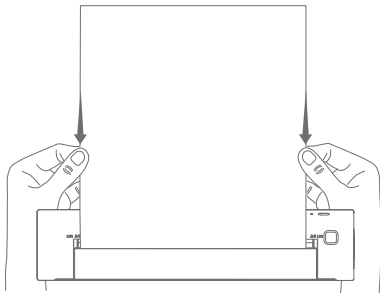

安全注意事项

1. 本产品内置锂电池, 请勿在40°C以上环境中使用; 远离火源及其他热源, 勿置于烈日暴晒环境 (如密闭车厢内)。
2. 充满电后请及时拔掉充电线, 防止过热、短路或起火。
3. 请勿将产品投入火中或水中, 以免造成电池短路、起火或燃烧。
4. 如怀疑电池存在异常, 请联系售后服务中心寻求帮助。

充电说明

- 5V $\Rightarrow$ 2A输入充电, 机器具有过电保护, 不建议使用快充的充电器充机器
- 建议购买后第一次使用时请先充满电。
- 长时间未使用, 请每隔3个月充一次电, 以免锂电池长时间自然损耗无法充电。

警告

- 本产品出厂标配不包含电源适配器, 若使用电源适配器充电, 应购买使用获得CCC认证且满足标准的电源适配器。
- 如果换用不正确的型号的电池组会有爆炸的危险。
- 请不要将电池投入火中或加热炉中, 请勿对电池进行机械挤压或切割进行处置。
- 不要将电池放置在极高温度或者极低压力的环境中, 这可能会导致爆炸或易燃液体/气体泄漏。
- 在居住环境中, 运行此设备可能会造成无线电干扰。



注意!
撕纸刀片有尖锐边缘, 请小心勿触防止划伤。



注意! 热零部件!
打印完成后, 请勿直接接触打印头, 以防过热烫伤。关闭电源后等待半小时才能接触打印头。



此产品需在成人监护下使用。



www.luckjingle.com
Made in China