

Taylor Sweden

INSTRUCTION MANUAL

DRIP COFFEE MAKER



DO NOT PLUG IN BEFORE READY TO USE.

MODEL B30203ABOP

PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATING THE PRODUCT AND RETAIN IT FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS =

When using an electrical appliance, basic precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Only use handle.
3. To protect against fire, electric shock and personal injury, do not place the cord, plug in water or any other liquid.
4. Close supervision is necessary whenever the appliance is used by or near children.
5. Unplug the appliance from the electrical socket when it is not in use and before cleaning. Allow it to cool before putting on or removing parts and before cleaning.
6. Do not operate the appliance if the cord or plug is damaged or after the appliance malfunctions or has been damaged in any way. Return the appliance to our authorised service facility for examination, repair or adjustment.
7. The use of an accessory not intended for use with this appliance may cause fire, electric shock or personal injury.
8. Do not use the appliance outdoors.
9. Do not allow the cord to hang over the edge of a table or counter or come into contact


with a hot surface.

10. Do not place the appliance on or near a hot gas or electric burner or oven.
11. Ensure the appliance is off before disconnecting the plug, then remove the plug from the electrical socket.
12. Do not open the top cover when the appliance is working.
13. Keep this instructional manual.
14. This appliance has a two-prong plug (one blade is wider than the other). To reduce the risk of electric shock, the plug is intended to fit into an electric socket in one way only. If the plug does not fit fully into the socket, reverse it or try another one. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TECHNICAL SPECIFICATIONS

Model No.	B30203ABOP
Power Supply	120V~ 60Hz
Power Consumption	900W
Water Tank Capacity	1.8L


PRODUCT OVERVIEW

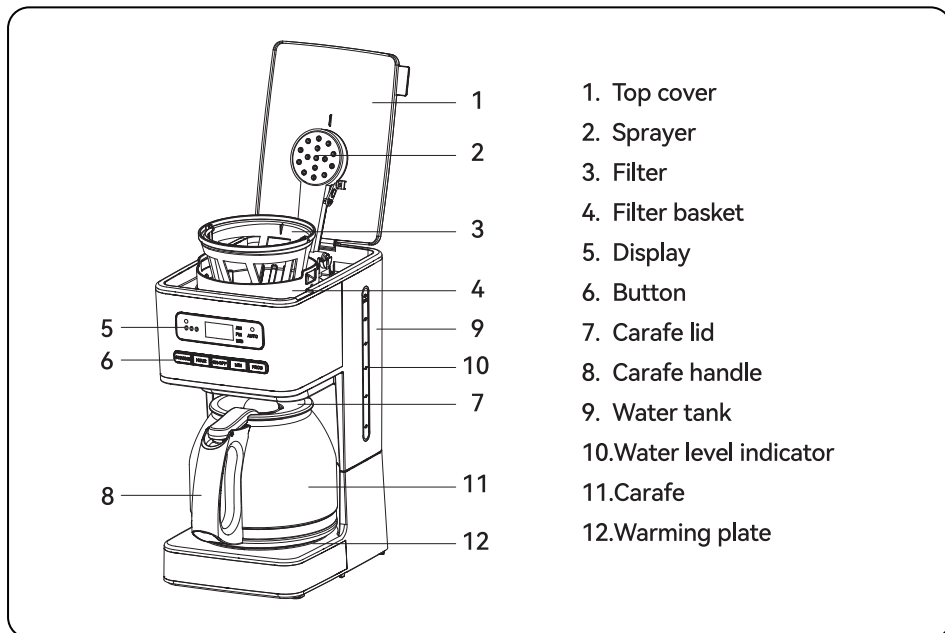


PRECAUTIONS BEFORE USE

1. Before using the appliance for the first time, wipe all parts with a cloth damped with warm, soapy water and then rinse and dry thoroughly.
2. Wipe the main body and base of the appliance with a soft, damp cloth and allow it to dry thoroughly. Do not immerse the main body in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the appliance as this could cause damage.
3. Clean your appliance before using it by running two brewing cycles without coffee or a coffee filter.

CONTROL PANEL ILLUSTRATION

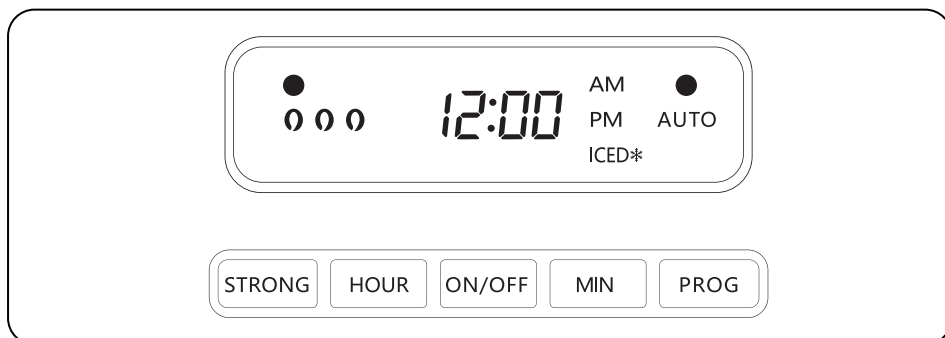

ON/OFF Button	Press to start or stop coffee/iced coffee brewing.
HOUR Button	Hour adjustment button
MIN Button	Minute adjustment button
PROG Button	1.Auto-brew function: Short press once 2.Iced coffee function: Quickly press twice
STRONG Button	Brew strength selection Press and hold for 3 seconds to enter the self-cleaning mode
RED Light	Brewing or keep warm status indicator light
Green Light	Programmed status indicator light, light up with AUTO icon
AM/PM Light	AM/PM indicator light
ICED Light	When iced coffee mode is selected, this indicator will be illuminated. Press ON/OFF button to enter iced coffee brewing mode.
 Light	Coffee strength indicator light
LED	Displays the time and shows the word "CLEA" in the cleaning function state. When the 60 brewing cycles are completed, "CLEA" will scroll on the screen three times.

OPERATING INSTRUCTIONS




- 1.Place the appliance on a flat surface.
- 2.Open the top cover. Pour the required amount of water into the carafe. Then pour the water into the water tank, check the water level indicator. Place the carafe in the warming plate.
- 3.Insert the filter into the filter basket, the filter paper can also be used as needed.
- 4.Connect the appliance to the electricity supply. All indicator lights of the display will flash for 30s, then the display will show the time and“ A coffee bean” icon, indicating that the appliance is in standby mode. You can also press any button to stop flashing and enter corresponding function.
- 5.Coffee brewing
 - (1)Add ground coffee to the filter using the measuring spoon according to the below table. The amount of ground coffee can be adjust according to your taste.

Number of cups of coffee	Amount of ground coffee
12 cups	9 spoons
10 cups	7 spoons
8 cups	6 spoons
6 cups	5 spoons
4 cups	4 spoons
1 cup=5oz, 1 spoon=5g of ground coffee	

(2) Press the ON/OFF button to immediately begin brewing coffee. The brew indicator light (Red indicator light) will flash.

(3) If strong coffee is needed, short press STRONG button first to select brew strength, then press ON/OFF button to enter the STRONG mode.

- It's recommended to use STRONG function when brewing 4 cups or less coffee to ensure the best result.

	Basic
	Medium
	High

(4) When the brewing cycle ends, the brewing red indicator light stops flashing and keeps on. The coffee strength indicator light turns off. Then warming plate will keep the coffee warm for 2 hours. Once the warming time is finished, the red indicator light will go off, the appliance will enter the standby mode automatically.

(5) Once the coffee grounds have cooled, carefully remove and discard the used coffee grounds.

(6) To turn off the coffee maker at any time, press the ON/OFF button. The red indicator light will go off, the appliance will enter the standby mode.

(7) Unplug the power.

(8) Remove the carafe and pour coffee.

- If the carafe is removed during the brewing cycle, the brewing cycle will be paused. It's necessary to place it back to the warming plate within 30s to prevent overflow. The brewing cycle will be resumed.

6. Set the clock

(1) Press HOUR and MIN buttons until the display shows the correct clock.

(2) AM or PM indicator light indicating that the set time is in the morning or afternoon.

(3) To change the time after setting, press HOUR or MIN button to adjust the clock directly.

(4)Note: If the appliance is unplugged or the power is interrupted, even briefly, the clock will need to be reset.

7.Preset the auto-brew time

(1)Press PROG button. The PROG indicator light (green indicator light) flashes. The LED shows the current time.

(2)Press HOUR/MIN button rapidly to set the desired auto-brew time (e.g. 7:15 a.m., the AM indicator light goes on.)

(3)After 3 seconds, the PROG green indicator light stops flashing and remains on. (The display shows“ AUTO”) and the LED shows the current time.

(4)Brewing will start automatically after the set auto-brew time. When the appliance starts working, the PROG indicator will go off and the red indicator light will light up and flash. The brewing cycle starts.

(5)To change or check the auto-brew setting, press the PROG button again. The set auto-brew time will be displayed on the LED, the PROG indicator light will illuminate for 5 seconds. Press HOUR/MIN button to modify the auto-brew time.

(6)To cancel the auto-brew function, press and hold the PROG button for 3 seconds. The PROG indicator light will flash for 5 seconds and then go off. (The “AUTO”in the display will be off too)

- If there is 5 seconds of inactivity after pressing the PROG button, the program will not be saved.
- If ON/OFF button is pressed, the auto-brew function will be canceled and the brewing cycle will start immediately.
- If the appliance is unplugged, the auto-brew function will be canceled.

8.Iced coffee brewing


(1)Add ice cubes to the desired mark in the carafe. Please refer to the below table for recommended amount of ice cubes.

Number of cups of coffee	Water in the water tank	Ice cubes in the carafe	Amount of ground coffee
12 cups	6 mark	12 mark	9 spoons
8 cups	4 mark	8 mark	6 spoons
4 cups	2 mark	4 mark	4 spoons
1 spoon=5g of ground coffee			

(2)Place the carafe in the warming plate.

(3)Press the PROG button twice, the ICED indicator light will flash. Then press ON/OFF button to enter iced coffee mode. (Red indicator light flashes with ICED indicator light remains on).

- Note: When ICED flashes for more than 5 seconds and the ON/OFF button is not pressed to start working during this period, then ICED goes out and the iced coffee mode is not selected.

- The keep warm function will not be activated after brewing iced coffee to prevent melting too many ice cubes. The red indicator light and the iced indicator light will go off, the appliance will enter the standby mode.
- To turn off the coffee maker at any time, press ON/OFF button. The red indicator light and the iced indicator light will go off, the appliance will enter the standby mode.
- The brew strength cannot be set in iced coffee mode. If this function has been selected, when the iced coffee brewing cycle begins, it will be canceled. Only  will be displayed.

(4)After brewing, the red indicator light and the ICED indicator light will be off.

HINTS FOR GREAT-TASTING COFFEE

- 1.A clean coffee machine is essential for making delicious coffee. Clean the coffee machine regularly as specified in the "Cleaning and Maintenance" section. Always use fresh, cool water for coffee making.
- 2.Store unused coffee grounds in a cool, dry place. After opening a package of coffee grounds, tightly reseal it and store it in the refrigerator to maintain freshness.
- 3.For optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- 4.Do not reuse coffee grounds, this greatly reduces the coffee's flavor. Keep reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing and needs to drink as soon as possible.
- 5.Regularly cleaning your coffee maker will prevent an oily buildup. A small amount of oil on the surface of brewed coffee is due to the release of oil from roasted coffee beans.
- 6.Heavily-roasted coffee beans release more oil than others.

CLEANING AND MAINTENANCE

CAUTION: Always unplug the appliance and allow the it to cool completely before cleaning. To prevent electric shock, do not immerse the power cord, plug, or the appliance in water or any other liquid. Always remove the plug from the wall outlet after each use.

- 1.Wash all removable parts in hot, soapy water after each use.
- 2.Wipe the exterior of the product with a soft, damp cloth to remove stains.
- 3.During the brewing process, water droplets may accumulate in the area above the funnel and drip onto the base of the product. To control dripping, wipe the area with a clean, dry cloth after each use.
- 4.Gently wipe the warming plate with a damp cloth. Never use abrasive cleaners to clean.
- 5.Store all accessories well for next use.

6. Self-cleaning function

Over time, calcium deposits or scale can build up in your machine, which is non-toxic, but can hinder the machine's performance and cause premature failure. Regularly descaling your machine helps maintain quality coffee as well as the life of the heating element and other internal parts that come in contact with water throughout the brewing process.

- (1) The appliance should be cleaned every 60 brewing cycles (about 2 months). The cleaning alarm will be activated after 60 brewing cycles and will appear before every brewing cycle begins. "CLEA" will scroll three times on the display to remind you cleaning the appliance.
- (2) If the scale is seriously accumulated and you want to clean the appliance before 60 brewing cycles, you can operate as followings:
 - ① Pour 6 cups of vinegar and 4 cups of cold water into the carafe.
 - ② Add the mixture to the water tank.
 - ③ Close the carafe lid well and place the empty carafe on the warming plate.
 - ④ Press and hold the STRONG button for 3 seconds, the "CLEA" on the display scrolls continuously and the red indicator light keeps flashing.
 - ⑤ The "CLEA" on the display scrolls continuously, the self-cleaning begins. The entire cleaning cycle requires 45-60 minutes to complete.
 - ⑥ When the cleaning cycle is completed, the appliance will shut down automatically.

STORAGE

1. Make sure all parts are clean and dry, store the appliance in a cool dry place.
2. If the appliance will not be used for a long time, store it in a box of appropriate size.

WARRANTY: 1 YEAR



AIGOSTAR INC
5220 4TH ST #2 IRWINDALE, CA 91706 US

[HTTP://WWW.TAYLORSWODEN.COM](http://www.taylorswoden.com)
SERVICE_EU@AIGOSTAR.COM
MADE IN CHINA