




MS04

Over Ear Noise Canceling Headphones
User Manual

Package Include

Headphones ×1
Charging cable ×1
Audio cable ×1
User manual ×1
Headphone case ×1

About the Headphones

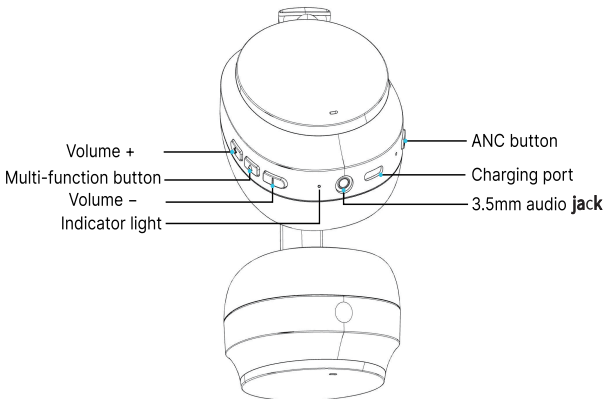

Product Specification

Bluetooth Version: V5.3	Battery Capacity: 500mAh
Usage Time: 80 Hours; 50 Hours(ANC mode)	Charging Time: 2 hours
Distance: 10-20 meters (Line-of-sight)	Speaker Diameter: 40mm
Mic Diameter: $\phi 6\text{mm}$	Impedance: $32\Omega \pm 10\%$
Speaker Sensitivity: $92 \pm 3\text{dB}$	Mic Sensitivity: $-38 \pm 3\text{dB}$
Frequency Response Range: 20Hz-20kHz	Weight: About 274g
Working Environment: $-10-45^{\circ}\text{C}$	

Operation Guide

1. Power on

Long press the multi-function button for 2S, the headphones will startup automatically.

2. Language Switch

Before bluetooth connected, double click the multi-function button quickly, you can switch between English and Japanese voice prompts.

3. Bluetooth connection

Turn on the Bluetooth function of your device, enter the search pairing state and select the "MS04" to pairing. Once connected, the headphone will automatically connect to the latest Bluetooth device when power on.

4. Power off

Long press the multi-function button for 4S, the headphones will turn off.

5. ANC

When power on, click the ANC button to shift between Noise Cancelling Mode/Nomal Mode/Transparency mode.

6. Music/Game mode

Press the multi-function button to select Music/game mode during hear music.

7. Answer/hang up a phone call

Click the multi-function button to answer an incoming call or hang up during a call. Long press the multi-function button to reject a call.

8. Calling for voice assistance

When the headphones connected to mobiles, long press the ANC button for 3S to activate voice assistant at your phone.

9. Previous/next song

Long press the "+" for the previous track; long press "-" button for the next track.

10. Volume adjust

Click the "+" to turn up the volume; click the "-" button to turn down volume.

Warranty Description

Warranty period: 12 months from the date of purchase.

If there is any problem with your purchase, please contact us via email: support@h-sound.com

The following situations are not covered by warranty:

1. Damage caused by self disassembly;
2. Failures caused by water ingress or of falling and considered mechanical damage;
3. Failure or damage caused by force majeure.

Attention

1. This product contains a built-in lithium battery. Do not expose the product to strong sunlight or fire. Dispose of the battery according to local regulations.
2. Do not remove or replace the product battery.
3. Do not disassemble or refit the earphone for any reason as you may damage it or void the warranty.
4. Do not contact with liquid to avoid serious damage to the headphone. earphone.
5. Avoid temperatures above 60°C and below minus 20°C.
6. Avoid exposure to temperatures above 60°C or below -20°C.

