



Item #211-4794 Model # M72WB
Item #211-4795 Model # M72WBTB
Item #211-4796 Model # M72WBTR
Item #211-4797 Model # M72WBW

USE AND CARE GUIDE

72 IN Adjustable Height Workbench With Pegboard

Questions, problems, missing parts?
Before returning to the store, call
1-866-441-5080
9 a.m – 5 p.m., CST, Monday-Friday

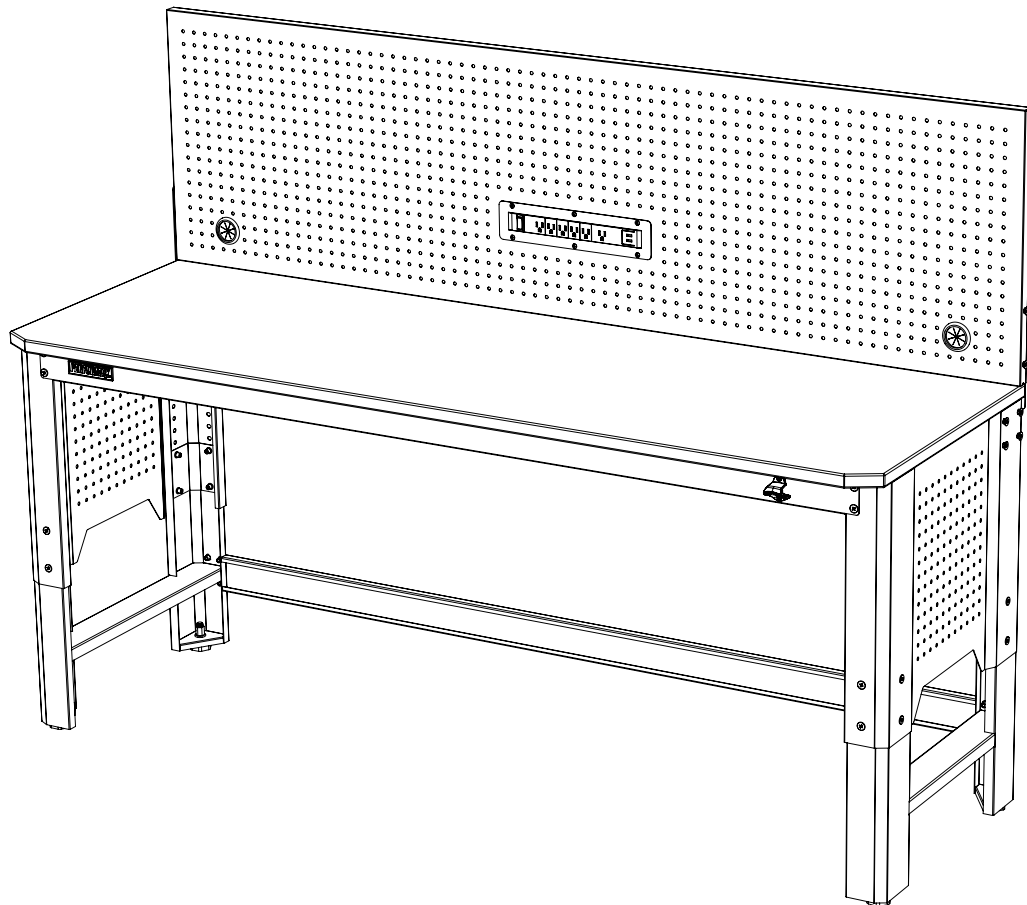


Table of Contents

Table of Contents.....	2	Assembly	6-8
Safety Information	2-3	Operation	9
Warranty	4	Cordless Power Tool Battery Chargers	9
Specifications	4	Maintenance.....	10
Package Contents.....	4-5	Replacement Parts	10

Safety Information

1. Use appropriate safety equipment when using power and hand tools. Failure to do so may cause personal injury or product damage.
2. Obtain the aid of an assistant to assemble and move this unit. Failure to do so may cause personal injury or product damage.
3. This product is intended for indoor use only.
4. Do not alter this product in any manner. This product is not designed for commercial or industrial use.
5. Check all bolts periodically and tighten if needed.



CAUTION: indicates a hazardous situation which, if not avoided, could result in product damage or personal injury.



CAUTION: Read and follow all Safety Rules and Operating Instructions before first use of this product.



CAUTION: Do not attach or mount this product to a vehicle or mobile trailers. This may cause personal injury or product damage. Mounting this product to any vehicle or mobile trailers in any manner will void warranty.



CAUTION: Do not stand on this product. You may fall which may cause personal injury or product damage.



CAUTION: Keep the product on level surfaces. The product may become unstable and tip if stored or moved on an unlevel surface, which may cause personal injury or product damage.

7. Extension cord

- ❑ Follow all manufacturers' Warnings and Operating Instructions for your extension cord.
- ❑ Do not insert extension cord through hole without grommet in place.
- ❑ Only use a three-wire extension cord with all three prongs intact. Never remove the round grounding prong.
- ❑ Extension cord must be connected to a 125 Volt GFCI protected outlet with proper ground. If GFCI outlet is not available, use an extension cord with GFCI protection built in.
- ❑ Check the insulation and plugs of extension cord before using. Do NOT use cord if it is worn or damaged.
- ❑ Do NOT overload extension cord.
- ❑ Remove extension cord from the hole before moving or transporting storage cabinet.
- ❑ Only use an extension cord that is rated for outdoor use.
- ❑ Do NOT connect extension cord to outlet that also supplies critical safety equipment with power.

8. Electrical Shock Hazard

- ❑ Do not plug cord into outlet with wet hands.
- ❑ Do not use this product near a bathtub, a shower, or a swimming pool.
- ❑ Product plugs must match the outlet.
- ❑ Never modify the plug in any way.
- ❑ Do not use any adapter plugs with earth (grounded) cabinet power strips.
- ❑ Unmodified plugs and matching outlets will reduce the risk of electric shock.
- ❑ Avoid body contact with earthed or grounded surfaces. There is an increased risk of electric shock if your body is earthed or grounded.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ❑ Reorient or relocate the receiving antenna.
- ❑ Increase the separation between the equipment and receiver.
- ❑ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❑ Consult the dealer or an experienced radio/TV technician for help.



CAUTION: RISK OF ELECTRICAL SHOCK: This unit has one power supply cord. Make sure the cord is unplugged before any servicing or cleaning.

Limited Lifetime Warranty

PERFORMAX® Workbenches are warranted to be free from defects in materials and workmanship under normal use for the lifetime that you own the product. If any part of the product is found to be defective during normal use, the defective product or part will be replaced at our discretion. This warranty does not cover products that are damaged through accident, abuse, misuse, commercial/industrial applications or neglect. This warranty also does not cover any losses, injuries or costs including indirect, incidental or consequential damages. This warranty may not be transferred or sold. When requesting warranty service please call 1-866-441-5080 and have the model number, cash register receipt and the date of purchase available when you call. If the product is defective, we will replace the defective part at no cost to you. Some states do not allow the exclusion or limitation of incidental damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state to state.

Specifications

Workbench Maximum Load Capacity	2000 lbs.
---------------------------------	-----------



NOTE: Begin product assembly close to the final intended location of your workbench. This product is heavy and may be difficult to move after assembly.

Package Contents

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.




ALTERNATIVE TOOLS FOR ASSEMBLY (Not Included)



Part	Description	Quantity
AA	M6x12 Screw	73
BB	M4x12 Screw	2
CC	Leveling Feet	4



Package Contents (continued)

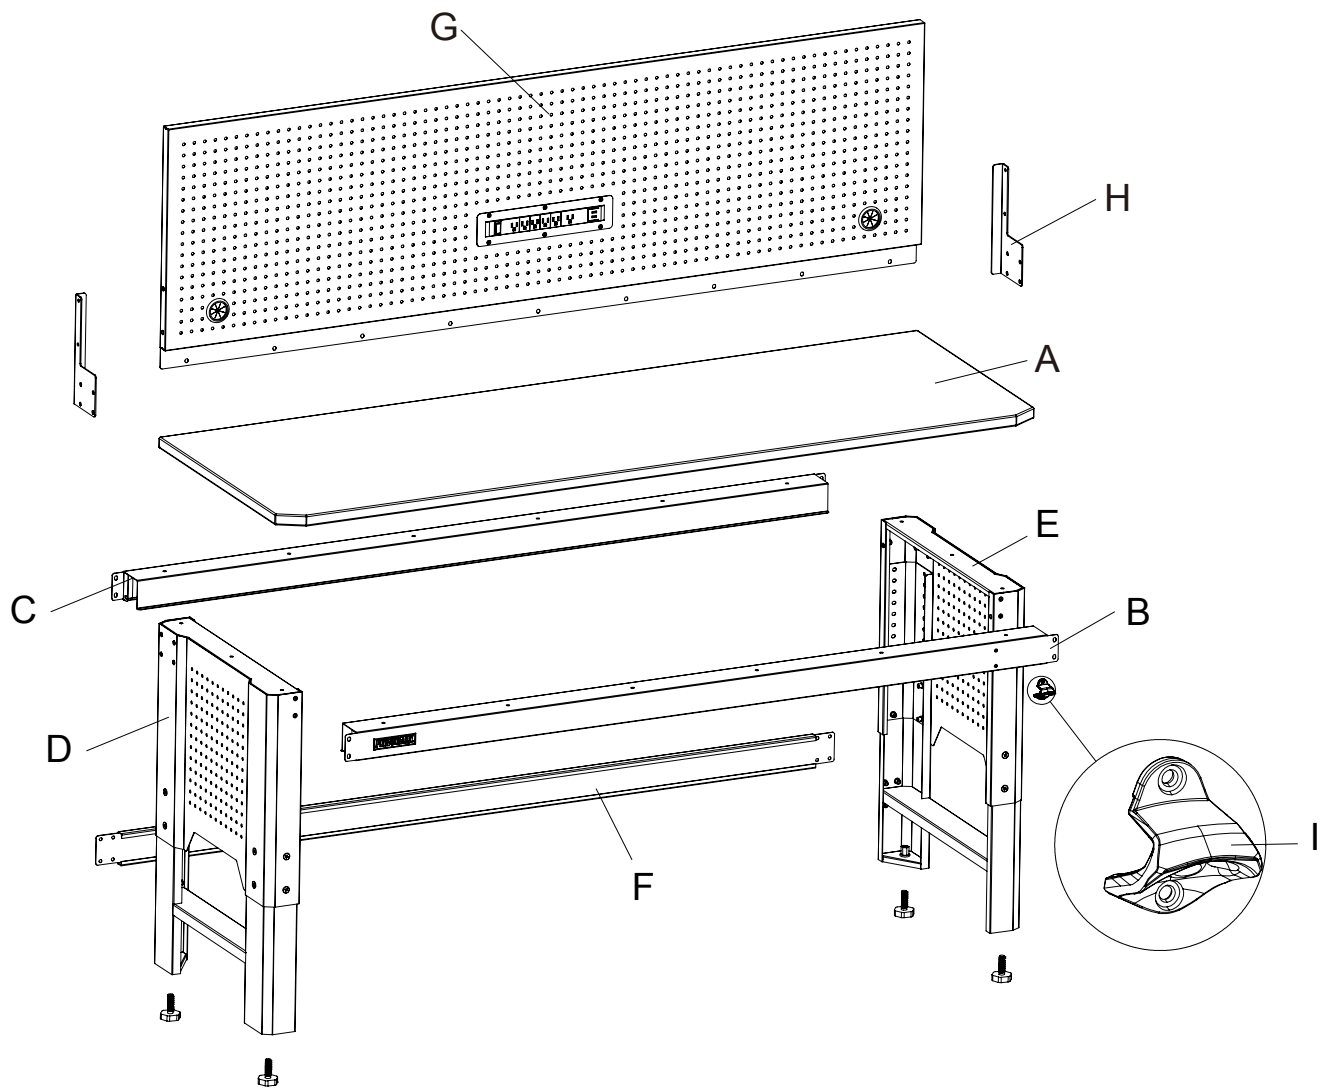

Part	Description	Quantity	Part	Description	Quantity
A	Workbench Wood Table	1	F	Back Rail	1
B	Front Crossbar	1	G	Pegboard	1
C	Rear Crossbar	1	H	L bracket	2
D	Left Leg Panel	1	I	Bottle Opener	1
E	Right Leg Panel	1			



Assembly




CAUTION: Two people are recommended for assembly.

1 Unpacking instructions

- After opening shipping box, remove protective cardboard from the top of the wood table and place cardboard on the floor.
- With the aid of an assistant, remove wood table and lay topside down on cardboard to protect the wood from scratching.
- Remove the remainder of workbench parts from shipping box. Check parts and hardware against the PARTS and HARDWARE lists on the next page. If parts or hardware are missing, please call 1-866-441-5080 for assistance.

2 Attaching the Leveling Feet

- Attach the four Leveling Feet (CC) to the Left (D) and Right Leg Panels (E) and tighten.

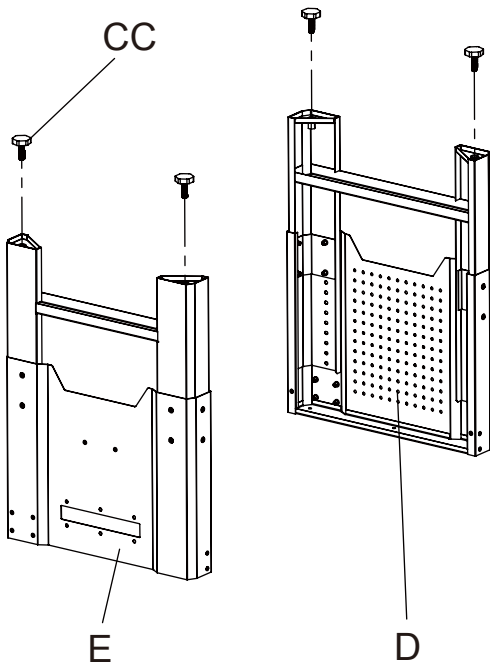


3 Workbench Height Adjustment

The Leg Panels are pre-set for a total workbench height of 36 inches (not including leveling feet).


The Leg Panels can be adjusted to alter the workbench height from 32 inches to 42 inches.

- Completely unscrew the Screws (AA) from each Leg Panel as shown in figure below.
- Raise or lower the leg bottoms to the same position in the leg channels on each Leg Panel.
- Insert and securely tighten the previously removed screws.
- Ensure 8 Screws (AA) are used to secure the Leg Panels.

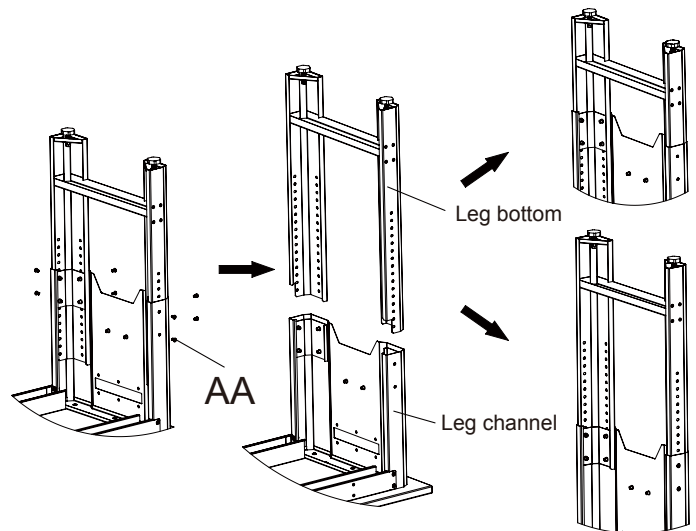


4 Attaching the Wood Table

- Determine the front and back of table. Leg Panels must be attached to the table with Back Rail attachment holes to the back of table.
- Attach the Left (D) and Right Leg Panels (E) to the underside of the Workbench Table (A):
- Align the pre-drilled holes in Table with holes in top of Legs.
- Partially tighten 3 Screws (AA) through each Leg into the Table as shown in the figure below. Do not fully tighten the Screws to allow for proper installation of the Crossbar attachments.

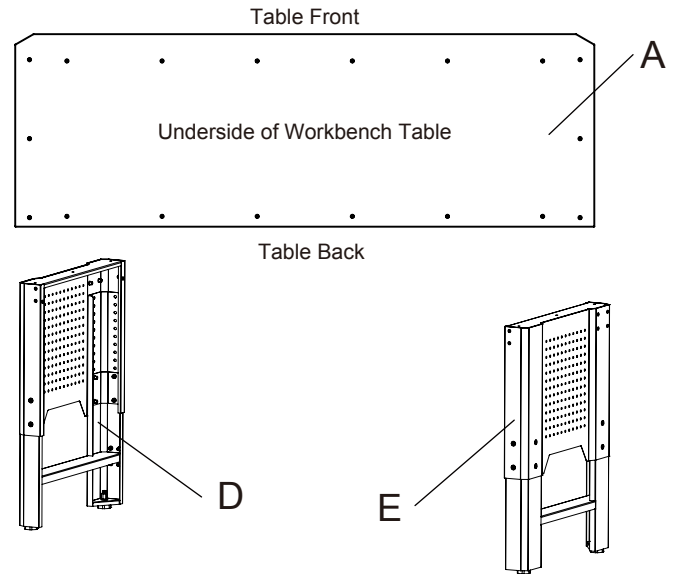

5 Attaching the Crossbars

- The Front Crossbar (B) has PREFORMAX badge.
- Attach Front Crossbar (B) to front of Table and Rear Crossbar (C) to back of Table
- Align the pre-drilled holes in Table with holes in Crossbar length.
- Partially tighten Screws (AA) through each Crossbar (B,C) into Table .
- Align Crossbar (B,C) end holes with holes in Left and Right Legs (D, E).
- On each end of Crossbar, partially tighten screws (AA) through Crossbar holes into Leg holes as shown in figure below. Note: The Crossbar end flanges must be attached so that they are on the outside of the Leg Panels.
- Go back and tighten all Screws (AA)

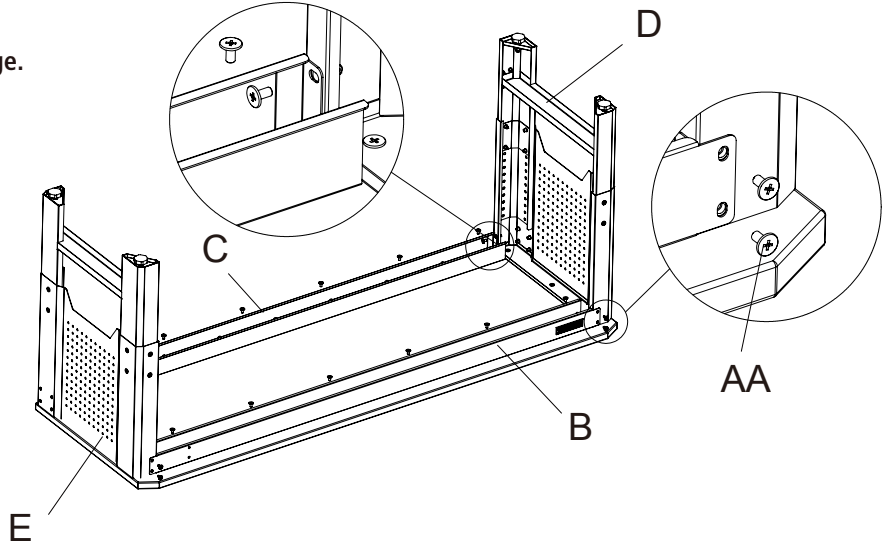


CAUTION: Ensure all Screws are properly tightened before flipping the Workbench over.

6 Attaching the Back Rail


- Attach Back Rail (F) to back of Left and Right Leg Panel (D,E). Align Back Rail end holes with holes in back of Left and Right Legs.
- Install and tighten 4 Screws (AA) through Back Rail end holes into Leg holes as shown in figure below.

Note: The Back Rail end flanges must be attached so that they are on the outside of the Leg Panels.

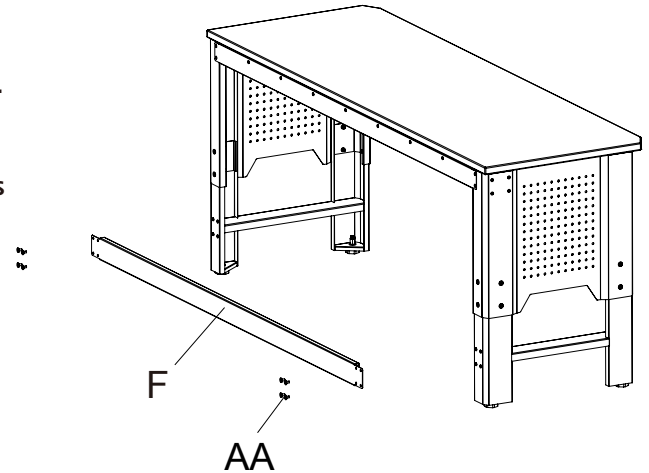


7 Attaching the Pegboard

- With the help of another person, carefully lift the Pegboard (G) into the upright position as shown.
- Align Pegboard (G) end holes with holes in Rear Crossbar (C).
- Install and tighten 11 Screws (AA) through Pegboard (G) holes into Rear Crossbar (C) holes as shown in the figure.

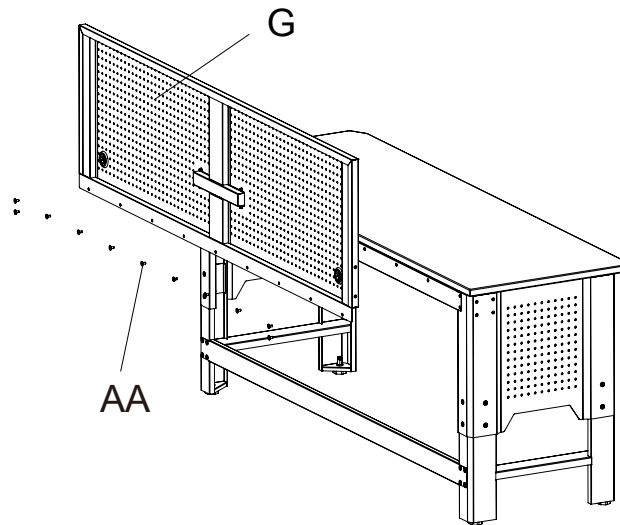


8 Attaching the L bracket

- Position the L-bracket (H) over the holes on the Pegboard (G) and the workbench.
- Tighten 6 Screws (AA) through the L-bracket (H) into Pegboard (G) and the workbench.
- Repeat this process for the other side of the Pegboard (G) to attach it to the workbench.
- Once the L bracket is attached, go back and fully tighten all screws.

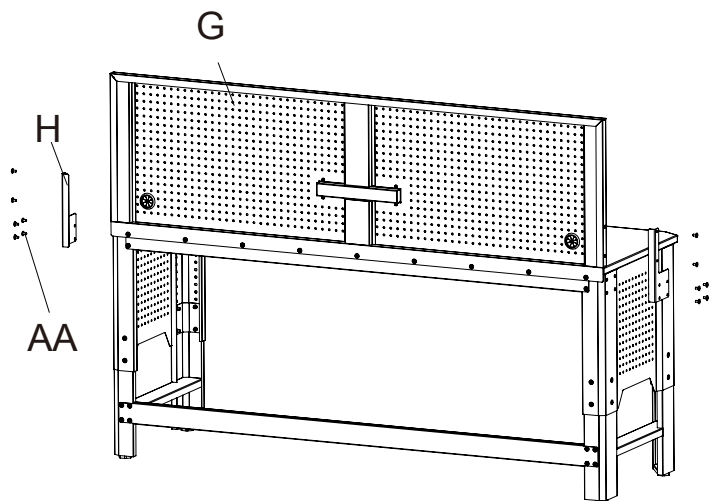

9 Attaching the Bottle Opener


- Tighten 2 Screws (BB) through the Bottle Opener (I) holes into Front Crossbar (B) holes as shown in the figure.

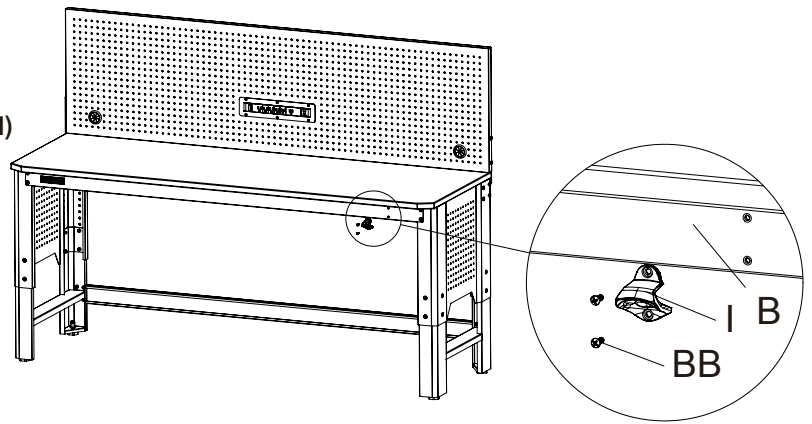

Operation

1 Leveling Foot Adjustment

- Adjust leveling position by turning the foot nut left to raise and right to lower the foot.

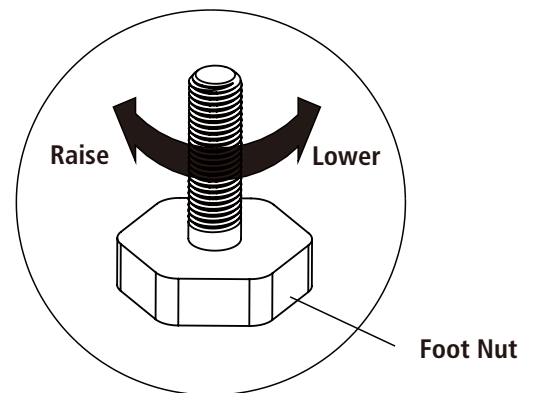

Cordless Power Tool Battery Chargers


- See Charger's Owner's Manual for proper use and care of charger and batteries. Follow all Warnings and Instructions provided with your battery charger.
- Chargers are for use in dry locations only. Do NOT expose to liquid, vapor, or rain. Should your charger become wet, Do NOT attempt to use. Unplug extension cord from supply before handling wet charger or cords.
- Only use chargers and batteries that are intact and operating properly.
- Do NOT touch metal prongs when plugging charger into extension cord.
- Keep flammable materials like paper or rags away from charger, cords or connections.
- Do NOT place or attempt to charge lead acid, car type batteries.

Maintenance

- Periodically the surfaces should be cleaned with a mild detergent and water.

Replacement Parts

For assistance with replacement parts please call 1-866-441-5080.

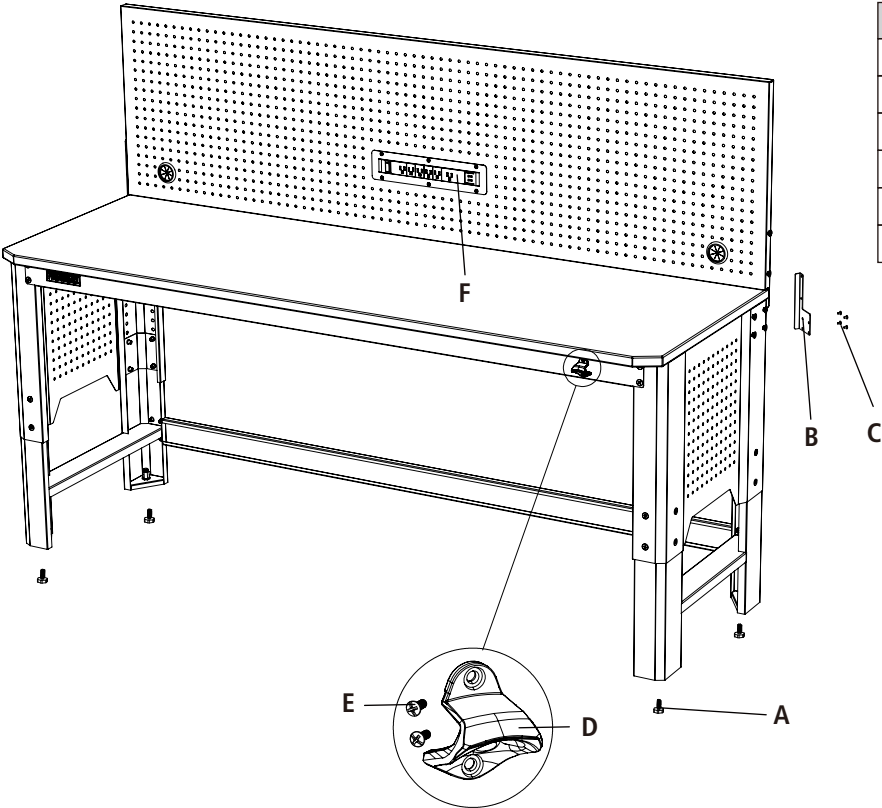

Part	Description	Quantity
A	Leveling Feet	4
B	L bracket	2
C	M6x12 Screw	73
D	Bottle Opener	1
E	M4x12 Screw	2
F	Power Strip	1

