 
 


730-0958HE(NG only)

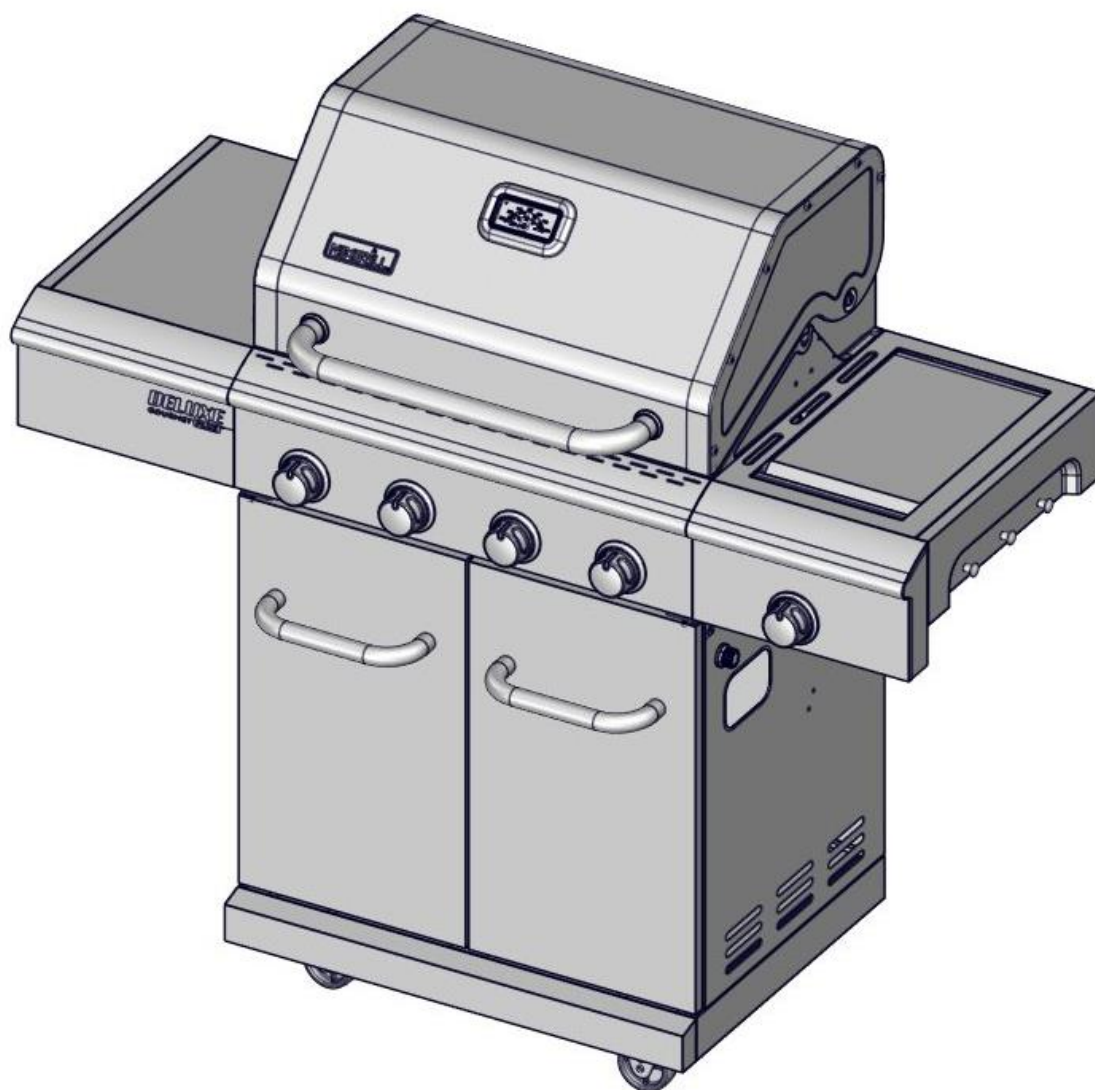 


Package parts List


1

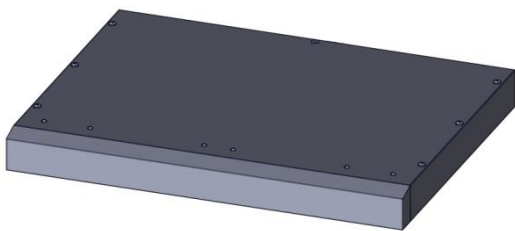


2

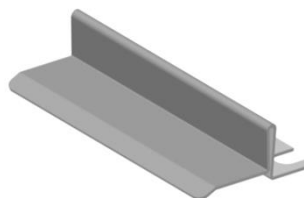


3

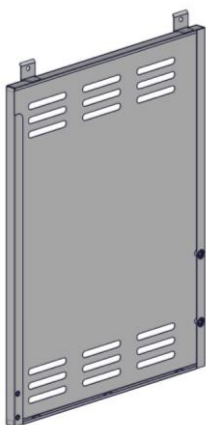 


4

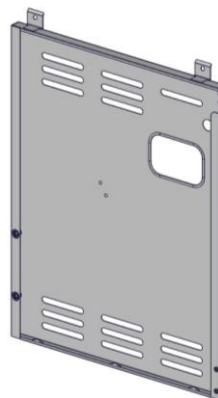 


5

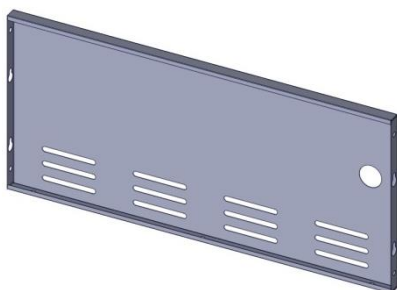 

6

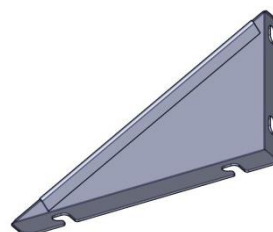 


7

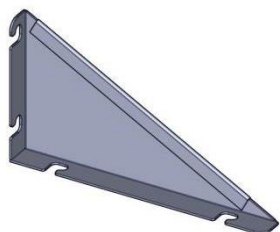 


8



 9

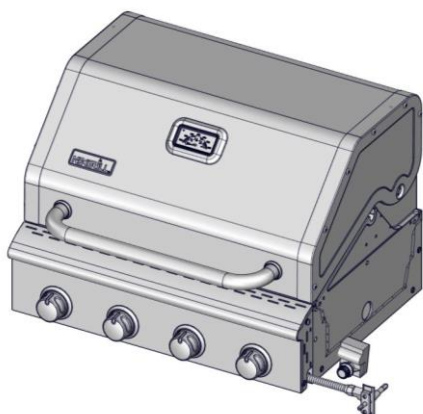


10

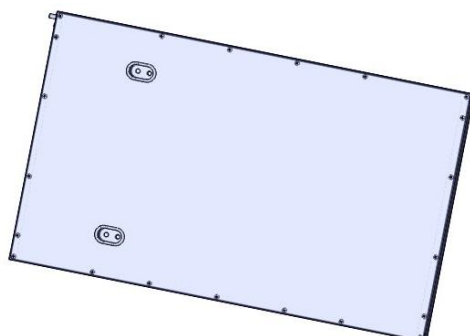 

Package parts List

 11

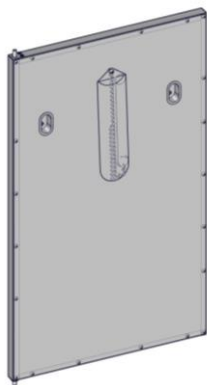


12 x2




13



 
14

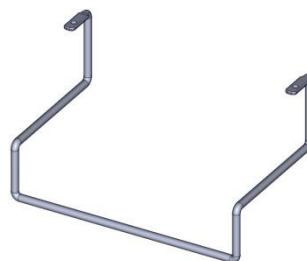


15

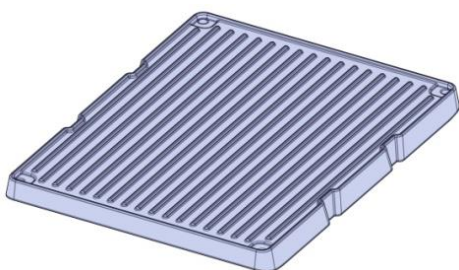 

16

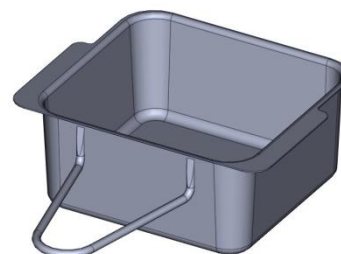 

17

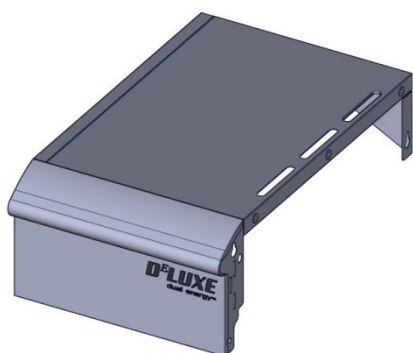 

18



19

 


20




Package parts List


21

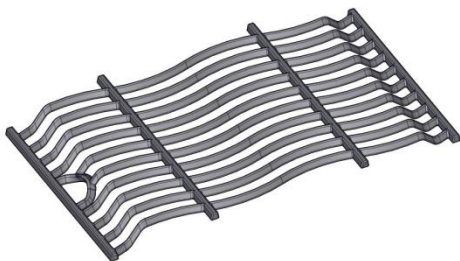


22

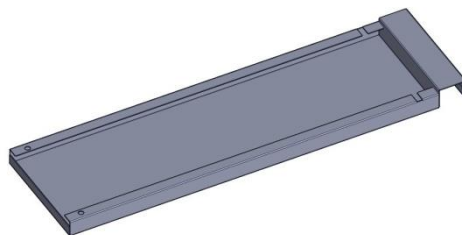 


23 (x4)

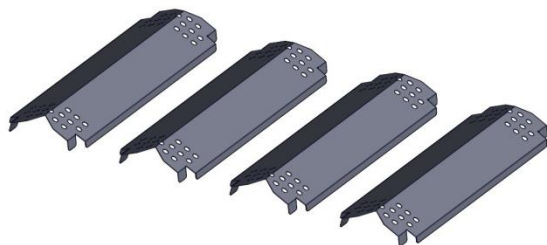 

24 (x2)

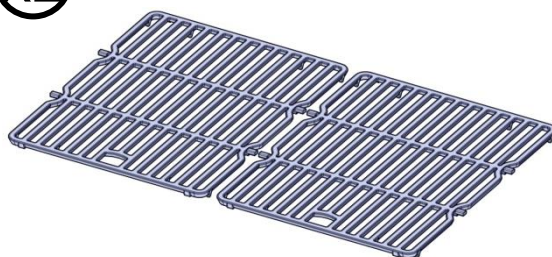 


25

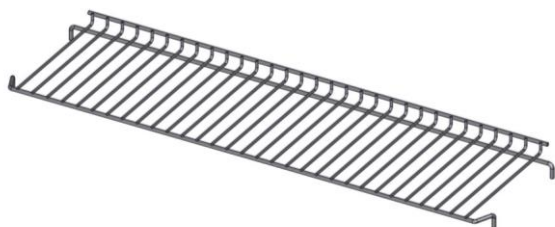 


26



 
27

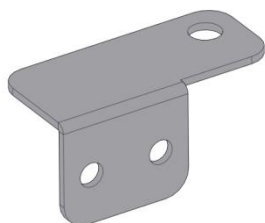

28

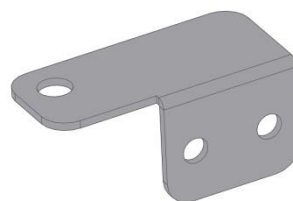 


Parts Diagram

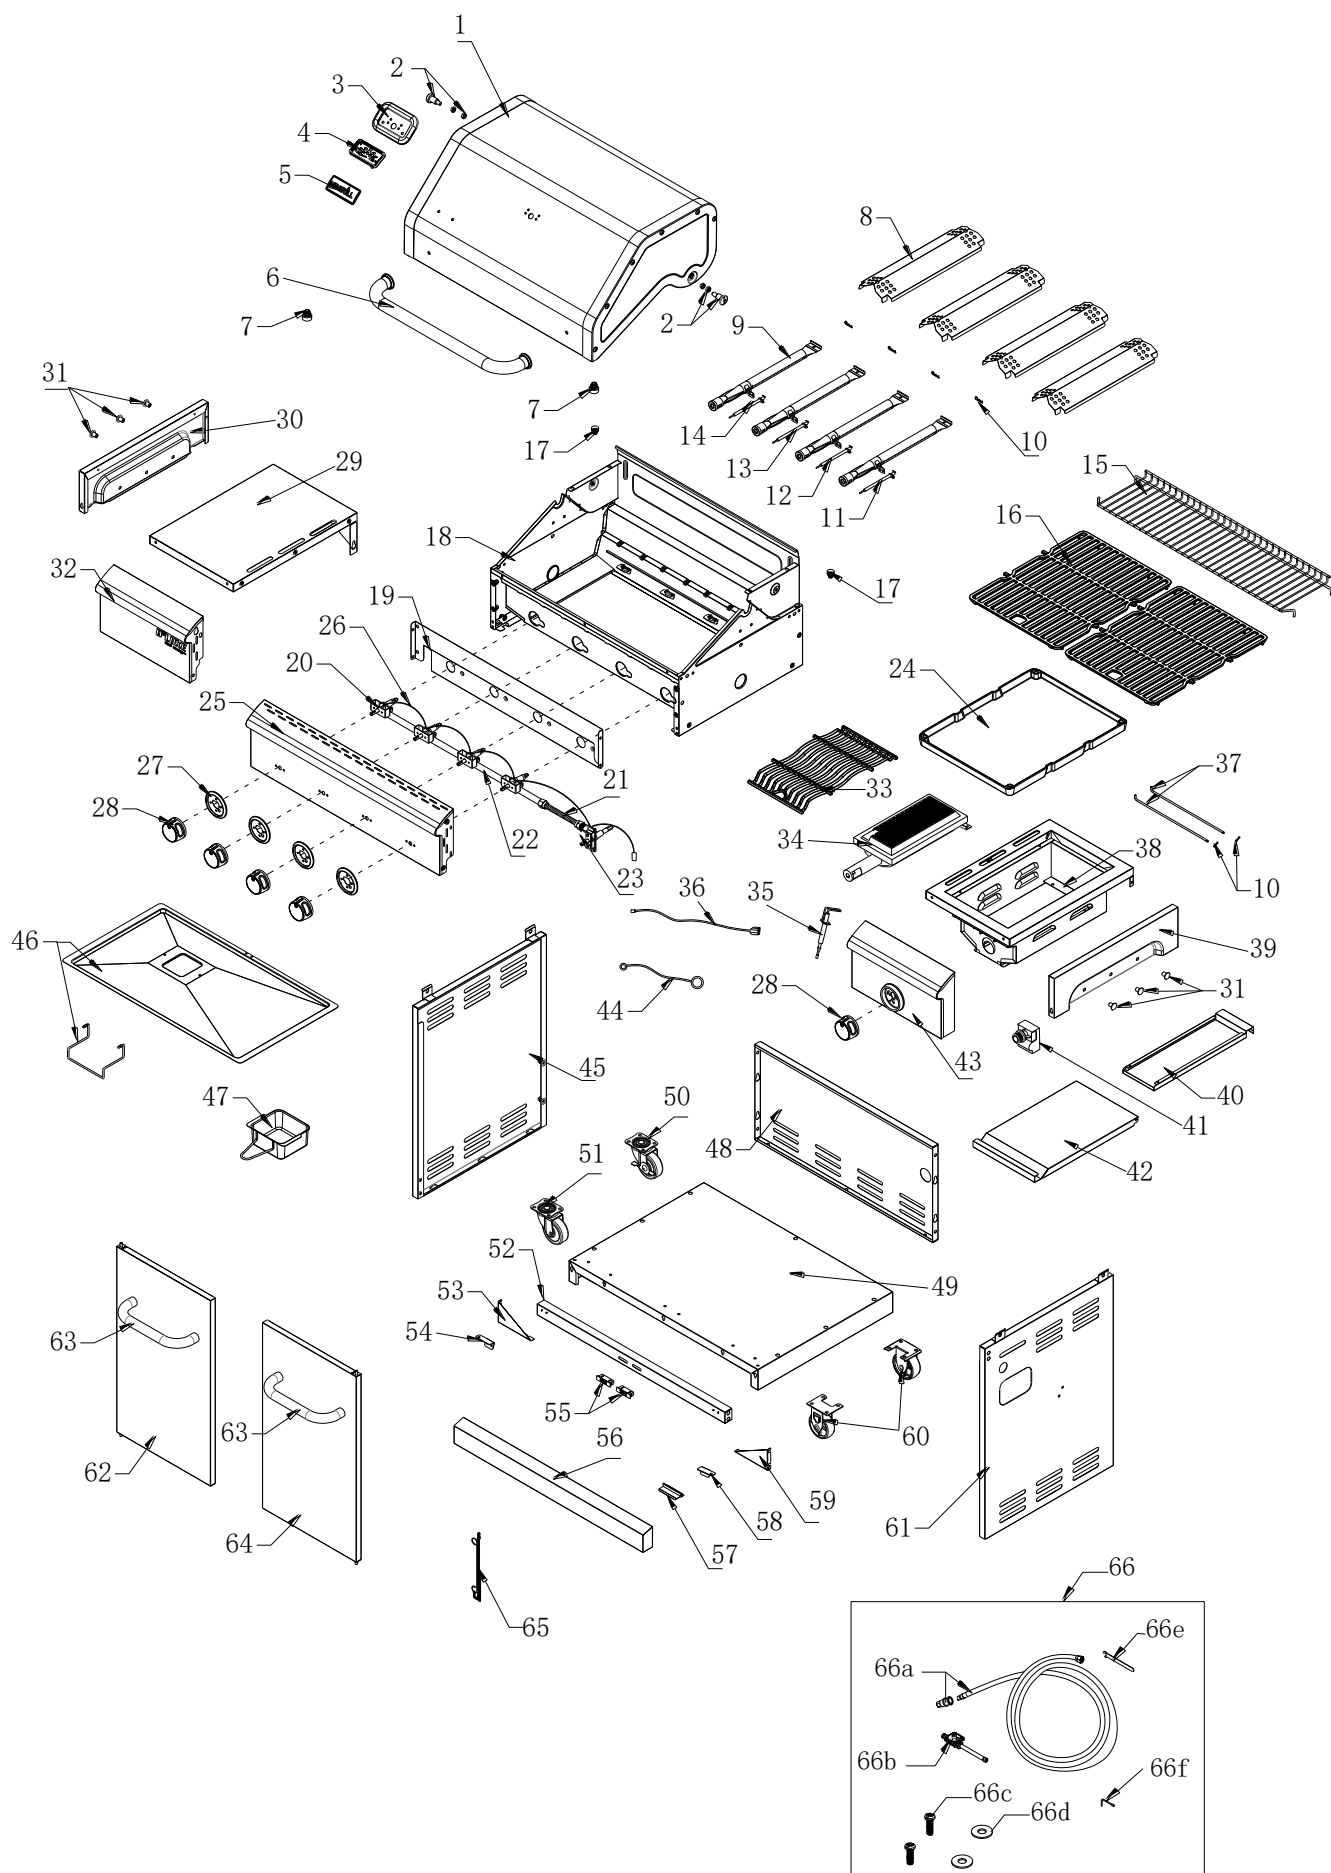 

Parts List

No.	Part (Description)	QTY	No.	Part (Description)	QTY
1	Main lid	1	37	Searing side burner lid hinge rod	2
2	Main lid screw	2	38	Searing side burner bowl assembly	1
3	Temperature gauge Housing	1	39	Side burner shelf trim piece	1
4	Temperature gauge	1	40	Searing side burner grease tray	1
5	Logo	1	41	Pulse igniter module	1
6	Main lid handle assembly	1	42	Searing side burner lid	1
7	Hood buffer A	2	43	Searing side burner control panel	1
8	Flame tamer	4	44	Grounding wire	1
9	Main burner	4	45	Side panel, left	1
10	Burner pin assembly	6	46	Grease tray assembly	1
11	Main burner igniter wire A	1	47	Grease box	1
12	Main burner igniter wire B	1	48	Rear panel	1
13	Main burner igniter wire C	1	49	Bottom panel	1
14	Main burner igniter wire D	1	50	Swivel caster with brake	1
15	Warming rack	1	51	Swivel caster	1
16	Cooking grid with hole	2	52	Cart frame, front	1
17	Hood buffer B	2	53	Triangle bracket, left	1
18	Main burner bowl assembly	1	54	Door hinge fixed plate, left	1
19	Front baffle	1	55	Door magnet	2
20	Main gas valve	4	56	Bottom panel trim piece	1
21	Searing side burner flex gas line	1	57	Door iron piece	1
22	Main manifold	1	58	Door hinge fixed plate, right	1
23	Searing side burner gas valve	1	59	Triangle bracket, right	1
24	Cooking griddle	1	60	Caster	2
25	Main control panel	1	61	Side panel, right	1
26	Switch cord assembly	1	62	Door, left	1
27	Control knob bezel	4	63	Door handle	2
28	Main burner control knob	5	64	Door, right	1
29	Side shelf, left	1	65	Lighting rod	1
30	left side shelf trim piece	1	66	NG conversion kit	1
31	Tooling hook	6	66a	NG gas hose with quick connector assembly	1
32	Side shelf control panel	1	66b	NG regulator assembly	1
33	Searing side burner cooking grid	1	66c	Truss head screw with lock	2
34	Searing side burner	1	66d	Flat washer	2
35	Searing side burner igniter wire pin	1	66e	6mm Wrench	1
36	Searing side burner igniter wire	1	66f	6mm Nut Driver	1

 
Tools Needed

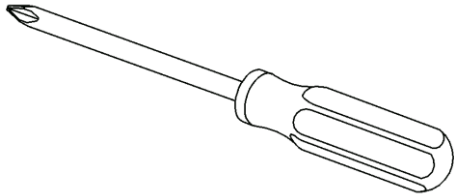


Some parts come with Screws pre-installed.
Loosen and tighten for final assembly.

Hardware package list

 
Truss Head Screw
1/4-20 x 5/8 "

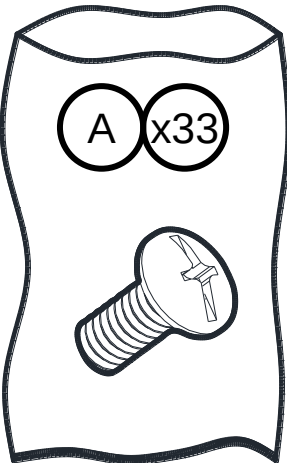


Truss Head Screw
5/32-32x 3/8 "

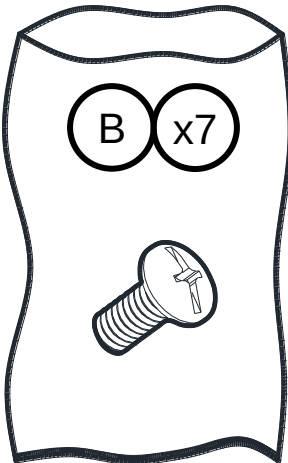 



Flat Washer
1/4"

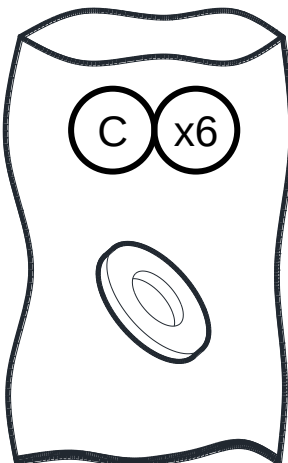 


Flat Washer
5/32"

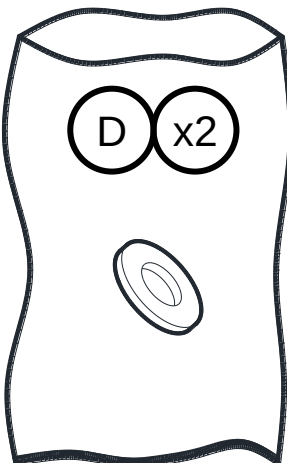 


1 !

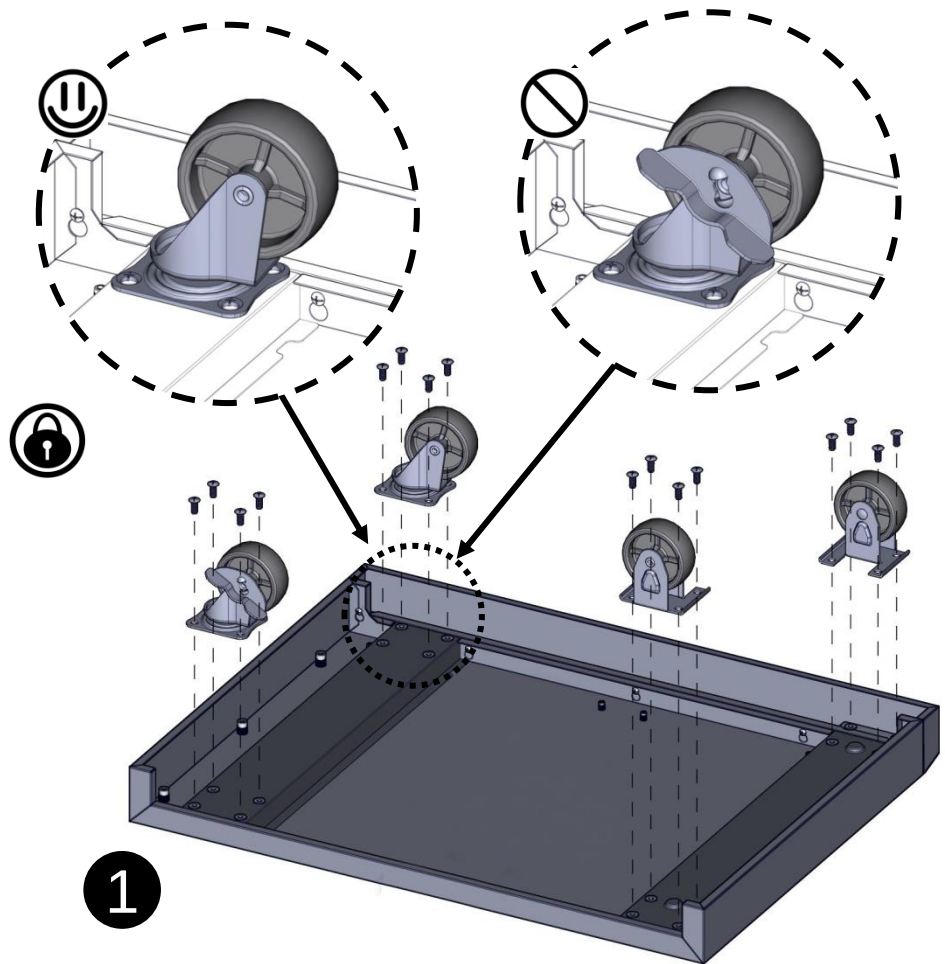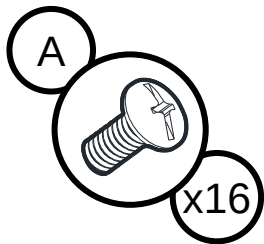  


2


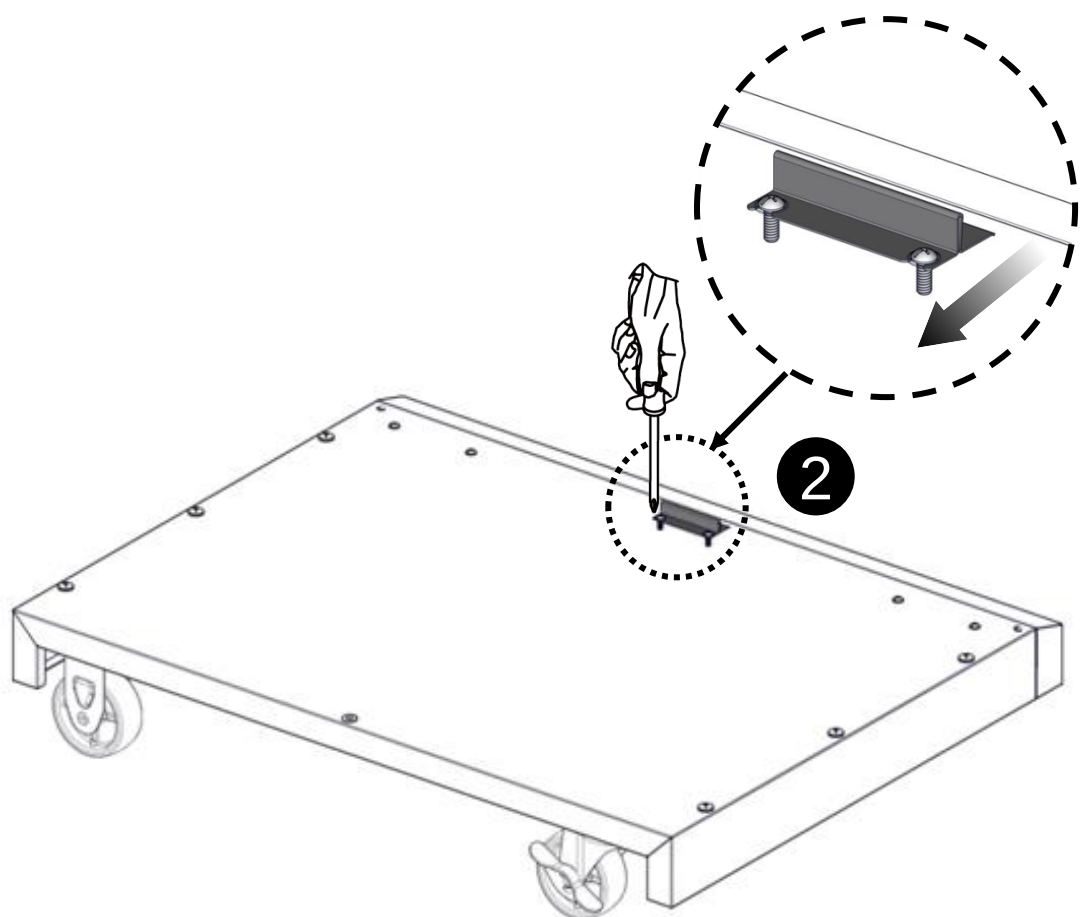 


3

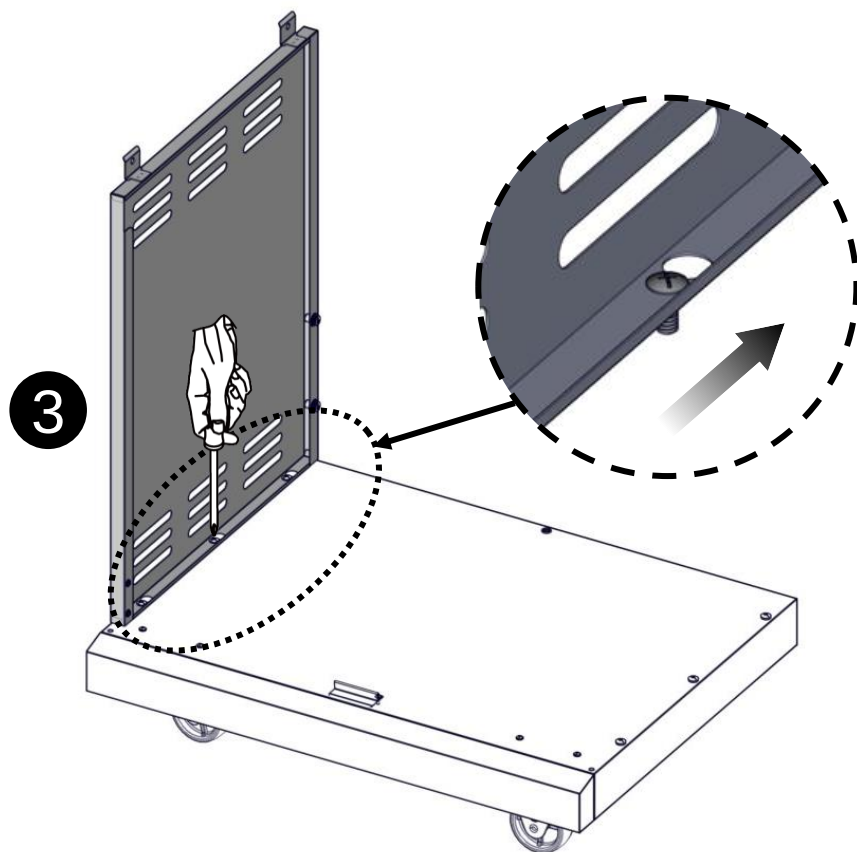 


4


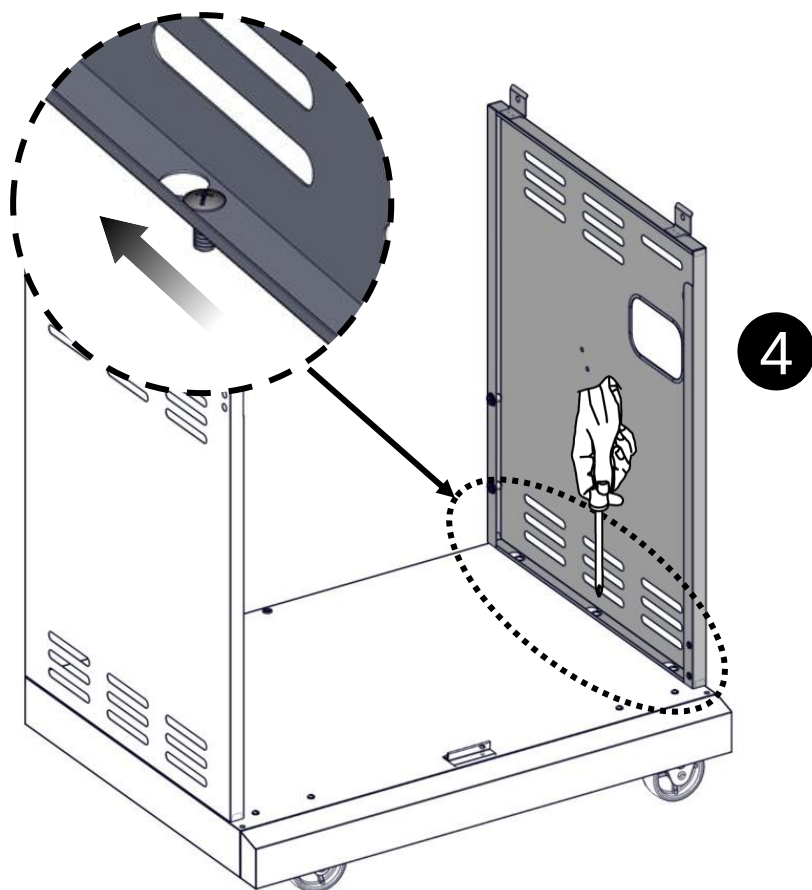 


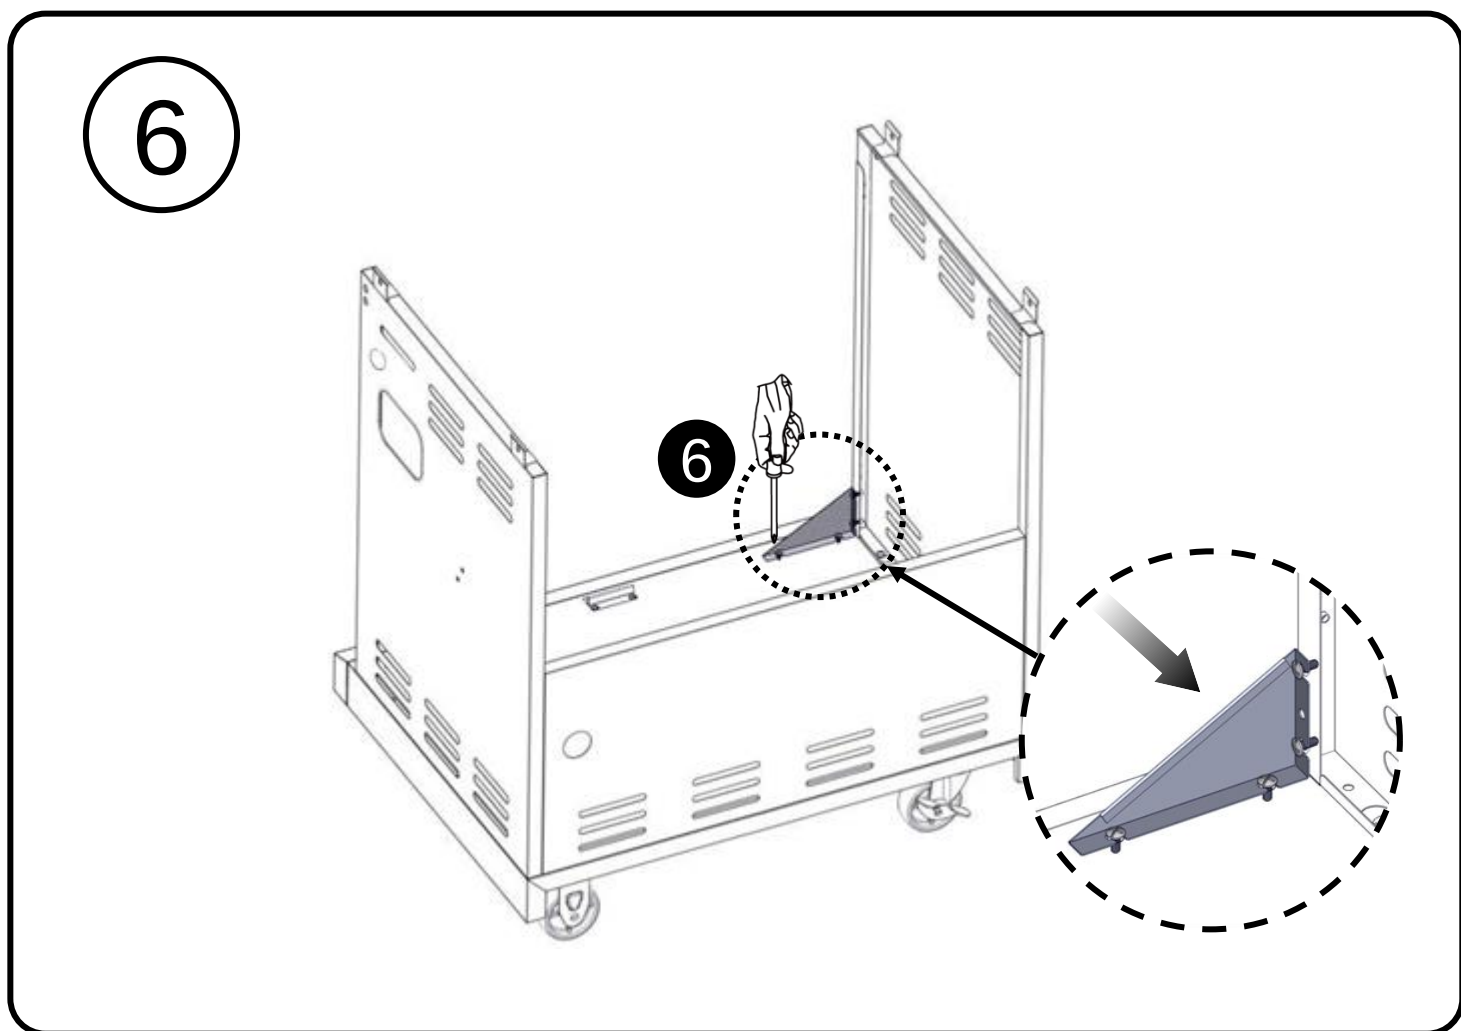 
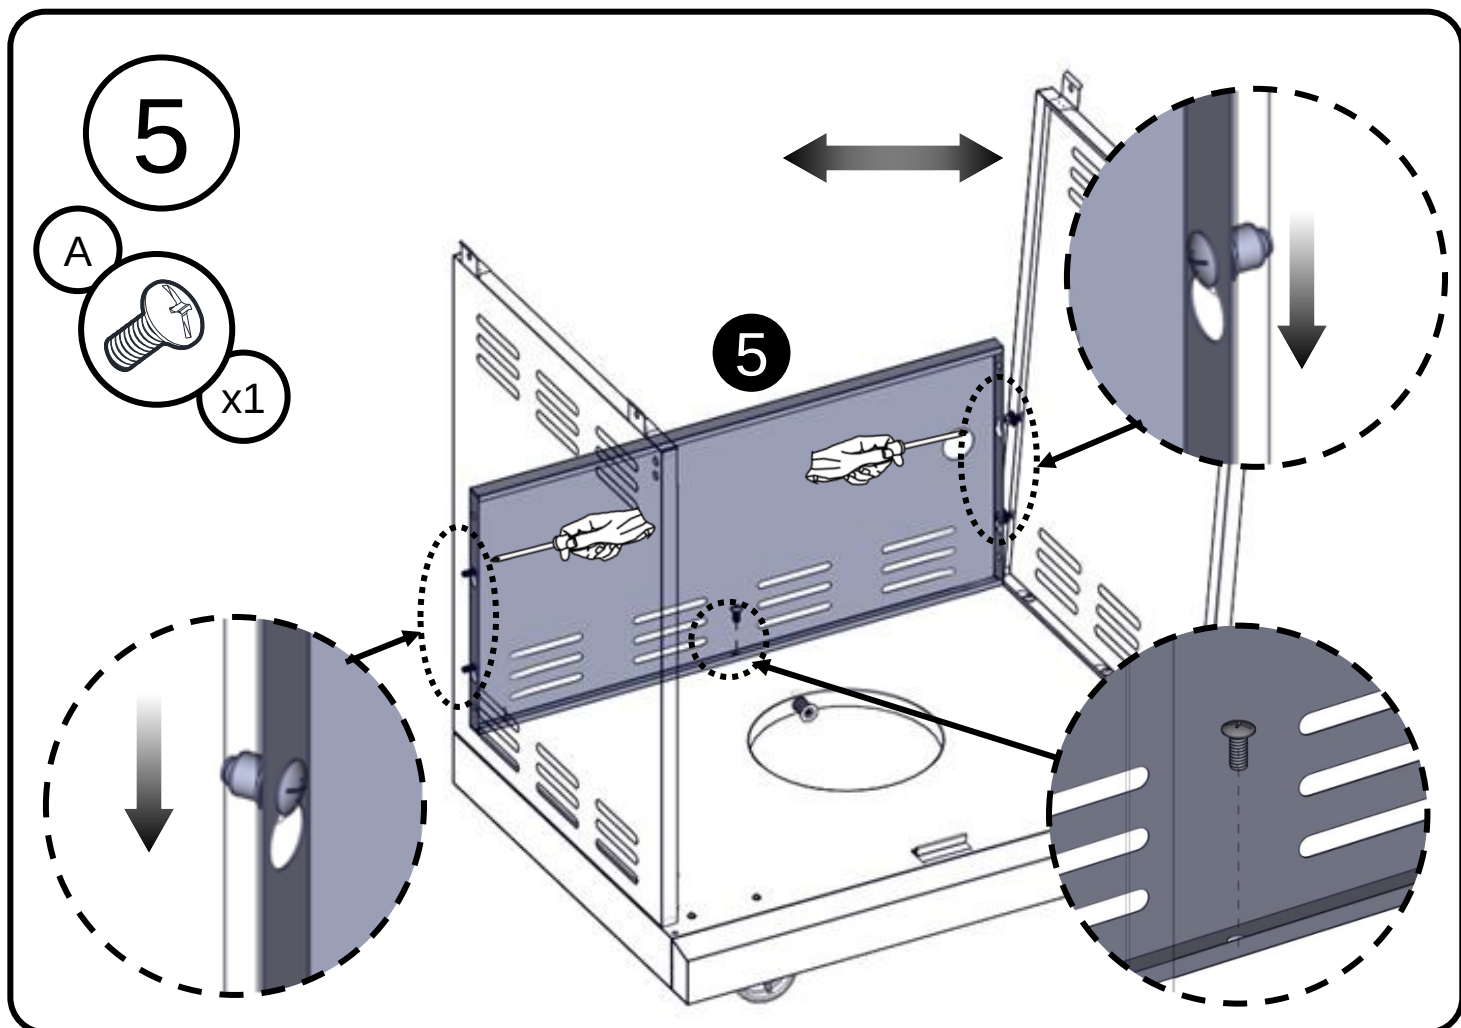 




7

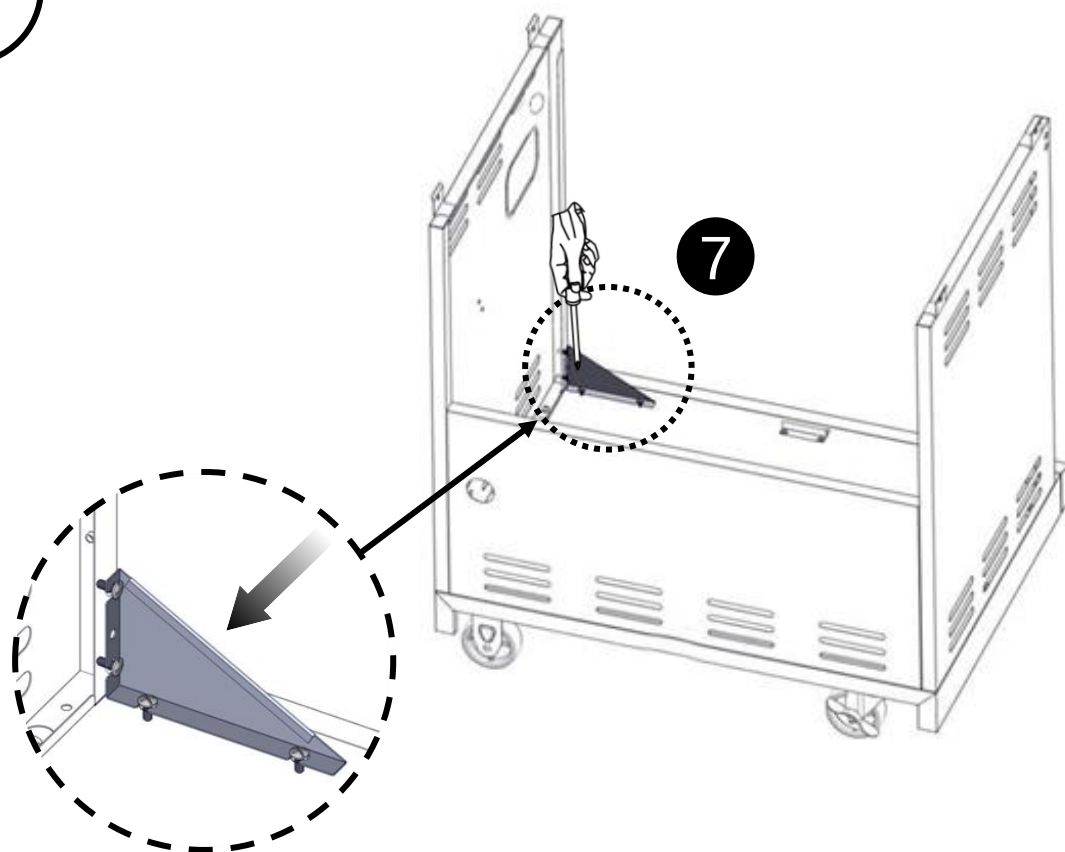 


8

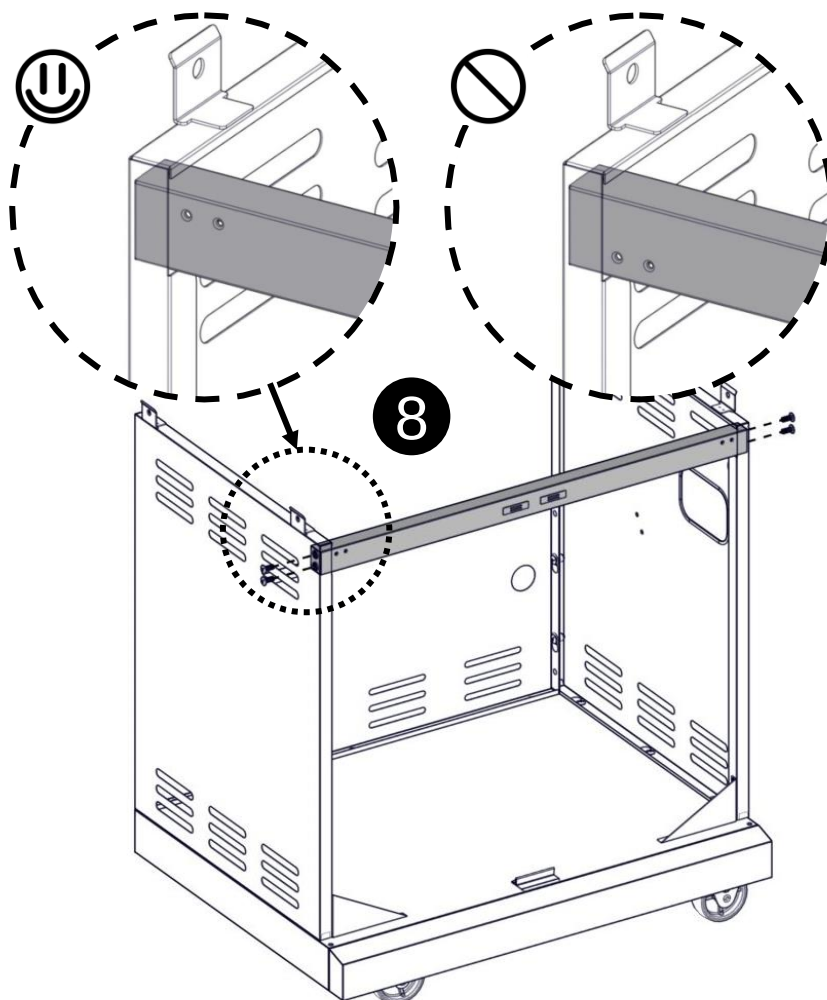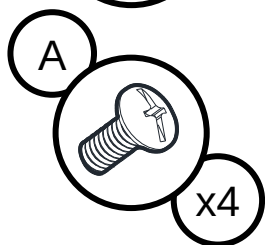  

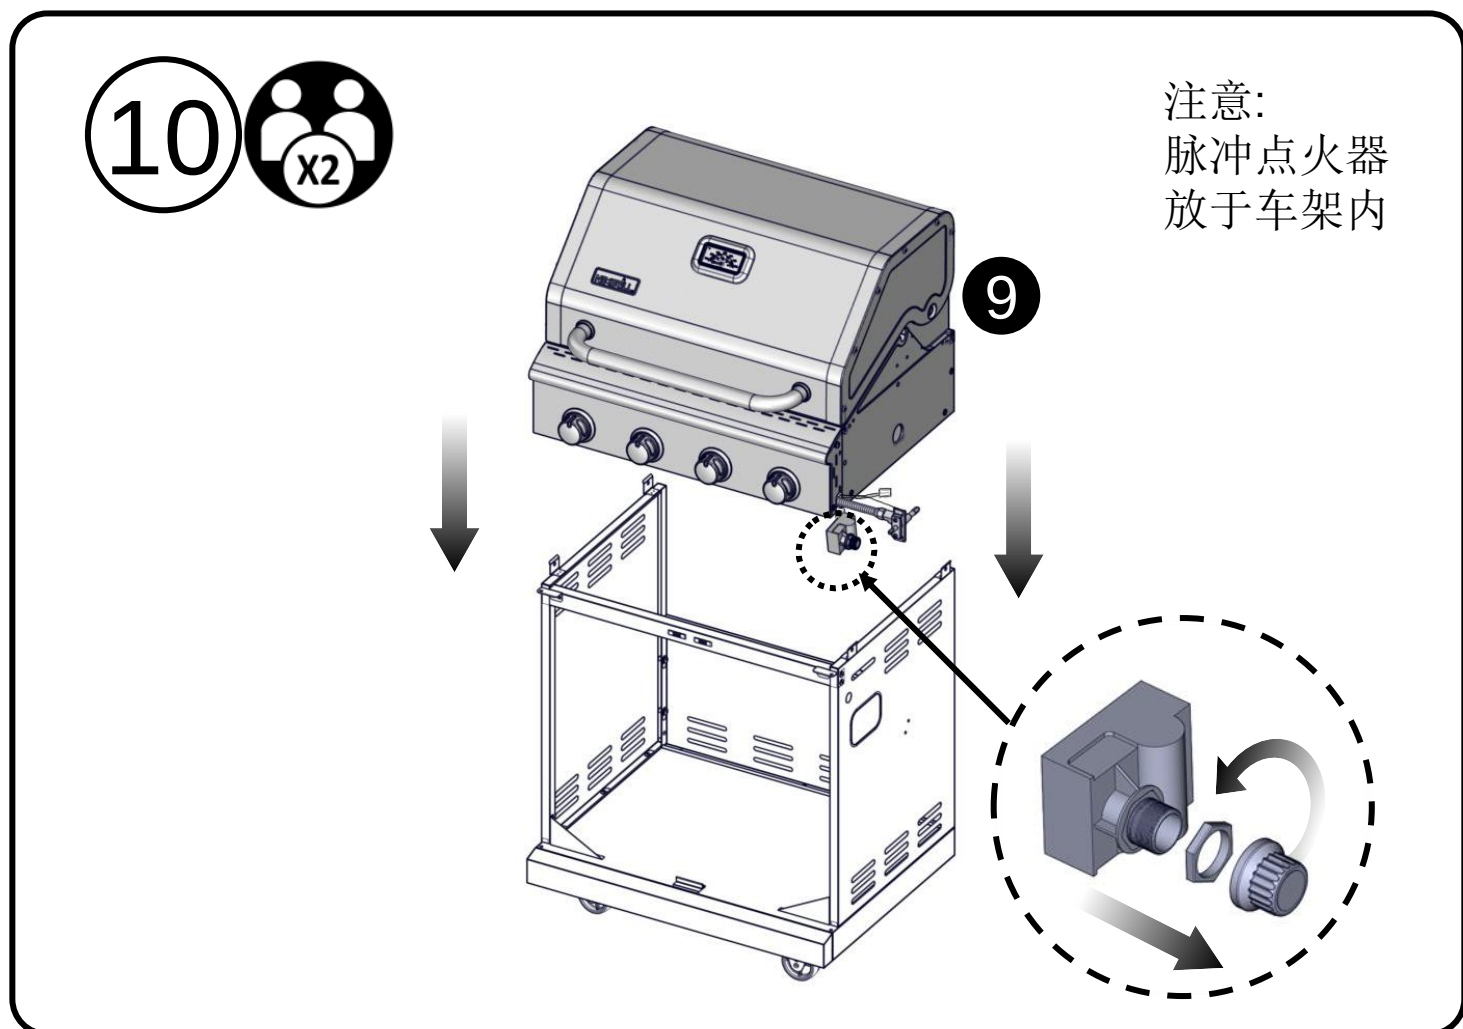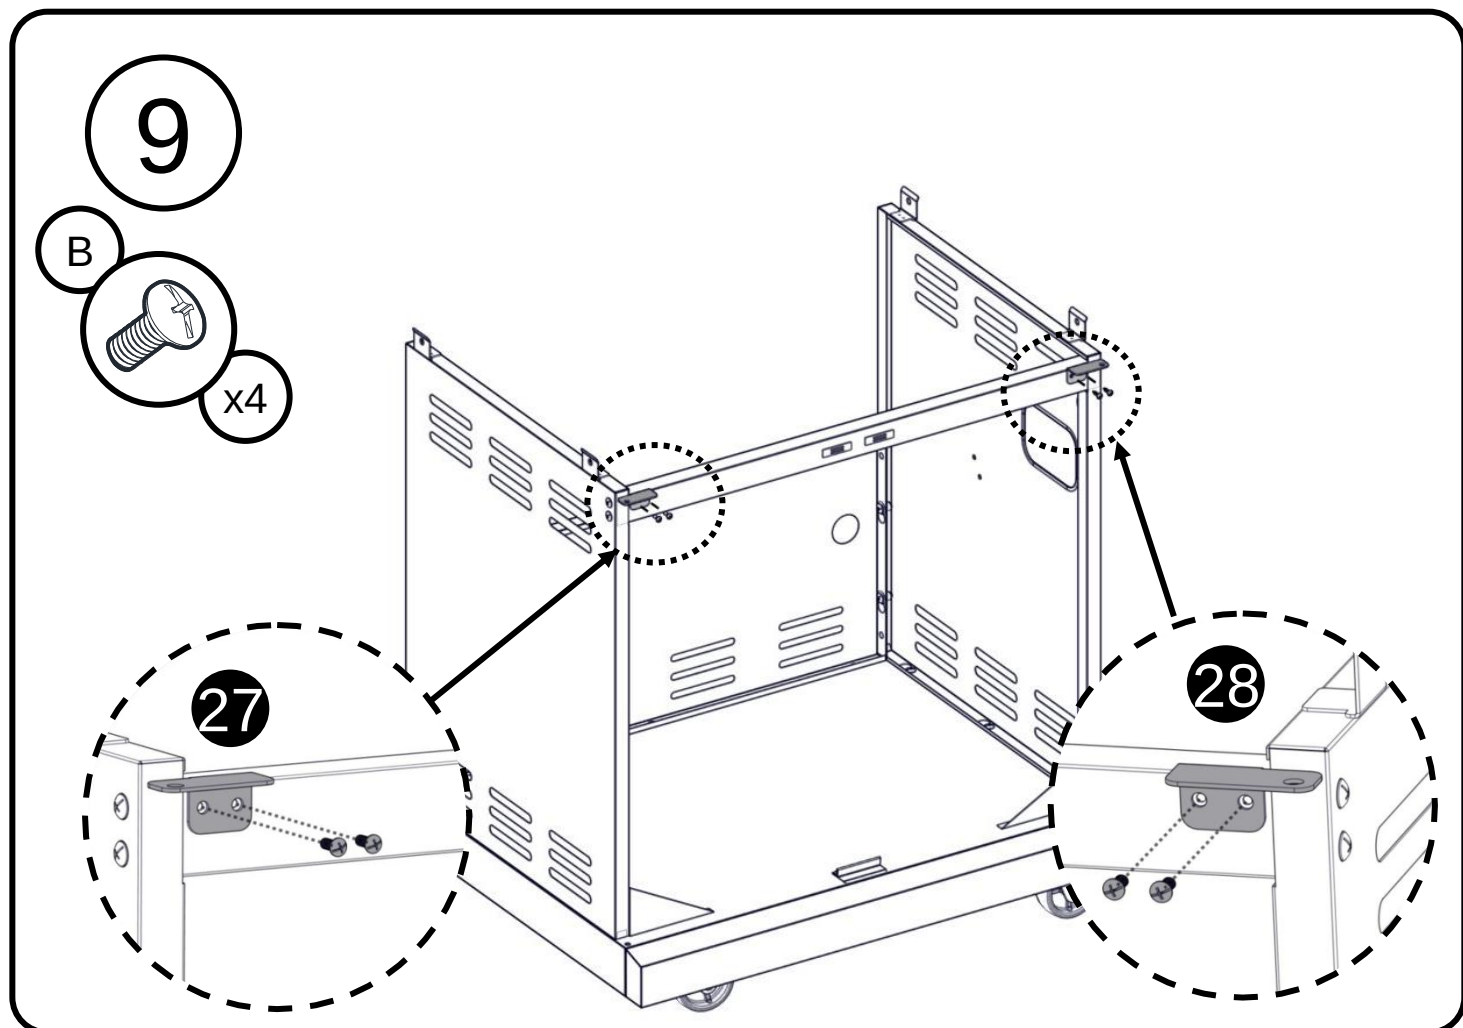  


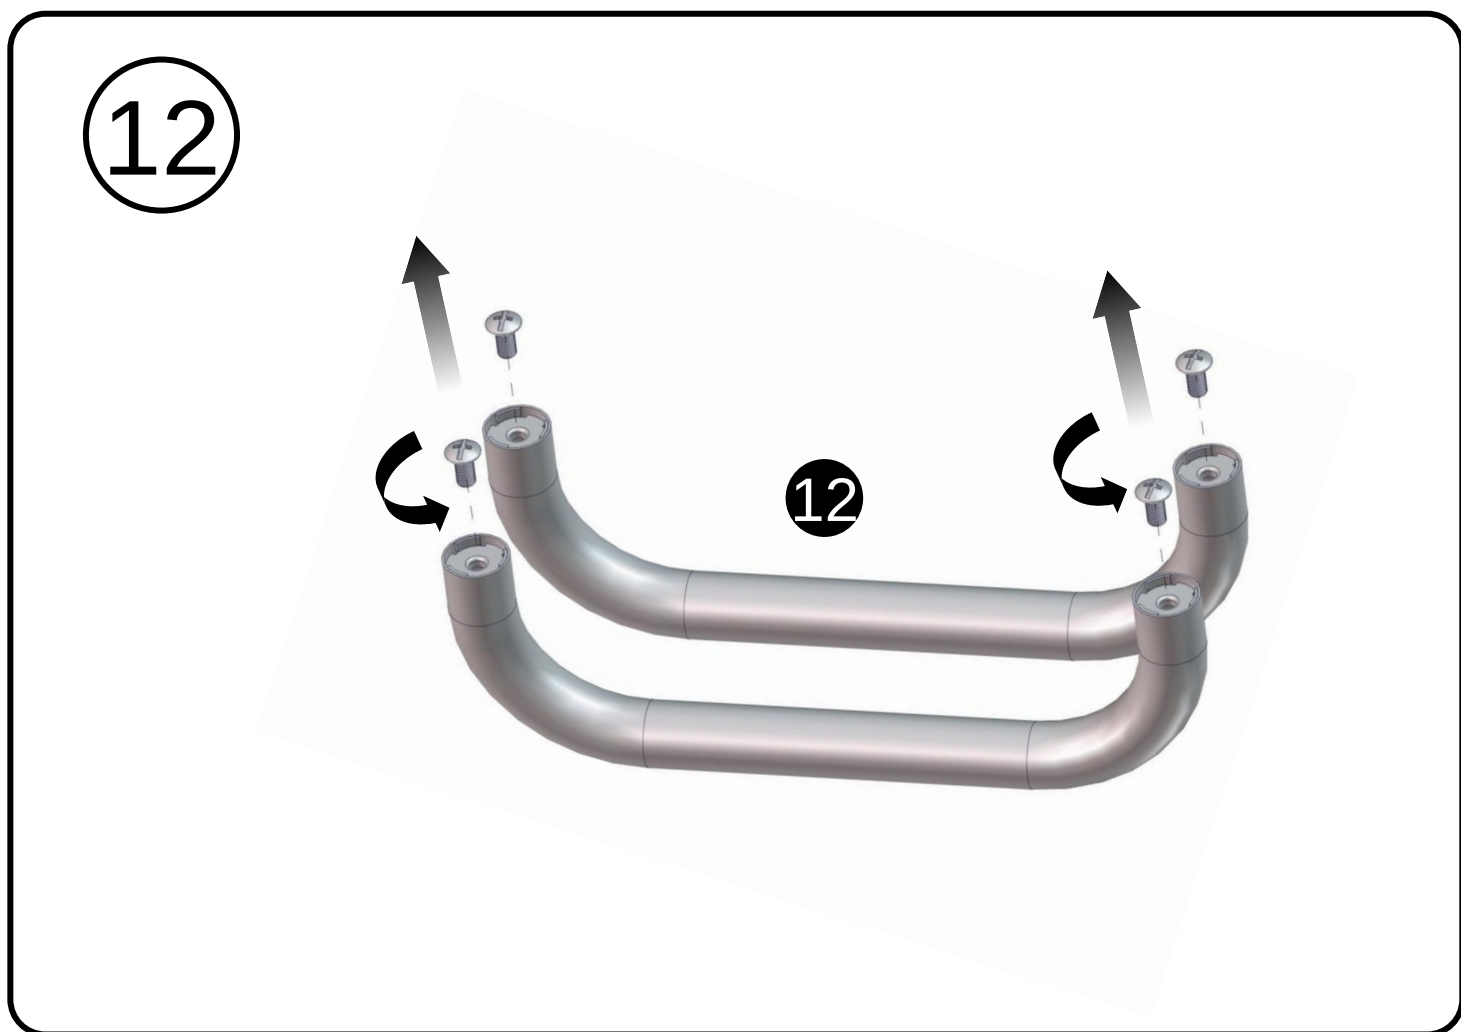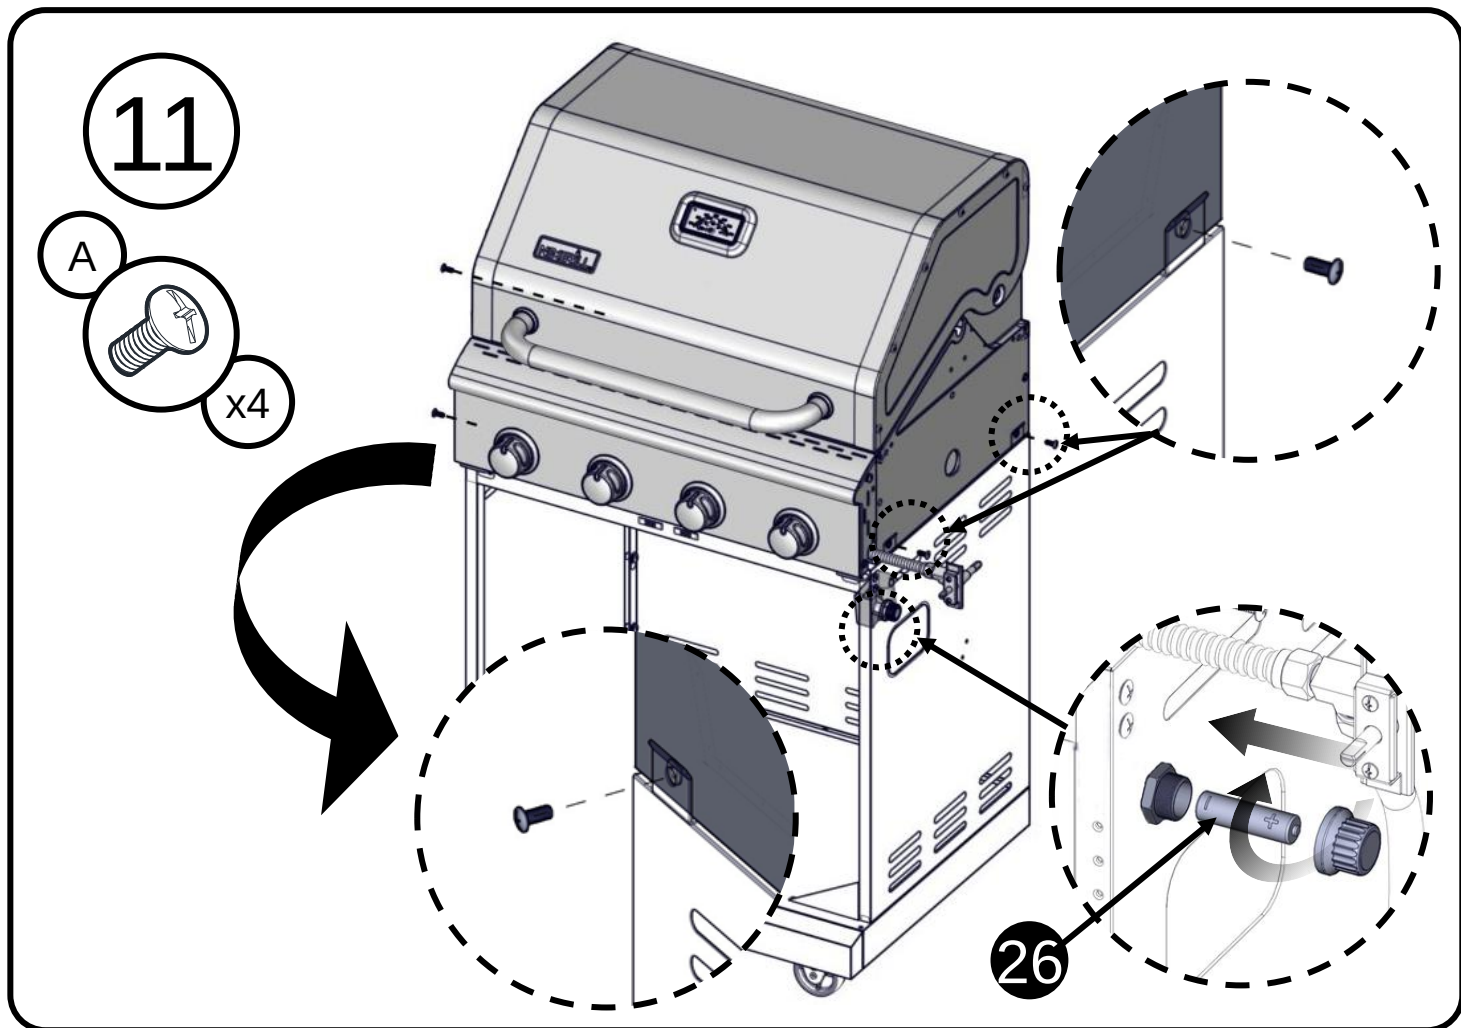  


13

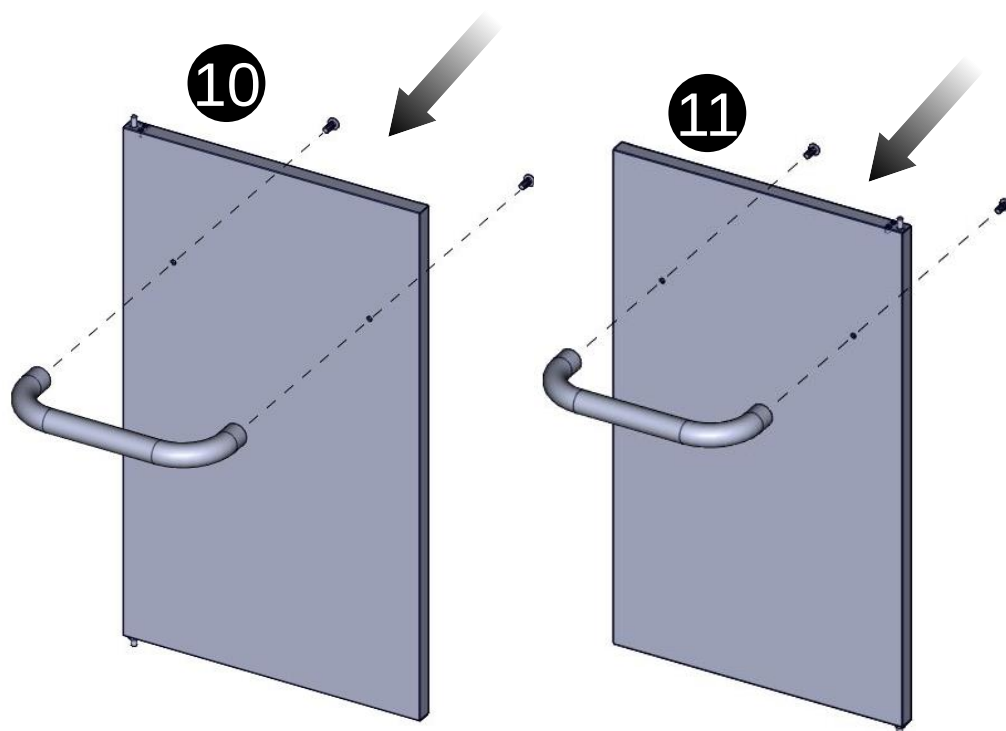 



14

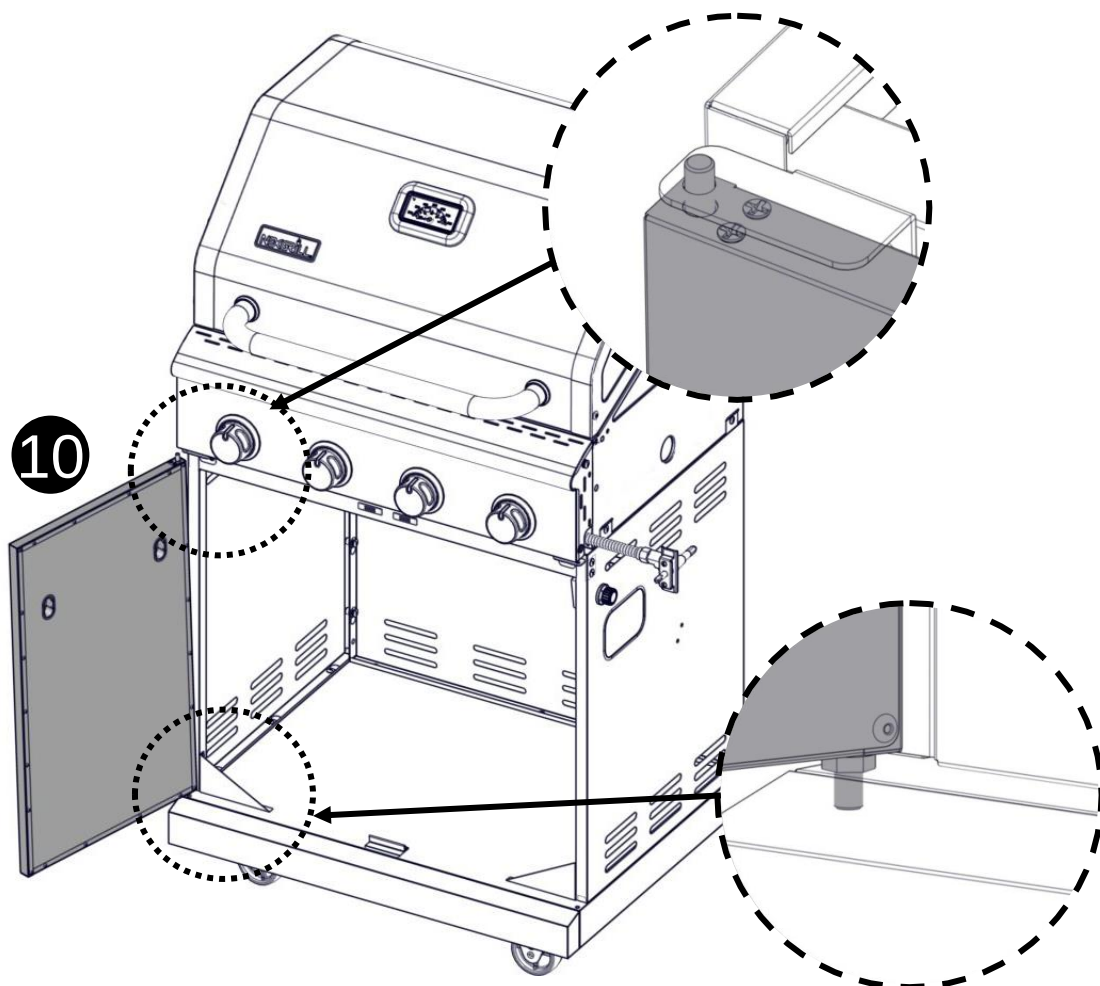 


15

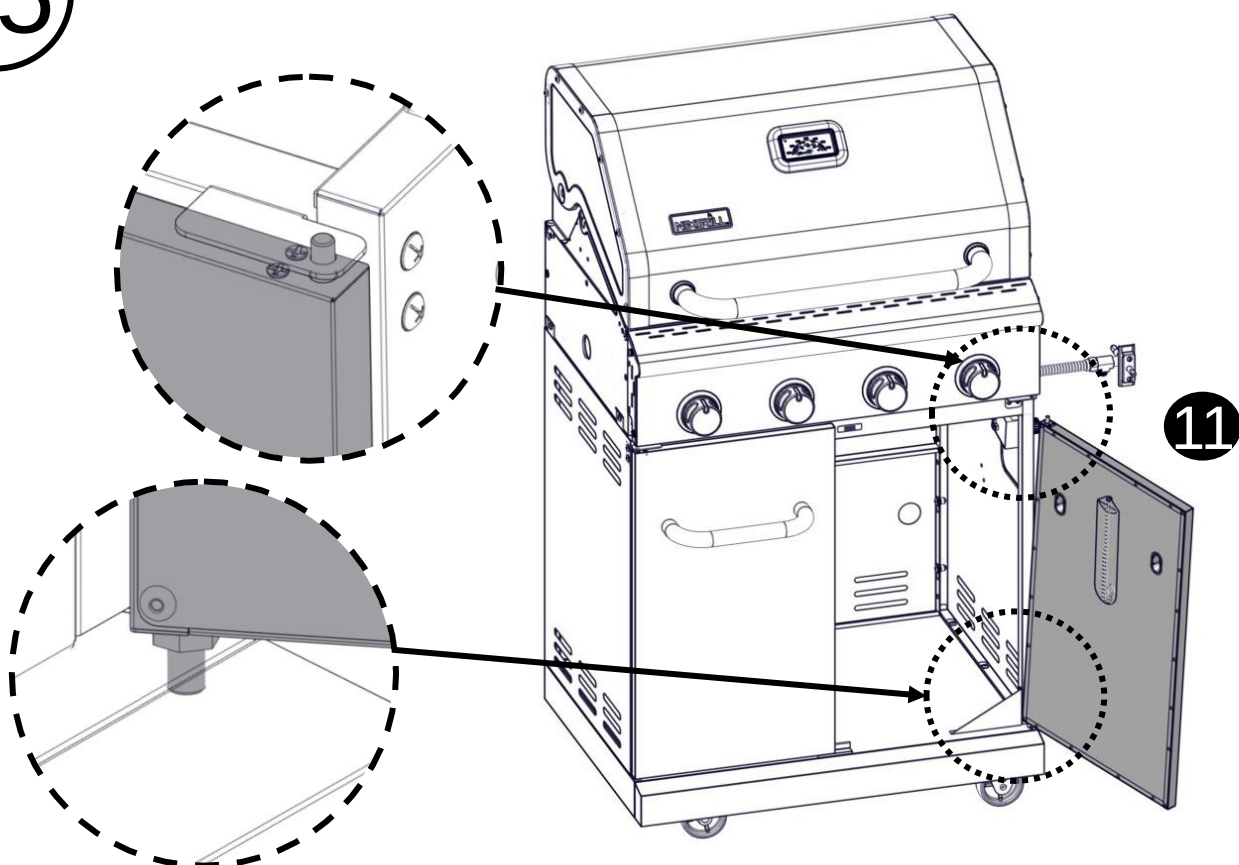 


16

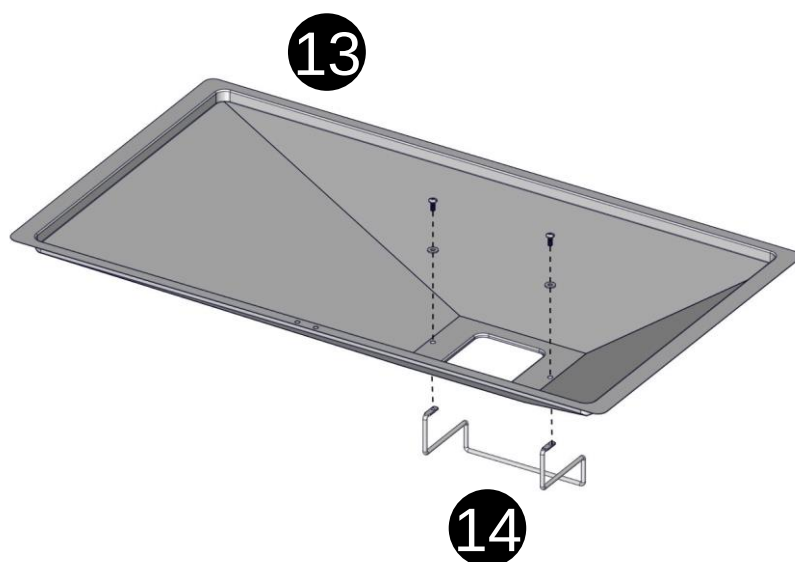 
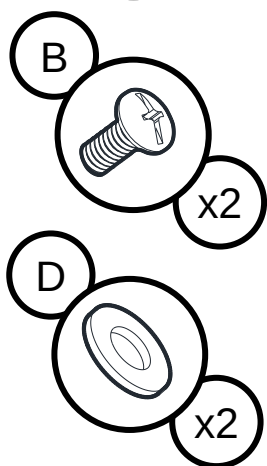 




17

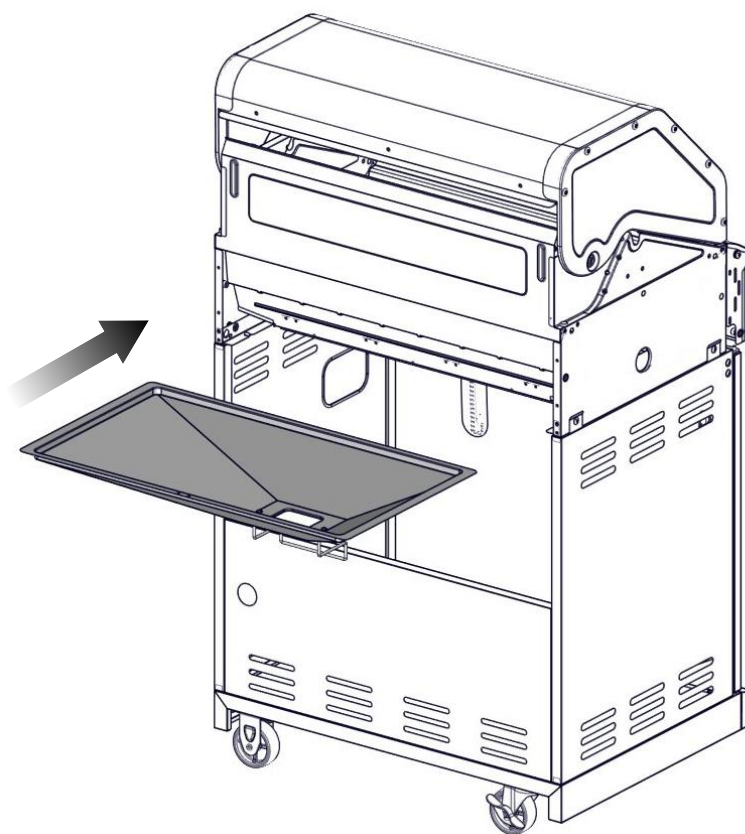 


18

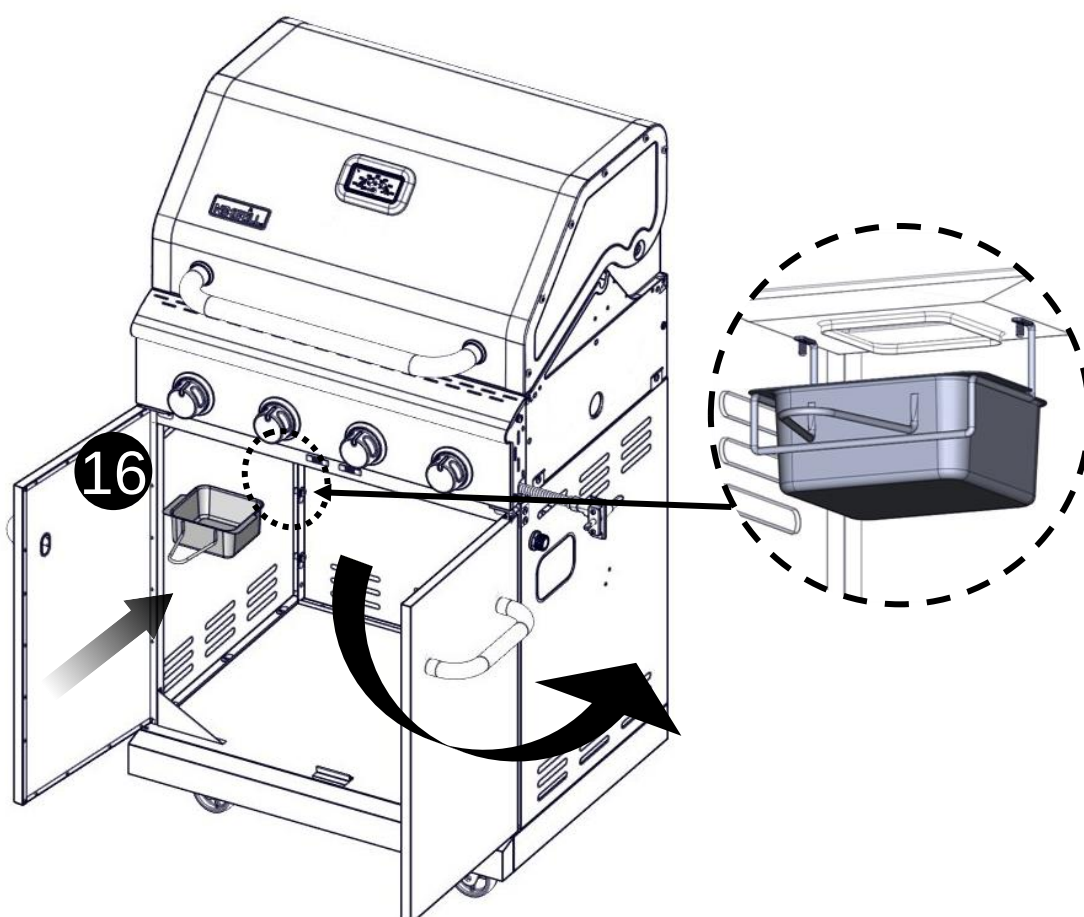 

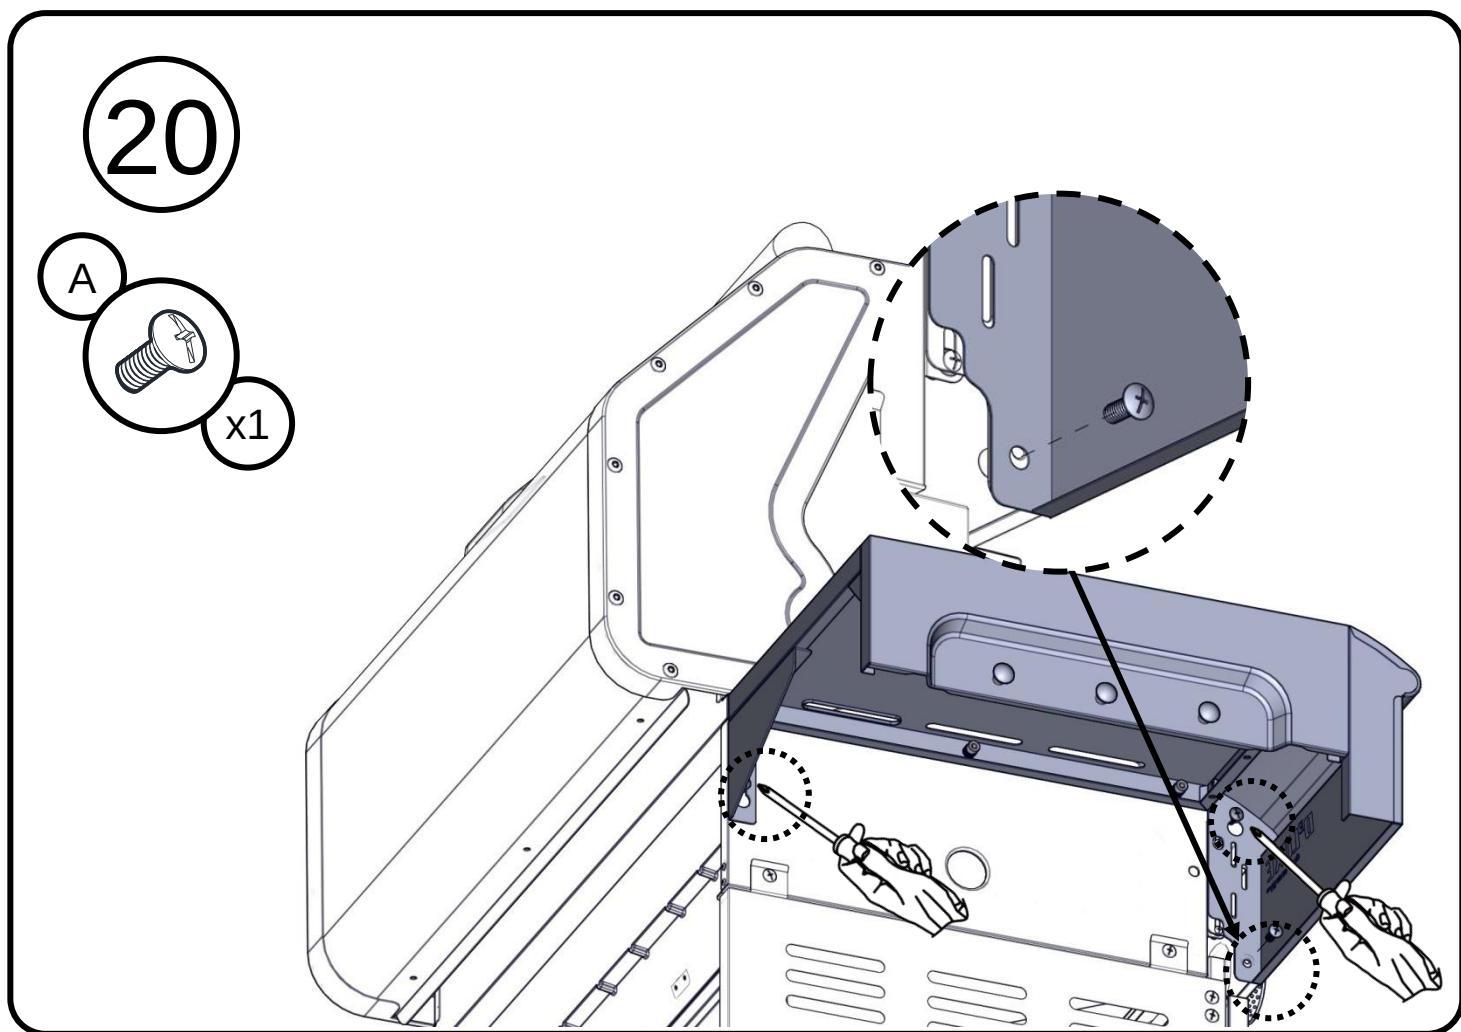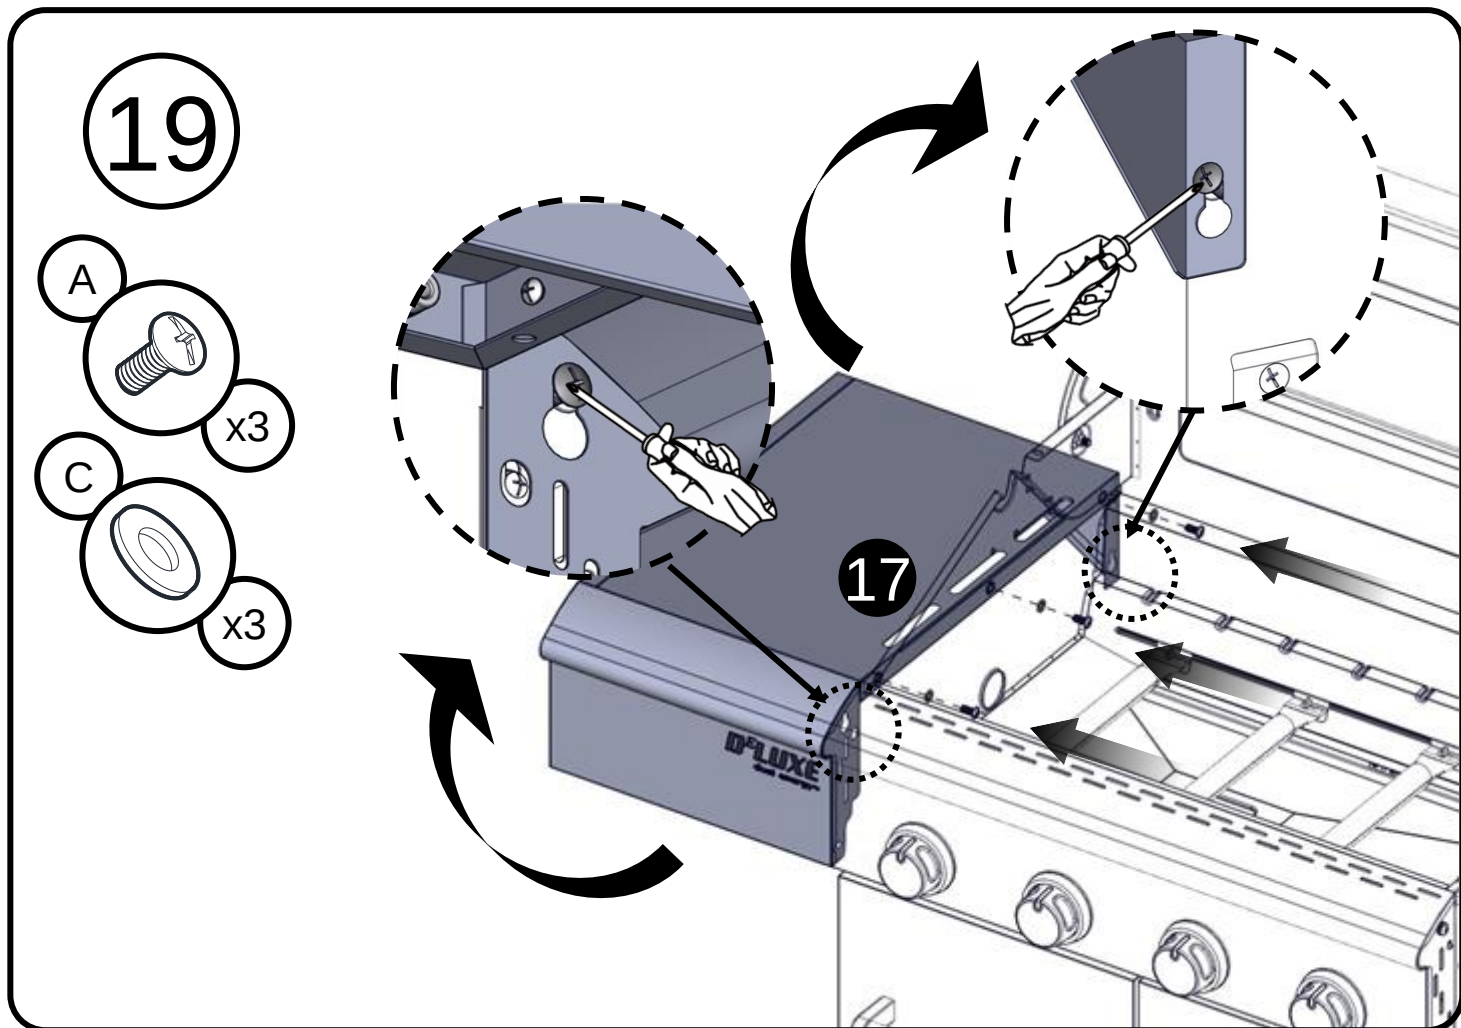  


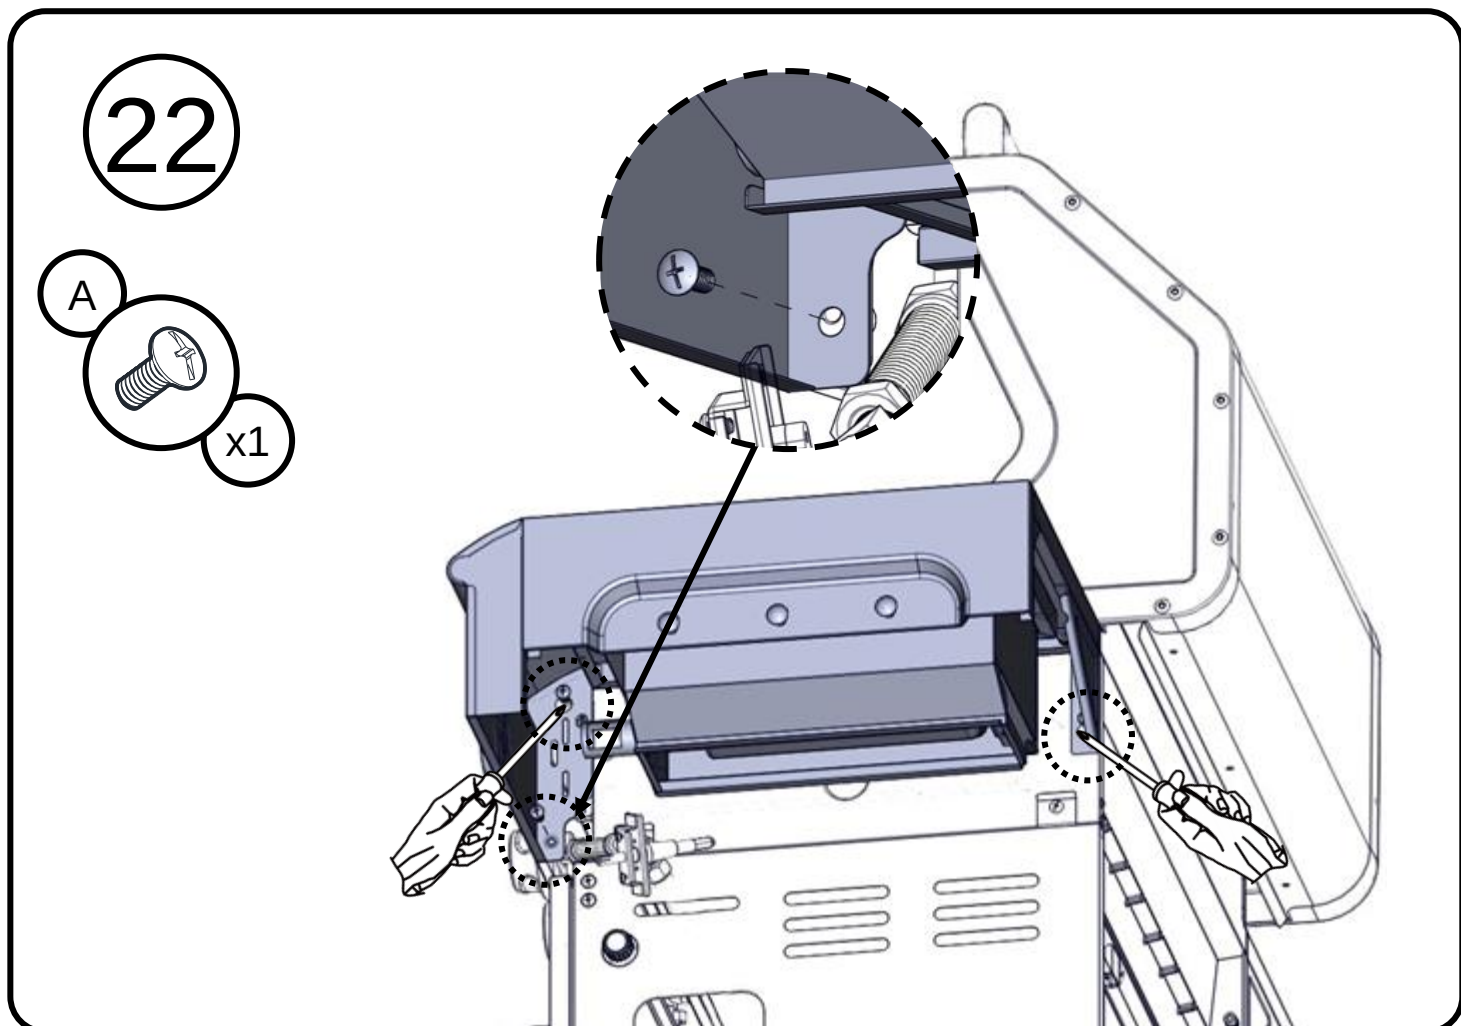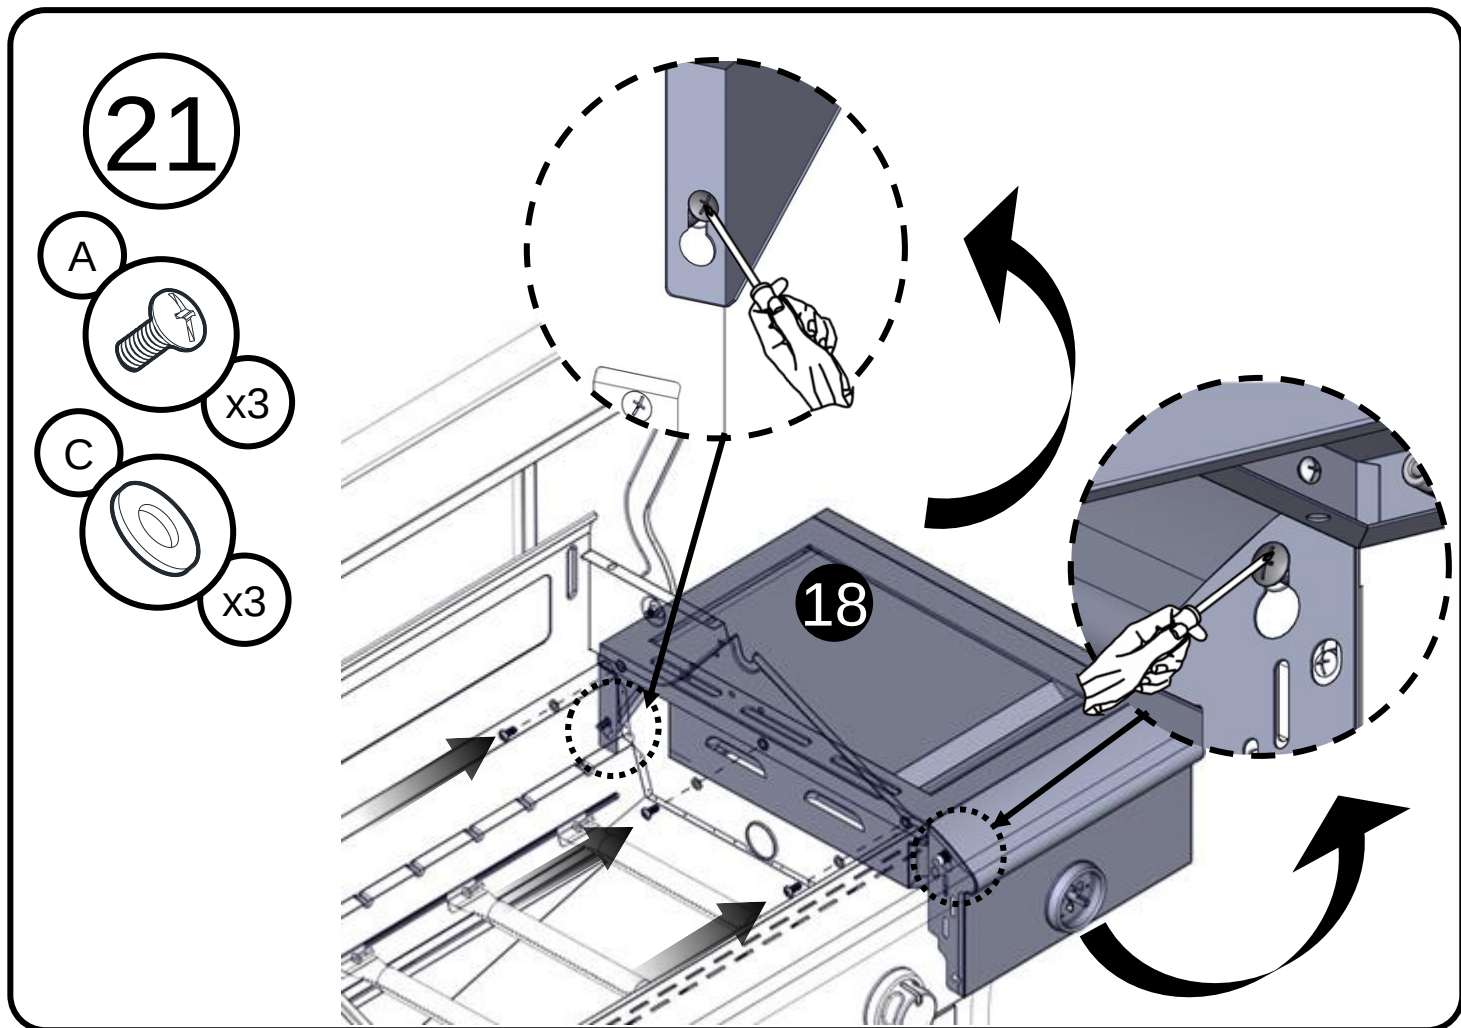  


23

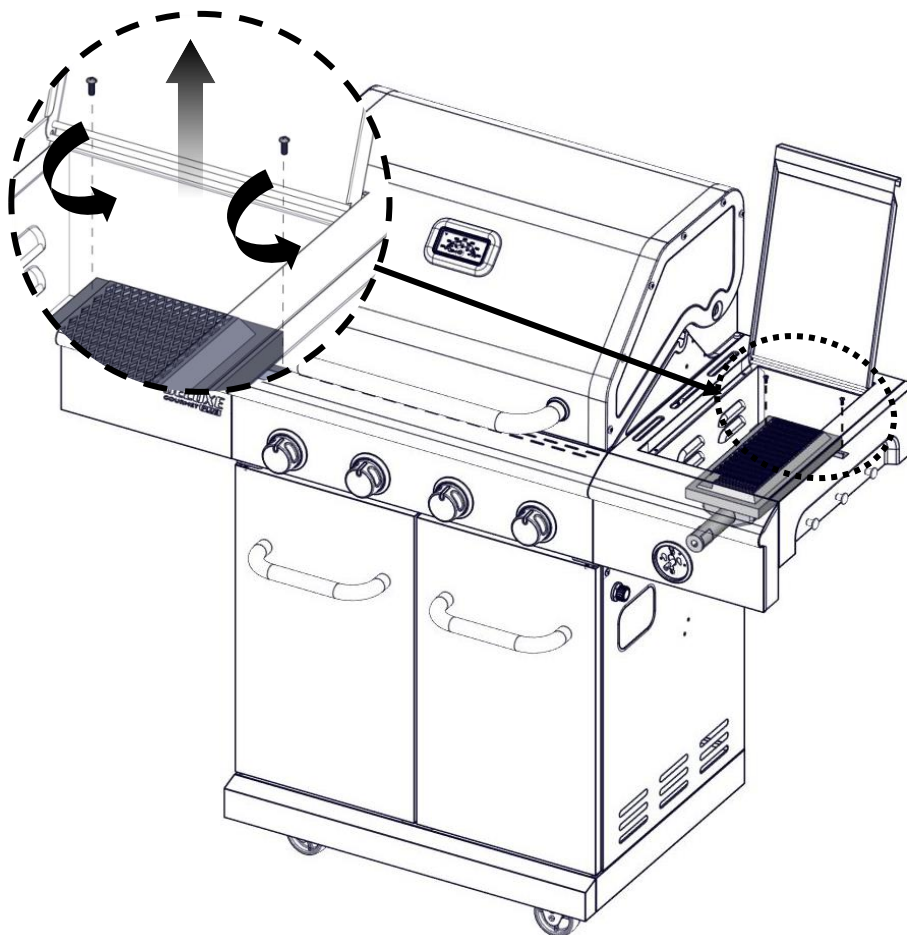 


24

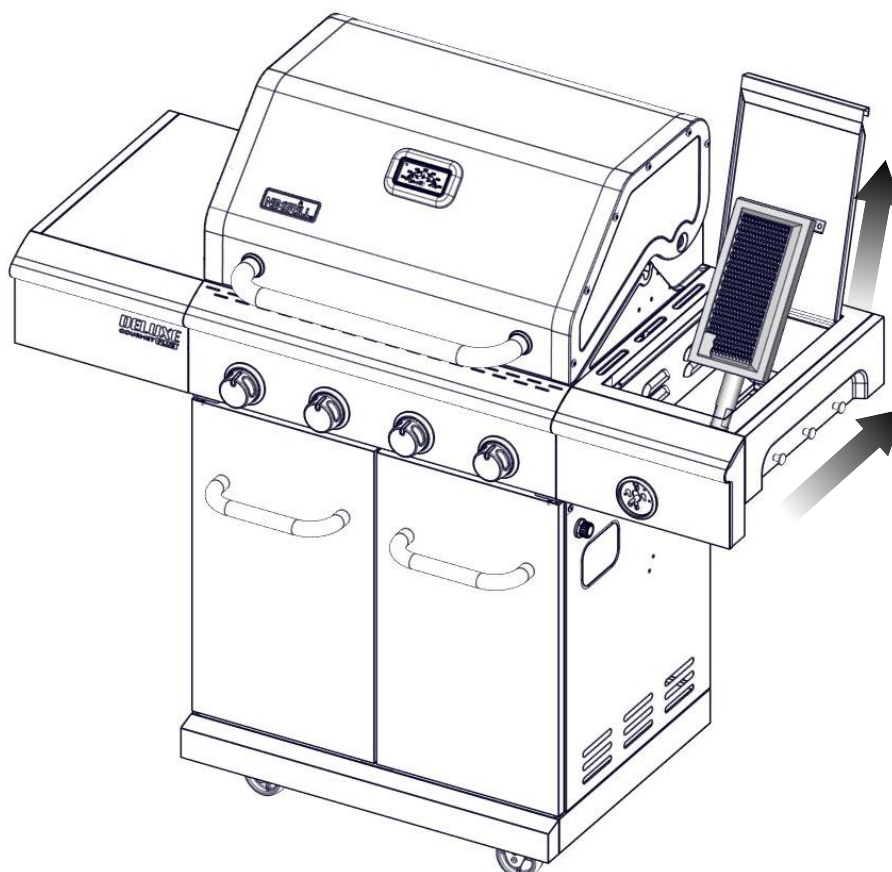 


25

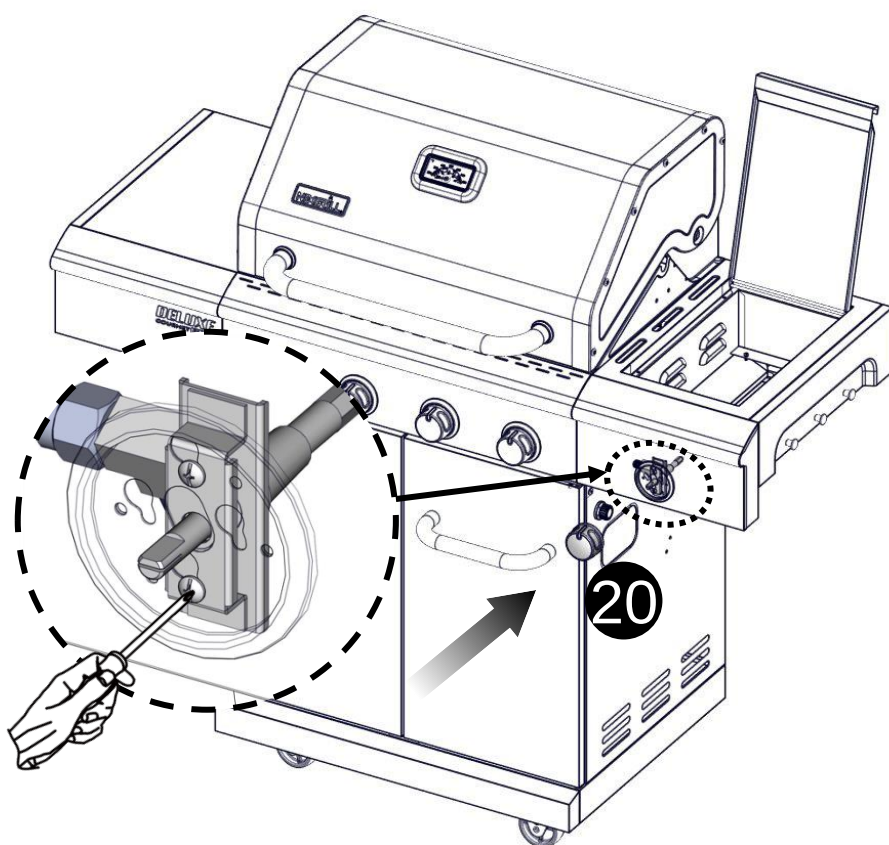 





26 !

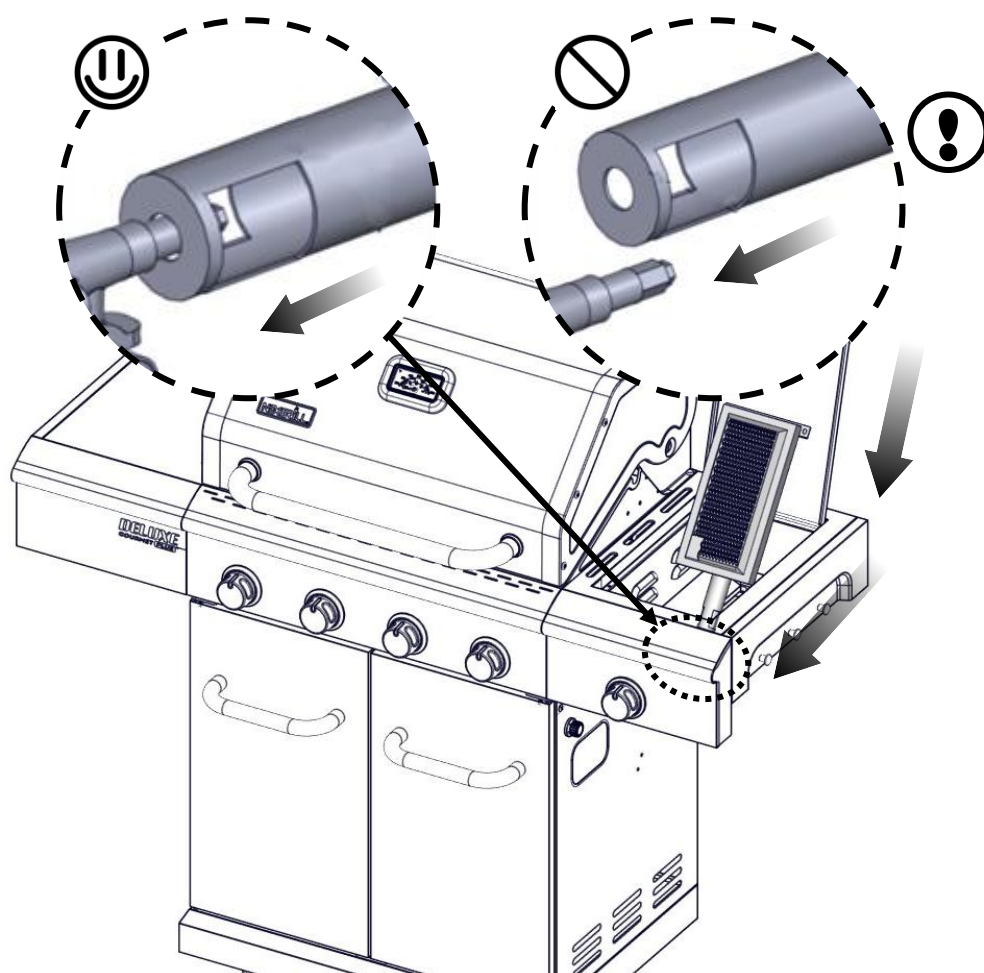 


27

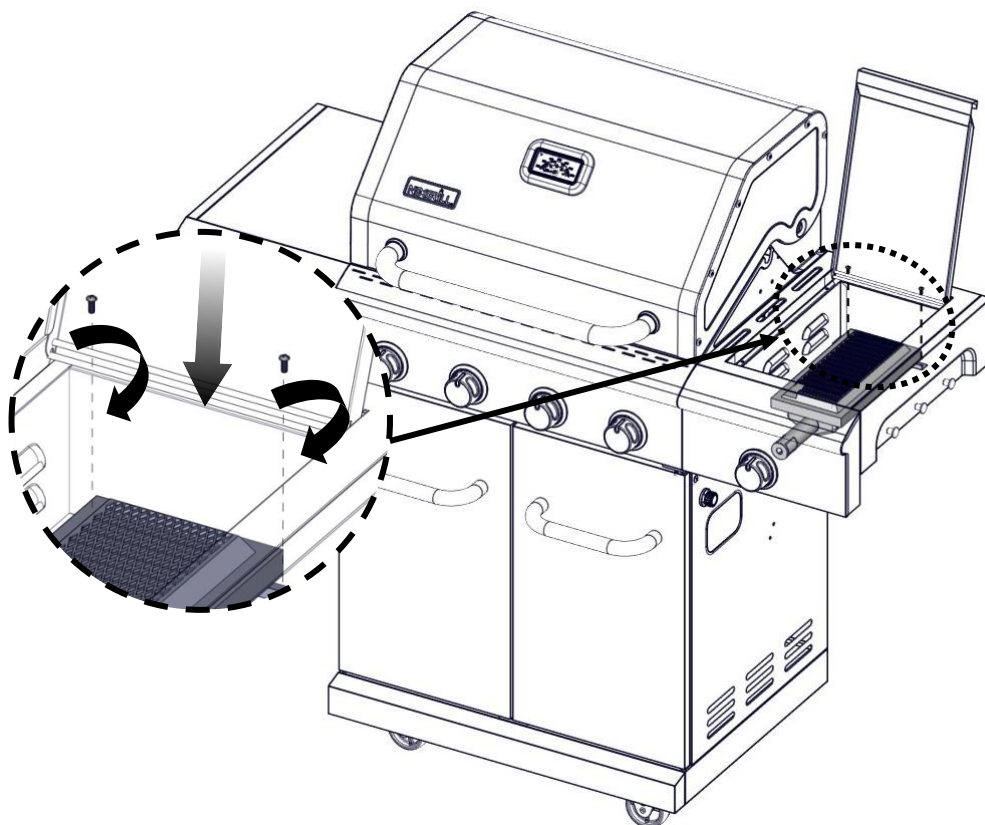 


28

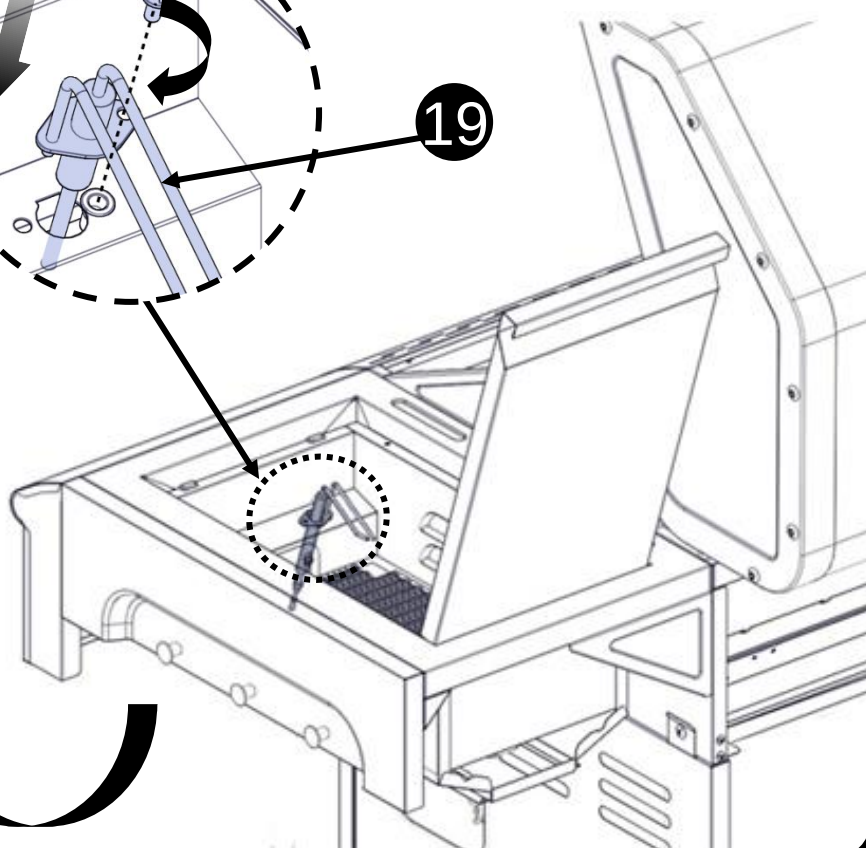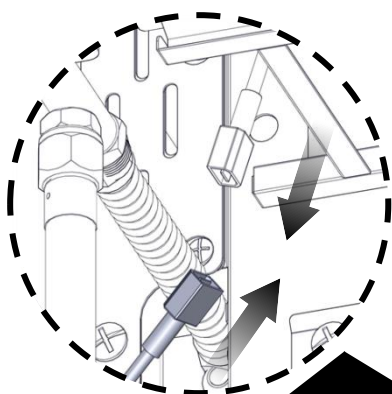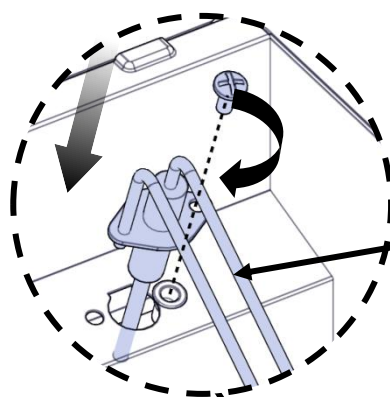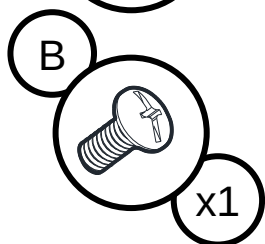    


29

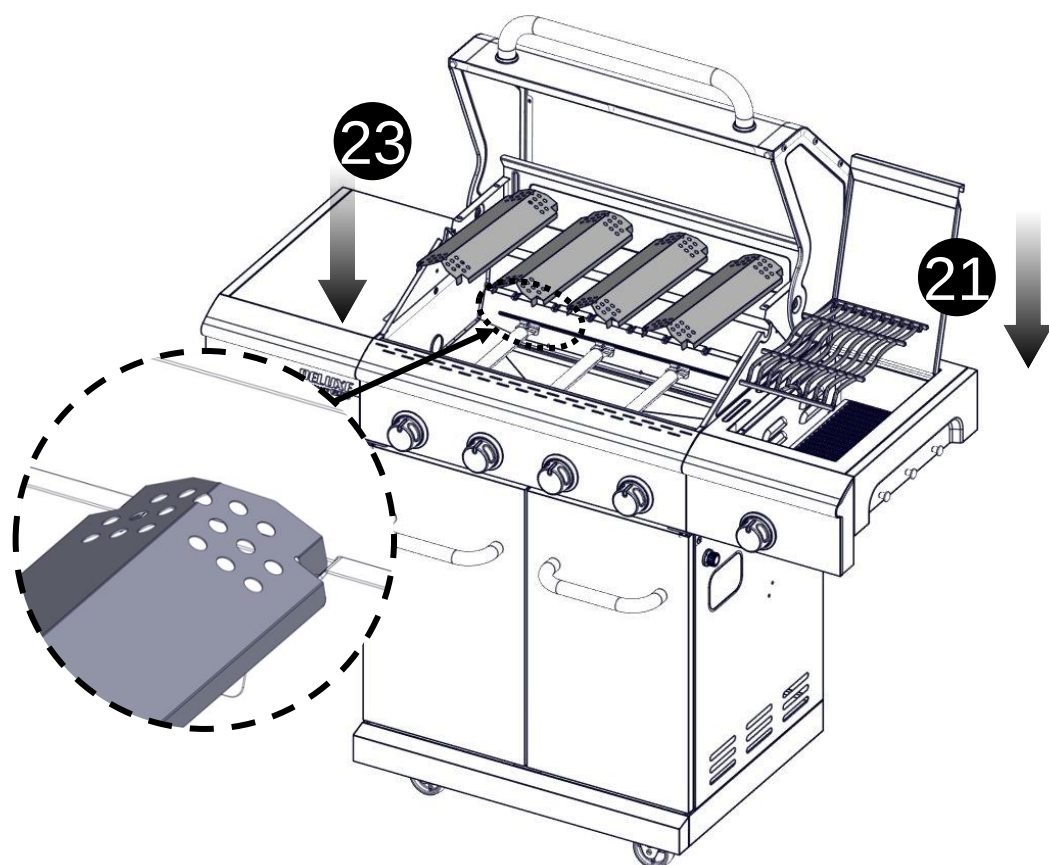 

30

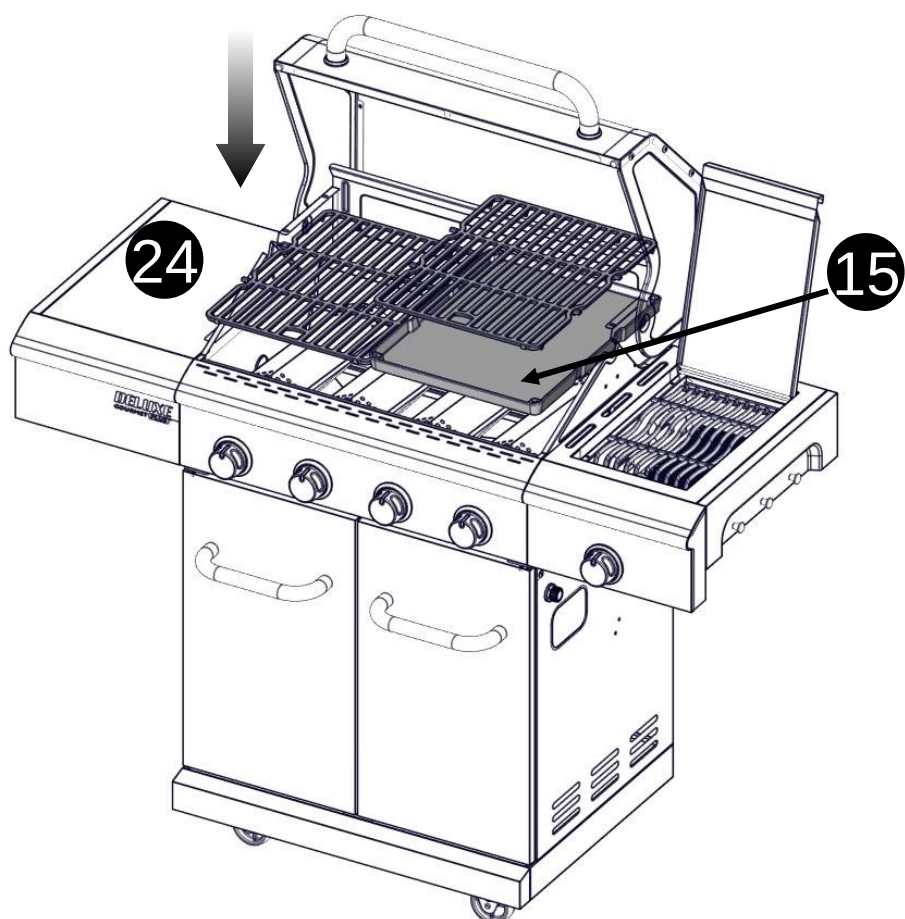 

31

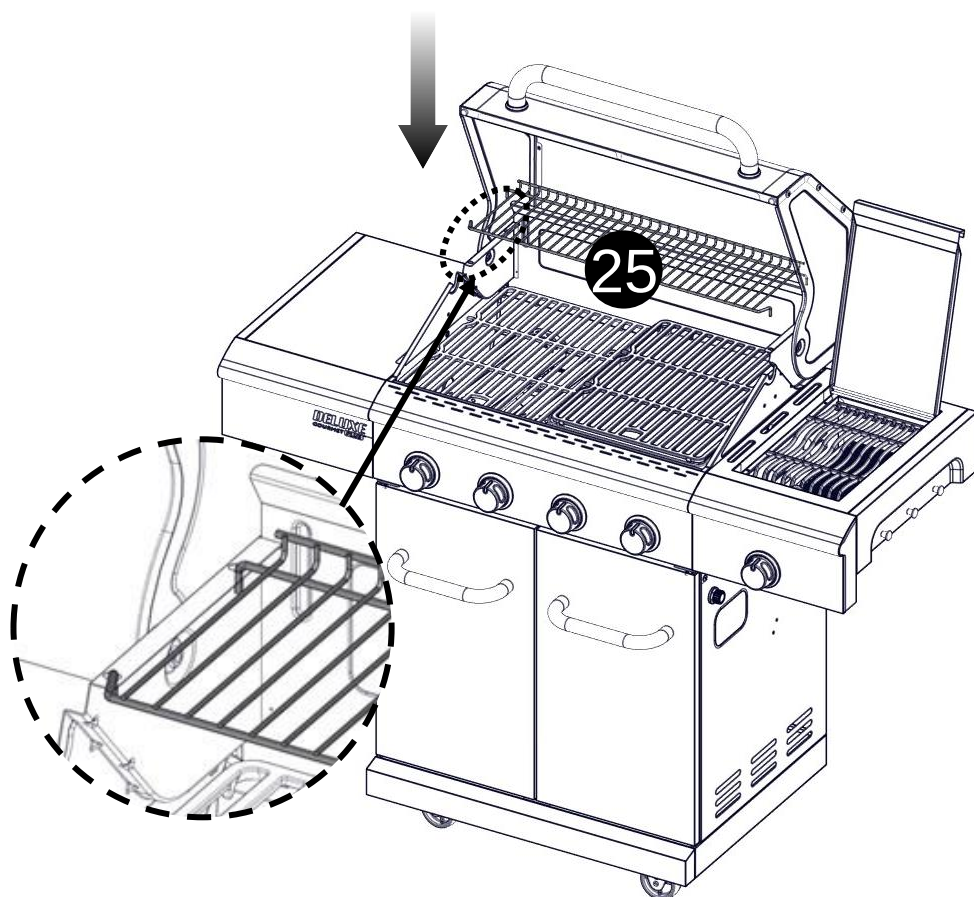 

32

