



GPS WATCH

User Manual

Instruction Manual

Charge and activate

Please connect the charging cable and activate the watch for the first use. When the watch battery is at the low level, it may take 3-5 minutes to wake up, which is normal. Please wait 5 minutes and check the charging status again. Please use a charger with a rated output power of 5V and a rated output current of 0.5A-2A or a computer USB port to charge the watch.



Download App

Scan the QR code below to download and install the corresponding App.



Scan QR code and download the App

Connect App

Open the App and set your personal information.



Go to the "Device" interface and click "Add Device!"



 
Select the corresponding device from the scanning list.



Done

The device MAC address can be found in "Settings" -> "About". This MAC address will help you find the corresponding device in the scanning list.

During the connection process, pop-up windows will appear to confirm pairing with the watch and phone. Please click to confirm pairing. After successful connection, the icon in the watch's status bar will turn blue. Grayed-out indicates not connected.

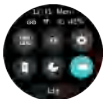


Bluetooth not connected.



Bluetooth connected.

 Touchscreen operation guide.

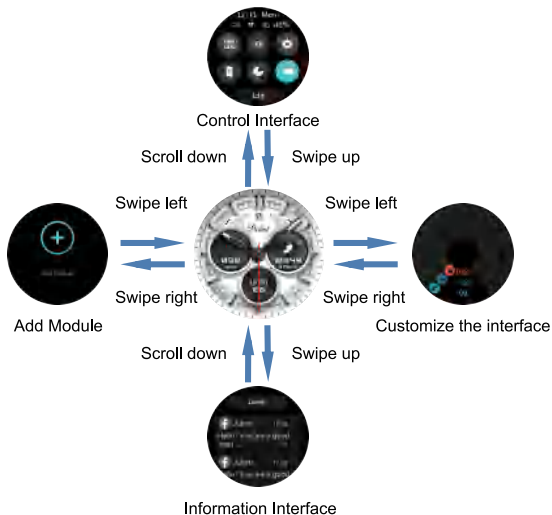

GPS user interface.



GPS not located.

 


GPS located.




Location in motion.

TWS earphones connected.

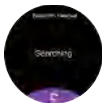

Bluetooth
earphones searching.

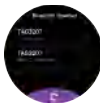 

Connected
Bluetooth earphones.



Disconnect
Bluetooth earphones.

Unbinding via App

"iOS: In the app's 'Device' interface, find 'Unbind'. After clicking 'Unbind,' go to your phone's 'Settings - Bluetooth' interface, click the 'i' icon to the right of the device, and then select 'Forget This Device.' This will unbind the device from your phone's system, ensuring it's no longer connected. Otherwise, you won't be able to reconnect next time. Android: In the app's 'Device' interface, find 'Unbind' and click 'Unbind' to disconnect from your phone."

Precautions

1. Do not wear the watch in hot showers or saunas to prevent steam intrusion.
Damage caused by water ingress due to improper use is not within the warranty.
2. Do not place the device near heat sources or exposed fire sources, such as induction cookers, microwave ovens, ovens, water heaters, stoves, candles, or other places that may generate high temperatures.
3. This device has a non-removable built-in battery. Do not replace the battery personally.
4. Please wipe the water off the watch immediately after washing hand or found any water on the watch. Water inside the speaker cavity may affect the sound quality. Check the speaker outlet and promptly wipe any remaining water from the speaker outlet.
5. If the watch malfunctions, dead, or becomes unresponsive, press and hold the power button for 10 seconds. The device will force into restart, which restoring normal operation.
6. After restoring factory settings, the data will be cleared, and the watch will need to be reconnected.



This product is not a medical device. Exercise data, heart rate, and sleep measurement results are for reference only and should not be used as a basis for diagnosis or treatment.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



GPS

