



2-in-1 Wireless Microphone DWM-121



Instruction Manual

PRODUCT CATALOG

1. Product Appearance.....	3/9
2. Product Features & UI.....	4/9
3. TX Function Description.....	4~5/9
4. RX Function Description.....	6~7/9
5. Charging Case Function Description.....	7~8/9
6. Distance Test.....	8/9
7. Mobile Phone Compatibility Test.....	9/9

PRODUCT APPEARANCE



Transmitter Master (TX)
Receiver Master (RX)

PRODUCT APPEARANCE

TX & RX	
Power adapter	DC 5V1A
Product frequency band	2.4GHz
Standby current	150uA
Working current	122mA
Charging current	80mA
Battery capacity	1000mAh 3.7V
Full charging time	1.5 hour
Continuous working time	14.5 hour
Microphone pointing mode	Omnidirectional type
ICM Ratio	1:15dB
Microphone sensitivity	40dB±3dB
Noise reduction degree	120dB
Communication distance (no obstacle)	100Meters
Audio sampling rate	48KHz
Frequency response range	20Hz~20KHz
Operating ambient temperature	-10°C~50°C
Charging Case	
Power adapter	DC 5V1A
Standby current	150uA
Charging current	400mA
Battery capacity	400mAh 3.7V
Full charging time	2 Hour
Host (TX+TX2+RX) charge times	14.5 cycles

Product Features & UI:



1. Transmitter Master (TX) Functional Description:

1. Battery Level LED (Red, Green, Blue)	1. Battery voltage is lower than 3.4V, the blue led will always be on, if it is higher than 3.4V, the green led will always be on, and if it is higher than 3.4V, the green led will always be on, and if it is higher than 3.4V, the green led will always be on, and if it is higher than 3.4V, the green led will always be on.
2. Microphone Function LED (Red, Green, Blue)	Normal mode is green light always on, noise reduction is blue light always on, and mute is red light always on.
3. Connection+EQ+LED	1. Not connection+EQ+OFF mode=LED green light flashes, and the green light remains on after connection. 2. Connection+EQ+ON mode=LED light blue constantly on.

2. Receiver Master (RX) Function Description:



2. Receiver Master (RX) Function Description:

1. Battery Level LED (Red, Green, Blue)	1. Battery voltage is lower than 3.4V, the blue led will always be on, if it is higher than 3.4V, the green led will always be on, and if it is higher than 3.4V, the green led will always be on, and if it is higher than 3.4V, the green led will always be on.
2. Microphone Function LED (Red, Green, Blue)	Normal mode is green light always on, noise reduction is blue light always on, and mute is red light always on.
3. Connection+EQ+LED	1. Not connection+EQ+OFF mode=LED green light flashes, and the green light remains on after connection. 2. Connection+EQ+ON mode=LED light blue constantly on.
4. Volume+EQ+Button	Long press to volume increase
5. Volume+EQ+Button	Long press to volume reduce.

3. Charging Case Function Descriptions:



3. Charging Case Function Descriptions:

1. TX1 Transmitter Host Position	TX1 transmitter is put back in this position when not in use, or put back in this position for charging when the battery is low.
----------------------------------	--

 
4. Distance Test



4. Distance Test

1. TX1 Transmitter Host Position	TX1 transmitter is put back in this position when not in use, or put back in this position for charging when the battery is low.
----------------------------------	--


5. Mobile phone compatibility test:



5. Mobile phone compatibility test:

1. TX1 Transmitter Host Position	TX1 transmitter is put back in this position when not in use, or put back in this position for charging when the battery is low.
----------------------------------	--

 6. Distance Test



6. Distance Test

1. TX1 Transmitter Host Position	TX1 transmitter is put back in this position when not in use, or put back in this position for charging when the battery is low.
----------------------------------	--

7. Mobile phone compatibility test:



7. Mobile phone compatibility test:

1. TX1 Transmitter Host Position	TX1 transmitter is put back in this position when not in use, or put back in this position for charging when the battery is low.
----------------------------------	--

8. Mobile phone compatibility test:



8. Mobile phone compatibility test:

1. TX1 Transmitter Host Position	TX1 transmitter is put back in this position when not in use, or put back in this position for charging when the battery is low.
----------------------------------	--

For any query please contact :
MS Mecatronics Limited
 (Formerly Known as MS Mecatronics Pvt. Ltd.)
 #104, Ring Road Mall, Outer Ring Road, Near Deepali Chowk,
 Sector-3, Rohini, Delhi - 110085 Tel. : 1800 123 544 444
 Email : support@digidigitalk.net In Website : www.digitalk.net In

