



MULTI-FUNCTIONAL

DJ AUDIO MIXER

"SPIN & ROCK YOUR OWN PARTY!"

NO.8D-10

 


Bluetooth connection name: 8D-10

- No sound playback for 5 minutes will put the device in sleep mode.
- Long press Bluetooth for 3 seconds to enter and exit.
- The product runs out of battery and automatically exits via Bluetooth.
- Bluetooth will exit if there is no connection with in 5 minutes after starting.
- The product will sound a beep when it runs out of power, and the light is not very bright.



1.If you switch to **12 MIDI SONGS**, there will be 12 MIDI tracks. By using the **12 BUTTON GRADIENT** button below, you can unlock more MIDI track libraries, with a maximum of 120 MIDI tracks!



2. Press the **SOUND EFFECTS** button. The **12 BUTTON GRADIENT** corresponds to 12 different sound effects.



Press the illuminated marked area to remove table legs.



3.Rotate the **DISC PLAYER** to get the disc - mixing sound effect. Use the **3 TYPES OF DISC SOUND EFFECTS** button below. There are a total of 3 disc sound effects available for switching. Add them to your music!

There are a total of 3 disc sound effects available for switching. Add them to your music!



4.The **ELECTRONIC KEYBOARD BUTTONS** below inject piano tones of 8 scales, which can provide more possibilities for your music!



5.**SOUND EFFECTS** knob(Tag 1) is like a single MIDI, enriching the sound effects. If it's too noisy, you can rotate the **VOLUME ADJUSTING** knob(Tag 2) to lower the volume.



6.The **12 BUTTON SOUND EFFECT SPEED ADJUSTMENT** is used to adjust the speed of MIDI performance, enhancing creative details (it cannot adjust the playback speed of the **SOUND EFFECTS**).



7.The DJ mixer also has a recording function. First, press the **RECORDING PLAYING** button. Then, select the button sound effects (cannot record MIDI), disc sound effects, and piano tones in your preferred order. Press the **RECORDING PLAYING** button again, and the machine will automatically play the sound sequence you selected. Go and create your own unique sound!.

8.Additionally, the DJ mixer has a game function. Press the **WHAC -A -MOLE** button, and color blocks will randomly pop up on the **SOUND EFFECTOR**. Quickly press the lit buttons. Succeeding in this challenge can train hand - eye - coordination and rapid response abilities.



9.The microphone also has a recording function. Press the **MICROPHONE RECORDING** button, sing into the microphone, and the device will automatically play back the recorded sound.Press the **MICROPHONE RECORDING** button again to turn off the microphone function.


Bluetooth connection name: 8D-10



10.Long - press the **BLUETOOTH BUTTON STOP SWITCH** for three seconds to trigger the Bluetooth connection function. The device will instantly turn into a karaoke mode.Set up the microphone and start singing! The functions of the device will be temporarily disabled after Bluetooth connection.

BATTERY PRECAUTIONS

- This product uses 4 x 1.5V "AA" batteries.
 - How to insert and remove batteries: Use a screwdriver to loosen the screw, open the battery cover, then insert or remove batteries following the correct polarity (+/-).
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - (in removable).
 - Rechargeable batteries are to be removed from the toy before being charged (if removable).
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Do not connect more than the recommended number of power sources.
 - Different types of batteries or new and batteries are not to be mixed.
 - Batteries are to be inserted with the correct
 - Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

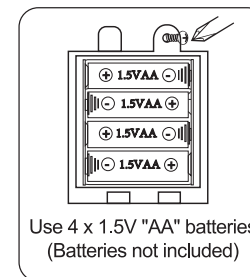

WARNING!

- This product must be used under direct adult supervision.
- This product contains small balls and components. Please do not swallow to avoid choking hazards. It is not suitable for children under three years old.



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.