



ONNAIS Magnetic Biometric Trigger Lock



Model: GL-005

For any assistance, please contact us at:

✉ support@onnaisafe.com



QUICK START GUIDE VIDEO



OR

<https://onnaisafe.com/pages/installation-guide>

Follow Onnais on Instagram & Facebook for faster help.




 @Onnaisofficial




 @Onnais

What's Included

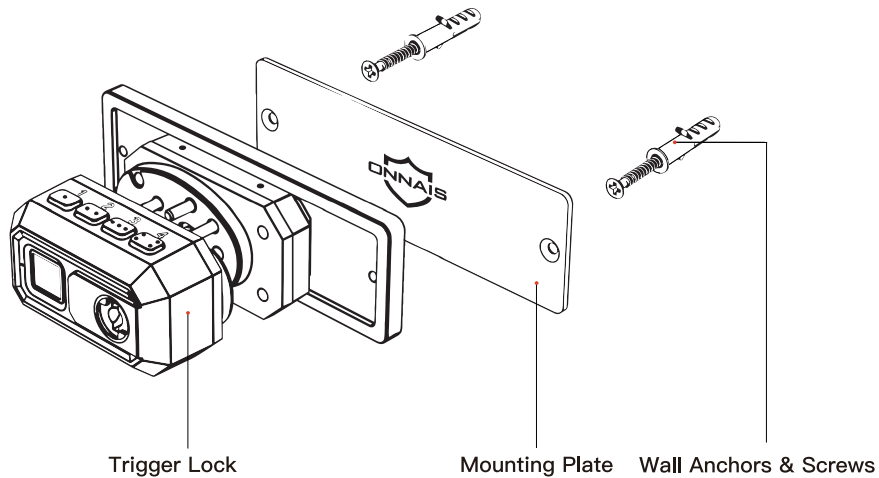

Trigger Lock Overview

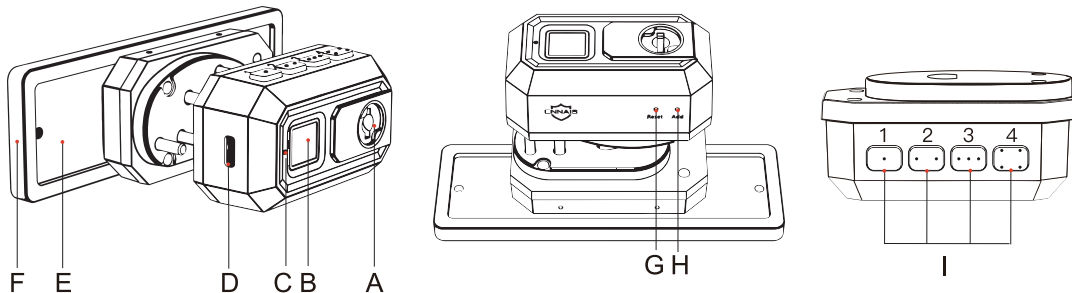

A. Keyhole

B. Fingerprint Sensor

C. Power Indicator Light

D. USB-C Charging Port

E. Magnetic Plate

F. Silicone Pad

G. Reset Button

H. Add Button


I. Password Keypad

Assembly and Setup Guide

Step 1: Charge the Trigger Lock


Plug the included USB-C cable into the charging port. **Charge the trigger lock for 4 hours before first use.**

⚠ Low battery warning: Beeps 4 times and the indicator light flashes red 4 times.

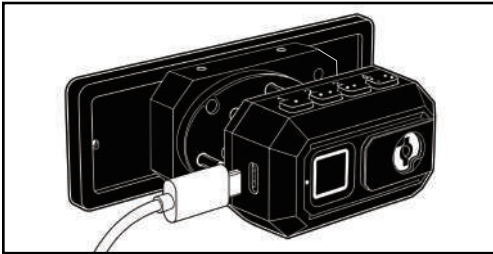



Step 2: Set Your Unlock Password

Set your unlock password before first use. See Page 5 for detailed instructions.

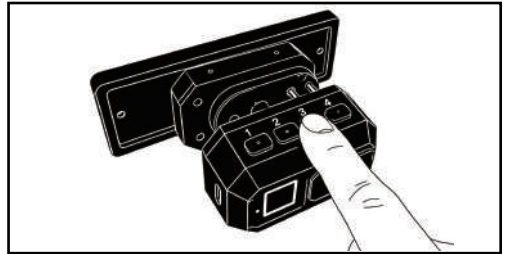

Step 3: Install the Trigger Lock

Secure the mounting plate to the wall using the included wall anchors and screws, then magnetically attach the trigger lock.

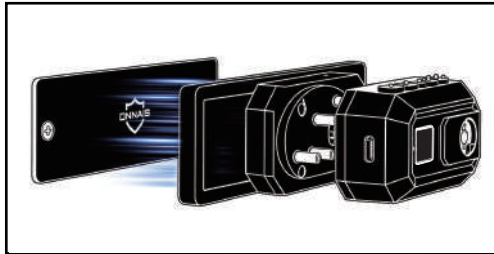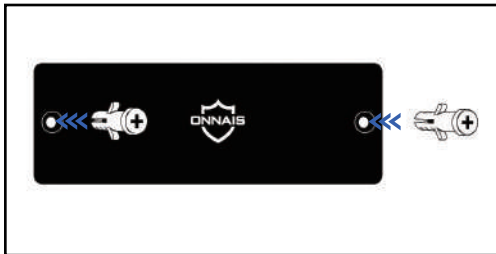

The magnetic trigger lock can be attached to any magnetic surface. For non-magnetic surfaces, such as walls, install the included steel mounting plate first, then magnetically attach the trigger lock.


Note: The maximum hanging load of the magnetic trigger lock is affected by the thickness of the ferrous surface. Thinner ferrous surfaces will reduce the maximum hanging load.

Trigger Lock Quick Setup



Please use the included "Pin" on the cover page to press "**Reset**" and "**Add**"


Password Setting

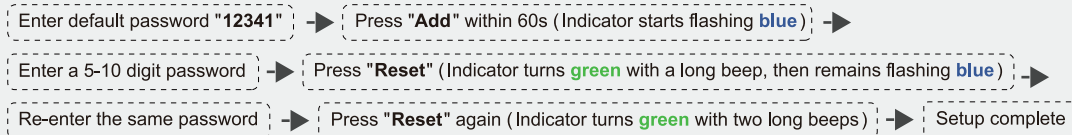

Note: If the indicator turns red, setup has failed. Please restart the setup process from the beginning.

⚠ To change the password, the trigger lock must first be reset. See page 6 for instructions.

 
Fingerprint Setting




Note: If the indicator turns red, setup has failed. Please restart the fingerprint entry process.

⚠ To add more fingerprints, repeat the steps above. Up to 100 fingerprints can be enrolled.

 
Reset the Trigger Lock



Delete Fingerprint

 

Toggle Silent Mode

 

Note: A flashing red power indicator light during any of the above setup procedures indicates that the setup has failed. Please try again.

Trigger Lock Installation Demonstration

For a secure fit on more firearms, this trigger lock features multiple steel pins. Simply adjust the lock's position to match the shape of your firearm's trigger guard and trigger.

- Key Position: Contact Point with the Trigger
- Auxiliary Position: Contact Point with the Trigger Guard

Pistol Models Referenced





P320



P226



TP9



SP5K

Rifle Models Referenced



Shotgun Models Referenced



Note: Firearms shown are examples only. ONNAIS Trigger Lock fits most handguns, rifles, and shotguns.

Q & A

Q: How long does the battery last in standby mode?

A: The battery lasts about 3 to 5 months in standby mode, or up to 2,000 unlocks. We recommend charging the battery every 2 months.

Q: Why can't my fingerprints be recognized?

A: Before enrolling fingerprints, it is necessary to set a password first. Additionally, please ensure that your fingers are clean and free of dirt or moisture, as these may affect fingerprint recognition.

Q: What should I do if I lose my key?

A: For security reasons, replacement keys are not available. Please store your keys in a safe and secure location.

Disclaimer

To the maximum extent permitted by law, Dongguan Huaxun Plastic Technology Co., Ltd is not responsible for indirect or consequential damages resulting from misuse, unauthorized modification, failure to follow instructions, or use with incompatible adapters, cables, or devices.