




©Disney
www.disney.com

Bluetooth®

Disney MICKEY AND FRIENDS WIRELESS SPEAKER

Instruction Manual

Thank you for purchasing this Wireless Speaker. This manual provides more information about this product, please read the instructions before using.

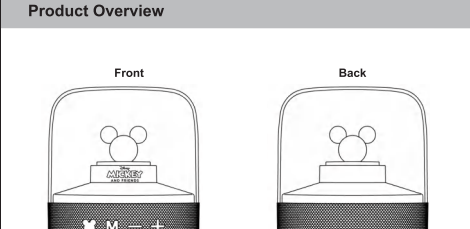

Front

- Power Button
- Play/Pause/ Bluetooth/ FM Radio Mode Button
- Volume Down/Previous Song Button
- Volume Up/Next Song Button

Back

- USB Type-C Charging Port
- LED Indicator



Package Contents

- 1(One) Wireless Speaker
- 1(One) USB Type-C Charging Cable
- 1(One) Instruction Manual

Power On/Off

Power on: Press and hold 2 second on the Power Button.
Power off: Press and hold 2 second on the Power Button.
 Note: Always power off the speaker when not in use.

Pairing Wireless speaker with your mobile device

1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32.8 Feet.
2. Power on the wireless speaker.
3. Activate the Bluetooth function on your phone within range and select "SP-0774 SPK" from the list shown.
4. You will hear a beep sound when pairing is successful.

Reconnect Wireless speaker to your mobile device

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

Charging your Wireless speaker

⚠ For your safety, please always use appropriate 5V output charger/ Adapter to charge the product. **DO NOT USE** Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Use the USB Type-C charging cable provided with this wireless speaker.
2. Connect the USB Type-C plug to USB Type-C charging port on the speaker, then connect the USB plug to wall adapter to begin charging.
3. The LED Indicator will turn red while charging and will turn off once fully charged.

NOTE:

- You must select a qualified charger from a regular manufacturer.
- You must charge the Wireless speaker if it has been not used for more than 6 months.



USB Plug

USB Type-C Charging Plug

⚠ **CAUTION:** FOR YOUR SAFETY, the charging cable included with this item is intended for use with this product only.

Bluetooth Speaker Mode

Play/Pause: Short press the Play/Pause Button once.
 Next Track: Short press the "+" Button
 Previous Track: Short press the "-" Button
 Volume Up: Long press the "+" Button
 Volume Down: Long press the "-" Button

FM Radio Mode Note: Please plug in USB Type-C cable as FM antenna before switch to FM Radio Mode. Switch to FM Radio Mode: Long press the "M" Button once. Long press the "M" Button again will back to Bluetooth Speaker mode. Auto Scan: Short press the M Button, Next Channel: Short press the "+" Button Previous Channel: Short press the "-" Button Volume Up: Long press the "+" Button Volume Down: Long press the "-" Button	Technical specification Driver Diameter: 52 mm Impedance: 4 Ohms Bluetooth Version: 5.4 Bluetooth Range: 32 Feet Playtime: 1.5-2 Hours Charging Time: 1.5-2 Hours Power Supply: Li-ion Battery 3.7V 500mAh FM Radio Mode Charging Method: USB Type-C Charging USB Type-C Charging Cable Length: 19.7 in. (50 cm) USB Type-C Charging Cable Rating Max. 5VDC, 5W.	FCC STATEMENT This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.
True Wireless Stereo (TWS) Mode NOTE: Please purchase two pieces of DISNEY MICKEY AND FRIENDS WIRELESS SPEAKERS to perform TWS Mode. TWS mode is not supported in FM Radio mode. 1. Turn On both wireless speakers. 2. Disconnect both wireless speakers from any Bluetooth device. 3. Keep both wireless speakers side by side. 4. Double press on the Power Button on ONE of the wireless speakers. And then it will have an alert sound. 5. The wireless speaker will connect with the other wireless speaker in few seconds. When successfully connected, both wireless speakers will have another alert sound. 6. Now you can follow the "Pair Wireless speaker with your mobile device" to pair with the mobile device. 7. To disable the TWS mode, power off and on both wireless speakers. Or, double press on the Power Button on ONE of the wireless speakers. They will have an alert sound and then disconnected.	FAQ • If the Wireless speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated. • If the Wireless speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. ⚠ Safety instructions for the lithium battery and charging the product -The input voltage to the product is DC 5V 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/adaptor for charging the product. -Only charge the product at ambient temperatures between 10°C/50°F and 40°C/104 °F. -Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.
Color Changing LED On/Off Short press on the Power Button to turn on or off the Color Changing LED.		FC FCC ID: 2ADMS-SP-0774 ITEM# SP-0774 Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Keep All Relevant Information For Future Reference Made in China

