

## VT18



# TABLE OF CONTENTS

<b>1. INTRODUCTION</b>	<b>3</b>
1.1 Specifications	3
1.2 Important Safety Information	4
1.3 Warnings	5
1.4 Tool Overview	6
1.5 Getting Started	7
<b>2. PAIR WITH SCAN TOOL</b>	<b>8</b>
<b>3. STAND ALONE</b>	<b>9</b>
<b>4. READ SENSORS</b>	<b>11</b>
4.1 TPMS screen overview	11
4.2 Reading TPMS Sensors	12
<b>5. PROGRAM</b>	<b>13</b>
5.1 Accessing the Program functions menu	13
5.2 Create New Sensor	14
5.3 Copy ID	15
5.4 Batch	18
5.5 Manual ID	20
5.6 Copy Set	22
<b>6. RELEARN</b>	<b>25</b>
6.1 Accessing the Relearn functions menu	25
6.2 Manual Relearn	26
6.3 Scan Tool	27
<b>7. DELETE JOB/GO HOME</b>	<b>28</b>
<b>8. KEYFOB</b>	<b>29</b>
<b>9. SETTINGS</b>	<b>30</b>
9.1 Accessing the Settings menu	30
9.2 Region	31
9.3 Units	32
9.4 Format	33
9.5 Buzzer ON	34
9.6 Auto Off	35
9.7 Language	36
9.8 Update/WIFI	37
9.8.1 Update	38
9.8.2 WIFI Settings	39
9.8.3 Renew License	41
9.9 Certifications	42
9.10 About	43
<b>10. MISCELLANEOUS</b>	<b>44</b>
10.1 Charging the battery	44
10.2 Warranty	45
10.3 Safety Precautions	46
10.4 FCC Statements	47
10.5 ISED Statements	47
10.6 CE Statements	48
10.7 Recycling	48

# 1. INTRODUCTION

## 1.1 Specifications

<b>Battery Type</b>	Rechargeable Li-Po 3.7 V 3000 mAh
<b>Battery Life</b>	Approximately 300 activations per full charge.
<b>Dimensions (Max. L,W,D)</b>	6.25" x 3.8" x 1.6" (15.9 cm x 9.7 cm x 4.1 cm)
<b>Case Material</b>	High Impact ABS
<b>Response Frequency</b>	Frequencies: 315 MHz and 433.92 MHz (supporting most specific frequencies)
<b>Low Battery Indication</b>	LCD bar graph display.
<b>Weight</b>	Approx. 1 lb (454 g)
<b>Screen Size</b>	2.8" display
<b>Temperature</b>	Operation: -20°C to +45°C (-4°F to 131°F) Storage: -20°C to +45°C (-4°F to 131°F)
<b>Operating Altitude</b>	Maximum Operating Altitude: 2000 m (6560 ft)
<b>Environment:</b>	Indoor/Outdoor Use (<80% Humidity)



### Product contents:

- TPMS tool
- USB cable
- Power supply

**Do not discard this manual. Keep it for future reference.**

## 1.2 Important Safety Information

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

*Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with:

- Part 15 of the US FCC Rules
- CE / CEM standards
- RoHS standards

Operation is subject to the following two points:

- (1) This device will not cause harmful interference, and
- (2) This tool can be affected by any type of interference, including interference that may cause a malfunction.



**CAUTION:** This product emits electromagnetic and electronically generated waves that may interfere with the safe operation of pacemakers.

*Individuals that have pacemakers should never use this product.*

### CAUTION:



**Do not use on live electrical circuits.**

**Please read instructions before use.**

**Wear safety goggles. (User and bystanders).**

**Risk of entanglement and strangulation.**

**Read the Warranty, Safety and recycling information at the end of this user guide.**

## 1.3 Warnings

# PLEASE READ THESE INSTRUCTIONS BEFORE USE

The tool has been designed to be robust, durable, safe and reliable when properly used.

- Please read all instructions below before use.
- Always follow these safety instructions.
- If you have any questions on the safe use of this tool, please contact your local dealer.

### 1. Read All Instructions

- All warnings on the tool and in this manual should be adhered to.
- All operating instructions should be followed.

### 2. Retain Instructions

The safety and operating instructions should be retained for future reference.

### 3. Heed Warnings

To use this tool safely, you and any bystanders must:

- wear safety goggles,
- read instructions before use,
- not use on live electrical circuits,
- pay attention to the risk of entanglement and strangulation.

### 4. Cleaning

Clean with a soft dry cloth, or if necessary, a soft damp cloth. Do not use any harsh chemical solvents such as acetone, thinner, brake cleaner, alcohol, etc as this may damage the tool.

### 5. Water & Moisture

Do not use this tool where contact or immersion in water is a possibility.  
Never spill liquid of any kind onto the tool.

### 6. Storage









Do not store or use the tool when exposed to direct sunlight, heat or excessive humidity.

### 7. Usage

To reduce the risk of fire:

- do not use the tool near flammable liquids,
- do not use the tool where there is a risk of exposure to explosive gases or vapours,
- keep the tool away from heat sources,
- do not operate the tool with the battery cover removed.

 
## 1.4 Tool Overview

 Power ON /OFF button	 Read or trigger sensor.
 Next, continue or confirm.	 Cancel, previous step.
 Navigate to select "up".	 Navigate to select "down".
 Navigate to select "left".	 Navigate to select "right".



## 1.5 Getting Started


Press and hold the Power button to turn on/off the device. Release button once it powers on/off.

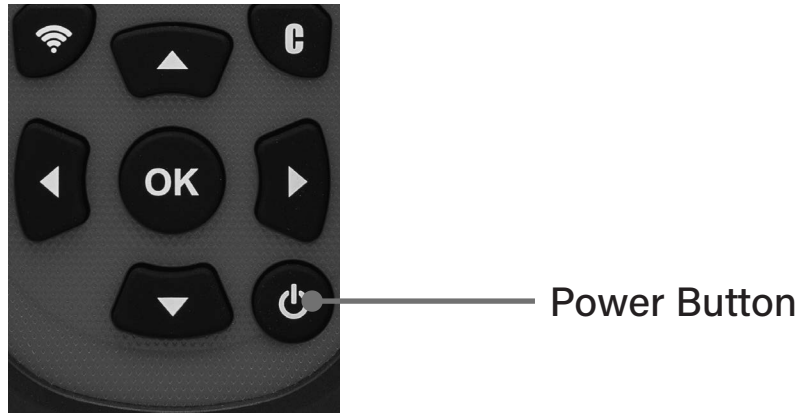

The tool will power ON and the splash screen will be displayed.





 Once the tool is completely powered on, the main menu will be displayed and the tool is ready for use.

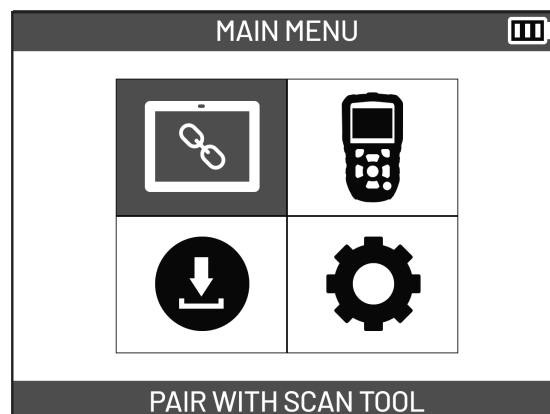


## 2. PAIR WITH SCAN TOOL

  From the main menu, select PAIR WITH SCAN TOOL.

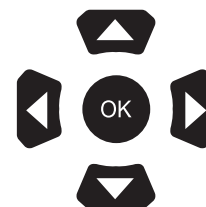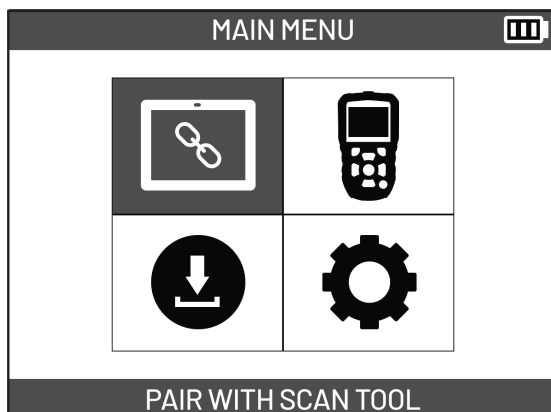

Use the arrow buttons to navigate. Press OK to confirm your choice.

 Message about connecting scan tool to the vehicle will be displayed.

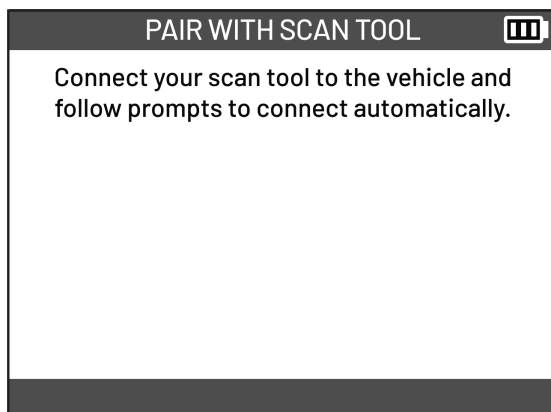

In the scan tool, enter the passkey (0 followed by last 5 digits of the tool serial number). Select the SCAN button then select the device to connect.

Device Connection

Passkey (6 digits)

000123

---


MAC Address

---

SCAN



## 3. STAND ALONE

 From the main menu, select STAND ALONE.

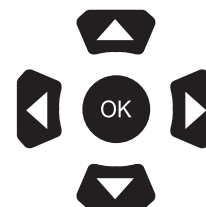



Use the arrow buttons to navigate. Press OK to confirm your choice.

  Select the vehicle make.

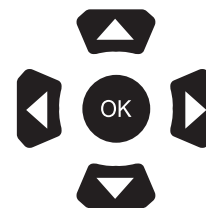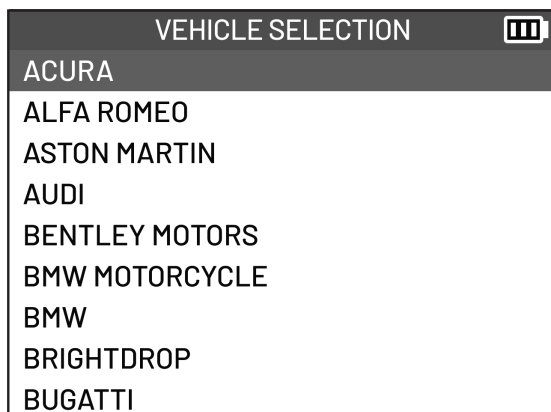



Use the arrow buttons to navigate. Press OK to confirm your choice.

  Select the vehicle model.

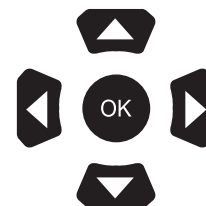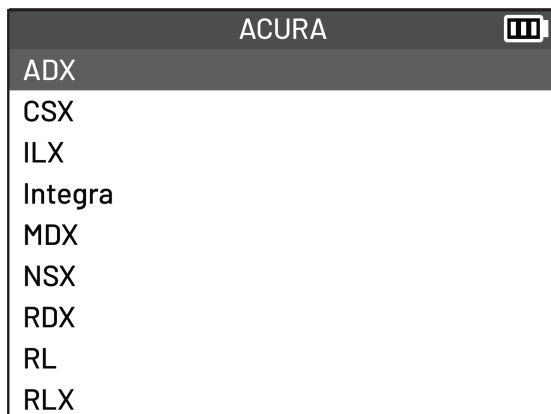


Use the arrow buttons to navigate. Press OK to confirm your choice.

  Select the vehicle year.

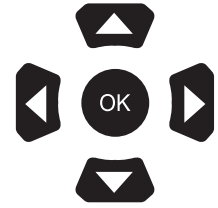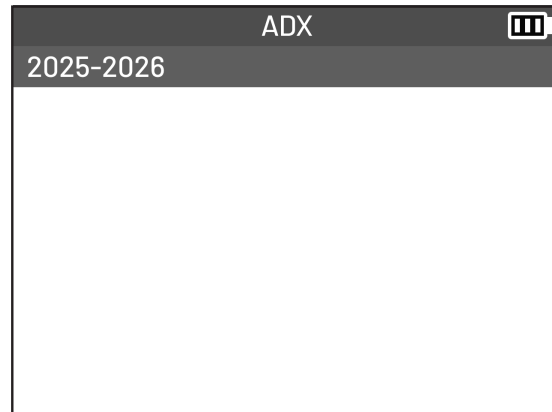

Use the arrow buttons to navigate. Press OK to confirm your choice.

 
Arrive at TPMS screen.  
Ready to read TPMS sensors.

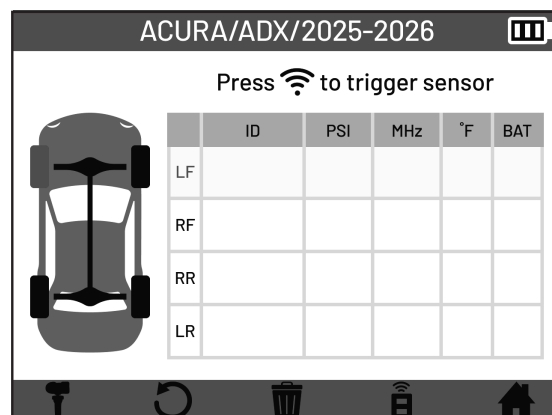

## 4. READ SENSORS

### 4.1 TPMS Screen overview


 
The TPMS screen is where the main functionality of the tool is located. You can read the TPMS sensors to display the Sensor ID, Pressure, Frequency, Temperature, and Battery Status. Selecting the icons on the bottom of the screen provide additional functions.

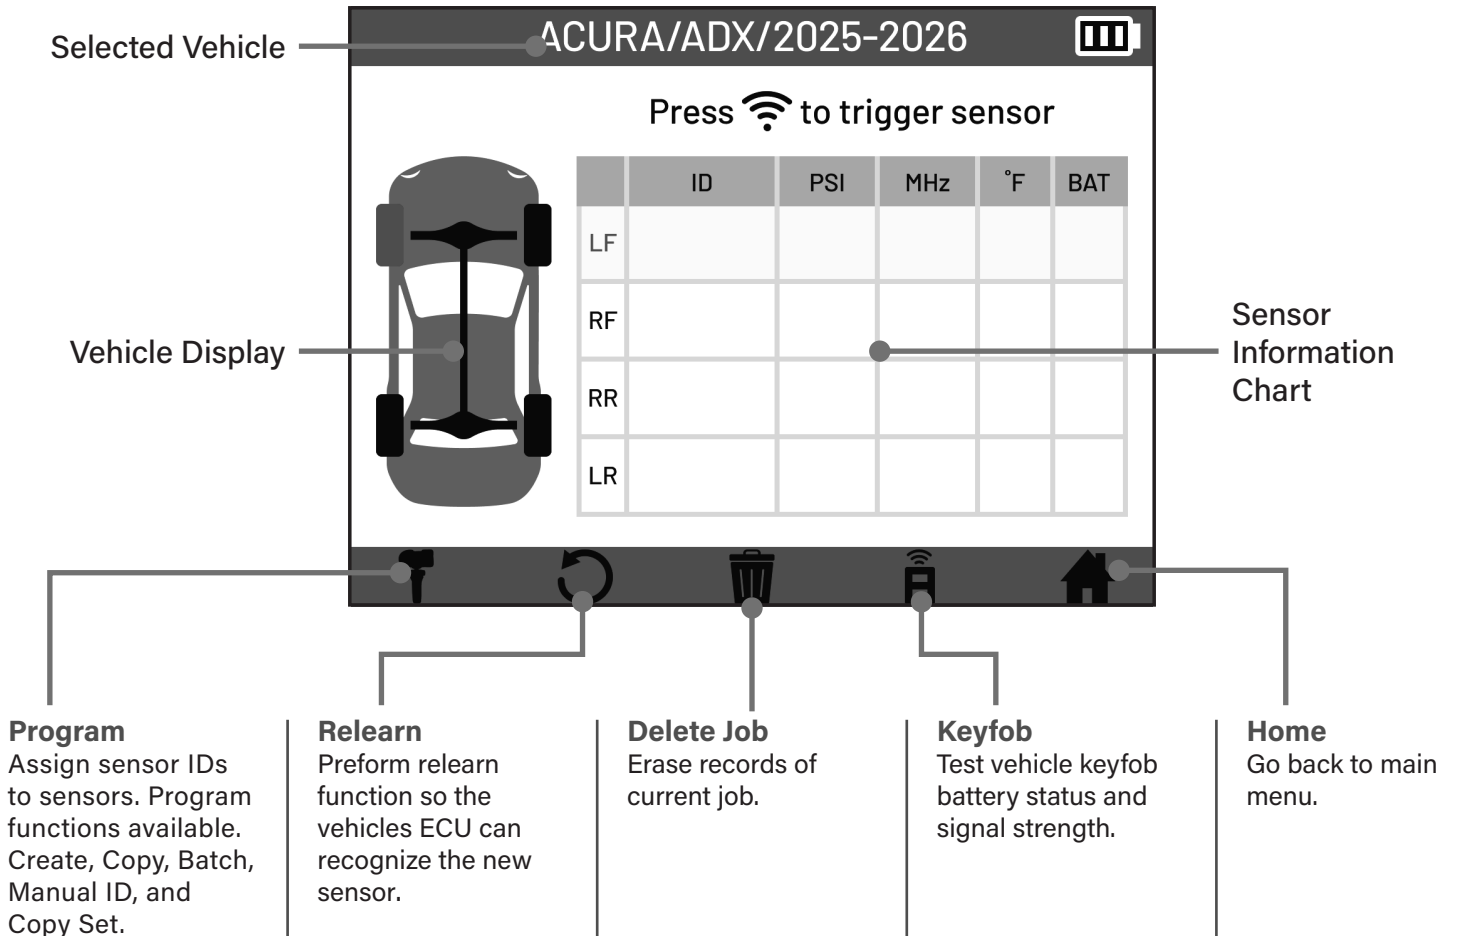

## 4.2 Reading TPMS Sensors

**IMPORTANT!** Vehicle-specific information in this manual is used as an example and cannot represent instructions specific to each make and model of vehicle. When using the various functions on the TPMS tool, it is important to refer to the on-screen prompts and/or to information in the vehicle's manual.

  
Select the wheel of the sensor you wish to scan. The selected wheel will be displayed in red on the vehicle display and highlighted on the sensor information chart.

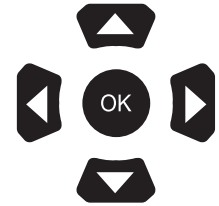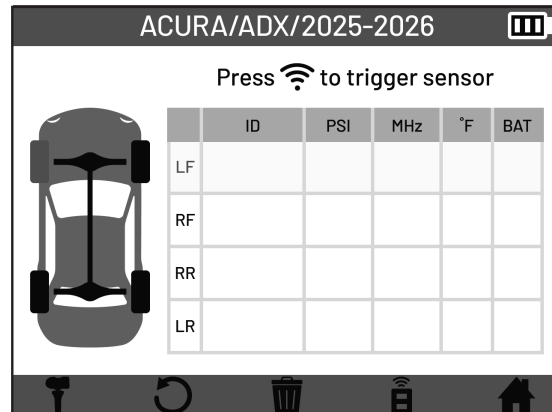

Use the arrow buttons to select wheel.


Place the tool's antenna towards the sensor through the tire sidewall. Press the trigger button to read the sensor.

 **NOTE!** To get the best reading from the TPMS sensors, point the tool's antenna at the sensor through the tire sidewall, not directly through the rim.

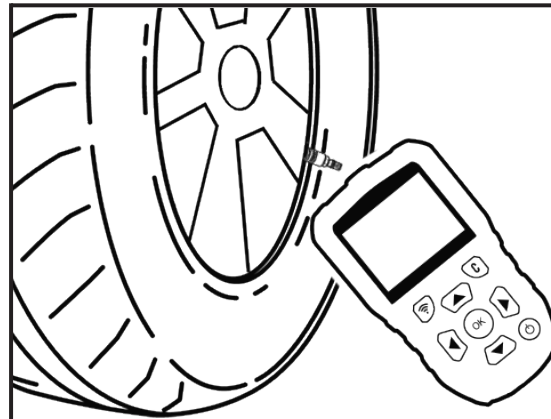

Press the trigger button on the tool to read the sensor.

 The sensor's information will be displayed on the chart. The wheel selection will automatically advance to the next wheel. Continue reading the remaining sensors.

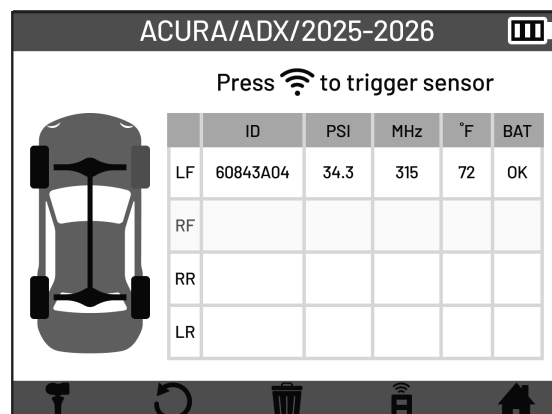

### \* NO SENSOR DETECTED


In the event that a "NO SENSOR DETECTED" error displays, reposition the tool and attempt to read the sensor again. If the error persists, this may be an indication that the sensor is dead and needs to be replaced.

## 5. PROGRAM


### 5.1 Accessing the Program functions menu

The Program function allows you to write new vehicle-specific data to a programmable TPMS sensor so it can operate correctly with the vehicle's TPMS system.


From the TPMS Screen, select the Program Icon located in the bottom bar.

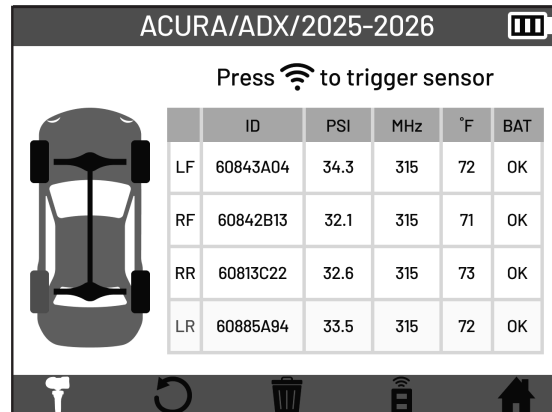

ACURA/ADX/2025-2026


Press  to trigger sensor

	ID	PSI	MHz	°F	BAT
LF	60843A04	34.3	315	72	OK
RF	60842B13	32.1	315	71	OK
RR	60813C22	32.6	315	73	OK
LR	60885A94	33.5	315	72	OK

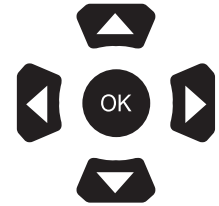 

Use the arrow buttons to navigate. Press OK to confirm your choice.


Select the make of the programmable sensor.

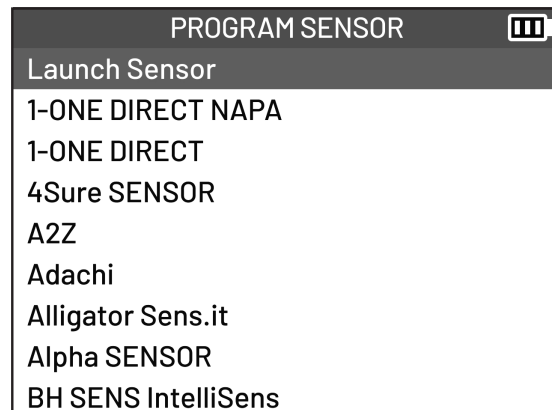

PROGRAM SENSOR


Launch Sensor

 - 1-ONE DIRECT NAPA
- 1-ONE DIRECT
- 4Sure SENSOR
- A2Z
- Adachi
- Alligator Sens.it
- Alpha SENSOR
- BH SENS IntelliSens

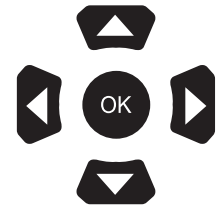


Use the arrow buttons to navigate. Press OK to confirm your choice.

Select the model of the programmable sensor.

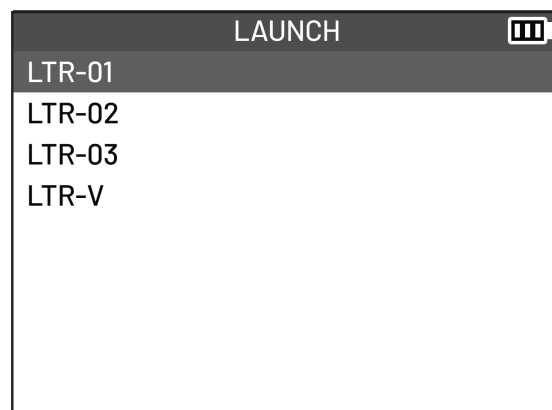



LAUNCH

 - LTR-01
- LTR-02
- LTR-03
- LTR-V

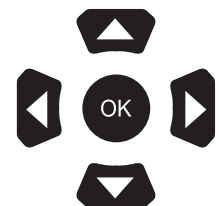

Use the arrow buttons to navigate. Press OK to confirm your choice.

  Arrive at the Program Functions screen.

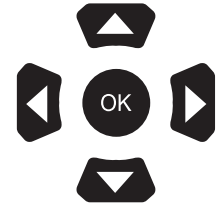
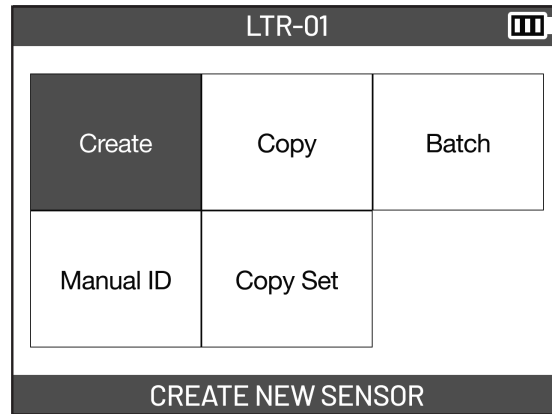


Use the arrow buttons to navigate. Press OK to confirm your choice.

## 5.2 Create New Sensor

  
Generates a new, vehicle-compatible TPMS sensor ID and programs it into a programmable sensor.

Select the CREATE NEW SENSOR function.

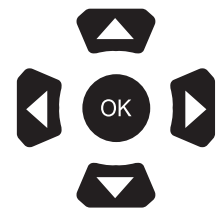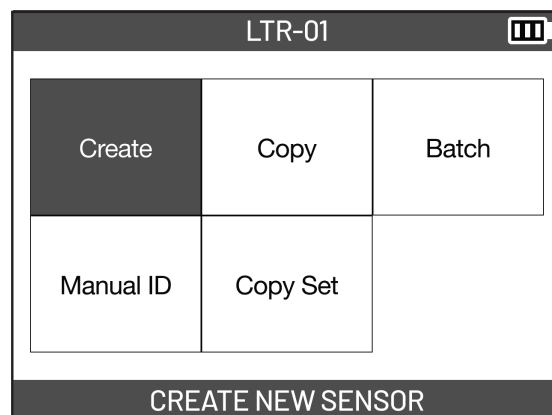


Use the arrow buttons to navigate. Press OK to confirm your choice.

 Hold the new programmable sensor near the tool antenna. Press the Trigger button on the tool to program.

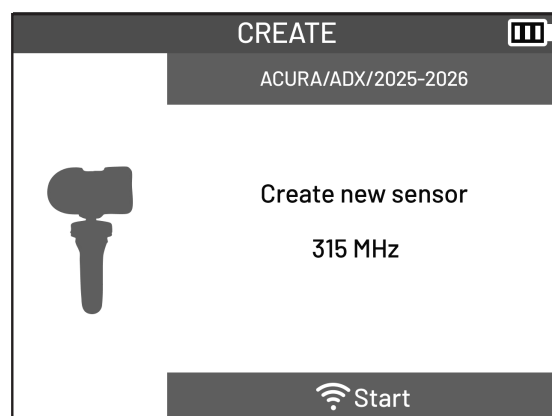

Press the trigger button on the tool to program sensor.

 Wait for the sensor to be programmed.

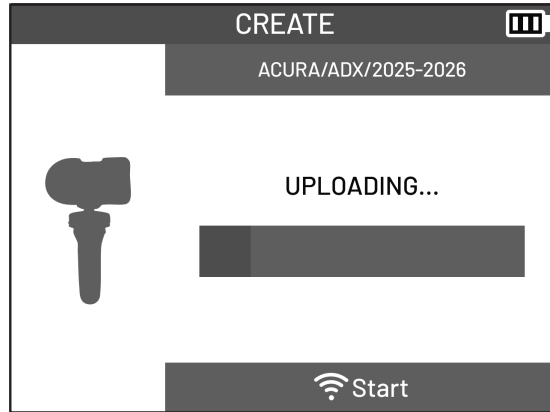

Once complete, the new sensor ID will be displayed.





Press the OK or Cancel button to go back to the Program Menu.

### 5.3 Copy ID

  
Copy the unique ID from an existing TPMS sensor and programs it into a new programmable sensor. Allows the replacement sensor to be recognized by the vehicle without requiring a relearn procedure in most cases.

Select the COPY ID function.

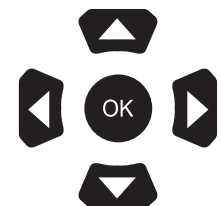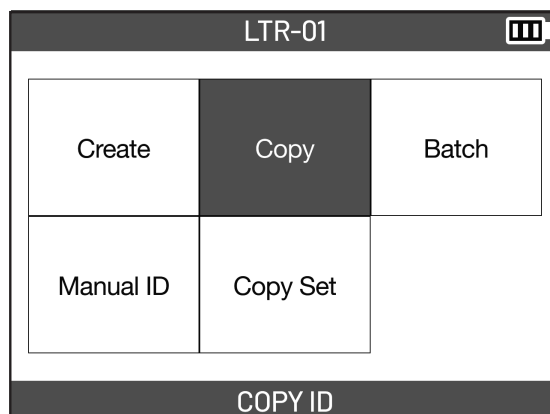


Use the arrow buttons to navigate. Press OK to confirm your choice.

 Hold the sensor you wish to copy near the tool antenna. Press the Trigger button on the tool to read the sensor ID.

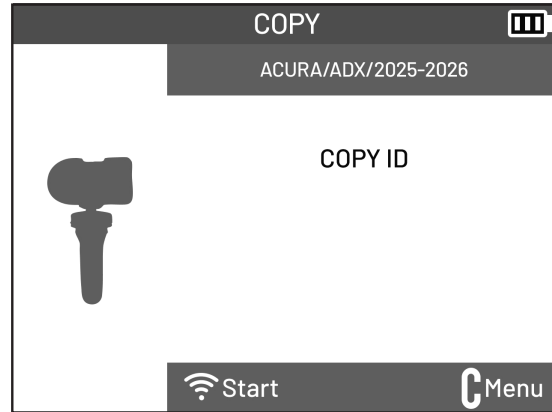


Press the Trigger button on the tool to read the sensor ID.

 Wait for the sensor ID to be retrieved.

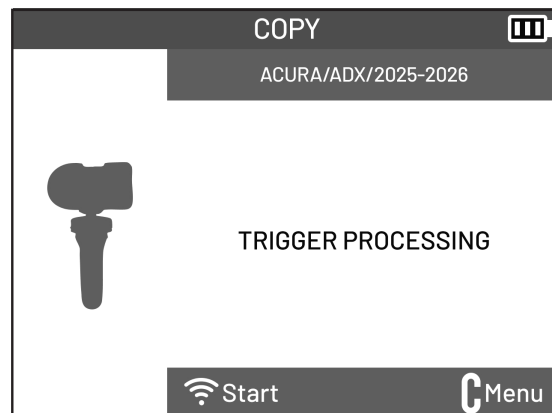


 The ID of the sensor along with pressure, frequency, temperature and battery status will be displayed.

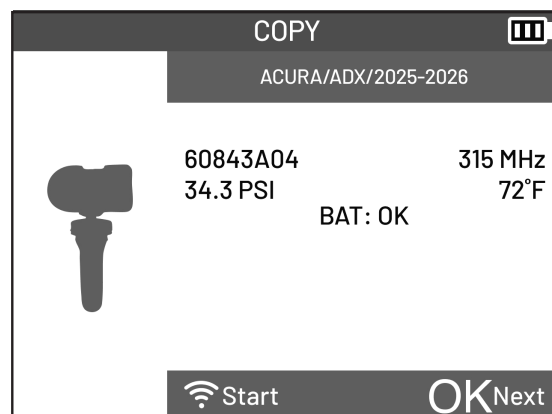

Press the OK or the Trigger button to proceed the Copy function.

 Hold the new programmable sensor near the tool antenna. Press the Trigger button on the tool to program.

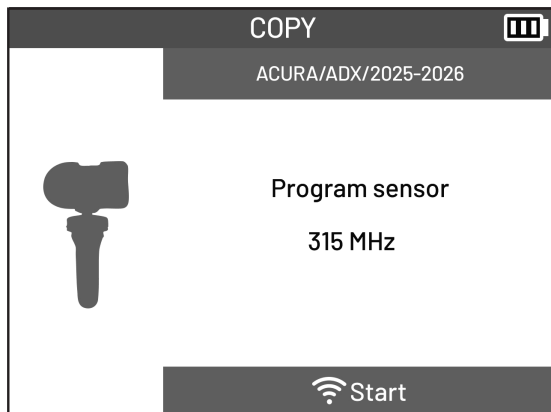

Press the trigger button on the tool to program sensor.

Wait for the sensor to be programmed.



Once complete, the new sensor ID will be displayed.





Press the OK or Cancel button to go back to the Program Menu.

## 5.4 Batch

 
 
In one step this function programs multiple sensors at the same time to unique IDs ensuring they are compatible with the vehicle selected.

Select the BATCH function.

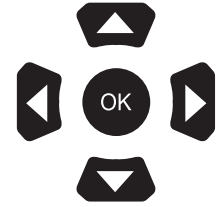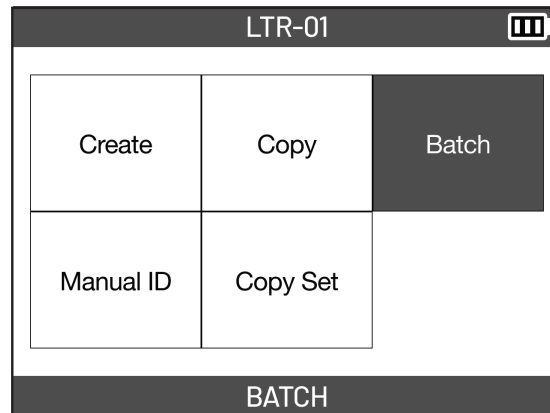


Use the arrow buttons to navigate. Press OK to confirm your choice.

  Select the number of sensors you want to program.

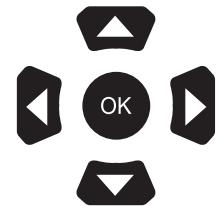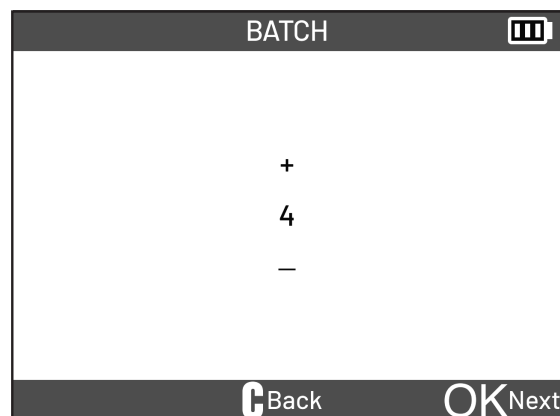


Use the UP and Down arrow buttons to increase or decrease number. Press OK to confirm your choice.

 Take note of the Warning text on screen.

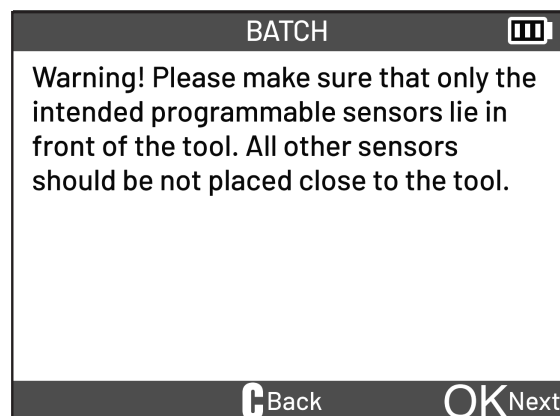


Press the OK button to proceed.

 Place the multiple sensors in front of the tool with the tool antenna pointing towards the sensors.

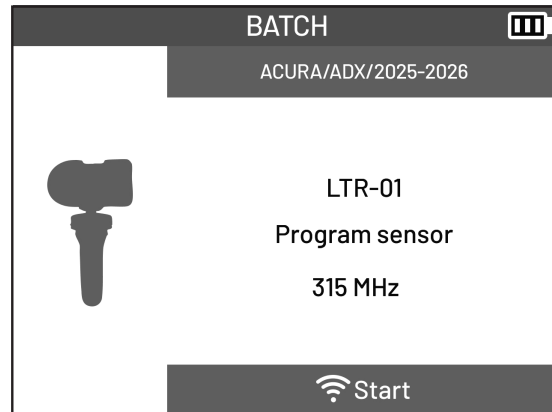


Press the trigger button on the tool to program sensors.

 Wait for the sensors to be programmed.

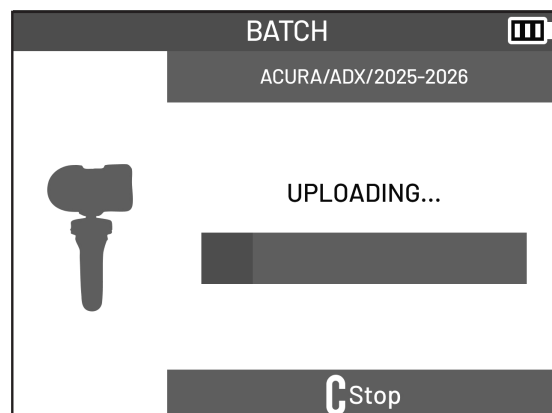

 Once complete, the new sensor IDs will be displayed.


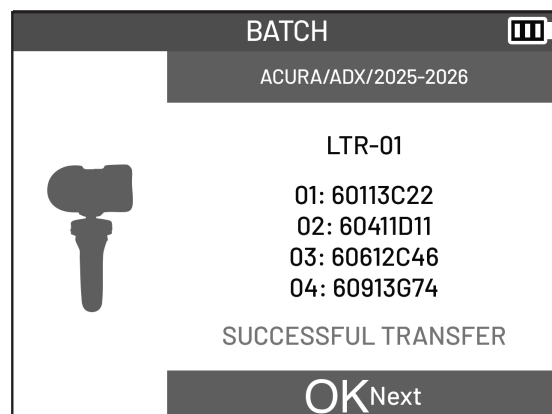


Press the OK or Cancel button to go back to the Program Menu.

## 5.5 Manual ID

  
Manually enter an ID for a damaged TPMS sensor. You must know the ID of the damaged sensor to use this function. The manual ID entry function is only available for certain makes of programmable sensors.

Select the MANUAL ID function.

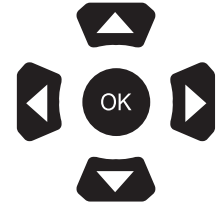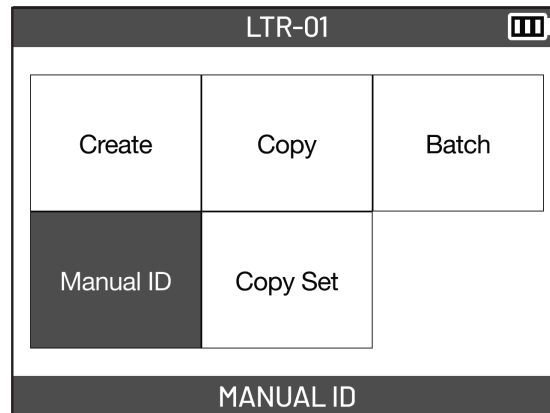



Use the arrow buttons to navigate. Press OK to confirm your choice.

 Read instructions on screen.

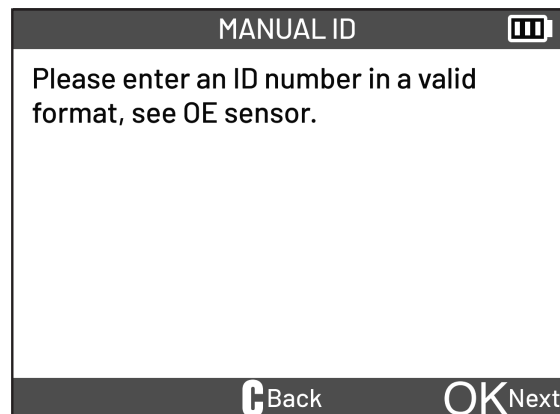


Press the OK button to proceed.

  Enter the sensor ID. Select NEXT once finished.

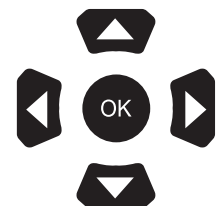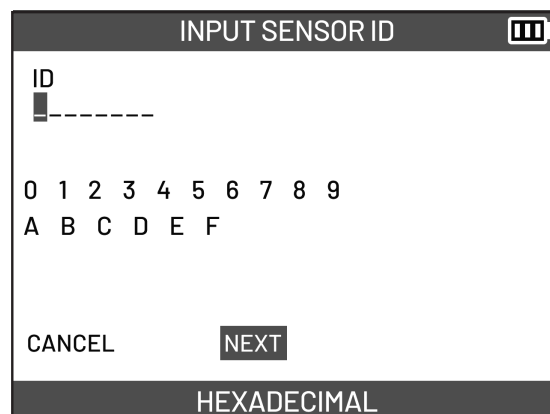


Use the arrow buttons to navigate. Press OK to confirm your choice.

 Hold the sensor near the tool antenna. Press the Trigger button on the tool to program.

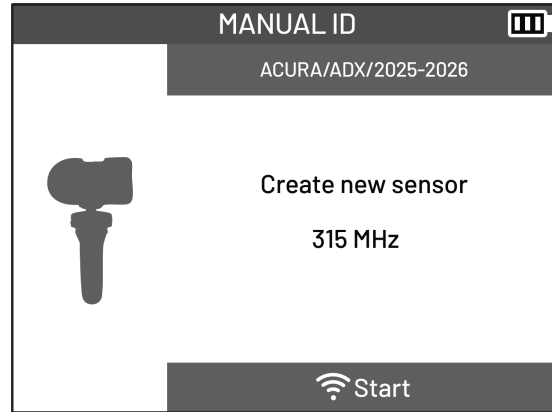


Press the trigger button on the tool to program sensor.

 Wait for the sensor to be programmed.

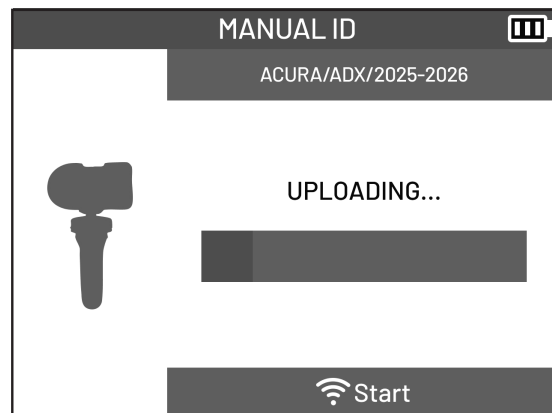

 Once complete, the entered sensor ID will be displayed.


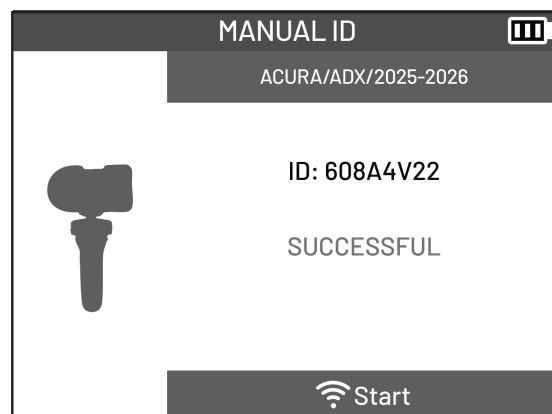


Press the OK or Cancel button to go back to the Program Menu.

## 5.6 Copy Set

 
 
Retrieves existing sensor IDs from active sensors and programs them into a new set of programmable sensors. This allows the creation of seasonal (winter/summer) wheel sets without requiring a TPMS relearn procedure.

Select the COPY SET function.

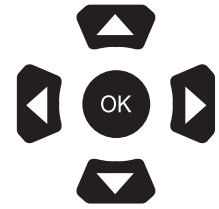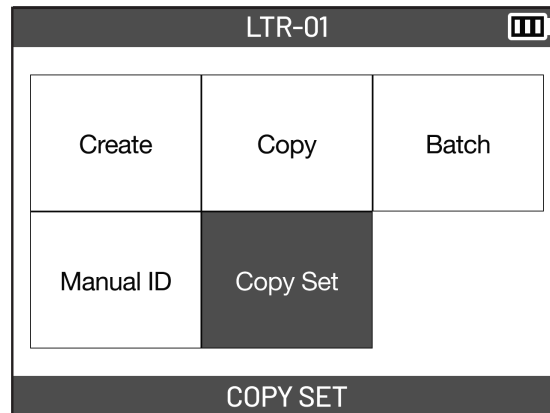


Use the arrow buttons to navigate. Press OK to confirm your choice.

  Select the first tire to copy. Press the Trigger button to proceed.

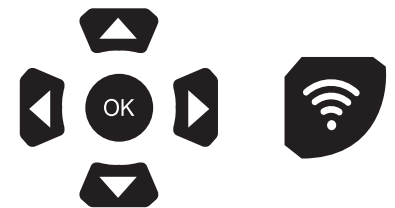
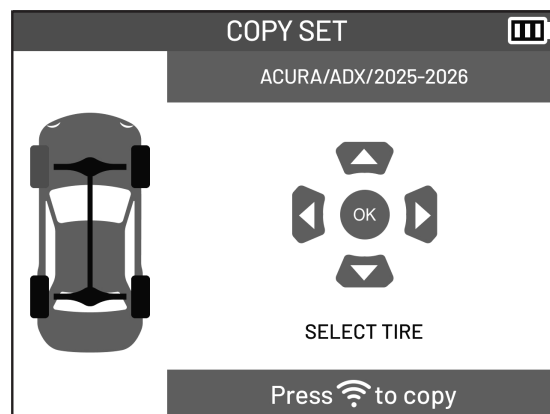


Use the arrow buttons to select tire. Press the Trigger button to read sensor.

 Wait for the sensor to be triggered.

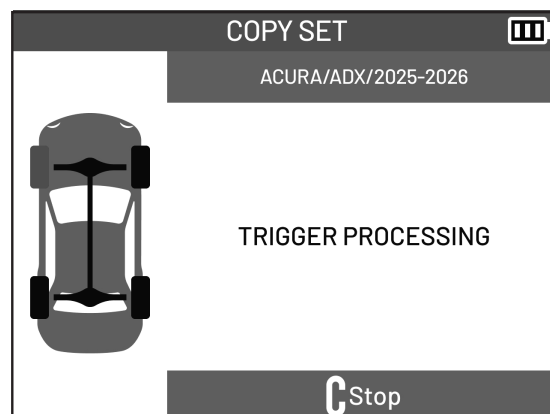


  The ID of the sensor along with pressure, frequency, temperature and battery status will be displayed.

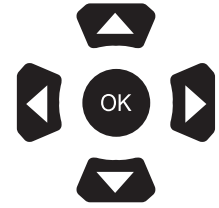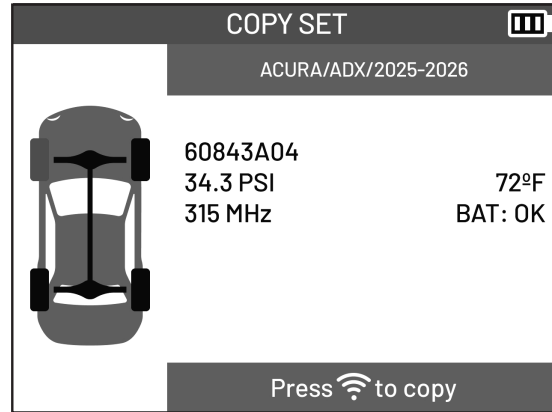


Use the arrow buttons to navigate to the next tire.

 Repeat the steps above and copy the remaining sensors. Once all sensors have been read, the tool is ready to program the new sensors. Select the first tire you wish you program.

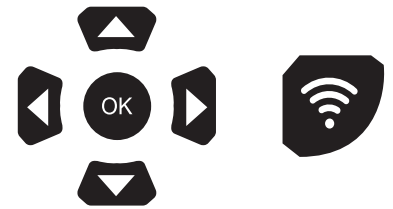


Use the arrow buttons to select tire. Press the OK or Trigger button to proceed.

 Hold the new programmable sensor near the tool antenna. Press the Trigger button on the tool to program.

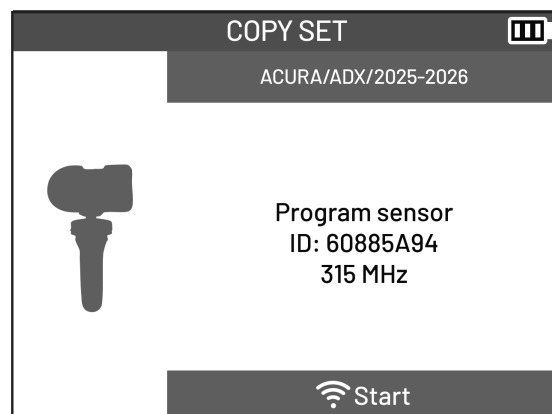

Press the trigger button on the tool to program sensor.

 Wait for the sensor to be programmed.

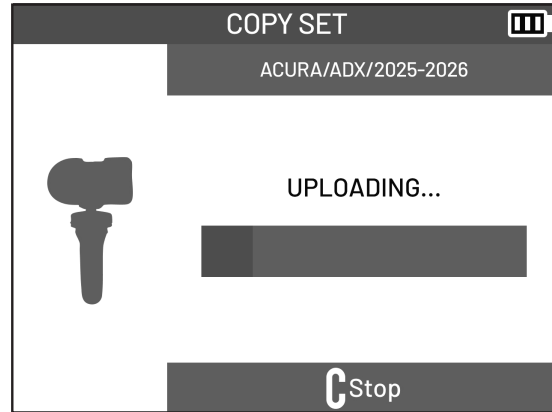


The ID of the sensor along with pressure, frequency, temperature and battery status will be displayed. Press the OK button to continue copying the remaining tires.



Press the OK button to return to the tire selection screen.

 Repeat the steps above to program the remaining tires.

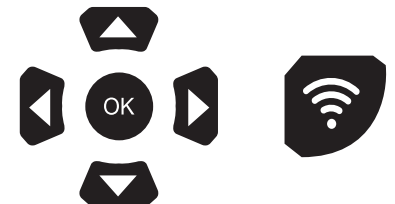



Use the arrow buttons to select tire. Press the OK or Trigger button to proceed.

## 6. RELEARN
  
### 6.1 Accessing the Relearn functions menu


The Program function allows you to write new vehicle-specific data to a programmable TPMS sensor so it can operate correctly with the vehicle's TPMS system.

From the TPMS Screen, select the Relearn Icon located in the bottom bar.

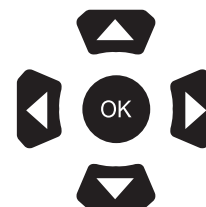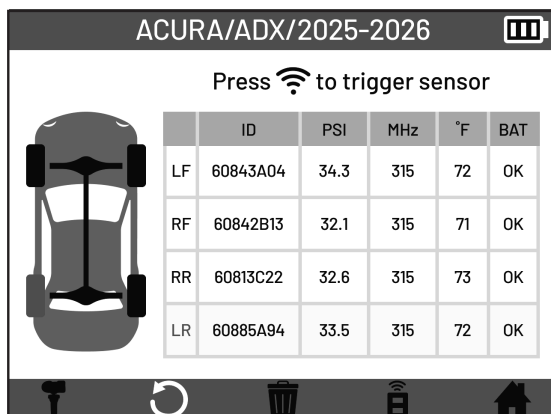

Use the arrow buttons to navigate. Press OK to confirm your choice.


 
Arrive at the Relearn functions menu.

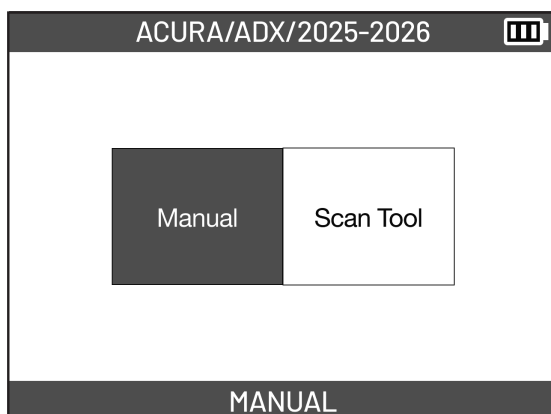

## 6.2 Manual Relearn


Process of teaching the vehicle to recognize new TPMS sensor IDs by following a specific sequence of actions using the vehicle controls.

  Select the MANUAL function.

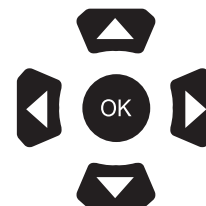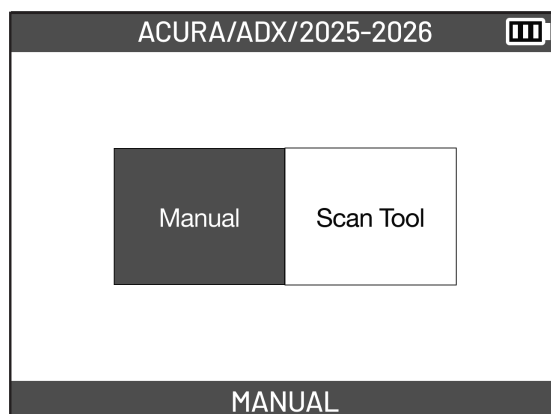

Use the arrow buttons to navigate. Press OK to confirm your choice.


 
Follow the instructions on screen to put the vehicle into relearn mode.

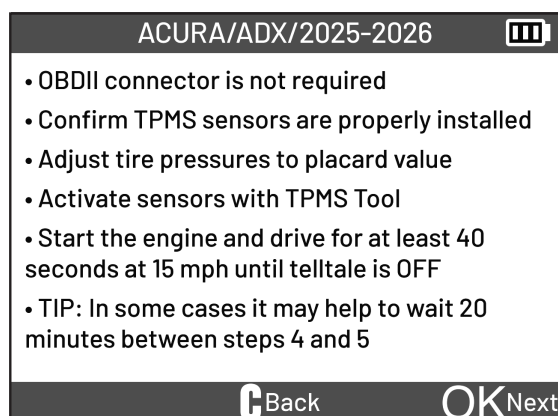

## 6.3 SCAN TOOL


Use Scan Tool to initiate relearn.

  Select the SCAN TOOL function.

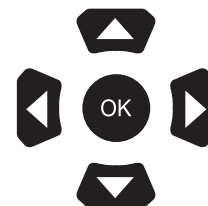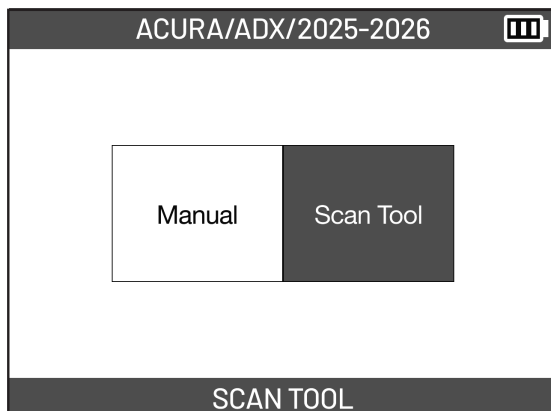


Use the arrow buttons to navigate. Press OK to confirm your choice.

 Follow the instructions on screen.

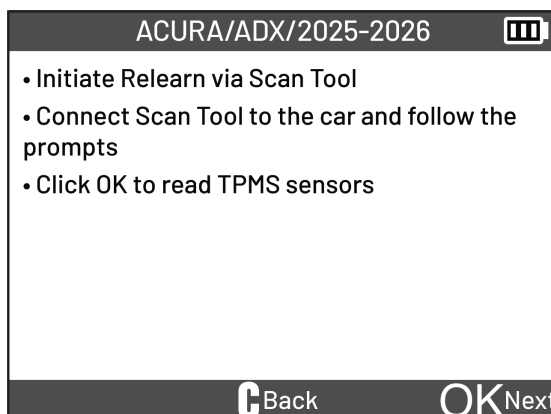

Press the OK button to proceed to read TPMS sensors.


 
Read all the sensors to finish the relearn.

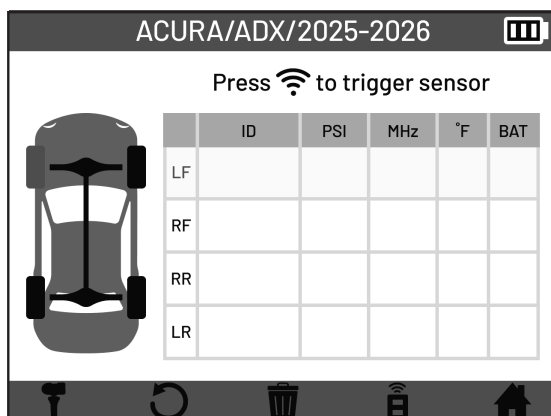

Press the trigger button on the tool to read the sensor.


## 7. DELETE JOB / GO HOME

  From the TPMS Screen, select the Delete Job Icon located in the bottom bar.

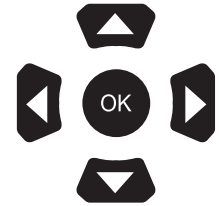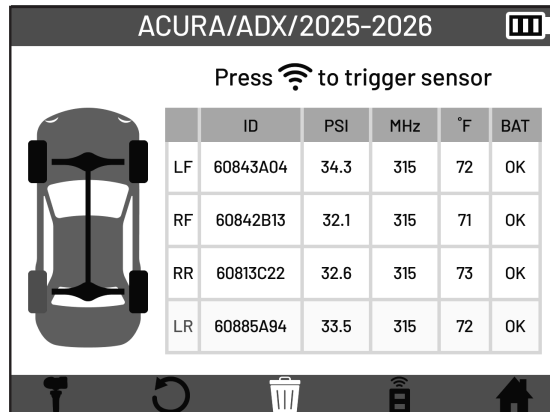



Use the arrow buttons to navigate. Press OK to confirm your choice.

 Press the OK button to erase records.

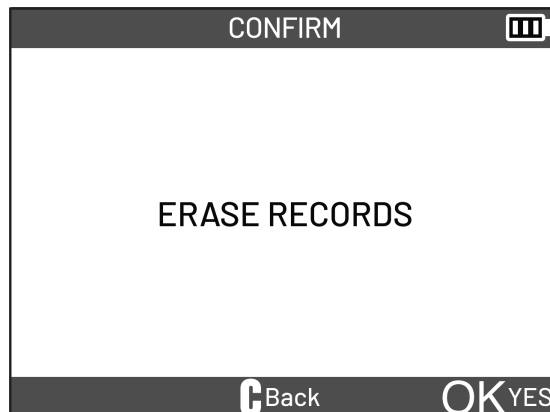

Press the OK button to erase records or Cancel button to go back.

  From the TPMS Screen, select the Go Home Icon located in the bottom bar to return back to the Main Menu.

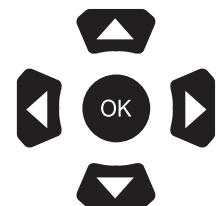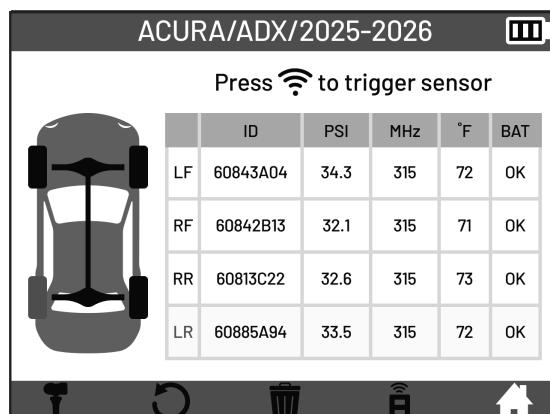


Use the arrow buttons to navigate. Press OK to confirm your choice.


## 8. KEYFOB

Test vehicle keyfob battery status and signal strength.


From the TPMS Screen, select the Keyfob Icon located in the bottom bar.

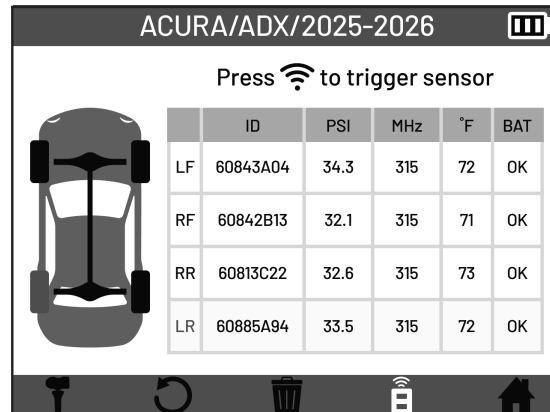

ACURA/ADX/2025-2026


Press  to trigger sensor

	ID	PSI	MHz	°F	BAT
LF	60843A04	34.3	315	72	OK
RF	60842B13	32.1	315	71	OK
RR	60813C22	32.6	315	73	OK
LR	60885A94	33.5	315	72	OK

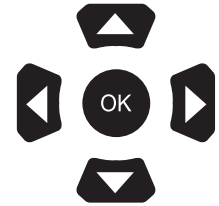 

Use the arrow buttons to navigate. Press OK to confirm your choice.

Select the frequency of the keyfob. This is dependent on the vehicle choice.

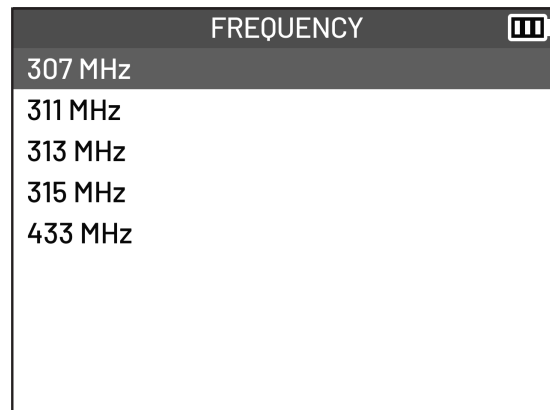

FREQUENCY

 
307 MHz

311 MHz

313 MHz


315 MHz

433 MHz

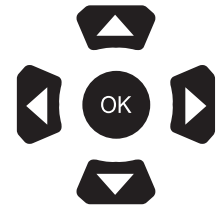

Use the arrow buttons to navigate. Press OK to confirm your choice.


 
Hold the keyfob near the tool antenna and press and hold button on keyfob. Signal strength will be displayed on screen.

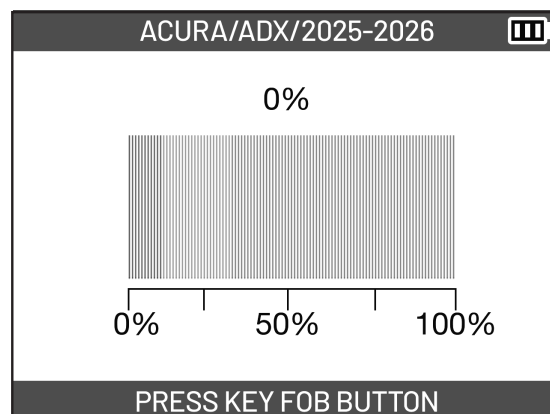

# 9. SETTINGS



## 9.1 Accessing the Settings menu

  From the main menu, select SETTINGS.

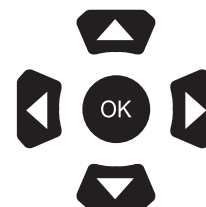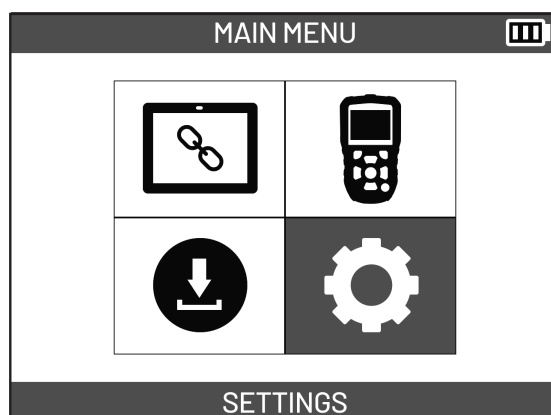

Use the arrow buttons to navigate. Press OK to confirm your choice.

  The different tool settings will be displayed.

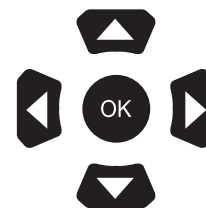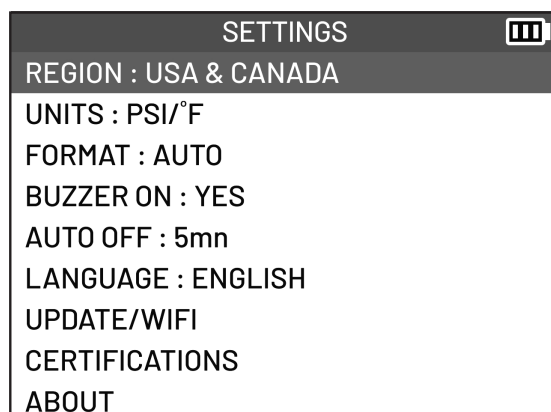

Use the arrow buttons to navigate. Press OK to confirm your choice.

### Description of settings.

#### REGION

Select the geographical region of the database.

#### UNITS

Change the units used to display pressure and temperature.

#### FORMAT

Change the format used to display the sensor ID.

#### BUZZER ON

Enable or disable sound.

#### AUTO OFF

Set the time before the tool switches off automatically when not in use.

#### LANGUAGE

Change the language that is displayed on the tool.

#### UPDATE/WIFI

Update the tool via WIFI and change the WIFI settings.

#### CERTIFICATIONS

View tool certifications.

 
 
#### ABOUT

Display the version numbers of the tool.

## 9.2 Region


Select the geographical region of the database.

Select REGION

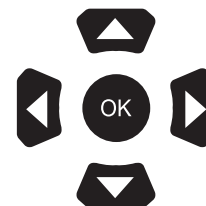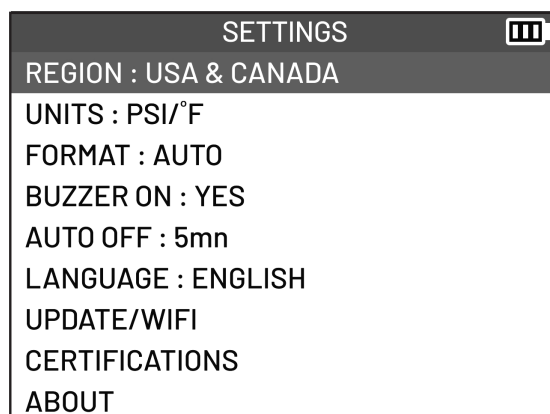

Use the arrow buttons to navigate. Press OK to confirm your choice.

 Select what regional database you wish to use.


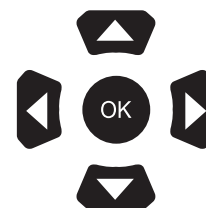


Use the arrow buttons to navigate. Press OK to confirm your choice.

### 9.3 Units

 
 
Change the units used to display pressure and temperature.

Select UNITS

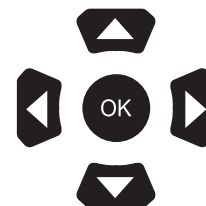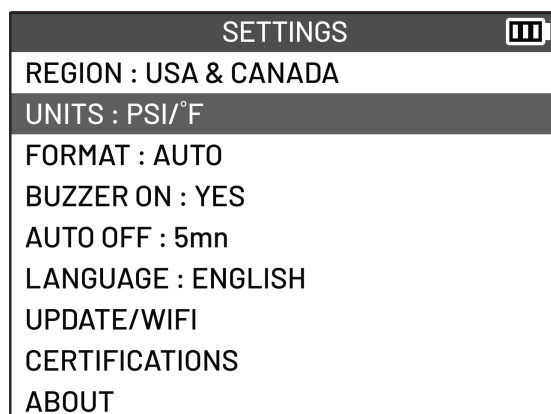

Use the arrow buttons to navigate. Press OK to confirm your choice.

  Select what unit you would like to use to display pressure and temperature.

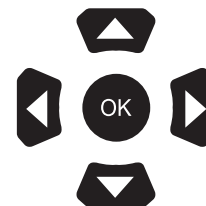
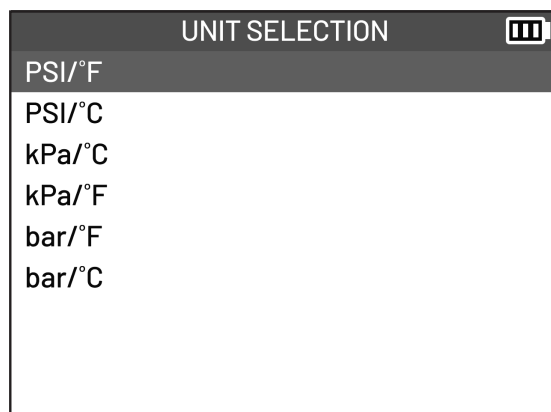


Use the arrow buttons to navigate. Press OK to confirm your choice.

## 9.4 Format

  Change the format used to display the sensor ID.


Select FORMAT

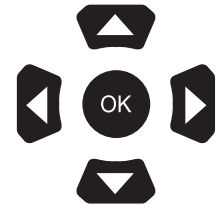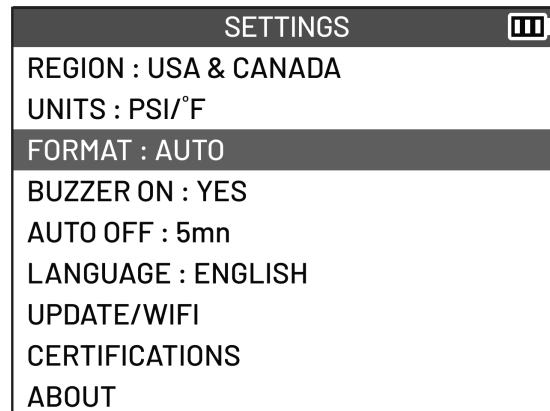

Use the arrow buttons to navigate. Press OK to confirm your choice.

Select what format you would like to use to display the sensor ID.

 - AUTO displays the sensor ID following the format sent by the sensor.
- DECIMAL displays the sensor ID in decimal format (0 to 9).
- HEXADECIMAL displays the sensor ID in hexadecimal format (0 to 9 and A to F).


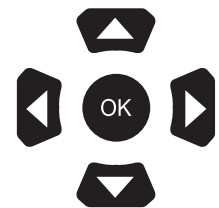


Use the arrow buttons to navigate. Press OK to confirm your choice.

## 9.5 Buzzer ON

  Enable or disable sound.



Select BUZZER ON

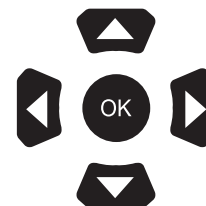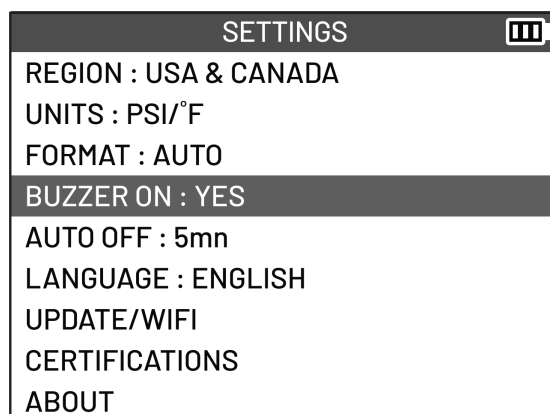

Use the arrow buttons to navigate. Press OK to confirm your choice.

Use the Up and Down arrow buttons to select YES or NO.

  - NO  
Mute sound from the tool
- YES  
Enable the tool's sound

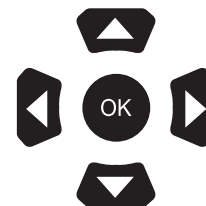
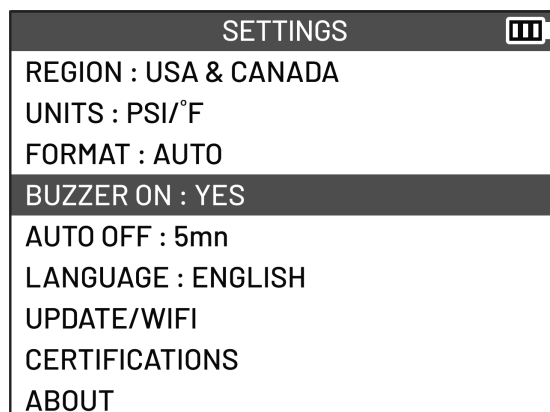


Use the arrow buttons to navigate. Press OK to confirm your choice.

## 9.6 Auto Off

  Set the time before the tool switches off automatically when not in use.



Select AUTO OFF

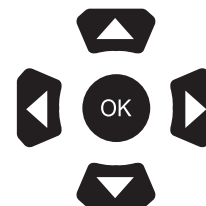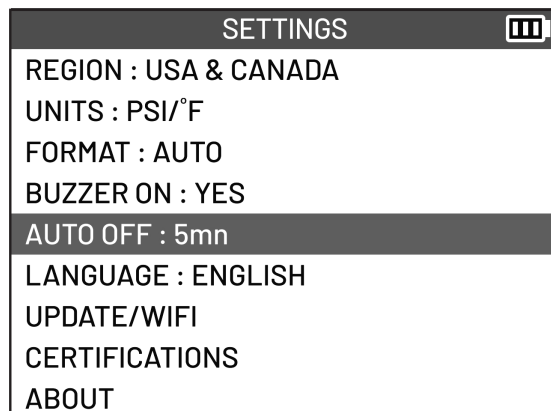

Use the arrow buttons to navigate. Press OK to confirm your choice.

Use the Up and Down arrow buttons to increase or decrease delay by 1 minute.

  It is possible to disable the tool's automatic power off function when not in use by reducing the time to 1 minute and then pressing the down arrow again.

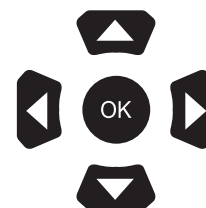
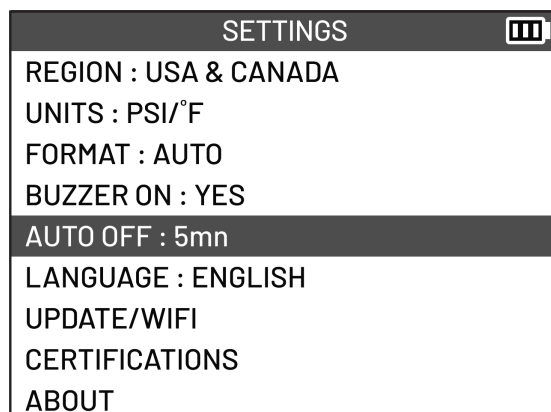


Use the arrow buttons to navigate. Press OK to confirm your choice.

## 9.7 Language

  
Change the language that is displayed on the tool.

Select LANGUAGE

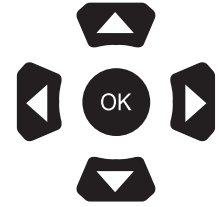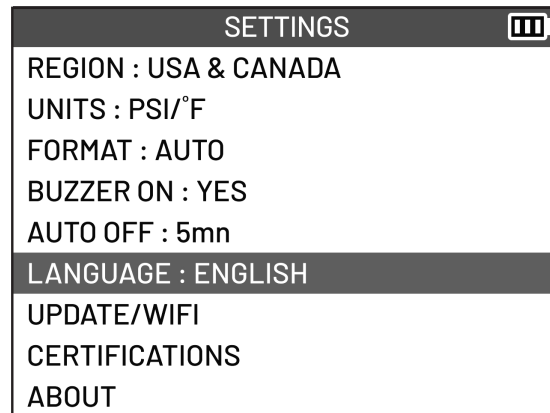

Use the arrow buttons to navigate. Press OK to confirm your choice.

 Select what language you wish the tool to display.


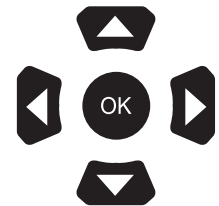


Use the arrow buttons to navigate. Press OK to confirm your choice.

## 9.8 Update/WIFI

 
 
Update the tool via WIFI and change the WIFI settings.

Select UPDATE/WIFI

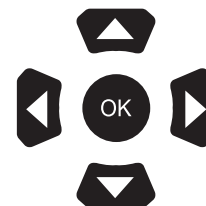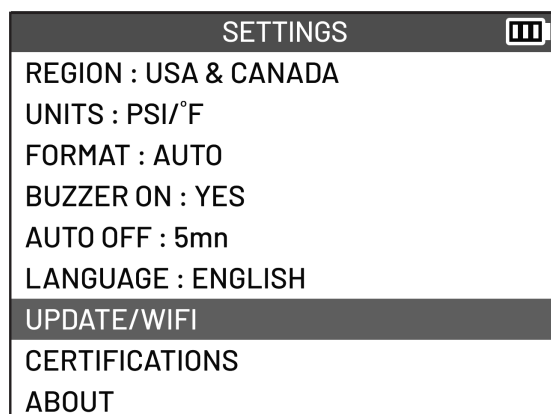

Use the arrow buttons to navigate. Press OK to confirm your choice.

  The Update/WIFI Settings will be displayed. WIFI connection is required to perform updates and renew license. If tool is not connected to WIFI, tool will display the WIFI Settings screen when selecting any of the options. See page 40 on how to connect to WIFI.

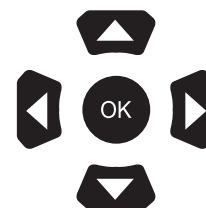
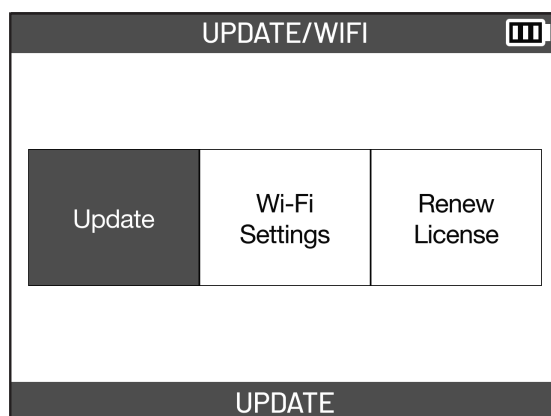


Use the arrow buttons to navigate. Press OK to confirm your choice.

## 9.8.1 Update

  
Select UPDATE.

Can access the Update function through the UPDATE/WIFI menu or by selecting the UPDATE function from the Main Menu.

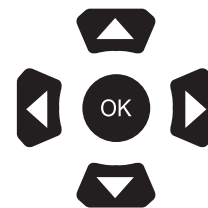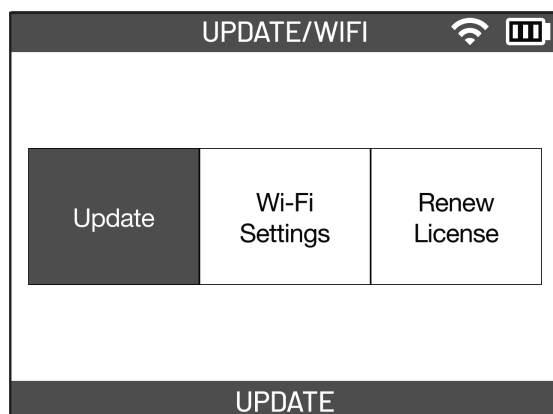

Use the arrow buttons to navigate. Press OK to confirm your choice.

 
Press the OK button on the tool to begin the update process.

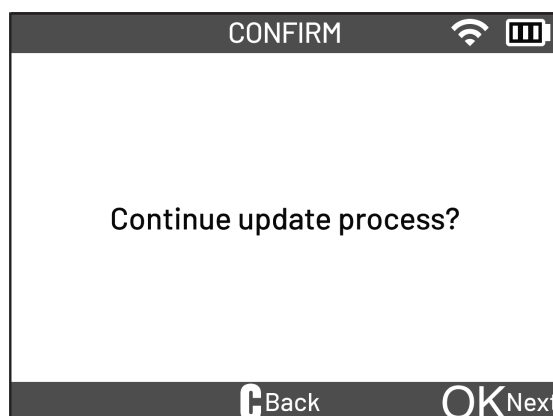

Press the OK button to update tool.



Wait for the update process to finish.

 - Do not use the tool while update is in progress
- Do not turn off the tool while update is in progress
- Recommended to connect tool to charger while updating the tool

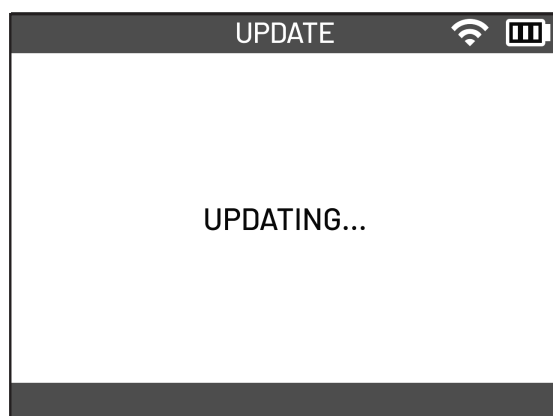



## 9.8.2 WIFI Settings

  Select WIFI SETTINGS

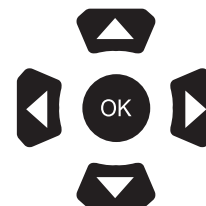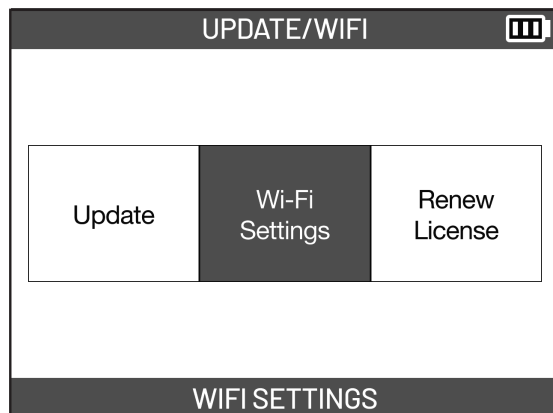



Use the arrow buttons to navigate. Press OK to confirm your choice.

  Select WIFI ACTIVATED. Use the UP and DOWN arrows to select between YES and NO. Select YES to connect to WIFI.

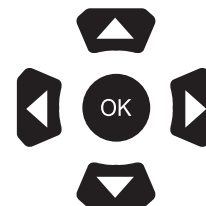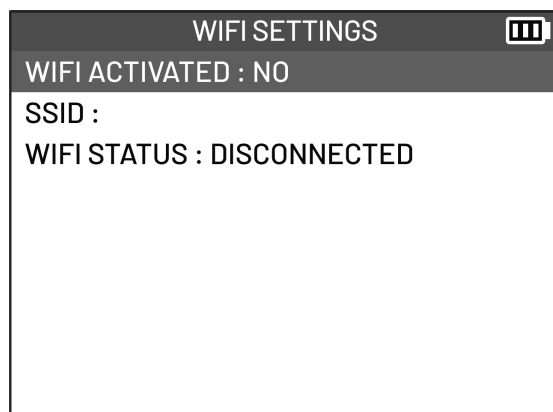


Use the arrow buttons to navigate. Press OK to confirm your choice.

  Select the network you wish to connect to.

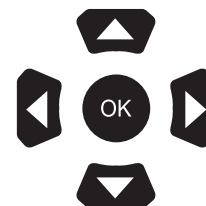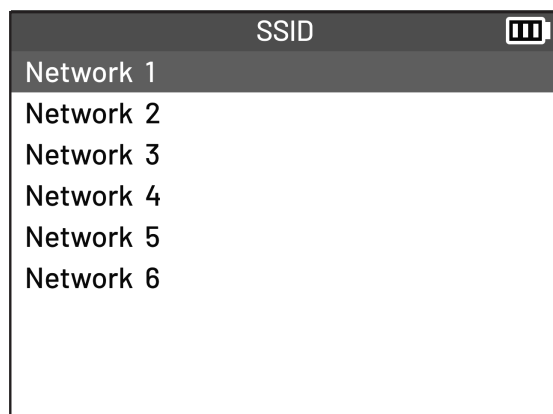

Use the arrow buttons to navigate. Press OK to confirm your choice.

 Enter the network password.  
Select NEXT once finished.

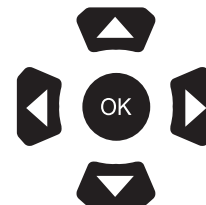

Use the arrow  
buttons to navigate.  
Press OK to confirm  
your choice.

Wait a few seconds to  
connect to the network.



Once connected, the  
network details will be  
displayed.



WIFI icon displayed in  
the top right corner of  
the screen indicates  
that the device is  
connected to WIFI.



### 9.8.3 Renew License

  Select RENEW LICENSE

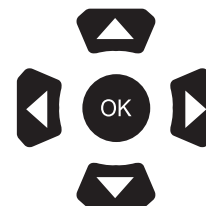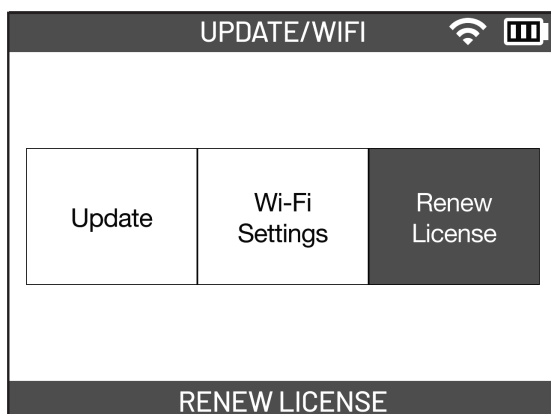


Use the arrow buttons to navigate. Press OK to confirm your choice.

  Enter the license code.  
Select NEXT to proceed.

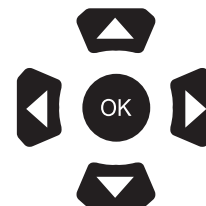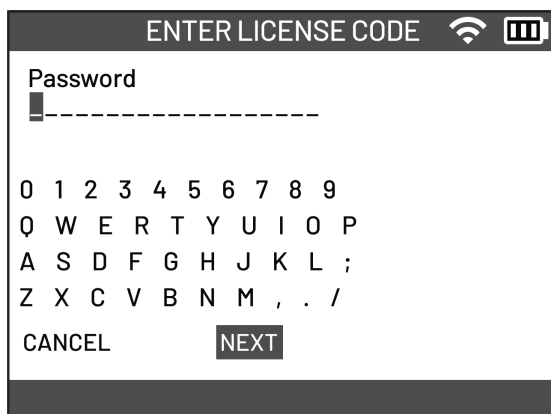

Use the arrow buttons to navigate. Press OK to confirm your choice.


 
The license validity can be found under the ABOUT setting.

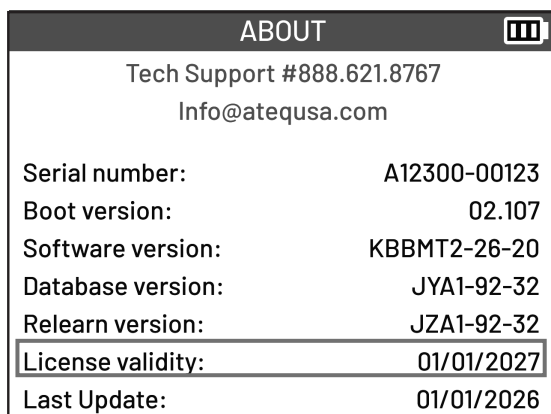

## 9.9 Certifications


View tool certifications.

  Select CERTIFICATIONS

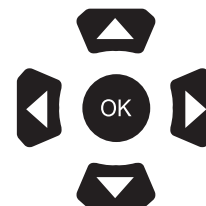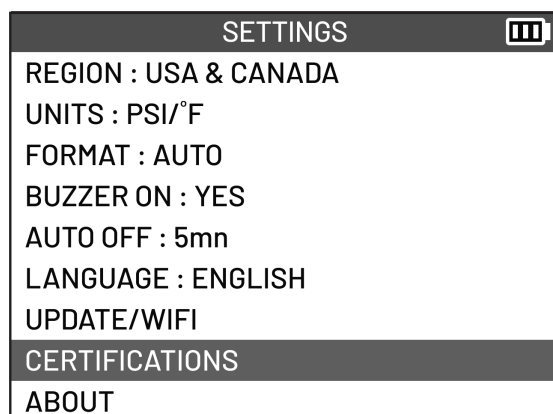

Use the arrow buttons to navigate. Press OK to confirm your choice.


 
Certification information will be displayed.

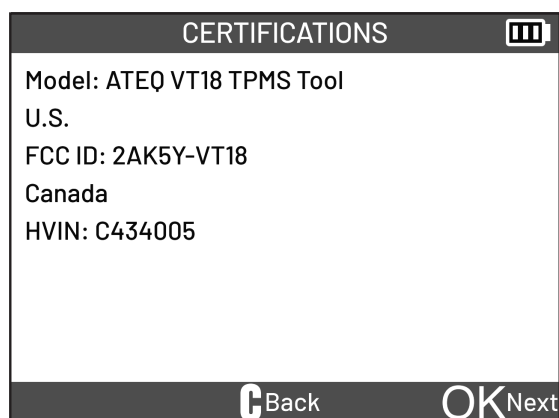

## 9.10 About


Display the version numbers of the tool.

  Select ABOUT

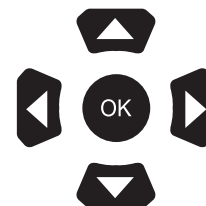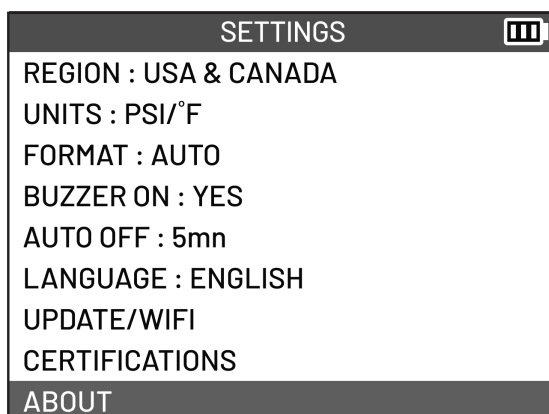

Use the arrow buttons to navigate. Press OK to confirm your choice.

 This displays the tool's serial number, the firmware and database version numbers, the validity of the software license, and when the tool was last updated.

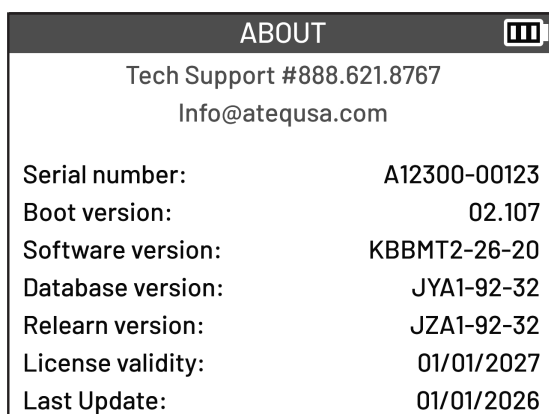


# 10. MISCELLANEOUS

## 10.1 Charging the battery

A full charge enables an average of 300 sensors to be read (approximately 60 to 80 vehicles). This may change depending on the sensor model.
 
### Battery level indicators



**DO NOT** use the tool with low battery status because the transmission and emission may not be reliable.



Battery charging



Battery faulty

### Battery replacement

If the battery is defective, the tool must be returned to the after sales service for battery replacement. Opening the tool or tampering with the seal placed on the tool, if broken, will void the warranty.

## 10.2 Warranty

### Limited Hardware Warranty

ATEQ warrants to the original purchaser that your ATEQ hardware product shall be free from defects in material and workmanship for the length of time, identified on your product package and/or contained in your user documentation, from the date of purchase. Except where prohibited by applicable law, this warranty is non-transferable and is limited to the original buyer. This warranty gives you specific statutory rights, and you may also have other rights that vary under local laws.

### Remedies

In the event of breach of the warranty, the sole responsibility of ATEQ and your sole remedy consists, at ATEQ's choice, in repairing or replacing the hardware. Shipping and handling charges may apply, unless prohibited by the applicable law. To repair or replace any hardware, ATEQ may, as it chooses, use parts that are new, restored or already used but in good working order. Any replacement hardware product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer or for any additional period of time that may be applicable in your jurisdiction.

This warranty does not cover problems or damage resulting (a) from accidents, abuse, incorrect use or any repair, any modification or any unauthorized disassembly; (b) from inappropriate use or maintenance, use not in compliance with the instructions of the product or from connecting to power supply with incorrect voltage; or (c) from use of consumables, such as replacement batteries, not supplied by ATEQ, apart from where such restriction is prohibited by the applicable law.

### How to Obtain Warranty Support

Before submitting a warranty claim, we recommend you visit the technical support section of our website at <https://www.ateq-tpms.com/> for technical assistance. Valid warranty claims are generally processed through the point of sale

during the first thirty (30) days after purchase. However, this period of time may vary depending on the place of purchase. Contact ATEQ or the retailer who sold you the product to get more details. Warranty claims that cannot be processed through the point of sale and any other product-related questions should be addressed directly to ATEQ. The addresses and contact details of ATEQ's customer services are given in the documentation provided with your product, and on the internet at <https://www.ateq-tpms.com/>.

### Limitation of Liability

ATEQ SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT OR ACCIDENTAL DAMAGE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, REVENUE OR DATA (WHETHER DIRECT OR INDIRECT) OR COMMERCIAL LOSS FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON YOUR PRODUCT, EVEN IF YOU HAVE NOT BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. Some jurisdictions do not allow the exclusion or limitation of special, indirect or accidental damage, and so the above limitations or exclusions may not apply to you.

### Duration of Implied Warranties

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS ON THIS HARDWARE PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THE APPLICABLE LIMITED WARRANTY PERIOD FOR YOUR PRODUCT. Some jurisdictions do not allow limitations on how long an implied warranty lasts, and so the above limitation may not apply to you.

### National Statutory Rights

Consumers have statutory rights under applicable national legislation governing the sale of consumer goods. Such rights are not affected by the warranties in this Limited Warranty.

## No Other Warranties

No ATEQ dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

## Warranty Period

The warranty period for ATEQ tools is one year.

## 10.3 Safety Precautions

**You must read and understand these safety precautions and warnings before using or charging your Li-Po batteries.**

### Operating environment

Remember to always follow any specific regulations in force in your sector of work, and to switch off your device when its use is prohibited, or when it may cause interference or danger. Only use the tool in its normal operating position.

### About charging

Only use the power supply provided with your tool. The use of any other power supply may damage the tool and/or be dangerous.

### About the charger

Do not use this charger in wet environments; never touch the charger if your hands or feet are wet.

Allow sufficient space around the charger for ventilation when you use it to power or recharge the tool's battery. Do not cover the charger with objects liable to affect cooling. Do not use this charger inside a bag.

Connect the charger to a suitable power outlet.

Do not use the charger if it is damaged or if its power lead is damaged. Do not disassemble the charger and do not modify any of its parts. Do not attempt to repair the charger. It does not contain any part that can be repaired. Replace the charger if it has been damaged or exposed to excess moisture.

Do not try to use it as a power source. Unplug it before undertaking any cleaning or care.

## About the battery

Always use the power supply approved by ATEQ and supplied with the device.

The tool must be returned to the factory for battery replacement.

Opening the tool or tampering with or breaking the seal placed on the tool will invalidate the warranty.

**CAUTION:** *This unit contains an internal Lithium-polymer battery. The battery can burst or explode, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush, pierce or dispose of the battery or the instrument in fire or water, do not short circuit or short the contacts with a metal object.*

### Safety instructions for Li-Po battery use

The tool must be placed on a non-flammable surface during charging (ceramic tray or metal box).

Only charge the Li-Po battery **WITH** the specific charger provided.

**NEVER** use a Ni-MH (Nickel Metal Hydride) type battery charger to charge a Lithium-polymer battery.

If the battery begins to overheat more than 60°C (140°F), **STOP CHARGING IMMEDIATELY.** The battery must **NEVER** exceed 60°C (140°F) during the charging process.

**NEVER** charge a battery pack immediately after use and while it is still hot. Let it cool down to room temperature.

If you see any smoke or liquid coming out of the battery, stop charging immediately. Disconnect the battery from the charger and place the battery in an isolated area for at least 15 minutes. **STOP USING THE BATTERY**, and return the device to your dealer.

Always keep a fire extinguisher for electrical fires within reach while charging the battery. In the unlikely event that the Li-Po battery catches fire, **DO NOT** use water to extinguish the fire, use sand or the extinguisher described above.

The parts of a Li-Po battery must be neutralized out of use. The neutralization procedure must be

carried out within very strict safety parameters. You are recommended to contact a specialist in this battery type to carry out this process. They will have the out-of-use battery collected by a specialized recycling organization. Alternatively, contact your dealer.

Do not dispose of Li-Po batteries with household waste.

To avoid leaks or other hazards, do not store batteries above 60°C. Never leave the battery inside a car (for example) where the temperature could be very high or in a place where the temperature might exceed 60°C. Store the battery in a dry place to avoid contact with any type of liquid. Store the battery only on a non-flammable surface that is heat resistant and non-conductive, and away from any flammable materials or sources.

A Li-Po battery must be stored with a minimum charge of 30%. If you store the battery completely discharged, it will quickly become unusable. If it has to be stored for a long period (over 6 months), remember to recharge it regularly (to more than 30%).

If you do not follow these safety instructions, you risk causing serious damage to people or property, and you even risk causing a fire!

ATEQ accepts no responsibility in the event of damage arising as a result of non-compliance with these safety instructions.

Since use of a Li-Po battery entails significant fire risks capable of causing serious damage to people and property, the user agrees to accept the risks and the responsibility involved.

Since ATEQ cannot control correct use of the battery (charging, discharging, storage, etc.), it cannot be held responsible for damage caused to people or property.

#### 10.4 FCC Statements

FCC ID: 2AK5Y-VT18

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits

are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### 10.5. ISED STATEMENTS - Notice to User

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### RF Exposure Information

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device can be used in portable exposure condition without restriction.

### 10.6. CE Statements

DECLARATION OF  CONFORMITY

The manufacturer of the **TPMS TOOL** declares that this device complies with the requirements of:

- ETSI EN 300 330-1 V1.8.1 (2015-03):

Electromagnetic compatibility and Radio spectrum Matters (ERM); Short Range Devices (SRD); Radio equipment in the frequency range 9 kHz to 25 MHz and inductive loop systems in the frequency range 9 kHz to 30 MHz; Part 1: Technical characteristics and test methods.

- ETSI EN 300 330-2 V1.6.1 (2015-03):

Electromagnetic compatibility and Radio spectrum Matters (ERM); Short Range Devices (SRD); Radio equipment in the frequency range 9 kHz to 25 MHz and inductive loop systems in the frequency range 9 kHz to 30 MHz; Part 2: Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive.

BS EN 62479:2010:

Assessment of the compliance of low power electronic and electrical equipment with the basic restrictions related to human exposure to electromagnetic fields (10 MHz to 300 GHz).

### 10.7. Recycling

Do not dispose of the rechargeable Lithium-polymer battery or the tool and/or its accessories in the general waste.



These components must be collected and recycled.



The crossed-out wheeled waste bin means that the product must be taken to separate collection at the end of the product's service life. This applies to your tool and also to any enhancements marked with this symbol. Do not dispose of these products as unsorted municipal waste. For further information, please contact ATEQ.