

**SENCOR®**

**Let's live!**



**MOBILE PHONE**

**Element P004  
Element P030**

**USER MANUAL  
EN**





## Introduction

Thank you for purchasing the Element mobile phone with colour display. This manual provides information on the functions, features and operation of the phone.

The mobile telephone is designed for use in GSM/GPRS networks; the telephone can operate two SIM cards in standby mode although if one SIM card is engaged in a call, you cannot call using the second card. In addition to the basic call functions, the phone has a number of useful features such as directory, operating modes, news, audio and video player, camera and video camera, alarm clock, calculator, date and time, auto power on and off etc., that are convenient for work and leisure activities.

The mobile phone meets the GSM / GPRS criteria and is certified by the competent authority.

The company reserves the right to change the contents of the manual without prior notice.

## Contents

1.	Safety instructions .....	3
2.	Marking and description of the parts .....	7
	2.1. Device .....	7
	2.2. Description of buttons .....	7
3.	Getting started .....	9
	3.1. Inserting SIM and memory cards .....	9
	3.2. Telephone on/off .....	10
	3.3. Charging the battery .....	10
	3.4. Security password .....	10
4.	Basic features .....	12
	4.1. Making a call .....	12
	4.2. Ignoring a call .....	12
	4.3. Receiving a call .....	12
	4.4. Ending a call .....	12
	4.5. Emergency calls .....	12
	4.6. Speed dial of extension .....	12
5.	Available functions in the phone menu .....	13
	5.1. Telephone directory .....	13
	5.2. Messages .....	13
	5.3. Recent calls .....	13
	5.4. Settings .....	13

5.5. Connectivity .....	15
5.6. Fun and games.....	16
5.7. Camera.....	16
5.8. Multimedia .....	16
5.9. FM Radio .....	17
5.10. File management .....	17
5.11. Organizer .....	17
6. Entering text .....	18
7. Care and maintenance .....	19
8. Technical specifications .....	20

# 1. Safety instructions

**WARNING:**

**Pay attention to the following instructions. The manufacturer does not assume any responsibility towards a user that does not follow these recommendations or uses the smartphone in an unsuitable manner. By using the device unsuitably, the user risks violating the relevant acts.**

**Read this user's manual carefully before use. Keep the manual for future reference.**

- Always follow the basic safety instructions when using this device to prevent the risk of fire, electric shock or injury.
- Please read this manual and follow all instructions for use, maintenance and installation. Do not use the mobile phone for purposes other than those for which it is intended.
- Failure to observe the rules specified in the user manual or inappropriate use will result in the invalidation of the warranty and may result in injury or damage to property. The manufacturer is not liable for any damages in such cases.
- Use of a mobile phone is prohibited in some areas. If you find yourself in an area where the use of mobile phones is prohibited, follow the instructions contained in this manual to switch the phone off. Usual areas where the use of mobile phones is prohibited include: Planes, petrol stations with flammable fuels, demolition sites, etc. Operating smartphones can interfere with electronic and medical devices, such as pacemakers, hearing aids and other medical electronic equipment.
- Switch off the phone whenever near fuel, chemical substances and explosives. Keep the device away from children.
- Follow the law on the use of mobile phones while driving. The driver is primarily responsible for the given vehicle. Use the hands-free function of your smartphone, if available. If driving in poor conditions, stop the vehicle before making or taking a call.
- If your phone has "Aeroplane mode", activate this prior to boarding a plane. If your phone does not support this mode, switch the device off prior to boarding a plane, as your device can interfere with plane instruments. Please follow the instructions issued on the plane.
- Always use genuine accessories. Using a non-genuine battery or charger can result in invalidation of the warranty, cause damage to the phone and injury to the user.
- Modifying or changing the features of the phone or tampering with the device is strictly prohibited. Modifying the device can result in serious failure and damage to property and potentially injure the user. Unless approved by the manufacturer, updating the operating software is also classed as a modification.
- Do not connect the battery charger to your smartphone before the battery is installed. Do not short circuit the battery.

- Charge the smartphone battery in well-ventilated and cooled areas and away from flammable and explosive materials.
- To prevent demagnetization, keep your smartphone away from magnetic materials, such as hard drives, credit cards etc.
- Mobile phones are sensitive to external interference, which can seriously affect functionality; in some environments, mobile phones cannot be used at all.
- Neither the mobile phone or charger are toys, small parts can be swallowed by children. The charger and connecting the charger into the electrical outlet is dangerous to for young children. The charger should not be used by children.
- Do not unplug the charger by pulling on the power cord – there is a risk of damaging the power cord/socket and/or charger. Unplug the power cord by pulling on the charger unit.
- Be particularly careful if the display glass on the phone breaks as sharp glass parts can cause injury. Do not use a damaged phone and seek professional help to repair the device.
- A high volume set on the mobile phone can result in damage to hearing, be careful when adjusting the volume. Using your phone to listen to loud music can have serious consequences. Be careful when adjusting the volume to listen to music.
- Do not use liquid or aerosol cleaning agents, benzine, solvents or similar products. Use a lightly damped towel for cleaning.
- Do not use the device near water, e.g. in a bathtub, shower or pool. Immersing the device into water can lead to injury by electric shock. Do not place any containers with water on the device, for example, vases.
- Place the device on stable surfaces. The device may become damaged if it falls on the ground.
- Do not cover the air vents on the device. These are used to prevent overheating.
- Keep the device in areas not prone to someone stepping on it.
- Do not place any objects into the air vents. Risk of fire or electric shock. Do not allow the device to be sprayed with liquid.
- To reduce the risk of electric shock, do not dismantle the device. If your device requires service or repair, take the device to an authorized service centre or qualified technician. Opening the device or removing the cover can uncover areas with dangerous voltage or other risks. Risk of electric shock when using a device that is not properly reassembled.
- Do not expose the device to extreme temperatures, e.g. near a hot radiator or stove or in a heated car.
- Do not place the device on burning objects, such as candles or cigarettes.
- Do not use the device to report gas leaks near the source of the leak.
- This smartphone is capable of capturing photos, recording video and sound; respect the relevant laws and regulations for using these features. Under certain circumstances, capturing photos, video and sound recordings without permission can be considered as breaking the law and valid regulations.



- When using network features, please do not download files infected with a virus, do not install damaged photos and ringtones. Our company is not liable for defects caused by the phone behaving abnormally after downloading files.
- Follow local regulations for disposing of the battery. Recycle if possible. Do not throw the battery into standard waste.

**WARNING**

**To prevent risk of fire or electric shock, do not expose the device to rain or moisture.**

**DECLARATION: Our company reserves the right to review the contents of this manual without prior notice.**

**Notes**

Some features and accessories described in this user manual depend on the software installed and the capacity and configuration of the local network, and do not necessarily need to be available or can be limited by mobile carriers. Thus, the descriptions provided do not necessarily correspond precisely to the specific phone or accessories, which you purchased. The manufacturer is not responsible for the quality and legality of any contents, which you upload or download to the mobile phone, whether it concerns text, pictures, music, films, additionally installed software protected by copyright etc. You are liable for consequences following the installation or using the contents of the above stated on this mobile phone.

All screenshots, symbols and icons in the user's manual are simulated. Actual screenshots, symbols and icons may differ.

Step-by-step procedures can differ from those provided in this manual, depending on the firmware version on the phone.

Unless stated otherwise, the home screen is the presumed starting point for all procedures described.

The phone is a device, the behaviour of which can be altered by the user via additional apps. Procedures and individual steps can therefore differ from those contained in this manual.

**Note on the service provider: The phone is configured from the factory to fully utilize available services. Your provider can limit or change some functions, security measures or behaviour of the phone, as opposed to the description in this manual. Ask your provider for any changes.**

# SENCOR®

## Appendix to the user's manual for the LCD panel

### Measures for static image; red/blue/green/black spots on the screen

#### A static image can damage the LCD display permanently.

- Do not leave a static image on the LCD panel for more than 2 hours. This may result in a damaged panel. This damage is known as "screen burn-in".

The warranty does not apply to screen damage caused by the reasons stated above!




#### Red, blue, green, and black dots may appear on the screen

- This is typical for liquid crystal displays and does not indicate any problems. LCD screens are made using precision technology to provide even the finest image details. Several defective pixels can appear on the screen from time to time, indicated as red, blue, green or black dots (up to 0.001% of the total pixel count of the screen). This does not affect the properties and performance of your device.

## 2. Marking and description of the parts

### 2.1. Device

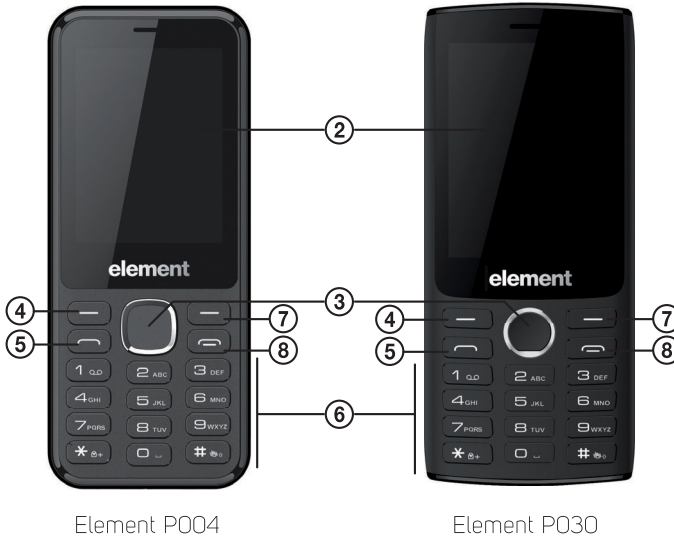

Element P004

Element P030

1. **Speaker** (in the back)
2. **LCD display**
3. **OK button** (middle navigation key)
4. **Left software button**
5. **Call button**
6. **Keyboard**
7. **Right software button**
8. **Button to end the call**
9. **Camera** (in the back)
10. **Flashlight**
11. **Headphones connector**
12. **USB port** (jack)

### 2.2. Description of buttons

Buttons	Functions
<b>Left software button / right software button</b>	<ol style="list-style-type: none"> <li>1. Performing functions displayed in the left/right bottom corner of the screen.</li> <li>2. In standby mode, the left soft button activates the menu; use the right software button to enter your contacts.</li> </ol>
<b>Navigation button</b>	It corresponds on other screens to the navigation button and direction button, except for special functions.

Buttons	Functions
<b>Call button</b>	<ol style="list-style-type: none"> <li>1. By pressing this button, you dial a number or accept an incoming call.</li> <li>2. In the standby mode, press this button to enter the list of dialled numbers.</li> </ol>
<b>OK button (middle navigation key)</b>	<ol style="list-style-type: none"> <li>1. This provides access to the phone menu from standby mode.</li> <li>2. In the dial panel mode, press this button to show or hide the dialling panel.</li> <li>3. Press and hold the button (for 5 seconds) to activate (or deactivate) the phone light.</li> </ol>
<b>Button to end the call</b>	<ol style="list-style-type: none"> <li>1. Press and hold the button to switch off the phone.</li> <li>2. Press to return from any screen to the standby screen.</li> <li>3. Ending the call or rejecting the incoming call.</li> </ol>
<b>Number pad</b>	Serves to dial or enter numbers and symbols. Press and hold the number 1 to go to the preset voicemail.
<b>Button *</b>	From the standby screen, enter * after entering a phone number to enter the extension number; enter the extension number after the "+" sign.
<b>Button #</b>	<ol style="list-style-type: none"> <li>1. On screen for text editing, press the # key to switch the text entry method.</li> <li>2. From the standby screen, press and hold the # key to switch between the General and Meeting profiles.</li> </ol>

## 3. Getting started

### 3.1. Inserting SIM and memory cards

**A SIM card must be inserted into the phone before it is first used. Your telephone operator will provide the SIM card.**

When purchasing services from the mobile network, you receive a SIM card together with details including your PIN code and the optional services that are available.



**NOTICE:**

Do not bend the SIM card and prevent it from being scratched. Do not expose the SIM card to static electricity, water and dirt. When inserting and removing SIM cards and the memory card, be careful not to damage the slots and base plate of the telephone.



**WARNING:**

**Prior to handling cards (SIM and memory) unplug the charger, switch the phone off and remove the battery.**

To open the back cover, lift it with your fingernail or a blunt object at the lower edge at the location of the cut-out. Gradually release the cover around the entire perimeter of the phone.

Lift the battery with a fingernail or a blunt object at the bottom edge in the place of the cut-out.

**Insert the SIM card** in the appropriate slots with contacts facing downwards so that the contacts on the SIM card touch the built-in SIM contacts in the phone. Insert the SIM card 1 into the left slot by the skewed corner located in the upper left corner of the slot; insert the SIM 2 card into the right slot by the skewed corner located in the upper left corner of the slot.

**Insert the memory card** into the slot located in the right lower corner of the area under the battery. Insert the memory card with the contacts facing downward so that the memory card contacts touch the built-in contacts for the memory card in the telephone and the edge of the memory card with cuts is facing the lower edge of the area for the battery.



**NOTICE:**

**If the memory card does not work, make sure it is properly installed and has good contact. The maximum size of supported memory cards is 8 GB.**

When inserting the battery in the phone, first connect the battery contacts with the contacts in the phone (bottom right) and then gently push the battery into the battery compartment. When placing the back cover on the phone, place the cover on the top edge of the phone and gently push on the edge of the cover from the top edge down throughout the entire perimeter of the cover, until the cover is fully in place.

**NOTICE:**

Phone functions such as voice calls and video calls, receiving and sending text messages and multimedia and data transfers of various speeds are possible and available only when at least one of the SIM card with activated operator functions is inserted and within reach of its wireless network. Ask your operator about services available on your SIM card and network availability.

### 3.2. Telephone on/off

Turn the phone on by pressing and holding the end call button. Turn the phone off by pressing and holding the end call button in standby mode.

### 3.3. Charging the battery

Connect the charger to the charger connector on the bottom edge of the phone. Then connect the charger to a standard electrical outlet and the battery icon in the upper right corner of the screen will start to flash. When the battery icon stops moving, the battery charging is complete. Press the charger plug between two fingers and disconnect the charger from the phone.

**NOTICE:****Use the original charger to ensure reliable mobile phone operation.**

Charging must be done in a well ventilated area at a temperature between  $-10^{\circ}\text{C}$  and  $+45^{\circ}\text{C}$ . You must use the charger provided in the package. Using another charger may be dangerous or you will not reach the expected performance or you will shorten the life of the battery in particular.

If the mobile phone automatically shuts down or displays "Battery is low" (the capacity of the battery is low), you should charge the battery. If the battery was not fully depleted prior to charging, the charging period will be shorter.

### 3.4. Security password

**PIN**

The PIN is used to make it impossible to use your SIM card illegally. The PIN code is usually included with the SIM card. If you enter three consecutive times the wrong PIN, unlock it by entering the PUK code. You will receive details from your telephone operator.

**PIN2**

The PIN2 code must be entered when entering certain features (e.g. Charge calls); if you enter three consecutive incorrect PIN2 code, unlock it by entering the PUK2 code. You will receive details from your telephone operator.

**PUK**

When removing a locked PIN code you must enter the PUK code. PUK code is included with the SIM card. If it is not included, contact your telephone service provider. If you enter ten times in a row the wrong PUK, the SIM card cannot be used any longer. Contact your telephone service provider to purchase a new card. The PUK code cannot be changed. If you lose the code, contact your telephone service operator.

**PUK2**

When removing the locked PIN2 code, you must enter the PUK2 code. If you enter ten times in a row the wrong PUK2 code, you cannot use the functions requiring PIN2 code any longer. Contact your telephone service provider to purchase a new card. The PUK2 code cannot be changed. If you lose the code, contact your telephone service operator.

## 4. Basic features

In case that when you switch on the phone and the default language is English, proceed as follows through the telephone Menu: Menu/Settings/Phone settings/Language and here select the required language from the menu.

### 4.1. Making a call

In standby mode, using the number keys enter the phone number you want to dial. When you enter the number, press the dialling button and the call is made. If you want to make an international call, add before the phone number the area code.

### 4.2. Ignoring a call

You can reject the incoming call by pressing the end call button.

### 4.3. Receiving a call

When you receive a call, the phone duly alerts you (vibration, ring tones, etc.); if this feature is supported by your telephone network, the phone's screen shows the name and telephone number of the caller; at this point you can press the dialling button to receive the incoming call.

### 4.4. Ending a call

After the conversation you can end the call by pressing the end call button.

### 4.5. Emergency calls

Call to the emergency services can be made directly without the SIM card. Different networks use different emergency numbers. Contact your telephone operator for details.

### 4.6. Speed dial of extension

To enter a pause (e.g. for direct dialling to an extension number) after entering a phone number, press and hold "\*". The screen shows the symbol "P", then continue to enter the extension number. When dialling, insert a short pause between the numbers for the switchboard to recognize the number correctly.

## 5. Available functions in the phone menu

### 5.1. Telephone directory

This function allows you to browse the phonebook, save, edit, and delete names and phone numbers in the phone and SIM card. The memory capacity of the SIM card varies and the maximum memory capacity of this phone is 300 contacts.

### 5.2. Messages

Message service is in fact a service of the telephone network. This offer is functioning properly, depending on the type of SIM card and the services provided by the telephone operator. Therefore check this function before using it.

**Write message:** Before using this function, make sure that you have the service center number of the telephone operator. The message capacity of the SIM card depends on its type.

**Delivered:** Saves received SMS messages.

**Drafts:** Stores unsent messages.

**Outbox:** Stores SMS messages, which were not yet sent.

**Sent messages:** Stores successfully sent SMS messages.

**SMS Templates:** Retains preset SMS messages for quick use.

### 5.3. Recent calls

Call History provides an overview of calls and the option to delete records.

**Missed calls:** View the list of recent missed calls.

**Outgoing calls:** View the list of recent dialled numbers.

**Incoming calls:** View the list of recent received calls.

**All calls:** View the list of all recent calls.

Press the button to select from each list the requested function for the selected item, e.g. Dial number, Send SMS, block number by adding to Blacklist or Delete item from call history.

**Delete the call list:** You can delete all call numbers lists, received, missed and rejected calls.

### 5.4. Settings

You can adjust the phone setting, like time and date, language, call settings, etc.

#### 5.4.1. Profiles

Preset modes are Common Mode, "Silence" mode "Meeting" mode and "Outside" mode. Setting up some profiles can be customized.

**Type of notification / ringing, ringtone / message tone:** Setting ringtones for calls and messages.

**Ringtone/message volume:** Setting the ringer volume, messages tone volume.

**Keyboard and volume of key sounds:** Setting a type of sound or switching it off.

**System sounds:** Turning system sounds on or off.



**NOTICE:**

The transmission of ringing sound and voice call is through loudspeaker located in the upper part of the phone. Increased volume from the loudspeaker during voice transmission is not a defect of the phone.

## 5.4.2. Phone Settings

**Time and date:** You can set the date and time of the phone and also their display mode.

**Preferred entry methods:** you can set your preferred method of entering text.

**Language:** You can select the language for the phone.

### View features

- **Wallpaper:** Set wallpaper for the standby screen from preset or custom images.
- **Show date and time:** Turn on or off the date and time on the standby screen.

**Navigation key:** You can speed up selection when pressing navigation keys up, down, left, or right in the standby mode. Tip: when setting up speed selection for Shortcuts function, you gain faster access to more items.

**Plane profile:** Turns off all transmitting and receiving modes of the phone (e.g. Shutdown signal GSM / GPRS, Bluetooth). Warning: Do not use this function, but switch off the entire unit.

**Expanded / Backlight LCD:** Adjustment of the backlight time and brightness of the display / keypad.

## 5.4.3. SIM card management

Sets active SIM cards (only the selected SIM or both SIM cards).

## 5.4.4. Call setting

In the Setting/Call setting menu are the following functions for individual SIM cards.

### Setting SIM 1/SIM 2 calls

**Call waiting:** You can switch this function on or off. After switching it on, you can receive other incoming calls during a current call.

**Call forwarding:** When turning on call forwarding depending on the different settings of the forwarding conditions (unconditional call forwarding, call forwarding on busy, call forwarding on no answer, call forwarding on busy) you can choose to switch the incoming call to voicemail or other numbers.

**Call blocking:** After activating call blocking depending on the different settings of the restriction conditions (all dialled calls, all incoming calls, incoming calls when roaming, dialled international calls, outgoing international calls when roaming), you can restrict calls by the relevant conditions (you need to submit an application to the telephone operator).

## Advanced setting

Contains:

**Blocked numbers (Blacklist):** Rejection of blocked numbers can be switched on or off. You can store up to 20 numbers in the list of blocked numbers.

**Auto redial:** You can switch this function on or off. When turned on, the phone will automatically dial the number called in the event of a failed connection attempt.

**Call time reminder:** You can set one-time or recurring call time reminder.

**Answer mode:** It offers the possibility of activating the answer call function by pressing any phone key and setting to automatically answer the call in handsfree mode.

## Setting up the network

Available items:

**SIM 1/SIM 2 – Network selection:** Selection of automatic or manual connection.

**GPRS transfer pref.:** Option On or Off GPRS Service (GPRS is the preferred method of data transmission).

## Security setting

Contains an item for each SIM setting and phone security:

**PIN lock:** Activation and deactivation of PIN code and its change.

**Change PIN:** Change PIN1 code.

**Change PIN2:** Change PIN2 code.

### Phone security:

- **Phone lock:** Activation or deactivation of the phone lock. The default password is "1122".
- **Change password:** Change of mobile phone and privacy password.

**Screen auto-lock:** Option to set the time interval after which the phone screen automatically locks.

**Factory defaults:** You can restore some of the phone settings to their default values. The default code to restore the factory setting is: 1122.

## 5.5. Connectivity

### Bluetooth:

- **Visibility:** You can choose phone visibility or hide it when Bluetooth is connected. If the Bluetooth visibility is off, other devices will not be able to find your telephone.
- **My device:** Shows the list of already paired devices. You can find other Bluetooth devices and find a compatible one. If the pairing passwords of two Bluetooth devices are identical, the pairing will be successful. Some devices (like Bluetooth headphones) have a preset code for connection. You will find it in the manual of the device.
- **Bluetooth name:** You can change the name of the phone.

**Services:** The phone supports the SIM Toolkit service. The offer is based on the abilities of your SIM card. Please contact your telephone operator for more information about the use of services and the charges.

**WAP** The function depends on data transmissions through the network operator. For the correct function, it is necessary to correct the settings for data parameters provided by your network operator. Warning: WAP is for easy browsing of pages. All browsed pages do not need to be shown in full resolution and with full support of all formats/scripts.

**Data accounts:** For the correct data account setting for transmission using GPRS, contact your telephone operator.

## 5.6. Fun and games

### ■ F1 Race game

This mobile telephone offers F1 Race. To control the car use keys with numbers "2", "4", "6" and "8". Use key "5" for flight (when passing you gain the power to fly). The goal of the game is to avoid crashing into other cars. In the games setting you can adjust the volume and vibration.

## 5.7. Camera

The device is equipped with a camera. For the camera to fully function, it must have a memory card with free space on it inserted in the camera. Press OK to take a picture.

**Go to video/camera:** With this function, you can switch to camera mode and video camera.

**Photos:** Entry in the picture viewer.

**Camera settings** You can set the properties for taking pictures. For example:

- **Scene mode:** It allows you to set automatic scene mode or Night mode.
- **White balance:** You can select from preset modes auto white balance.

**Picture setting:** You can set the size and quality of the picture.

**Storage:** You can choose place where to save pictures (Phone, memory card).

**Restore default:** Allows to restore default settings.

## 5.8. Multimedia

### Video player

This phone supports video formats 3GP, AVI and MP4.

### Audio player

This phone can play MP3 files saved in the phone memory or the memory card and supports background playback. Use navigation buttons as player controls. To control the volume, use the \* and # buttons. Enter the options Menu using the left software button:

**Playlist:** Display all MP3 files or playlist that you saved.

**Shuffle:** Setting the shuffle mode

**Repeat:** Setting the repeat mode

**End:** Return to previous menu.

### Sound recorder

You can use the phone to record sound. For the camera to fully function, it must have a memory card inserted in the telephone.

## 5.9. FM Radio

To connect the FM radio, you need to have earphones that work as an aerial for the telephone. You can call or receive calls when listening to the radio without limitations. The radio sound is muted during a call. Press the left and right navigation key to switch stations. Press OK to stop/start play of the FM radio. To control volume, use the \* and # buttons. On the radio play screen, press the left software key to enter the options menu, where you can do the following:

**Stations list:** You can save and edit the name and frequency of the selected station.

**Manual control:** You can search for the frequency manually, and save it.

**Pre-set auto-search:** Starts automatic station search and saves the found station in the station list.

**Settings:** Allows you turn on or off listening to the radio in the background.

## 5.10. File management

This is for viewing pictures and captured photos on a memory card through a photo album. It is also possible, for example to rotate the selected image, set it as your wallpaper, share it via Bluetooth.

## 5.11. Organizer

### Calendar

This function can be used to view easily calendar days. Using the buttons up/down/left/right go to another date.

### Calculator

This function changes your device into a calculator, which can perform simple mathematical operations.

### Alarm

You can adjust the alarm clock, time, ringtones and snooze mode. You can have up to 5 preset active or inactive alarms.

In the "alarm edit" regime, use the up and down buttons to switch to further options.

When the cursor is over the desired item, use the left / right keys to change the options for some items (e.g. alarm time). Press "OK" for other items and select from the options shown.

### World time zones

Displays the actual date and time in individual time zones. Use the up and down keys to switch between destinations / time zones.

### Stopwatch

Measures time intervals.

### Flashlight

You can switch the flashlight on/off. The central navigation key can be used to control the flashlight while the standby screen is displayed. Press and hold to activate or deactivate the flashlight.

## 6. Entering text

The device offers several text input modes, you can enter text or data in your contacts, edit contact records, search for names and write SMS messages.

If you want in the "text input" mode change the input method, press the **#** button. The selected input method is displayed in the upper left corner of the screen.

### Letters (big, normal)

Enter the editing page, press the **#** button and switch the mode of entry to "letters" (e.g. "Abc"), then use the number pad and the selected letters will appear on the screen.

Press a number key once to enter the first letter printed on the key, press quickly twice for the second letter. If the letter you want to enter is on the same key as the previous letter, wait until the cursor appears again, and then enter the next letter.

For example, if you want to enter "OK", you should press three times "6" and thus enter "o", then double press "5" and the display will show the letter "k". Press the right software key to delete the entered text.

### Numbers

Go to the editing mode and press **#** to change the method of entering to "numbers" (e.g. "123"). Then use the number pad and the screen will show the appropriate numbers. Individual buttons 0-9 represent numbers from 0 to 9. To enter the number you want, you can press the corresponding button. Press the right software key to delete the number.

**Insert punctuation** from the selection by pressing **\***. To speed up selection you can use the key "1" (repeated press).

**For space** in the text use the "0" key.

## 7. Care and maintenance

### Battery care

The device is powered by a battery. It is necessary to charge the battery when it is empty. You achieve maximum performance of the new battery can only be achieved by charging it when it is fully discharged.

If you do not use the charger, unplug it from the power outlet and from the device. Do not leave a fully charged battery

charging for longer than is strictly necessary. Overcharging may shorten its life.

Temperature affects the level to which the battery can be recharged. Therefore, it is necessary to keep the battery at room temperature before charging. If the temperature of the battery exceeds 40 °C, it is not possible to charge it.

Use the battery only for its intended purpose and prevent short-circuiting. Accidental short-circuiting can occur when a metallic object causes direct connection of the positive (+) and negative (-) battery terminal.

Do not use damaged battery.

Do not leave the battery in hot or cold places. It reduces its capacity and life. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Do not throw batteries into a fire, they could explode. Dispose of them in accordance with local regulations.

### Product care and maintenance

The following recommendations will help to extend the life of your phone.

Keep the device and accessories out of the reach of small children.

Keep the device dry. All types of liquids or moisture will cause disruption of electronic circuits.

Do not store the device in hot places. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.

Do not attempt to open the device in other ways than as described in this manual.

Improper handling can damage the device.

When cleaning the unit, do not use harsh chemicals or strong detergents.

**NOTICE:**

Use only the supplied or approved replacement accessories. Non-original accessories may damage your phone and may constitute breach of warranty conditions.

## 8. Technical specifications

Element P004	Element P030
Display size: 2,4" TFT	Display size: 2,8" TFT
Resolution: 320 × 240 pixels	Resolution: 320 × 240 pixels
DUAL SIM	DUAL SIM
CPU: MTK MT6261D	CPU: MTK MT6261D
RAM memory: 32 MB	RAM memory: 32 MB
Micro SDHC card slot (up to 8 GB)	Micro SDHC card slot (up to 8 GB)
Camera: 0.08 megapixels	Camera: 0.3 megapixels
GSM 900/1800MHz	GSM 900/1800MHz
Bluetooth / FM radio / lamp	Bluetooth / FM radio / lamp
Battery: 2000 mAh Li-ion	Battery: 1500 mAh Li-ion
Bluetooth: 2.1	Bluetooth: 2.1
MicroUSB	MicroUSB
Dimensions: 124 × 52 × 11.4 mm	Dimensions: 132 × 57.5 × 10.8 mm
Weight: 83 g	Weight: 98 g
Accessories: adapter, headphones	Accessories: adapter, headphones

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.

 The product meets EU requirements.

Hereby, FAST ČR, a.s. declares that the radio equipment type Element P004 / P030 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: [www.sencor.eu](http://www.sencor.eu)

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01

# SENCOR®

## EN Warranty conditions

**Warranty card is not a part of the device packaging.**

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.