 



hs Aroma Diffuser User Manual

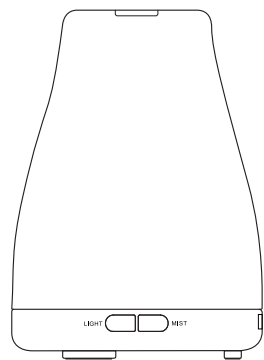

Model: 40-510-000/40-510-100
PLEASE READ THIS MANUAL CAREFULLY BEFORE USING




ACCESSORIES

 - 1 x 150ml Aroma Diffuser
- 1 x AC Adapter
- 1 x User Manual

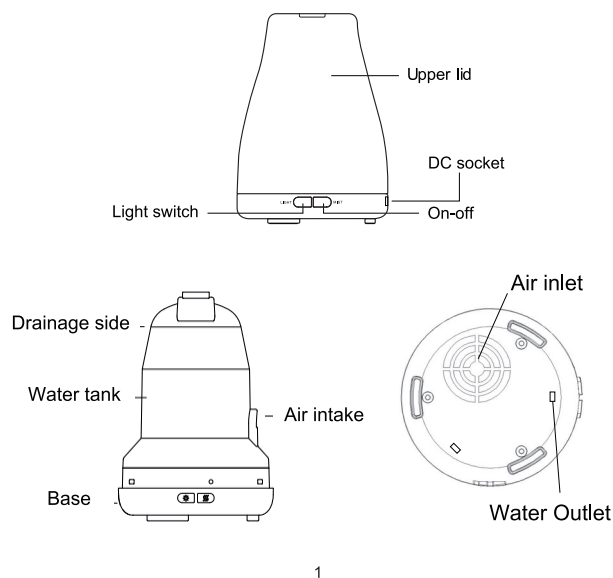

1

OPERATION

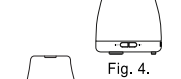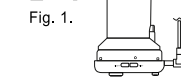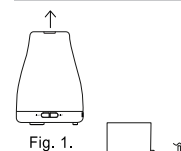

1. Carefully turn lid counter clockwise to open the unit. (Fig. 1)
2. Take the AC adapter out of the tank, then connect the power cord to the unit. (Fig. 2)
3. Pour the required amount of water into the tank. Add 2-3 drops of essential oils (not included) for 150ml of water. (Fig. 3)
4. Place the lid back onto the unit. (Fig. 4)
5. Plug the AC adapter into a household power socket.
6. Press the "LIGHT" button to change the LED color. Hold the button down to turn off the LED light. (Fig. 5)
7. Press the "MIST" button to toggle between intermittent mist mode and continuous mode. The green light will signify intermittent mode and the red light will signify continuous. (Fig. 6)

2


ATTENTION

1. Please remember to keep the lid on the unit whenever the diffuser is on.
2. The intensity of the mist may vary while working. This is normal and is not cause for concern.
3. If the diffuser is not in use, drain the water out of the tank and store in a dry place.
4. If turning on the unit without water in the tank, it will auto shut off to protect the unit. The unit does not work if there is no water in the tank.
5. Please use 100% pure essential oil to prevent the unit from damage.

ACCIDENTAL LEAKAGE

In the event of the unit being knocked over or tipped during use, please follow the steps as below to avoid malfunction.

- Unplug the unit and remove cover.
- Pour out any remaining water out of the water tank.
- Shake the unit gently to drain any water inside the mechanism and then allow drying for at least 24 hours.

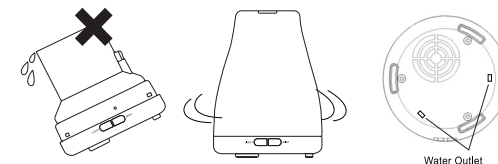

3

PRECAUTIONS

Please check below to avoid malfunction of the unit.

- Do not fill over 150ml "MAX" at any time.
- Do not switch on power when the tank is empty.
- Do not touch the ultrasonic vibration plate.
- Clean regularly as per Maintenance instructions to avoid malfunction.
- Always unplug from power supply before maintenance.
- For hygiene reasons, after use, pour away remaining water from "DRAIN SIDE" of tank, and wipe with a clean dry cloth.
- Essential oils can stain. In the event of spillage or contact, please wipe away with a soft cloth.
- Do not let mist blow directly onto furniture, clothing, walls etc.
- Keep away from direct sunlight, heat sources, air conditioners or fans.
- Always keep on stable flat surface. Do not place on carpet, duvet or unstable areas.
- Keep away from electronic equipment, such as TV and audio equipment.
- Do not tip the product. This may cause water to enter the mechanism and cause malfunction.
- Do not use the product continuously without interruption. After the product powers off automatically, please wait 60 minutes before restarting to avoid damage to the ultrasonic plate.
- Use clean, cool, filtered or distilled water.
- The amount and intensity of mist produced will vary, but this is not unusual and should not be considered as a failure. Factors that affect the variance include water type, humidity, temperature and air flow.
- Do not move the diffuser while in use.
- Do not touch any part of the product with wet hands.
- Keep out of reach of children and pets.
- Diffuser is not to be used by children or persons with reduced physical, sensory, or mental capacities.
- Keep cord clear of pathways and do not pull forcefully at any point.
- If smoke or burning smell is detected, unplug immediately.

4

MAINTENANCE

It is suggested to clean the diffuser every 2-3 days, or when changing to another scent of essential oil, please clean the unit as following:

1. Remove the power cord and the lid from the main unit.
2. Drain water from the tank as shown.
3. Wipe the tank with wet wipes or soft cloth (you may need to clean the ultrasonic vibration tile with cotton swabs).
4. Do NOT using strong detergents or abrasives.

SPECIFICATION

Model Number :	40-510-000/40-510-100
Item Description :	150ml Essential Oil Diffuser
Dimensions:	Approx. 4x4x5.5" (10x10x14cm)
Weight (excluding adapter):	Approx. 12.7oz (360g)
Power Supply (input/output):	AC100-240V 50.60HZ / DC 24V 650MA
Length of Cord:	Approx 4.9' (150cm)
Rate Power:	Approx 15.6W
Time Mode:	1H/3H/6H/ON
Tank Capacity:	150ML
LED light:	7 bulbs
Materials :	PP
Accessories:	AC Adapter and User Manual
Method of mist production:	Ultrasonic vibration at approx 2.4MHz

5

TROUBLE SHOOTING

- Problem 1: Can't turn on.**
Cause: Have you connected the AC adapter properly?
Solution: Check the AC adapter.
- Problem 2: Once the unit is on, it shuts off automatically**
Cause: Not enough water in the tank? Pressing the MIST button for too long?
Solution: Add water to the tank. Short/quick press the MIST button.
- Problem 3: There is no mist or very little mist out of the unit.**
Cause: Not enough or too much water in the tank?
 Dirt on the ultrasonic plate?
 Dirt on the air inlet port on the underside of the base?
Solution: Use a piece of soft cloth to gently wipe the ultrasonic vibration plate and the air inlet port. Add water to the tank.
- Problem 4: Water leakage from the unit.**
Cause: The cover and inner cover are not installed properly?
 Did you add too much water in the tank?
 Did you tip over the unit?
Solution: Drain out the water and dry unit. Correctly install the cover. Add water to the tank no more than 150ml. If you tip over the unit, pour out all the water, shake the unit gently to drain out the water inside the machine, then leave it to dry for at least 24 hours.

6

FCC STATEMENT AND EMC COMPATIBILITY

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential setting. This equipment generates, uses, and can radiate radio frequencies.

WARRANTY

One-year warranty is available from purchasing date, excluding user-caused failures listed below:

- (1) Failure resulted in unauthorized disassembly and modification.
- (2) Failure resulted in unexpected drop during application or transportation.
- (3) Failure resulted in operation away from proper instruction in user manual.

Note: If any parts are missing, DO NOT return to the place of purchase. If you have any questions about the operation of this product, please go to <https://www.livehealthsmart.com/contact-us> or email us directly at service@livehealthsmart.com

Manufactured for:
HealthSmart® International
1931 Norman Drive
Waukegan, IL 60085
Made in China

#91-510-000/100 04/21
©2021 HealthSmart® International



7