



尺寸: 200*140mm

装订方式: 打钉

材质: 封面用157g哑粉纸,内页用106g哑粉纸

印刷: 彩色

备注:

第一页, 左侧为封底, 右侧封面

第二页, 左侧为封面反面, 右侧为内1页



KIEKIE



User Manual

Tablet PC All-in-one



Contents

Chapter 1 — Getting Started	03
1.1 Product Overview	03
1.2 Package Contents	04
1.3 Setup & Assembly	04
1.4 First-Time Setup	04
Chapter 2 — Home Screen Overview	05
2.1 Home Screen Layout	05
2.2 Search Page	05
2.3 eCalendar Page	07
Chapter 3 — Featured Apps & Functions	10
3.1 Oil Painting Gallery	10
3.2 Photos (Photo Album)	11
3.3 Relax Mode	12
3.4 Clock	12
3.5 Calendar (Pre-installed eCalendar)	13
3.6 Electronic Whiteboard	13
3.7 Screen Casting (PTV)	14
Chapter 4 — Download New Apps	15

Contents

Chapter 5 — Settings	16
5.1 General	16
5.2 Network	17
5.3 Bluetooth	19
5.4 Personalization	19
5.5 Device Information	20
5.6 Help	20
5.7 More	21
Chapter 6 — Device Maintenance	31
6.1 Screen Cleaning (10-point Capacitive G+G Panel)	31
6.2 Power Adapter Guidelines (12V/3A Type-C)	31
6.3 Operating Temperature & Humidity	31
6.4 Long-Term Storage	31
6.5 Firmware Update & Backup	31
6.6 Factory Reset	31
Chapter 7 — Technical Specification	32
Chapter 8 — FAQ	33
Chapter 9 — Warranty & Support	35





Chapter 1 — Getting Started

1.1 Product Overview

Introduction

The Tablet PC All-in-One Series (15.6" to 32") merges tablet, computer, digital whiteboard, and smart calendar into one full HD display. Powered by Android 14 with GMS certification, it delivers a secure, app-rich experience for education, enterprise, healthcare, and home use.

  JT156S-H06

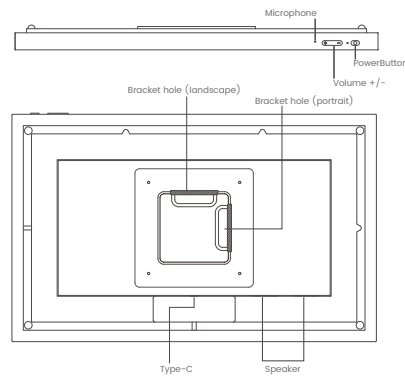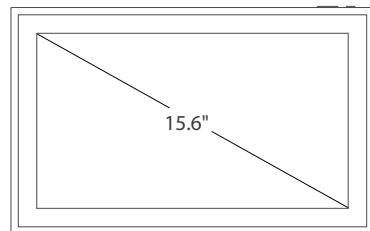

Chapter 1 — Getting Started

1.2 Package Contents

- Main Unit, Use Manual, Adapter, Bracket
- Optional: Earphone /Glasses Cloth/Protective Film/Scraper/Silica Gel Set

1.3 Setup & Assembly

- 1.3.1 Install the rotating stand — supports 90° left/right rotation
- 1.3.2 Mount on wall using VESA standard brackets
- 1.3.3 Connect the Power Adapter
- 1.3.4 Insert TF card for local storage

1.4 First-Time Setup

- 1.4.1 Power On
- 1.4.2 Select System Language
- 1.4.3 Connect to Wi-Fi (2.4G +5G)
- 1.4.4 Set Time Zone, Date & City (for weather display)
- 1.4.5 View and accept Google Services
- 1.4.6 Click  to enter the Tablet PC All-in-one interface and start exploring.

Chapter 2 — Home Screen Overview

2.1 Home Screen Layout

Including Clock, Poster, Window, Oil Painting, Music, Photos, Relax, and more.



2.2 Search Page



Main Function Tiles:

Chapter 2 — Home Screen Overview

2.2.1 Widgets

Widgets: Display Time&Location



2.2.2 Search

Click  to enter Search page; Enter the app name to search.



Chapter 2 — Home Screen Overview

2.2.3 Settings

Click  to enter the Settings interface; For details on settings, refer to Chapter 5.



2.2.4 Player


Music Playback: Previous track, Next track, Pause.



Chapter 2 — Home Screen Overview


2.2.5 Wi-Fi

 Tap  to enter Wi-Fi settings.

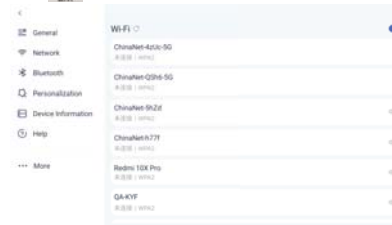

2.2.6 USB

 
Check  USB connection status; Manage files on connected devices.

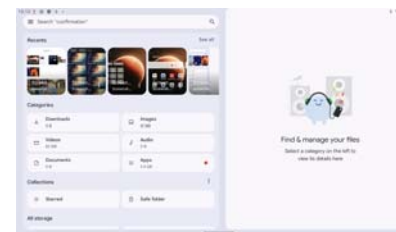

Chapter 2 — Home Screen Overview

2.3 eCalendar Page

 
Quickly view and manage Weather, Event, Meals, Tasks, Lists.

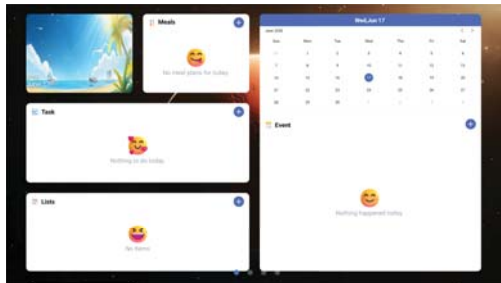


Chapter 3 — Featured Apps & Functions

3.1 Oil Painting Gallery

 
Click "Oil Painting" to view, search, and filter oil paintings.

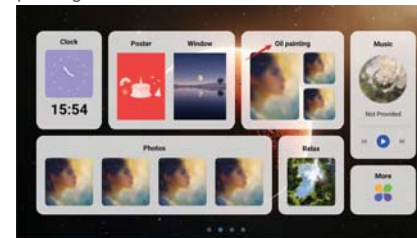


Filter Conditions→Author

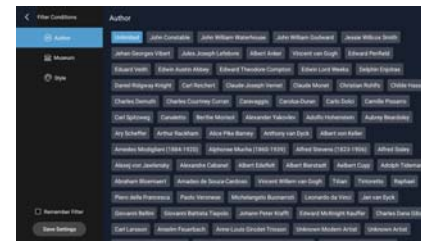 

View

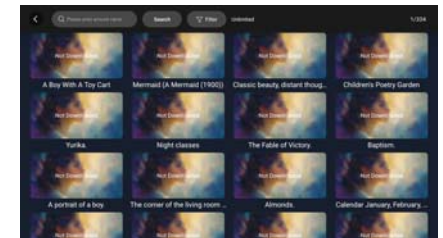 


Filter Conditions→Museum

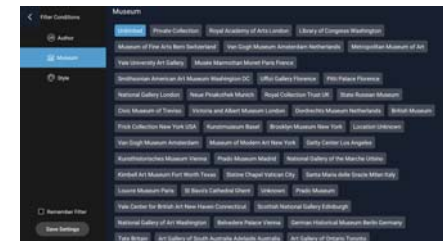 


Chapter 3 — Featured Apps & Functions

 Filter Conditions→Style

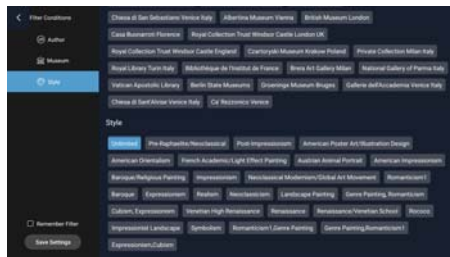

 3.2 Photos (Photo Album)

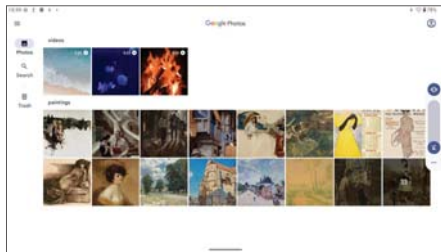

— 11 —

Chapter 3 — Featured Apps & Functions

3.3 Relax Mode



3.4 Clock

Offers a variety of dial styles and background colors to choose from.



— 12 —


Chapter 3 — Featured Apps & Functions

3.5 Calendar (Pre-installed eCalendar)

eCalendar APP offers many features. Scan the QR code for the full manual:



 
3.6 Electronic Whiteboard

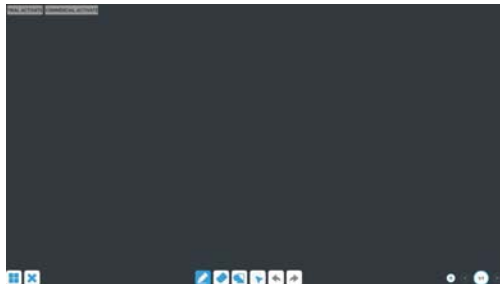

Chapter 3 — Featured Apps & Functions

3.7 Screen Casting

 Enter Settings > Screen Cast, then search for your device to start casting, or share images and videos wirelessly via Bluetooth.

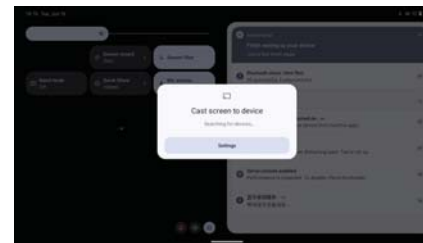

3.8 E-BOOK

Support TXT, EPUB, PDF, WORD, EXCEL, POWERPOINTS



Chapter 4 — Download New Apps

4.1 Google Play Store

Log in to your Google account and download apps from Google Play.



4.2 APK Apps

Supports downloading, installing, and using APK apps.



Chapter 5 — Settings

5.1 General

Includes: Display (Brightness and font size settings)

Sound (media, Notification, Alarm volume settings,)

  
Time and Language settings (Set local time and language)

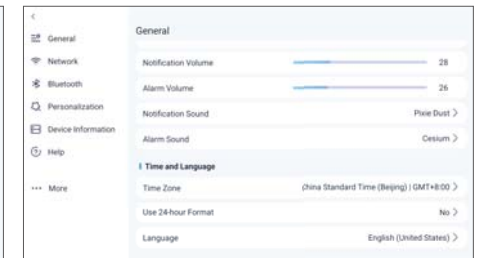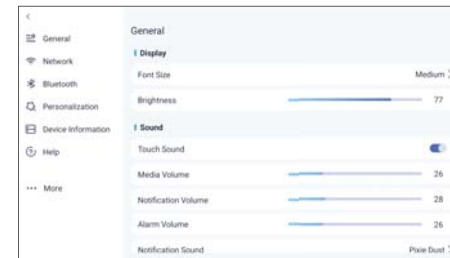



Chapter 5 — Settings

5.2 Network

 Includes: Network Status, Wi-Fi settings (Turn on Wi-Fi, select network connection)

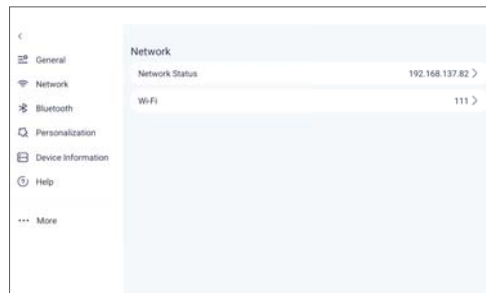

Chapter 5 — Settings

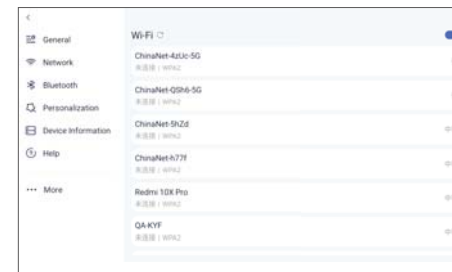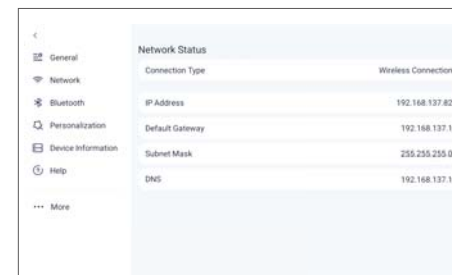  


Chapter 5 — Settings

5.3 Bluetooth

Includes: Open Bluetooth., Connected Devices

 (1. Turn on Bluetooth switch. 2. Pairing and connecting Bluetooth devices)

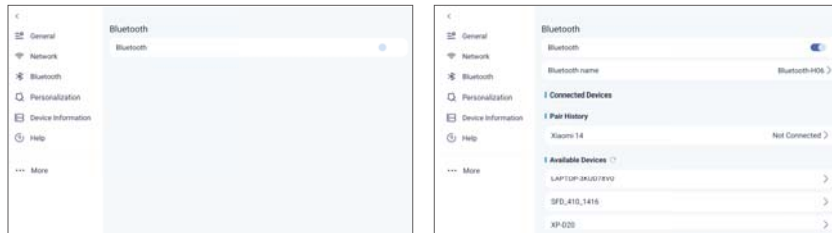

5.4 Personalization


Includes: Wallpaper (Select and set a favorite wallpaper)



Chapter 5 — Settings


5.5 Device Information

 Includes: Device Name, Storage space, Device Model, System Version, WLAN MAC Address, Bluetooth Address, Serial Number (View the information of this device like Device name Storage space and so on)

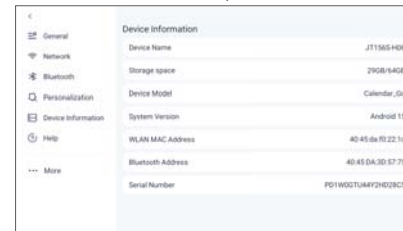

5.6 Help

 Includes: Contact Us, Official Website, Version (If you encounter any device issues, please contact us.)

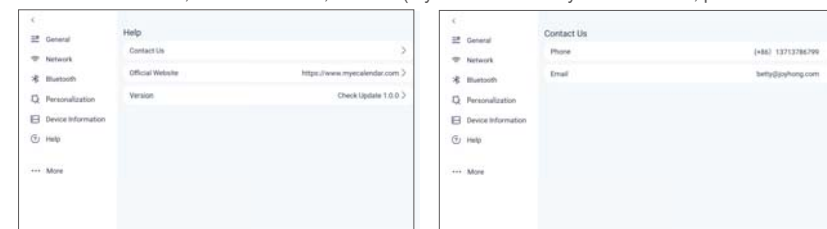


Chapter 5 — Settings



5.7 More


Network & internet (Open the Internet and connect)

 Connected devices (Open and search for devices, connect to devices)

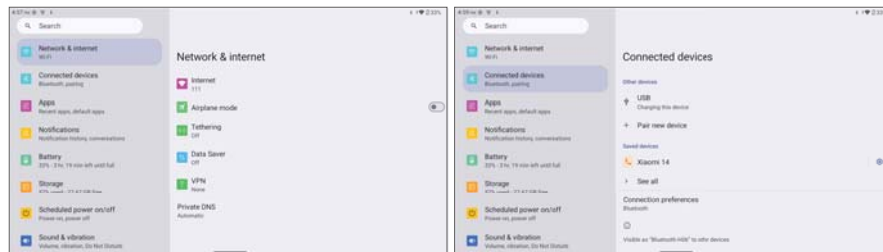


Chapter 5 — Settings

 Apps (APP settings)

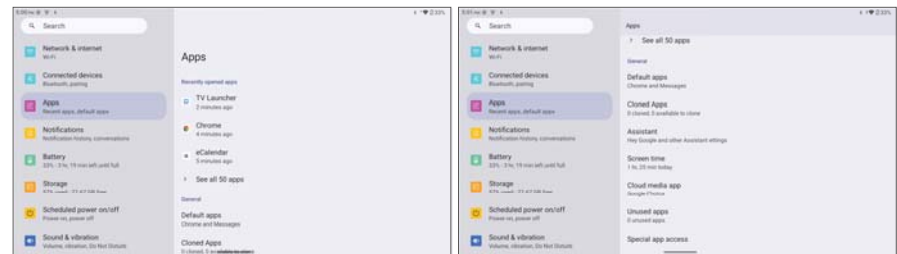


 Notifications (APP Notifications control)

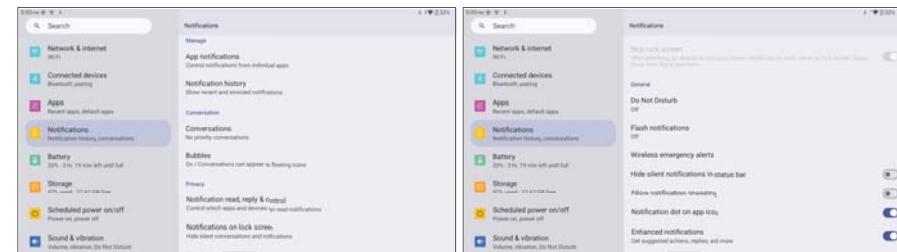


Chapter 5 — Settings

 Battery (Check battery level)

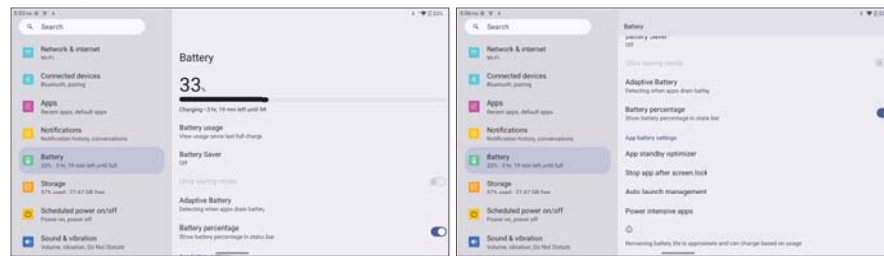


Storage (Storage manager)

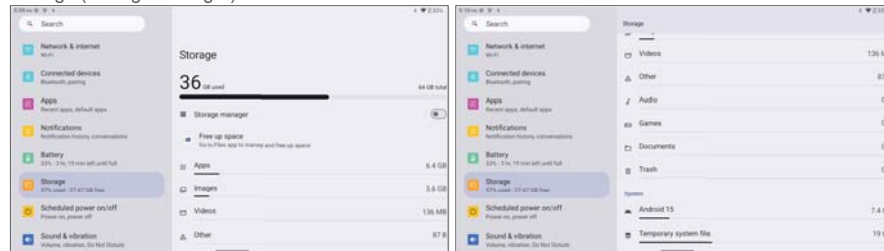 


Chapter 5 — Settings

 Scheduled power on/off (Timer settings, Scheduled power on/off)

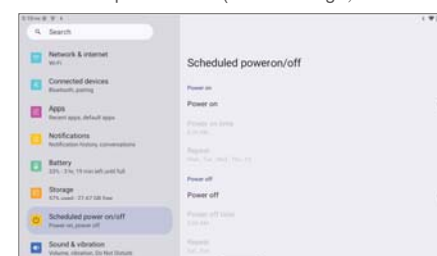


 Sound & vibration (Media, notification, and alarm volume settings)

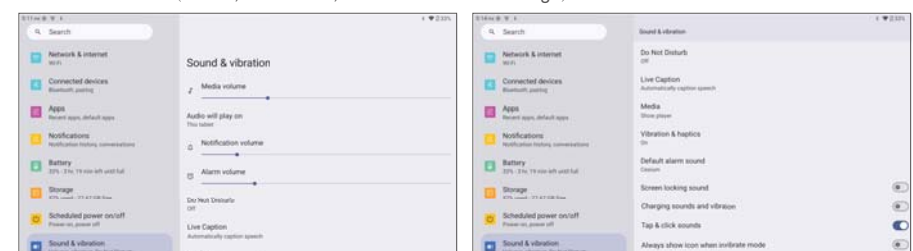


Chapter 5 — Settings

 Display (Screen brightness, screen lock settings)


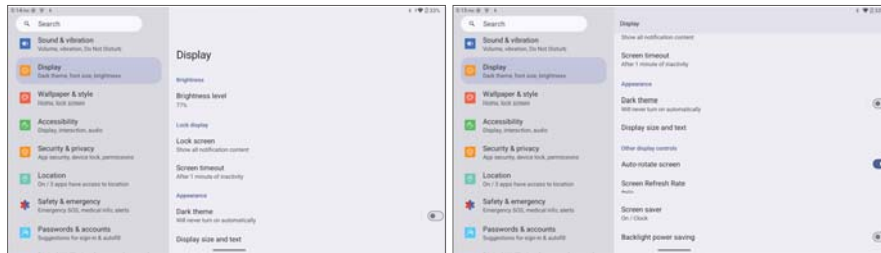


 Wallpaper & style (Choose and set your favorite wallpaper style.)

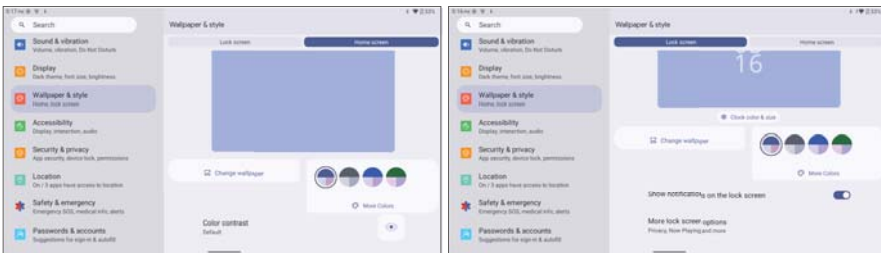


Chapter 5 — Settings

  Accessibility (Setting access display, interaction, audio)

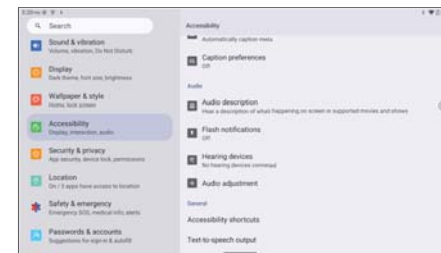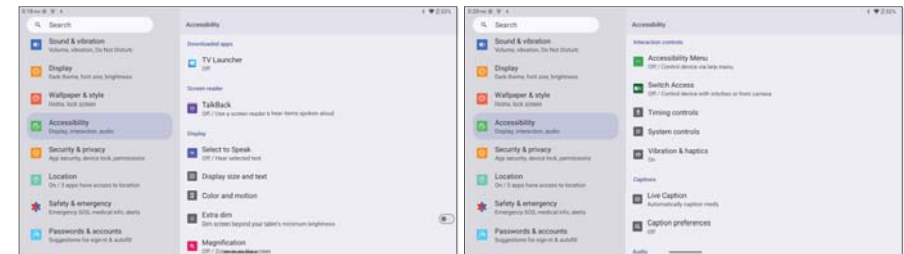


Chapter 5 — Settings

 Security & privacy (Set screen,app,device lock to protect privacy information)

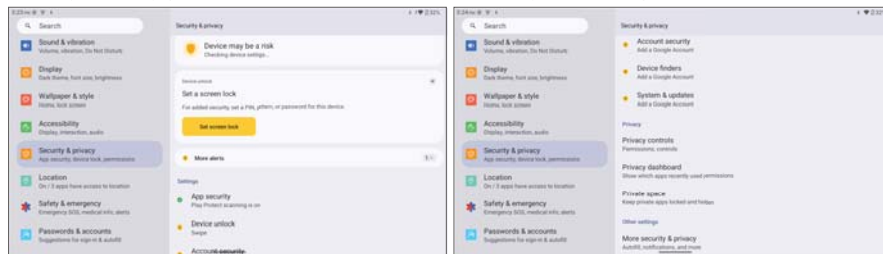


 Location (Turn on location, allow the app to access location information.)

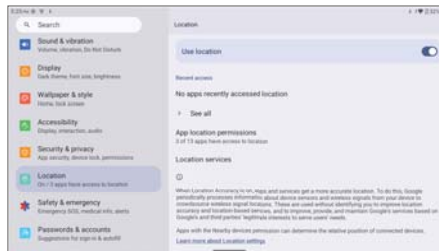


Chapter 5 — Settings

 Safety & emergency (Open Emergency sos ,medical info,alerts to stay safe.)

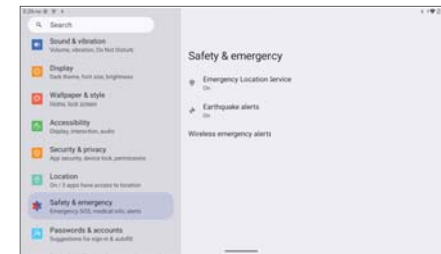

 Passwords & accounts (Log in to Google account)

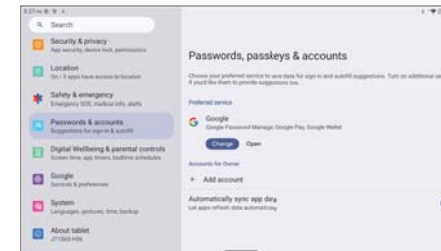


Chapter 5 — Settings

Digital Wellbeing & parental controls (View Screen time, app time and bedtime schedules)



 
Google (Log in to Google and provide Google services)

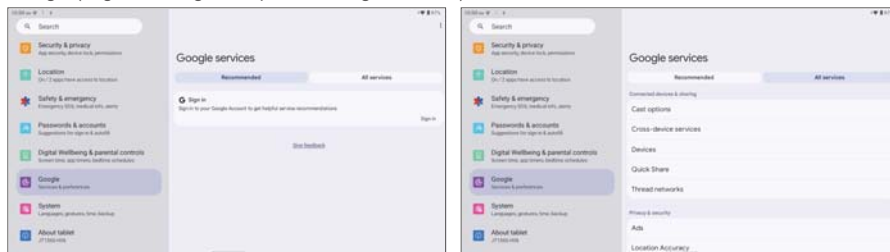

Chapter 5 — Settings


System

 Includes: Languages, Keyboard, Gestures, Date & time, Backup, System updates, Users, Reset options, Memory Extension (Can set language, local time, etc.)

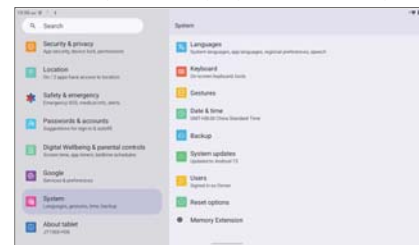

About tablet

 Includes: Device, Ram, Screen, Battery, CPU, CAMERA (View device information about the tablet)

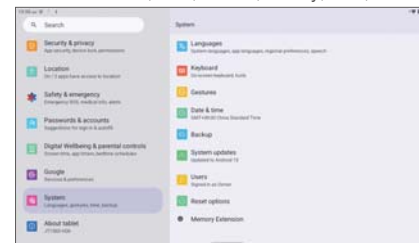



Chapter 6 — Device Maintenance

6.1 Screen Cleaning (10-point Capacitive G+G Panel)

- Power off before cleaning. Use microfiber cloth + neutral screen cleaner only.
- Do not spray liquid directly on screen; no alcohol, tissue or rough cloth.
- Wipe gently, no hard scraping to protect anti-fingerprint coating.

6.2 Power Adapter Guidelines (12V/3A Type-C)

- Use original 12V/3A PD adapter only. Mismatched power causes hardware damage.
- Handle cable and connector gently; keep adapter ventilated and dry.
- Unplug mains power for long idle periods.

6.3 Operating Temperature & Humidity

- Ambient Temperature: 0 °C ~ +40 °C
- Relative Humidity: 20% ~ 80% (Non-condensing)

6.4 Long-Term Storage

- Fully power off and remove peripherals before storage. Cover with anti-static bag.
- Storage range: -10~35 °C, 10%~70% RH, away from sunlight.
- Power on 30 mins monthly if stored over 30 days to protect lithium battery.

6.5 Firmware Update & Backup

- Keep power connected during firmware upgrade; back up all data first.
- Use official firmware; follow on-screen update guide.
- Regular data backup is suggested to avoid file loss after reset/update.

6.5 Firmware Update & Backup

- Backup all data before reset.
- Do not cut power during reset; all custom settings will revert to factory defaults.

Chapter 7 — Technical Specification

Solution: T606

Memory: 4GB RAM + 64GB ROM

Display Resolution: 1920 × 1080

WiFi: Dual-band WiFi (2.4GHz + 5GHz)

Power Interface: USB-C, support 5V⎓3A, 9V⎓2.22A, 12V⎓1.67A

Bluetooth: BT 5.0



Chapter 8 — FAQ

8.1 Device won't power on / restarts automatically.

- ① Check power connection; Force restart: long-press the hold power button 5–10 sec.
- ② Auto-restart causes: low battery, overheating, or system crash.

8.2 Cannot connect to Wi-Fi (2.4G vs 5G troubleshooting)

- ① Switch between 2.4GHz / 5GHz bands.
- ② Complete captive portal login (hotels, cafes).
- ③ Forget network → reconnect.

8.3 Touch screen unresponsive

- ① Clean screen, remove screen protector.
- ② Calibrate in settings, Clear cache.

8.4 Cannot log into Google Play / download failures

- ① Set date & time to auto.
- ② Clear Play Store cache.
- ③ Check storage space and GMS support.

8.5 eCalendar sync fails

- ① Check Wi-Fi connection.
- ② Trigger manual sync in settings.
- ③ Verify enterprise calendar permissions.

8.6 Screen casting fails

- ① Both devices on same Wi-Fi (5GHz recommended).
- ② Disable VPN or firewall temporarily.

Chapter 8 — FAQ

8.7 Bluetooth speaker / display scenarios issue

- ① Ensure Bluetooth is on and paired.
- ② Keep within 10m range.
- ③ Enable Bluetooth Speaker mode.

8.8 Home screen weather / time inaccurate

- ① Enable auto time zone and network time.
- ② Grant location permission. Refresh widget.

8.9 Charging issues / adapter heat

- ① Original the adapter recommended.
- ② Mild warmth = normal. Excessive heat = stop use & contact support.

8.10 External devices not recognized

- ① USB OTG Not Recognized
- ② Use correct USB port.
- ③ Format drive to FAT32 or exFAT.
- ④ Test one device at a time.

8.11 System update failure

- ① Battery ≥30% required.
- ② Restart update if interrupted.
- ③ Contact support for bootloop recovery.

8.12 Cannot activate after factory reset

- ① FRP: log in with previous Google account.
- ② MDM: re-enroll with IT admin.
- ③ Contact us support if still locked.



Chapter 9 — Warranty & Support

- 1.The warranty covers failures caused by defective raw materials and manufacturing defects under normal operating conditions.
- 2.Free repair or replacement of spare parts will be provided within the valid warranty period.
- 3.Damage caused by improper operation, unauthorized disassembly, modification or firmware flashing.
- 4.Malfunction or damage from water immersion, liquid spillage, dust corrosion, extreme temperature or physical impact.
- 5.Contact our official customer service via email, online chat or service hotline for troubleshooting guidance.
- 6.If remote troubleshooting cannot resolve the issue, follow official instructions to send the unit to designated service centers for maintenance.

Contact Us

For any inquiries with our products, please feel free to contact us, we will respond within 24 hours.
Email: kietech@outlook.com

Chapter 9 — Warranty & Support

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance between 20cm the radiator your body.



--	--