

SY058 SPRAY TWIST REMOTE CONTROL STUNT CAR MANUAL

Thank you for using our products. In order to get a better understanding of this product,Please read the following instructions carefully before using them, which will bring you a different sense of operating experience.

Attention

- Electric control product: This product is suitable for 14 years old and above. It is assembled/charged by adults and then played by children.
- Please use the product under the supervision of adults. Please do not dismantle or modify the product without authorization. Any modification may cause the product to be unable to be used normally.

Precautions for Use

- 1.The toy car uses a 3.7V rechargeable lithium battery, the remote controller uses 2 1.5V "AA" unchargeable batteries, and the watch remote controller uses 2 x1.5V "AAA" unchargeable batteries.
- 2.Battery removal and loading should be carried out correctly according to the polarity and voltage in the toy battery box
- 3.Uncharged battery not rechargeable
- 4.The rechargeable battery must be charged under adult supervision;
- 5.The rechargeable battery should be taken out of the toy before charging;
- 6.Different types of batteries or old and new batteries can't be used in mix.
- 7.The car body must use the original configuration of battery; And the original USB cable must be used to charge the battery.
- 8.The run out of battery should be removed from the toys; If you haven't used it for a long time, please remove the toy's battery.
- 9.The power terminal shall not be short-circuited;
- 10.Use a screwdriver turned on the remote control battery cover screw, across the electrodes in the correct polarity into the battery, use a screwdriver on the battery cover screw drive at the end of the screw, the battery plug wire connected to the body the power cord in the correct polarity;
- 11.Repair and maintenance: this product is a plastic, hardware and electronic components, shall not enter the water or placed in a humid environment or use for a long time, regularly check the wires, plugs, casing and other parts for defects and found defects should stop using, and restored.

2.4G Automatic code matching specification

1. After the remote control car has installed the battery, turn on the switch and enter the connection state.
Note: Please repeat the above operation if the connection is unsuccessful.
2. One remote control corresponds to a car. When the connection is successful, it will not be disturbed.
Note: Not connect to many cars at the same time.
3. When the remote control does not control any function within one minute, automatically enter the sleep state (indicator light off). If you need to restart, please press the switch button of the remote control.
4. When you need to repair the remote control or the car, take out the battery of the remote control and turn off the power switch of the remote control car. To enter the rematch.

Operation tip

1. When you are in operation, the power switch is in the "ON" position, such as the power switch is in "OFF", the car is turned OFF.
2. When the battery power is consumed, the left and right steering will fail and the forward and backward speed will also slow down. The battery needs to be removed and recharged.
3. The effective control distance of the remote control car is about 25 meters. When the distance exceeds the distance, the remote control car may appear to stop or uncontrolled phenomenon.

 
Handle remote controller and watch controller interchange operation instructions

1. When the handle remote control is connected to the remote control car, disconnect the power supply of the watch remote control or perform it in the sleep state of the watch remote control.
(Remote control car power switch must be turned off before opening)
2. When the watch remote control is coded with the remote control car, the handle remote control stops operating for 10 seconds and enters the hibernation state, just open the watch remote control switch.
(Remote control car power switch must be turned off before opening)

Remote control operation instruction

- Name of part**
- ⚙️ A key deformation ⚙️ Program ⬅️ The left side of the transverse ➡️ The right side of the transverse
- 🔊 Demo button 🔊 Silent/Play music 🔊 Trumpet and trumpet/spray key
- ⚙️ Press the programming key, input forward, backward, left to transverse, right to transverse, and the remote control car will be programmed to demonstrate.
- 🔊 Press the remote control Demo button, auto demo on car (3 songs free conversion), press any key to exit auto demo.
- 🔊 Press the mute button of the remote control to turn off the sound or play music.
- 🔊 Press the remote control sound / spray button, the car turn on the trumpets and spray.

When at the end of the operation, turn off the switch for the remote control cars, the car 1 minute will automatically enter the sleep mode.

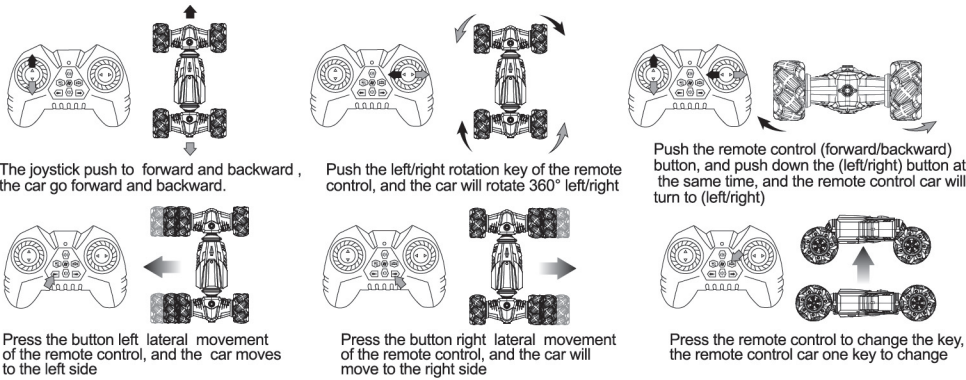

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Soak water bomb steps

Pour 500 pieces of the bag into a container or mineral water bottle and inject purified water for about 180 ml. After soaking the for 4 hours or more, The diameter of the absorbent bomb increases to 7MM-8MM (the increase of water volume and the duration of immersion cannot make the water bomb continue to increase).It can then be used in conjunction with the emitter.Light and heat cause the absorbent bomb to shrink and can be repeatedly dropped into the water, making it larger again.Must use the factory water bomb bag.


How to recharge

- 1.This 3.7V lithium battery is new , before playing please charge the battery.
- 2.Connect the battery plug to the USB cable plug, press the correct pole to connect, and then plug the charging cable into the socket to charge. It takes 100-150 minutes to fully charge the battery,Charging plug with indicator light, red light on when charging, light off when full. Please don't overcharge,Charging for a long time will not increase the power.
- 3.Check toys and batteries regularly. If accessories, batteries, charging cables, etc. are damaged, stop using them immediately.After repair or renewal, can continue to use.

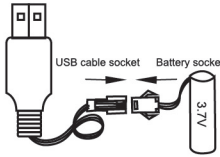


How to install batteries

 - 1.Remote controller
(1)Open the battery cover of the remote control and load 1.5V AA battery according to the positive and negative polarity of the battery compartment.
(2) Cover the battery box and lock the screws.



 - 3.Remote control car
(1)Open the bottom battery cover and connect the rechargeable battery to the power outlet and load it into the bottom of the car.
(2) Cover the battery box and lock the screws.

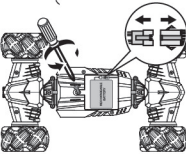

Instructions

- 1.The toy battery charger should be checked before use to prevent damage to wires and other components. If there is damage, it must be repaired before use.

General fault handling		
Symptoms	Fault cause	Treatment method
The vehicle cannot be operated	1. The remote control is not connected or the remote control car switch is not on 2. The battery is not properly installed. 3. The rechargeable battery is weak	1.Open the car switch, contact the remote control again. 2. Properly load the battery into the remote control and the car 3.The car battery is charged
The vehicle is not controlled and the distance is close by remote control	1.Remote control or car battery,lack of electricity 2.There may be a source of disturbance near the site	1. Replace the battery in your remote control or recharge your car battery . 2.Replace the site
Abnormal protection	1.When the function of the remote control vehicle is hindered by external forces or the power is insufficient, 2.circuit battery short circuit.	1.Turn on the power switch again and protect the remote car from power failure

