 


POFOTO

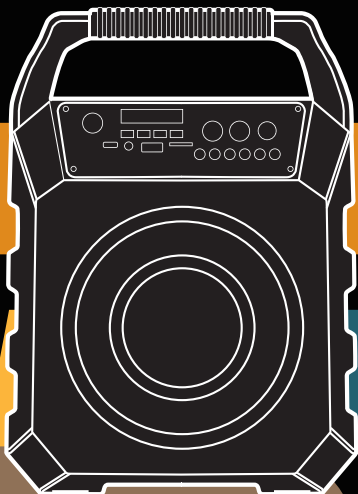

K100

Portable Karaoke Machine

User Manual

*Please read the manual carefully before you use the product,
and keep the manual well after using.

Limited-time offer!

Within **7 days** of receiving the product, you can get a free 12 months warranty extension (for a total of **24 months** of coverage) by sending your order number to our official email or by scanning the QR code below.

Benefits	Before	After the Upgrade
Warranty period	12 Months	24 Months ↑
Return and exchange period	30 Days	60 Days ↑
Customer service response time	Within 24 hours (working days)	Within 12 hours (working days) ↑
After-sales support	Lifetime	Lifetime
More benefits	NO	Upcoming...



Extended Warranty

Contact Us: help@pofotovip.com



Contact Us

 


**Watch
Operation Videos**




**Download a More
Detailed PDF User Manual**


What's In the Box:

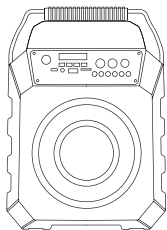


Portable Karaoke Machine x 1

 

Wireless Microphones x 2

 

USB Type-C Cable x 1

 

AUX Audio Cable x 1



Shoulder Strap x 1



User Manual x 1

CONTENTS

Important Safety Instructions	I
Welcome & Congratulations!	2
Product Feature	2
Create Your Home Karaoke Room	5
Main Unit Controls and Interfaces	6
Microphone Controls	10
Modes.....	11
Charging the Device	14
Main Unit Troubleshooting Guide	15
Warranty Policy	16
FCC Compliance Statement	17
Warning:	18

Important Safety Instructions

IMPORTANT SAFETY INFORMATION

Safety Instructions Before Using the Machine

- Please read and retain this user manual.
- Do not block the speaker's ventilation openings or sound channels with objects.
- Avoid using the machine at high volumes for prolonged periods to prevent damage.
- Use compliant accessories, internal batteries must not be removed or replaced by the end user.
- The operating temperature should be between 0°C and 40°C.
- Do not expose the device to damp or high-temperature environments such as puddles, sunlight, or open flames to avoid the risk of electric shock or explosion.
- Unplug the machine during thunderstorms or if it will not be used for an extended period.
- Do not forcibly insert a TF card or SD card into the slot. Insert the card in the correct sequence to avoid malfunction.
- Do not use any corrosive or oily cleaners to clean the machine.
- To maintain the machine's performance and battery life, fully charge it at least once every one months

Welcome & Congratulations!


Thank you for your purchase of this product. Be sure that you have read this manual and understood its contents before using the product. Keep the manual where it will be read by all who use the product.

Product Feature

Step 1


Fully charge the main unit and microphones before using.

Note: The speaker takes 5 hours to fully charge, and the microphone takes 2 hours to fully charge.

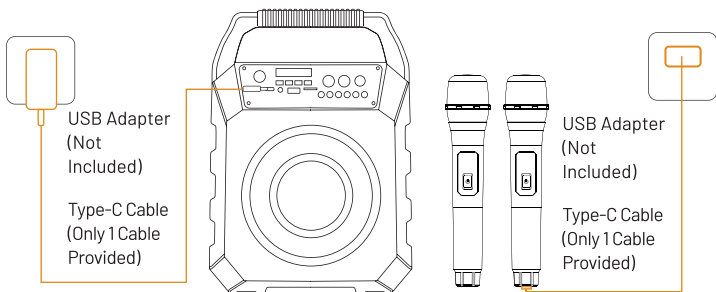

Step 2


Turn clockwise to power on.

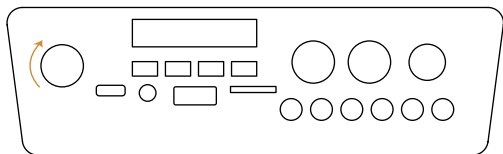


Step 3

Method 1: Enable Bluetooth on your phone or tablet and pair it with "POFOTO K100."

Note: The Bluetooth connection page may vary depending on the phone/tablet/ computer/laptop operating system.

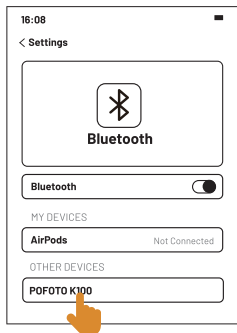

Method 2: Connect your device directly using an AUX cable.

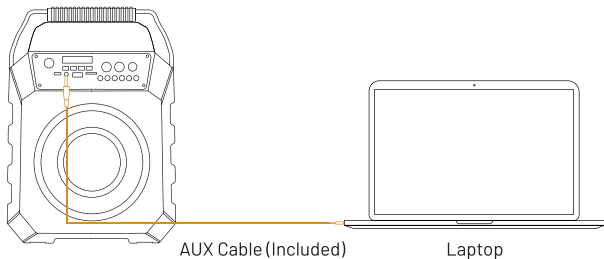


Step 4

Press and hold the  to turn on the microphone.

Now you're ready to start your singing journey!

Note: Position your mouth toward the microphone as shown to ensure clear sound capture while singing.

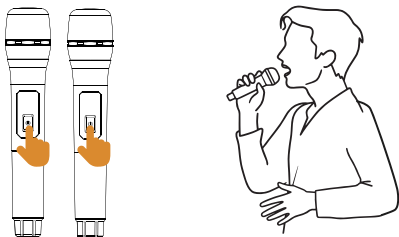

Tips:

1. If Bluetooth pairing fails, triple press the [Mode/Light] button to disconnect Bluetooth, and quadruple press to clear phone pairing records (only available when Bluetooth is disconnected). And then pair again.
2. While using the system, avoid pointing both microphones directly at the speaker, and keep them at least one meter apart. This helps prevent harsh feedback noise.




Create Your Home Karaoke Room



How to pair two karaoke machines?

1. Turn on both karaoke machine.
2. Connect one karaoke machine to your phone or tablet via Bluetooth as the primary device.
3. Double press the [Mode/Light] button on both karaoke machines. After a beep, wait about 1 minute. A second beep will sound when pairing is successful.
4. Once paired, both karaoke machines will play the same audio and lighting effect in sync, creating a stereo effect.

1

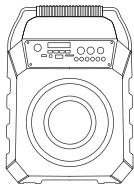

2

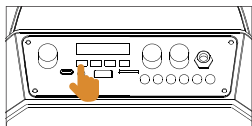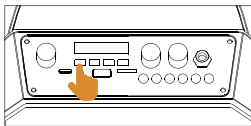


3




Done!



 Main Unit Controls and Interfaces

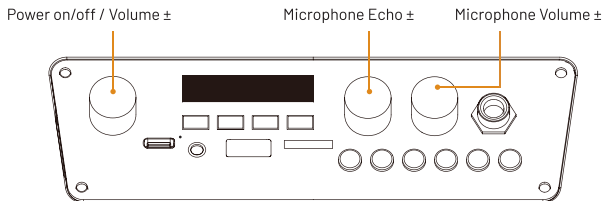


KNOB	
Power on/off / Volume ±	Turn clockwise: powers on and increases volume. Turn counterclockwise: decreases volume. Turn fully counterclockwise: powers off.
Microphone Echo ±	Turn clockwise: increases Echo effect. Turn counterclockwise: decreases Echo effect.
Microphone Volume ±	Turn clockwise: increases microphone volume. Turn counterclockwise: decreases microphone volume.

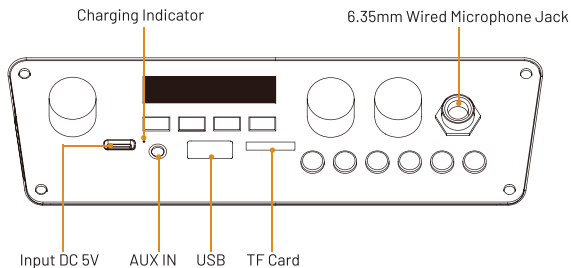 

JACKS AND PORTS

Input DC 5V	Connect to a 5V/2A power adapter for charging or power supply.
Charging Indicator	When the speaker is charging, the charging indicator stays solid red.
AUX IN	Connect external audio devices (e.g., smartphone, tablet) using a 3.5mm audio cable. The reset button is recessed inside the AUX IN jack. Insert a thin pin (such as a paper clip) into the jack and press to reset the machine.
USB	Insert a USB flash drive to play music files. (Supports up to 128GB. Compatible with WAV, MP3, FLAC, and WMA files only.)
TF Card	Insert a TF memory card to play music files. (Supports up to 128GB. Compatible with WAV, MP3, FLAC, and WMA files only.)
6.35mm Wired Microphone Jack	Plug a wired microphone with a 6.35mm connector for karaoke.

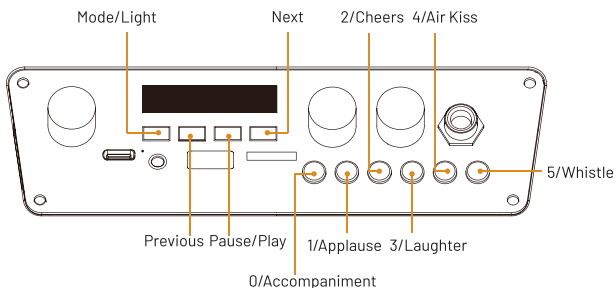 


BUTTON OPERATIONS

Mode/Light	• Press to switch between Bluetooth, AUX, USB, and TF card playback modes. (When a USB flash drive, TF card, and AUX cable are inserted) • Press and hold to cycle through lighting effects: Spiral Gradient, Three-Color Rotation, Bidirectional Convergence, Circle Run, Music Spectrum + Breath Mode, Beat Sync, Breath Mode. • Double press to initiate/cancel TWS pairing. • Triple press to disconnect/connect Bluetooth. • Quadruple press to clear phone pairing records (only available when Bluetooth is disconnected).
Previous	• Press to skip to the previous track.
Pause/Play	• Press to play or pause the current track. • Press and hold for more than 8 seconds to reset the unit.
Next	• Press to skip to the next track.
0/Accompaniment	• Press to switch to accompaniment mode.

1/Applause	• Press to play the applause sound effect. • Double press to switch to male voice.
2/Cheers	• Press to play the cheers sound effect. • Double press to switch to female voice.
3/Laughter	• Press to play the laughter sound effect. • Double press to switch to elderly voice.
4/Air Kiss	• Press to play the air kiss sound effect. • Double press to switch to baby voice.
5/Whistle	• Press to play the whistle sound effect. • Double press to restore original voice.

 
Digital Display

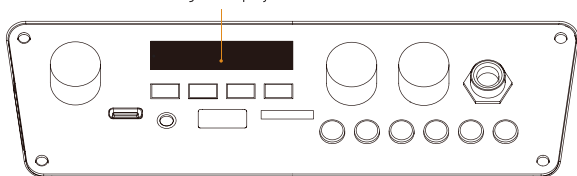

DIGITAL DISPLAY	
BLUE 	• When BLUE flashes, the speaker is ready for Bluetooth connection. • When BLUE stays solid, Bluetooth is connected.
U05	Volume: U1~U16
Lod	USB/TF mode: Loading audio files from USB/TF card.
00 0 1	USB/TF mode: Track number.
USB  00 09 SD 	USB/TF mode: Track play time.

RLH AUX	AUX mode
	When the battery icon flashes, the battery is low. Please charge.
E 16	Echo range: E1~E16 (Can only be adjusted when the microphone is successfully connected to the speaker.)
 16	Microphone volume range: 1~16 (Can only be adjusted when the microphone is successfully connected to the speaker.)

 
Microphone Controls

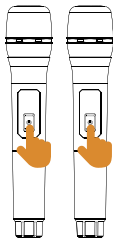


- Power on/off: Press and hold  for about 3 seconds.
- Accompaniment On/Off: Short press .
- Pause/play: Double press .
- When the digital display on the microphone flashes, the microphone is ready to connect to the speaker.
- When the digital display stays solid, the microphone is successfully connected.

Modes

 » Bluetooth Instructions

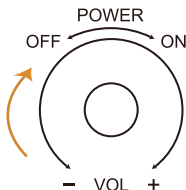

 1. Turn clockwise until you hear a beep – the unit powers on. If no USB, TF card, or AUX input is detected, the speaker will automatically enter Bluetooth mode.

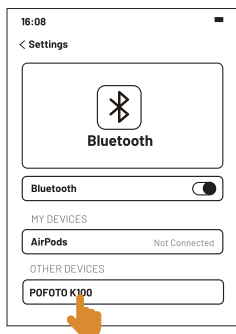

2. Enable Bluetooth on your mobile device and search for available devices. Select "POFOTO K100" from the list to pair.

If prompted for a PIN code, enter "0000" and confirm to complete pairing.

Tip: After pairing successfully, the karaoke will automatically reconnect to the most recently paired device within one minute the next time it's powered on. To pair a new device, please disconnect the previous one first.

3. Bluetooth Pairing Status

When powered on and not connected to any device, the display will flash "BLUE". This indicates the speaker is in Bluetooth pairing status and is ready to be discovered. Upon successful Bluetooth connection, the flashing "BLUE" display will become a solidly lit icon.


4. Disconnect Bluetooth

After powering on, Triple press the [Mode/Light] button to disconnect from the previous device. The karaoke machine will then enter Bluetooth pairing mode for connection with a new device.

5. Quadruple press the [Mode/Light] button to clear phone pairing records (only available when Bluetooth is disconnected).

Note: When in Bluetooth mode, the device will automatically shut down if there is no Bluetooth connection for 15 minutes.

» USB/TF Card Instructions

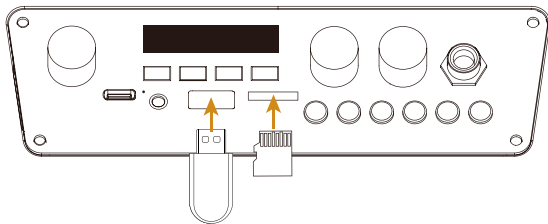


1. When a USB drive or TF card is inserted, the unit will automatically switch to USB/TF mode, read the audio files, and start playback.

2. To exit USB/TF mode, simply remove the USB drive/TF card or press the [Mode/Light] button to switch back to Bluetooth mode.

Note: It is recommended that the USB drive and TF card only contain WAV, MP3, FLAC, and WMA files.

» AUX Instructions

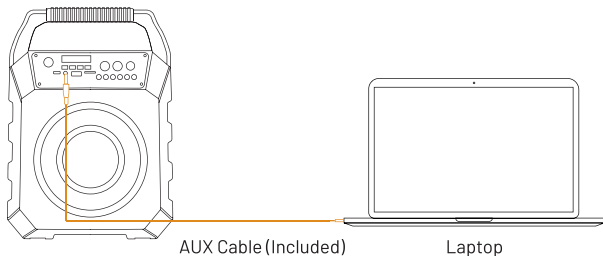

Connect your phone/laptop/tablet to the speaker using an AUX cable to play audio from your device through the speaker.

» TWS Function

1. Pairing preparation

Prepare two speakers. Power on both speakers (one connected to Bluetooth, the other left unconnected).

2. Initiate pairing

On the speaker already connected to Bluetooth, double press the [Mode/Light] button (this unit will act as the host). After a beep, wait about 1 minute. A second beep will sound when pairing is successful.

3. Operation after pairing

Once paired, the following buttons can be operated synchronously on both units: power off, previous/next track, play/pause, lighting effect switch, and vocal cancel/accompaniment.

4. Cancel pairing

To cancel TWS pairing, double press the [Mode/Light] button again.

Charging the Device

Speaker:

- Please use a 5V/2A adapter to charge the device. Do not use an adapter rated higher than 5V/2A.
- A full charge takes approximately 5 hours.
- Charging indicator: Red means charging, green means fully charged.
- When the battery is low, the device will give a low battery voice reminder. Please connect the charger as soon as possible.
- If not used for a long time, fully charge the device at least once a month.

Microphone:

- Use two AA batteries to power a microphone.
- If the microphone will not be used for an extended period, remove the two AA batteries from inside the microphone.

Main Unit Troubleshooting Guide

Issue	Solution
Unable to pair after multiple attempts	Power off the speaker and turn it back on, or disable and re-enable Bluetooth on your phone.
Audio dropout during playback	Check if the connection distance is too far or if there are obstacles between the speaker and the phone.
No sound	Check if the phone or speaker volume is set to minimum.
Cannot power on	Check if the built-in battery has sufficient charge.
Power indicator does not light up	Check if the charging port is properly connected.
Microphone does not turn on	The microphone may not have two AA batteries installed, or the batteries may be depleted. Please replace them with two new AA batteries.
Howling (audio feedback)	Do not point the microphone directly towards the speaker. Position yourself so the microphone is behind or to the side of the speaker. Reduce the microphone volume on the main unit.

Warranty Policy

Our company provides customers with a 12 months product warranty from the date of purchase.

How to Extend Your Warranty

Please email us at help@pofotovip.com to register and extend your 24 months warranty coverage.

Filing a Warranty Claim

Should you experience any product issues, please don't hesitate to contact us first at help@pofotovip.com.

Warranty Exclusions

This warranty shall not be valid if the product has been subjected to any of the following conditions:

- Improper installation, operation, or maintenance that is not in accordance with the official product instructions.
- Use for purposes other than its intended function.
- Use for commercial or non-household purposes.
- Damage or malfunction resulting from:
 - Incorrect voltage supply.
 - Accidents, including liquid or moisture damage.
 - Misuse, abuse, or negligent handling.
 - Faulty or improper installation.
 - Mains power supply problems, including voltage spikes or lightning damage.
 - Infestation by insects or vermin.
 - Tampering or modification by persons not authorized by our company.
 - Exposure to abnormally corrosive conditions.
 - Insertion of foreign objects into the unit.
- Use with accessories or parts not pre-approved by us.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- **Caution:** Any changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- **FCC Statement:**

For Bluetooth microphone: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For Bluetooth speaker: This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

FCC ID: 2A5AQ-K100
FCC ID: 2A5AQ-K100MIC

Warning:

- 1. English:** Please do not expose the machine to the sun directly or close to the fire, it may change the shape of the machine and the color of the display. It is normal that the machine goes hot after using for a period of time.
- 2. Français:** Veuillez ne pas exposer la machine directement au soleil ou près d'un feu, cela pourrait déformer la machine et altérer la couleur de l'écran. Il est normal que la machine chauffe après une certaine période d'utilisation.
- 3. Deutsch:** Bitte setzen Sie die Maschine nicht direktem Sonnenlicht oder Feuer aus, da dies die Form der Maschine und die Farbe des Displays verändern kann. Es ist normal, dass die Maschine nach einer gewissen Nutzungsdauer heiß wird.
- 4. Español:** Por favor, no exponga la máquina directamente al sol ni cerca del fuego, ya que podría deformarse y cambiar el color de la pantalla. Es normal que la máquina se caliente después de un tiempo de uso.
- 5. Italiano:** Si prega di non esporre la macchina direttamente al sole o vicino al fuoco, potrebbe deformarsi e cambiare il colore del display. È normale che la macchina si riscaldi dopo un periodo di utilizzo.
- 6. 日本語:** 機械を直射日光や火のそばに置かないでください。機械の形状やディスプレイの色が変わる可能性があります。使用後に機械が熱くなるのは正常です。



Warning:

This product contains a lithium-ion battery.

Do not expose the battery to excessive heat, fire, or direct sunlight.

Do not disassemble, crush, puncture, or short-circuit the battery.

Use only the specified charger and follow the charging instructions.

If the battery leaks or emits an odor, discontinue use immediately.

Item: Portable Karaoke Machine with 2 Wireless Microphones

Model: K100

Power Input: 5V= 2A

Battery: 4400mAh Rechargeable Battery

Manufacturer: Shen Zhen Hong Xing Da Technology Co., Ltd

Address: Room 401, 4/F, Building 3, Hao'er Jia'shitai Industrial Park, No.164, Feng'tang Avenue, Zhan'cheng Community, Fu'hai Street, Bao'an District, Shenzhen; Post code: 518100; China

Email: help@pofotovip.com

Business: HERMAN INNOVATIONS TECHNOLOGY CO., LIMITED

Address: UNIT83, 3/F, YAULEE CENTRE NO.45 HOI YUEN ROAD KWUN TONG KOWLOON. HONGKONG.

Email: help@pofotovip.com

Website: <https://pofotovip.com>



HUMISS TRADING S.L.
Calle Luis Barhuel 12-3A, Madrid, 28018,
Spain
eugenes@outlook.com
+34613177772



Sea&Mew Accounting Ltd
Electric Avenue Vision 25, London,
Enfield EN3 7GD
info@seamew.net
+447399648608



FR

Vous êtes responsable de remettre
tous les appareils électriques et
électroniques usagés à des points
de collecte correspondants.

Pour en savoir plus :
www.quefairedemesdechets.fr



FR

Les piles
et batteries
se recyclent

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



OU

Made in China

Points de collecte sur www.quefairedemesdechets.fr

POFOTO