

# Operation Guide 5750

**CASIO®**

You can also find information about operational procedures at the CASIO website.

 
<https://s.casio.jp/mw/en/5750/>




- Your watch may differ somewhat from the one shown in the illustration.

## Bezel Attached

- Make sure the crown is fully pushed in before attaching the bezel.

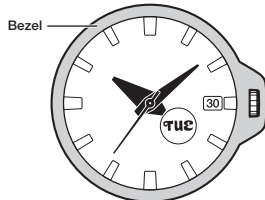

## Bezel Removed

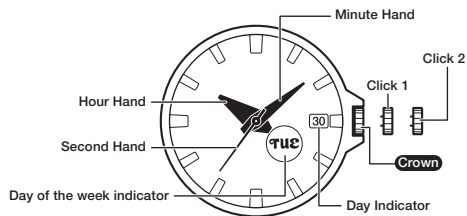 

## To operate the crown

 
Remove the bezel.

Be sure to replace the bezel after finishing a crown operation. Insert the bezel hooks into the watch case.

- The watch is not protected from impact while the bezel is removed.
- Water resistance is not guaranteed while the crown is pulled out.


## Crown Operations

Some water-resistant models (10BAR, 20BAR) have a screw-in crown. When you need to perform a crown operation, rotate it towards you to unscrew it. Then pull the crown out. Avoid applying undue force when pulling. The watch loses its water resistance while the crown is unscrewed. After performing a crown operation, fully screw the crown back in.

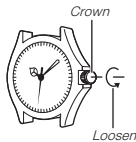

## If your watch has a rotary bezel...

 You can rotate the bezel to align its ▼ mark with the minute hand. Then you will be able to tell how much time has elapsed since aligning the ▼ mark.

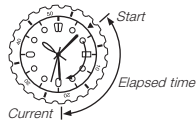

## To adjust the time setting

When the second hand is at 12 o'clock, pull the **Crown** out to Click 2.

Rotate the **Crown** to change the time setting.

Push the **Crown** back in on a time signal to resume timekeeping.

### Note

- Take care that you set the correct AM or PM time.
- When changing the time, move the minute hand four or five minutes past your final setting, and then back it up to the setting you want.

## To change the day indicator setting

Pull the **Crown** out to Click 1.

Rotate the **Crown** towards you to set the day.

Push the **Crown** back in.

### Note

- The day indicator setting uses a 31-day month. Make adjustments for months of shorter lengths.
- Avoid changing the day indicator setting between the hours of 9:00 p.m. and 4:00 a.m. Otherwise, the day indicator may not change correctly at midnight.

## To change the day of the week indicator

Pull the **Crown** out to Click 1.

Rotate the **Crown** away from you to set the day of the week.

Push the **Crown** back in.

### Note

- Avoid changing the day of the week indicator setting between the hours of 9:00 p.m. and 4:00 a.m.

## Low Battery Alert

- The second hand will jump at two-second intervals to alert you when battery power is low.
- Have the battery replaced as soon as possible after low battery alert is indicated.

## Specifications

**Accuracy at Normal Temperature:** ±20 seconds per month

**Power Supply:** One silver oxide battery (Type: SR920SW)

Battery nominal voltage: 1.55V

Battery life: Approximately 3 years

**Other:** Low battery alert

Specifications are subject to change without notice.