 


SONGX ANC Star Ring Earbuds

FCCID:2AW7B-SX12

User Manual

Product Overview

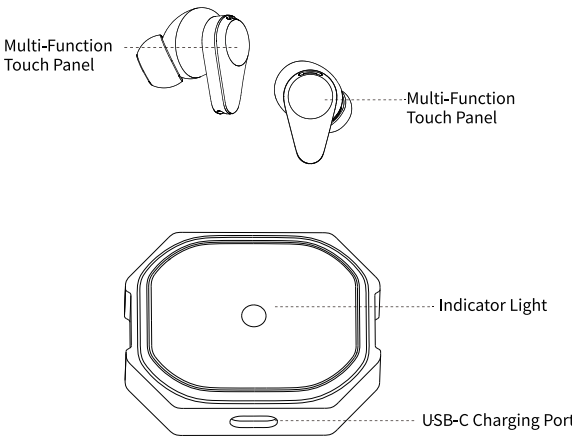


What's in the Box

SX12 Earbuds	× 1
SX12 Charging Case	× 1
Silicone Ear Tips (S/M/L)	× 6
USB-C Cable	× 1
User Manual	× 1


How to Pair

1. In the first time, put the earbuds into the charging case, close and open it, to activate the earbuds.

 2. Open the charging case, the earbuds will turn to pairing mode.

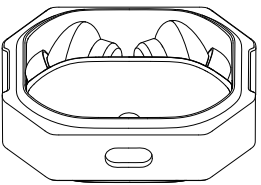


 3. Select "SONGANC II" under bluetooth menu on your device. The pairing is successful.

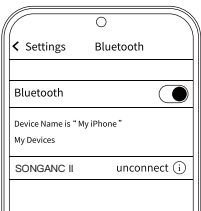

4. Congratulations, your earbuds are connected successfully. You can choose to use them at TWS Mode or MONO Mode.

 5. The next time you use it, open the charging case, it will automatically connect to your device.

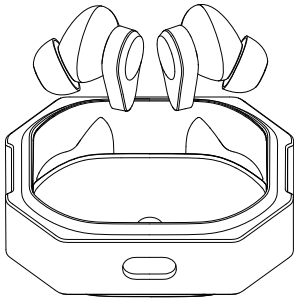


6. Connect to a New Device

To connect a new device, just disconnect the Bluetooth of the connected device, the headset will automatically enter the pairing mode, and the new device can search the Bluetooth list connection. You can also double-click the charging box button to enter the forced pairing mode, and the yellow light of the charging box flashes 4 times.

Touch Control




 ANC&Transparency Mode

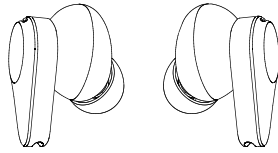

1. Press and hold the left ear for 1S to switch between ANC mode/Transparent mode/Normal mode when using with both ears. It is recommended to wear the left and right earphones correctly when using the noise reduction function.

 2. Press and hold the right ear for 1S to turn on/off the Game mode when using with both ears.

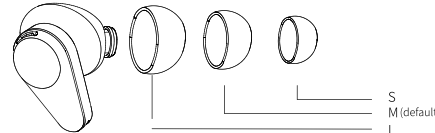

3. Long press 1S to turn on/off the Game mode when using one ear.

*Note: The ANC function needs high requirements for the microphone. Please pay attention to cleaning to avoid the reduction of ANC function caused by foreign matter blockage.

Power on

—Open the charging case or touch the button of earbuds for 3 seconds.

Power Off

—Close the charging case.

If you are in a call and another call comes in

—One tap the L/R earbud to accept the new call and hang up the current call;
—Double tap the L/R earbud to keep the current call and reject the incoming call;

Charging

In the first time, open the charging case to check the level of battery. If the case indicators are red, suggest to charge the case.

Charging the Earbuds

When low battery, the voice announcement will remind you to charge every 5 minutes.
When the earbuds are placed in the charging box, the current battery indicator of the charging box flashes 5 times and then goes out.

Charging the Charging Case

Charging the charging case, you can use the USB-C cable. When the case is in charging, the light on the case will be breathing. The light color indicates the battery level of the charging case.


The light will turn off when the charging case is fully charged.

70—100%	Green + Blue
30—70%	Red + Blue
0—30%	Red

Factory Data Reset

Try to reset as following instructions when earbuds are unable to connect.

 Put the earbuds into the charging case. Open it, Tap the function button of the charging case for 6S to clear the pairing information and restore the factory setting, the red light of the charging case flashes 4 times.

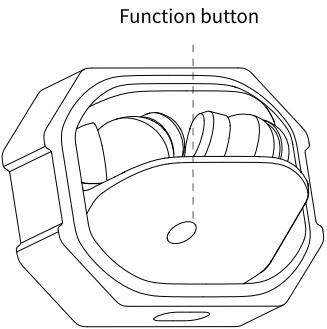

FAQ

1. How to change from Mono Mode to Tws Mode.

- a. When you just only use the right earbud, take out the left earbud from the charging case, the music will come out from the left and right earbuds at the same time.
b. When you just only use the left earbud, take out the right earbud from the charging case, the music will come out from the left and right earbuds at the same time.

2. How to change from TWS Mode to Mono Mode.

- a. When you put your right earbud into the charging case, the left earbud will continue playing music.
b. When you put your left earbud into the charging case, the right earbud will continue playing music.

3. The earbuds cannot reconnect to my device automatically.

If your earbuds are connected to several devices before, they will reconnect automatically with the recently connected device. Disconnect this device, open your Bluetooth and connect it again, if all of this doesn't work, restore the factory settings.

4. How to pairing two earbuds together?

The left and right earbuds can't pair with each other, please put your earbuds into the charging case, and then take them out again. They will automatically pair with each other. If it doesn't work, please restore it.

5. No sound from left/right earbud.

Please put your earbuds into the charging case, and then take them out again. If still not solve this problem, please carry out restoring the factory settings (Page 7), and then put your earbuds into the charging case and then take them out again.

6. Can't turn on my earbuds

Please put them into the charging case and charge the case at the same time.

FCC Compliance Statement

FCC and IC Statement

This device complies with part 15 of the FCC rules and industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions;
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-3(B).

FCC/IC Radiation Exposure Statement

This equipment complies with FCC/IC RSS—102 radiation exposure limits set forth for an uncontrolled environment.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference—once in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures;
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any Changes or modifications not expressly approved by the party set forth for an uncontrolled environment. Responsible for compliance could void the user's authority to operate the equipment.

Important Safety Information

Handle this earbud with care. They contain sensitive electronic components and batteries, which can be damaged or cause injury if dropped / durned / punctured / crushed / disassembled, or exposed to excessive heat or liquid. Do not use damaged earbuds. Please follow the instructions;

Do not use this product near water.
Clean only with dry cloth.
Only use accessories specified by the manufacturer.
Refer servicing to qualified personnel.

CAUTION: Prevention of Hearing Loss

Permanent hearing loss may occur if earbuds are used at high volume for prolonged periods of time.

