

Alarms and timers

Set an alarm

Einen Alarm einstellen / Définir une alarme / Impostare una sveglia / Sæt en alarm / Een alarm instellen / Defina una alarma / Ställ in ett alarm / Nastavit budík / Ustawienie alarmu / Definir um alarme

1. Press Menu and turn and press Select dial to select 'System Settings'

Drücken Sie auf Menü und drehen und drücken Sie das Auswahlrad, um „Systemeinstellungen“ auszuwählen
Appuyer sur Menu et tourner et appuyer sur la molette de sélection pour sélectionner « Paramètres système »
Premere Menù, ruotare, quindi premere Seleziona per selezionare 'Impostazioni di sistema'

Tryk på Menu, drej og tryk på Vælg-drejeknappen for at vælge 'Systemindstillinger'

Druk op Menu, draai en druk op de knop Select om 'System Settings' te selecteren

 
 
 
 
 
 
 
 
 
 
Pulse «Menù» y gire y pulse el selector para seleccionar «Configuración del sistema»

Tryck på Meny och vrid och tryck på Välj-ratten för att välja "Systeminställningar"

Stisknëte tlačítko Menu a otočte tlačítkem Vybrat. Stisknutím vyberte možnost „Systémová nastavení"

Naciśnij przycisk Menu, obróć i naciśnij pokrętkę wyboru (Select), aby przejść do „Ustawień systemu”.

Pressione Menu e rode e pressione Seleccionar para seleccionar "Configurações do sistema"



2. Turn and press Select dial to select 'Alarm'

Drehen Sie und drücken Sie das Auswahlrad, um „Alarm“ auszuwählen.
Tourner et appuyer sur la molette de sélection pour sélectionner « Alarme »
Ruotare e premere il quadrante Seleziona per selezionare 'Sveglia'

Drej og tryk på Vælg-drejeknappen for at vælge 'Alarm'

Draai en druk op de knop Select om 'Alarm' te selecteren

Gire y pulse el selector para seleccionar «Alarma»

Vrid och tryck på Välj-ratten för att välja "Alarm"

Otočte tlačítkem Vybrat a stisknutím vyberte možnost „Budík"

Obróć i naciśnij pokrętkę wyboru (Select), aby wybrać „Alarm”.

Rode e pressione o botão Seleccionar para seleccionar "Alarme"

3. Turn and press Select dial to select 'Alarm 1' or 'Alarm 2'

Drehen und drücken Sie das Auswahlrad, um „Alarm 1“ oder „Alarm 2“ auszuwählen
Tourner et appuyer sur la molette de sélection pour sélectionner « Alarme 1 » ou « Alarme 2 »

Ruotare e premere il quadrante Seleziona per selezionare 'Sveglia 1' o 'Sveglia 2'

Drej og tryk på Vælg-drejeknappen for at vælge 'Alarm 1' eller 'Alarm 2'

Draai en druk op de knop Select om 'Alarm 1' of 'Alarm 2' te selecteren

Gire y pulse el selector para seleccionar «Alarma 1» o «Alarma 2»

Vrid och tryck på Välj-ratten för att välja "Alarm 1" eller "Alarm 2"

Otočte tlačítkem Vybrat a stisknutím vyberte možnost „Budík 1" nebo „Budík 2"

Obróć i naciśnij pokrętkę wyboru, aby wybrać „Alarm 1" lub „Alarm 2".

Rode e pressione o botão Seleccionar para seleccionar "Alarme 1" ou "Alarme 2"

4. Turn and press the Select dial to adjust an alarm setting

Drehen und drücken Sie das Auswahlrad, um eine Alarminstellung anzupassen
Tourner et appuyer sur la molette de sélection pour régler un paramètre d'alarme

Ruotare e premere la manopola Seleziona per regolare un'impostazione della sveglia

Drej og tryk på Vælg-drejeknappen for at justere en alarminstilling

Draai en druk op de knop Select om de alarminstelling te wijzigen

 
Gire y pulse el selector para ajustar una configuración de alarma

Vrid och tryck på Välj-ratten för att justera en alarminställning

Otočte tlačítkem Vybrat a stisknutím upravte nastavení budíku

Obróć i naciśnij pokrętkę wyboru, aby dostosować ustawienia budzenia.

Rode e pressione o botão Seleccionar para ajustar uma configuração de alarme





Cancel an alarm

Alarm abbrechen / Annuler une alarme / Annullare una sveglia / Annuler en alarm / Alarm uitschakelen / Cancele una alarma / Avbryt ett alarm / Zrušit budík / Anulowanie budzenia / Cancelar um alarme









Snooze an alarm

  Schlummerfunktion des Alarms / Répéter une alarme / Posticipare una sveglia / Udsæt en alarm / Alarm op slummerstand zetten / Posponga una alarma / Snooz a ett alarm / Odložit budík / Przełączenie budzika na Drzemkę / Suspender um alarme



Set sleep timer

      Sleep-Timer einstellen / Régler le minuteur de veille / Impostare il timer di spegnimento / Indstii dvale-timer / Slaaptimer instellen / Ajuste el temporizador de estado de reposo / Ställ in sömntimer / Nastavit automatické vypnutí / Ustawienie trybu sleep timer / Configurar temporizador para adormecer

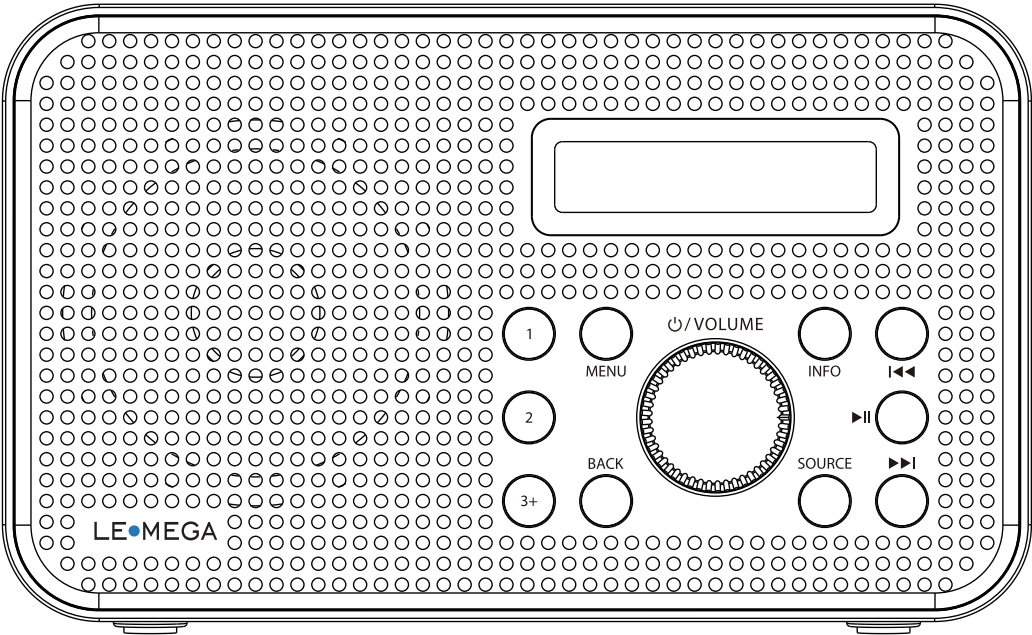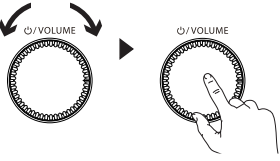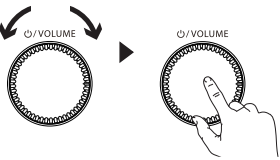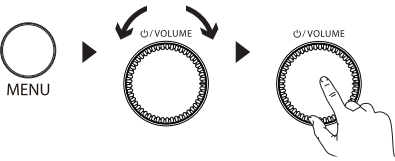

LE•MEGA
LIFE & ALOUD

PR2 GO PORTABLE DAB & FM RADIO

 
Quick Start Guide
info@lemegaaudio.com

Quick setup

Schnelle Einrichtung / Installation rapide / Installazione rapida / Hurtig opsætning / Snelle installatie / Configuración rápida / Snabb installation / Rychlé nastavení / Szybkie ustawienia / Configuração Rápida


1. Unclip (A) and extend aerial (B) and connect power to USB adapter (C)

Lösen (A) und verlängern Sie die Antenne (B).
Schließen Sie den USB-Adapter (C) an.
Détacher (A) et déployer l'antenne (B) et connecter l'alimentation à l'adaptateur USB (C)
Sganciare (A), estendere l'antenna (B) e collegare l'alimentazione all'adattatore USB (C)
Friger (A), og træk antennen (B) ud, og tilslut strømmen til USB-adapteren (C)
Ontkoppel (A) en breid de antenne uit (B) en sluit de voeding aan op de USB-adapter (C)
Desenganche (A) y extienda la antena (B) y conecte la alimentación al adaptador USB (C)
Koppla loss (A) och förläng antennen (B) och anslut strömmen till USB-adaptern (C)
Vycvkněte (A) a vytáhnete anténu (B) a připojte napájení k USB adaptéru (C)
Odepnij (A), rozlož antenę (B) i podłącz zasilanie do adaptera USB (C)
Solte (A) e estenda a antena (B) e conecte a energia ao adaptador USB (C)

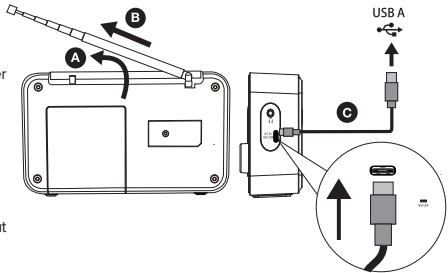


2. Push to switch on

 Zum Einschalten  drücken
Appuyer sur  pour allumer
Premere  per accendere
Tryk på  for at tænde
Druk  om in te schakelen
Pulse  para encender
Tryck på  för att slå på den
StisknĚte  pro zapnutí
Naciśnij , aby włączyć
Pressione , para ligar

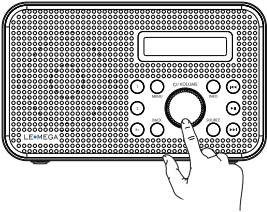


3. Wait for autotune to complete

 Warten Sie, bis der automatische Sendersuchlauf abgeschlossen ist
Attendre la fin du réglage automatique
Attendere il completamento della sintonia automatica
Vent på, at autotune er afsluttet
Wacht tot de autotuning is voltooid
Espere a que se complete la sintonización automática
Vänta tills autotune är slutfört
Počkajte na dokončení automatického ladění
Odczekaj na zakończenie automatycznego strojenia.
Aguarde a conclusão da sintonização automática

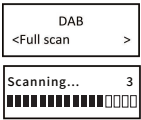

4. Press Source button to display Source menu

 
Drücken Sie die „Quelle“-Taste, um das Menü „Quelle“ anzuzeigen
Appuyer sur le bouton Source pour afficher le menu Source
Premere il pulsante Sorgente per visualizzare il menu Sorgente
Tryk på Kildeknappen for at få vist Kildemenuen
Druk op de knop Source om bronmenu weer te geven
Pulse el botón «Fuente» para mostrar el menú «Fuente»
Tryck på källknappen för att visa källmenyn
Stisknutim tlačítka Source zobrazíte nabídku zdroje
Naciśnij przycisk Źródło, aby wyświetlić menu Źródło.
Pressione o botão Source para exibir o menu Source

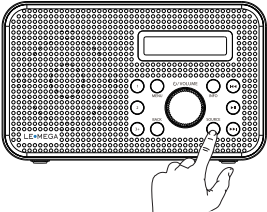

5. Tap Source button to switch between (A) DAB radio, (B) FM radio

Drücken Sie die „Quelle“-Taste, um zwischen (A) DAB-Radio, (B) FM-Radio
Toucher le bouton Source pour basculer entre (A) radio DAB, (B) radio FM

 Toccare il pulsante Sorgente per passare tra (A) radio DAB, (B) radio FM
Tryk på Kildeknappen for at skifte mellem (A) DAB-radio, (B) FM-radio
Raak de knop Source aan om te schakelen tussen (A) DAB-radio, (B) FM-radio
Toque el botón «Fuente» para cambiar entre (A) radio DAB, (B) radio FM
Tryck på källknappen för att växla mellan (A) DAB-radio, (B) FM-radio
Klepnutim na tlačítko Source můžete přepínat mezi (A) DAB rádiem, (B) FM rádiem
Naciskaj przycisk Źródło, aby przełączać się pomiędzy pozycjami: (A) radio cyfrowe DAB, (B) radio FM i (C)
Toque no botão Source para alternar entre (A) rádio DAB, (B) rádio FM

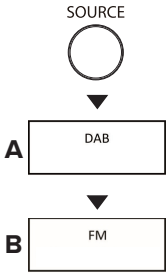

Controls

Bedienung / Contrôles / Comandi / Betjening / Bedieningselementen / Controles / Kontrollen / Ovládací prvky / Elementy sterujące / Controlos

Tap to turn PR2 GO on and long press for standby (off when powered by batteries)

Schalten Sie PR2 GO zwischen Ein und Standby (Aus im Batteriebetrieb)
Passer de marche en veille (non disponible lorsque alimenté par des piles)
Cambiare PR2 GO tra acceso e standby (spento quando alimentato dalle batterie)
Skift PR2 GO mellem tændt og standby (slukket når den er drevet af batterier)
Schakel PR2 GO in tussen inschakelen en stand-by (uitgeschakeld bij gebruik met batterijen)
Cambie su PR2 GO entre encendido y modo de espera (apagado cuando el dispositivo funciona con pilas)
Växla PR2 GO mellan på och standby (av då den drivs med batterier)
Přepínání rádia mezi režimem zapnuto a pohotovostním režimem (vypnuto v případě napájení na baterie)
Używaj przycisku do przełączania urządzenia pomiędzy trybem włączenia a trybem gotowości (trybem wyłączenia w przypadku zasilania baterijnego).
Alternar entre ligado e em espera (desligado quando alimentado por pilhas)

Switch between digital radio, FM radio

Schalten Sie zwischen Digitalradio, UKW-Radio
Basculer entre le radio numérique, la radio FM
Passare tra radio digitale, radio FM
Skift mellem digital radio, FM-radio
Schakelen tussen digitale radio, FM-radio
Cambie entre radio digital, radio FM
Växla mellan digital radio, FM-radio
Přepínání mezi digitálním rádiem, FM rádiem
Przełączanie pomiędzy radiem cyfrowym, radiem FM
Alternar entre rádio digital, rádio FM

Change settings (including language)

Einstellungen ändern (einschließlich Sprache)
Modifier les paramètres (y compris la langue)
Modificare impostazioni (inclusa la lingua)
Skift indstillinger (inklusive sprog)
Instellingen wijzigen (inclusief taal)
Cambie la configuración (incluido el idioma)
Ändra inställningar (inklusive språk)
Změna nastavení (včetně jazyka)
Zmiana ustawień (w tym języka)
Alterar configurações (incluindo idioma)

Press to return to the previous screen

Drücken, um zum vorherigen Bildschirm zurückzukehren
Appuyer pour revenir à l'écran précédent
Premere per tornare alla schermata precedente
Tryk for at vende tilbage til det forrige skærbillede
Indrukken om terug te keren naar het vorige scherm
Pulse este icono para retroceder e ir a la pantalla anterior
Tryck för att återgå till föregående skärm
StisknĚte pro návrat na předchozí obrazovku
Naciśnij, aby powrócić do poprzedniego ekranu
Premir para voltar ao ecrã anterior

Press to change radio stations

Drücken, um Radiosender zu wechseln
Appuyer pour changer de station de radio
Premere per cambiare stazione radio
Tryk for at skifte radiostationer
Indrukken om van radiostation te veranderen
Pulse para cambiar las emisoras de radio
Tryck för att byta radiostationer
StisknĚte pro změnu rozhlasové stanice
Naciskaj, aby zmieniać stacje radiowe
Premir para mudar de estação de rádio

Set and recall presets

Voreinstellungen festlegen und abrufen
Définir et se souvenir des préséglages
Impostare e richiamare le impostazioni predefinite
Indstil og husk forindstillinger
Instellen en oproepen van presets
Configure y recuperar preajustes
Ställ in och återkalla förinställningar
Nastavení a vyvolání předvoleb
Ustawienie i przywrócenie ustawień wstępnych
Definir e recuperar predefinições

Turn and press to select menu options. If listening to content, turn to adjust the volume & tap to mute the volume.

Drehen und drücken, um Menüoptionen auszuwählen. Drehen, um die Lautstärke anzupassen, wenn Sie etwas hören.
Tourner et appuyer pour sélectionner les options du menu. Si vous écoutez du contenu, tournez pour régler le volume.
Ruotare e premere per selezionare le opzioni del menù. Se si ascolta il contenuto, ruotare per regolare il volume.
Drej og tryk for at vælge menuindstillinger. Hvis du lytter til indhold, skal du dreje for at justere lydstyrken.
Draaien en indrukken om de menu-opties te selecteren. Draaien om tijdens het luisteren volume te regelen.
Gire y pulse para seleccionar las opciones del menú Si está escuchando contenido, gire para ajustar el volumen
Vrid och tryck för att välja menyalternativ. Om du lyssnar på innehåll, vrid för att justera volymen.
Otočte a stisknĚte pro výběr možností nabídky. Při poslechu můžete otočením upravit hlasitost.
Obróć i naciśnij, aby wybrać opcje menu. Obracaj, aby ustawiać głośność podczas słuchania.
Rodar e premir para selecionar as opções do menu. Se estiver a ouvir conteúdo, rodar para ajustar o volume.



Rear panel connections

Anschlüsse an der Geräterückseite / Raccordements du panneau arrière / Collegamenti sul pannello posteriore / Bagpanelforbindelser / Aansluitingen achterpaneel / Conexiones del panel posterior / Bakre panelanslutningar / Připojení na zadním panelu / Złącza na panelu tylnym / Conexões do painel traseiro

Type C USB Power input

Type C USB-Stromeingang
Entrée d'alimentation Type C USB
Ingresso di alimentazione Type C USB
Type C USB Power input
Type C USB-voedingsingang
Entrada de alimentación Type C-USB
Type C USB strömångång
Vstup Type C USB
Wejście zasilania Type C USB
Entrada de alimentação Type C USB



Stereo headphone output (3.5mm)

Stereo-Kopfhörerausgang (3,5 mm)
Sortie casque stéréo (3,5 mm)
Uscita cuffie stereo (3,5 mm)
Stereohovedtelefonudgang (3,5 mm)
Uitgang voor stereokoptelefoon (3,5 mm)
Salida de auriculares estéreo (3,5 mm)
Utgång för stereohörlurar (3,5 mm)
Vystup pro stereofonní sluchátka (3,5 mm)
Wyjście słuchawkowe stereo (3,5 mm)
Saída de auscultadores estéreo (3,5 mm)



 
Choose source

Quelle auswählen / Choisir la source / Scegliere la Sorgente / Vælg kilde / Kies bron / Elegir fuente / Välj källa / Wybierz źródło / Escolher a Fonte

Digital radio

Change digital radio station


Digitalen Radiosender wechseln
Changer de station de radio numérique
Cambiare la stazione radio digitale
Skift digital radiostation
Wijzig digitaal radiostation
Cambie de emisora de radio digital
Byt till digital radiostation
Změna digitální rozhlasové stanice
Zmiana stacji radi cyfrowego
Alterar estação de rádio digital

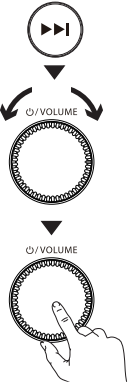

FM radio



Seek to next station

 Nächste Station suchen
Rechercher la prochaine station
Cercare la prossima stazione
Søg efter næste station
Zoek naar het volgende station
Búsqueda de la siguiente emisora
Sök efter nästa station
Vyhledat další stanici
Wyszukiwanie następnej stacji
Procurar a próxima estação



Manual tune

  Manueller Suchlauf
Syntonisation manuelle
Sintonizzazione manuale
Manuel kanalinstilling
Handmatig afstemmen
Manual
Manuell inställning
Ruční ladění
Strojenie ręczne
Sintonização manual

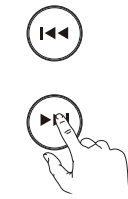


Preset 1-2

Voreinstellung 1–2 / Préréglage 1-2 / Impostazioni predefinite 1-2 / Forindindstillet 1-2 / Voorinstelling 1-2 / Voorinstelling 1-2 / Förinställning 1-2 / Predvolba 1-2 / Ustawienia wstępne 1-2 / Predefinição 1-2


Store

 Speichern
Enregistrer
Memorizza
Gemme
Opslaan
Guardar
Spara
Uložit
Zapisz
Save

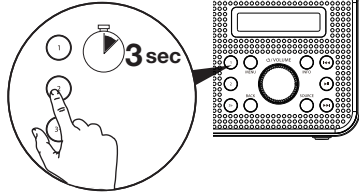

Select

 Auswählen
Sélectionner
Selezionare
Vælg
Selecteer
Selección
Välj
Vybrat
Wybór
Seleccionar

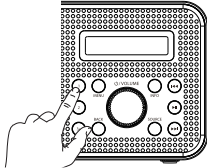


Preset 3-20

Voreinstellung 3–20 / Préréglage 3-20 / Impostazioni predefinite 3-20 / Forindindstillet 3-20 / Voorinstelling 3-20 / Voorinstelling 3-20 / Förinställning 3-20 / Predvolba 3-20 / Ustawienia wstępne 3-20 / Predefinição 3-20




Store

 Speichern
Enregistrer
Memorizza
Gemme
Opslaan
Guardar
Spara
Uložit
Zapisz
Save

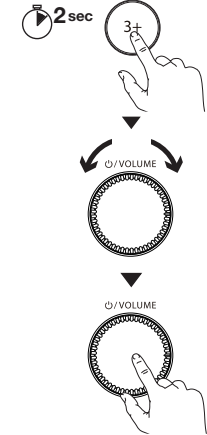

Select

   
Auswählen
Sélectionner
Selezionare
Vælg
Selecteer
Selección
Välj
Vybrat
Wybór
Seleccionar

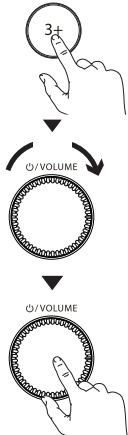

Digital radio settings

Autotune

 Autom. Sendersuche / Autotune / Sintonia automatica / Autotune / Autotune / Sintonización automática / Autotune / Automatické ladění / Strojenie automatyczne / Sintonização automática

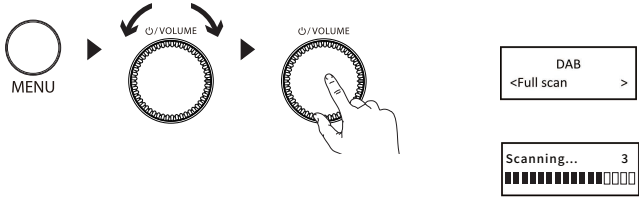

LE•MEGA

LIFE & ALOUD

PR2 GO PORTABLE DAB & FM RADIO



Owner's manual

1. Introduction

Safety Instructions

 
- PLEASE READ THIS OWNER'S MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND STORE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE
- Do not use this product near water or moisture.
- Clean only with a dry cloth.
- Unplug this product from the wall outlet before cleaning.
- Place the unit on a solid surface.
- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs and the point where they exit from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself.
- Opening or removing covers may expose you to dangerous voltages or other hazards.
- Please contact the manufacturer to be referred to an authorized service center near you.

- To prevent risk of fire or electric shock, avoid over loading wall outlets, extension cords, or integral convenience receptacles.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.



2. Controls, connectors

PRODUCT OVERVIEW

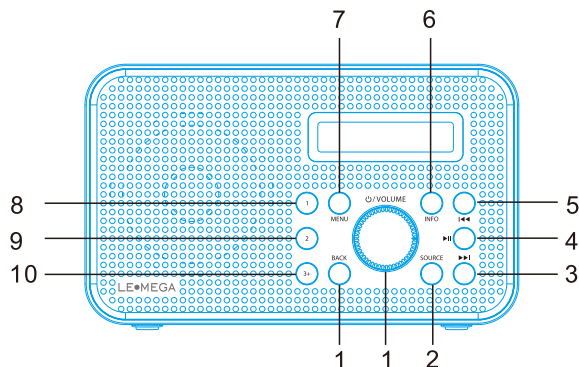

1. Power/SELECT Knob/Snooze/Mute/Vol+/Vol-

2. Source

5. TUNE-/|◀◀

8. Preset 1

3. TUNE+/▶▶|

6. INFO


9. Preset 2

4. SCAN/▶||

7. Menu

10. Preset 3+

 SIDE VIEW

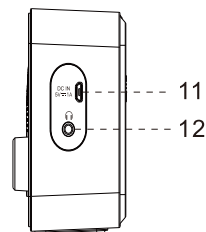

11. 5V/1A DC jack

12. Headphone Jack

GETTING STARTED

ACCESSORIES INCLUDED

Carefully remove the unit and all accessories from the package.

Please verify that you have all the following accessories before recycling the gift box.

- Owner's Manual
- Power cable

UNDERSTANDING THE CONTROL FUNCTIONS

QUICK SETUP

Fully extend the Telescopic antenna to ensure good reception in both DAB and FM Radio modes. It may be necessary to alter the position of the DAB Digital Radio and/or the Telescopic antenna to achieve the best signal.

1. Connect the power cable to the input in the side of the PR2 GO and then plug the cable into an outlet to power on. Or powered by built-in battery.
2. Fully extend the rear telescoping antenna.
3. Press the Power button on the front to turn the PR2 GO on.
4. When powered on for the first time in DAB mode, the PR2 GO will initiate an auto scan. When complete, The display will indicate how many stations were received. Be sure the rear antenna is fully extended during the auto scan.
5. Press the front panel Source button to select the desired source.
6. Adjust the volume to the desired level using the rotary knob on the front.
7. In DAB mode, the **◀◀ / ▶▶** button allows you to navigate between different stations.

GUIDE TO FEATURES

1. POWER KNOB [Power ON/OFF/Standby/Snooze/Mute/VOL+/VOL-]:

1.1 Connect mains power and push the **Power** knob to power on the **PR2 GO**. When powered on for the first time in DAB mode, It will automatically scan for the available radio stations. Fig.1.

Push and hold **Power** knob to enter **Standby** mode. Fig.2

1.2 When your PR2 GO is powered by build-in battery, short push Power knob to power on, Press and hold **POWER** knob to Standby, Press and hold again to power off.

1.3 Vol+/Vol- : Turn the Volume dial to increase or decrease the volume. The volume knob may also be used to navigate when in the station list.

1.4 Mute: Press the button to mute the music when playing.

1.5 Snooze: Press the button to snooze a set time when alarm sounding.



Fig.1



Fig.2

2. SOURCE: Briefly press to cycle through the sources: DAB, FM.

2.1 In FM mode, PR2 GO will tune to the start of the available FM range (87.50MHz) or the last FM station listed to fig.3.

2.2 To manually change the FM frequency, make sure that you have not selected any other sub-menus. Press the **◀◀ / ▶▶** button to change the frequency by 0.05MHz.

 


Fig.3

3. ▶▶ /NEXT: Press to select the NEXT track under FM/DAB mode, Press and hold the **▶▶** button 2 seconds to auto-scan the stations under the DAB/FM mode. Or press **▶▶** button to cycle through the menu list for options.

4. SCAN: In DAB/FM mode, press SCAN button, it will automatically scan for the available radio stations and stored to presets.

5. ◀◀ /Previous: Press to select the previous track under FM/DAB mode, Press and hold the **◀◀** button 2 seconds to auto-scan the stations under the DAB/FM mode. Or press **◀◀** button to cycle through the menu list for options.

6. Info: View more information about the station or track playing. When in DAB mode, briefly press repeatedly to view DLS (Dynamic Label Segment), signal strength, PTY (Programme Type), ensemble, frequency, signal quality, bit rate codec, time, date. In FM mode, view radio text, PTY (Programme Type), PS (Programme Service), time, date etc.

7. Menu: press the MENU to show the MENU for the current mode. Press again to show now playing screen.

8. BACK: press the BACK to return to the previous screen.

9. PRESET 1

PR2 GO has 30 preset stores for DAB and FM stations. Presets 1-2 have dedicated buttons, presets 3-30 are within the on-screen menu.

To store preset 1 or 2, Press and hold the preset 1 or 2 buttons until the display shows the text 'preset # stored' . fig19.

10. PRESET 2: Same operation as PRESET 1.

11. PRESET 3+: To store preset 3-30, Press and hold preset button 3+. The display will shows a list of the Preset stores numbered 1 to 30 these are displayed as either 'Empty' or with the currently stored station name. Use the **◀◀ / ▶▶** button to choose a preset memory then press 'Select' knob to store the currently-playing station. After confirming

the preset station is stored the display reverts to the Now playing screen.

Recall a station from the Preset list

To recall preset 1 or 2, Press preset button 1 or 2. This will play the radio station stored in preset 1 or 2.

To recall a preset 3-30. Press preset button 3+. The display will show a list of the presets stored number 1-30.

Use the ◀◀ / ▶▶ button to choose a preset and press 'Select' to play that station.

 


Fig.17



Fig.18

 


Fig.19

DAB mode

In DAB mode, press MENU button to enter the menu list to fig.4. Press the ◀◀ / ▶▶ button to select option through the list of menu. Then, stop at your preferred option and Push the SELECT Knob to confirm. The menu options are: full scan, manual tune, DRC, prune, system.

1. Full scan – under menu list, press the ◀◀ / ▶▶ button to select “Full scan” through the list of menu, Push SELECT knob to confirm and full scan starts automatically to fig.4. Once a scan is completed, the radio returns to play the previously-selected station or first station on the station list.

Note: if no radio station found, it shows “No DAB station”. For a better reception, extend the antenna or do the full scan again in another place.

2. Manual tune – as well as the normal method of scanning, you can also manually tune to a particular channel/frequency. This can be useful for adjusting your antenna to achieve the best possible reception and scanning a particular channel to update the station list. Under menu list, press the ◀◀ / ▶▶ button to select “Manual tune” through the list of menu, Push SELECT knob to confirm. Then press the ◀◀ / ▶▶ and then Push SELECT knob to confirm the setting to fig.5. The display shows a live indication of the received signal strength on the selected frequency. Adjustments to your antenna will be manifested in the received signal strength displayed.

3. DRC (Dynamic range compression) – this function reduces the difference between the loudest and quietest audio being broadcast. Effectively, this makes quiet sounds comparatively louder and loud sounds comparatively quieter. Options: off (default)/ low/ high under menu list, press the ◀◀ / ▶▶ button to select “DRC” through the list of menu, Push SELECT knob to confirm. Then press the ◀◀ / ▶▶ to select a particular setting and Push SELECT knob to confirm the setting to fig.6.

Note: DRC only works if it is enabled by the broadcaster for a specific station.

4. Prune – this removes all invalid stations indicated in the station list with a '?' in front of the station name. Under menu list, press the **⏮ / ⏭** button to select "Prune" through the list of menu, Push SELECT button to confirm to fig.7. Then press the **⏮ / ⏭** button to select <Yes>, and Push SELECT button to confirm.

5. System – the System menu options are: sleep, Alarm, time, backlight, language, factory reset, SW version to fig.8.

5.1 Sleep – when listening to the radio you can set a period of time before the radio enters 'standby' mode.

Note: the radio must be active and not in 'standby' mode already.

Under the system menu, press the **⏮ / ⏭** button to select "Sleep" through the list of menu, press SELECT knob to confirm to fig.9.

 


Fig.6

 


Fig.7

 


Fig.8

 


Fig.9

Then press the **⏮ / ⏭** button to select < sleep off / 15mins / 30mins / 45mins / 60mins / 90mins >, and Push SELECT knob to confirm.

5.2 Alarm: Press Menu>System setting> Alarm. There are 2 Alarms, press the **⏮ / ⏭** button to select .

Alarm 1 set up: Press SELECT knob and press **⏮ / ⏭** button to set on time/Duration/Source/ Frequency / Volume then push SELECT knob to confirm the settings.

Parameters

Alarm – Off | On

Source – DAB/FM/Buzzer

Frequency - Daily | Once | Weekends | Weekdays

Press the Select Knob to save Alarm settings.

5.3 Time – if there is any DAB+ radio signal, the machine will automatically update the time, there is no signal, can also be set manually to fig.10.

*Set Time/Date: set hour / set minute / set month / set date > set year > saved

*Auto update options: update from Any / update from DAB / update from FM / no update

*Set 12/24 hour: 12hour/24 hours

*Set date format: DD-MM-YYYY/MM-DD-YYYY
Cycle through Time menu by Push the SELECT button, select a particular option, and Push the SELECT button changes.

 


Fig.10

 


Fig.11

5.4 Backlight – The PR2 GO has a backlight with three brightness settings, and adjustable timeout (this is the time delay, in seconds, after which the display switches to the Dim level).

There are three settings:

- **Timeout – On** | 10 | 20 | 30 | 45 | 60 | 90 | 120 | 180 sec
- **On level** – High | Medium | Low
- **Dim level** – High | Medium | Low

5.5. Language – the language used for display messages can be selected from below options: English | Deutsch | Italiano | Francais | Nederlands | Espanol | Norsk | Dansk |

Suomi | Polski under the system menu, press the ◀◀ / ▶▶ button to select “Language” through the list of menu, Push the SELECT knob to confirm to fig.12. Cycle through

Language menu by press the ◀◀ / ▶▶ button, select and stop at a particular language, Push the SELECT knob to confirm.

5.6. Factory Reset – this function clears all user defined settings, replacing them with the original default values, so time/date, preferences/settings, DAB station list and preset stations are all lost. Under the system menu, press the ◀◀ / ▶▶ button to select “Factory Reset” through the list of menu, Push the SELECT knob to confirm to fig.13.

Then, use the ◀◀ / ▶▶ button to choose <Yes> and Push the SELECT knob to start the factory reset.



Fig.12

Fig.13

5.7. Software version – this is used to display the current software version.

Under the system menu, press the button to select “Software version” through the list of menu fig.14, Push the SELECT knob to confirm. Then, the existing SW version will be showed.

 


Fig.14

Fig.15

FM mode

1. If the PR2 GO is in FM mode, press and hold MENU button to enter the menu list to fig.15. Press the ◀◀ / ▶▶ button to select option through the list of menu. Then, stop at your preferred option and Push the SELECT knob to confirm. The menu options are: scan setting, audio setting, and system.

2. Scan setting - by default, FM scans stop at any available station (All stations). This may result in poor quality audio from weak stations. Options: Strong stations only / All stations under menu list, press the ◀◀ / ▶▶ button to select a particular option in “Scan setting”, then Push the SELECT knob to confirm the change to new setting to fig.15.

3. Audio setting - by default, all stereo stations are reproduced in stereo. For weak stations, this may result in poor quality audio. The audio quality can be improved using mono. Options: Stereo allowed | Forced mono Under menu list, press the ◀◀ / ▶▶ button to select a particular option in “Audio setting” to fig.16, then Push the SELECT knob to confirm the change to new setting. It will automatically change to new setting after 3 seconds.

4. System - Please refer to above description point 6 “System”.

Technical Specification

Model: PR2 GO

Type: Portable Digital Radio

Power output: 1CH X1.2W

Power Supply: DC 5V 100-240V ~ 50/60Hz or 2000mA built-in rechargeable Li-ion batteries.

Dimension (mm): 160W x 95H x 5.2D

Weight: 0.36KG

Specifications are subject to change without notice.

LE•MEGA
LIFE & ALOUD

PR2 GO PORTABLE DAB & FM RADIO

If you have any questions or suggestions, please share with us.

info@lemegaaudio.com
www.lemegaaudio.com