

Small drift high speed car instructions

NO: 8923B

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE
PRODUCT AND KEEP IT IN A SAFE PLACE.

Information to User:

- (1) Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- (2) Important: Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Remote control car and remote control battery installation and charging

Connect the battery to the charging cable, then plug in the USB charging cable on the USB port of the computer or USB charger, then switch on Power. A red light indicates charging. When the red light doesn't go on it means full.

After charging is complete, turn the battery
Put in battery compartment locking screws

Remote control battery installation method
(1) Open the battery cover of the remote control.
(2) Load 1.5V AA "according to the correct polarity" batteries, cover the battery cover and lock the screw.

4 high-speed tires are included in the package and can be self-propelled replace the drive tire.

Operation method

1. Turn the power switch of the remote control car to the "ON" position
Put the remote control car on a flat surface, turn on the remote control switch. When the remote control light stops blinking, you can flip the joystick. Perform operations.
(Note: The remote control light can not be flipped when flashing)

Product use basic operation diagram



1. Pull the remote control lever backwards to remotely control the car. Move forward, move forward to move the remote control car backwards. When the control lever when pulled back halfway, the remote control car will slowly move forward. When the joystick is fully pulled backwards, the remote control car will quickly move forward.
2. Rotate the "right turn/right turn steering wheel" clockwise. Turn the car right, counterclockwise "turn left/turn left" turn left with the steering wheel.
3. High and low speed buttons: Factory default low speed gear. Press the switch button to switch to high gear.
4. Light switch: Press once to turn on the body lights, then press again to turn off the body lights.



Warning: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Product Cleaning Information

Regular cleaning of toys maintains their appearance and hygienic condition. Before cleaning, turn off the power and unplug the toy for safety reasons.
Gently wipe the surface of the toy with a soft, damp cloth. Avoid using harsh materials or strong detergents, as these may scratch or damage the surface.
For difficult stains, use mild soap and water or a toy cleaner. Dampen a cloth with the detergent and gently rub the stain, then wipe dry with a clean, damp cloth.
Be careful not to allow water or detergent to get into the toy's electronic components or battery compartment to avoid damage.
If the toy has removable parts, such as a cover or plastic accessories, these can be removed and cleaned separately. Follow the washing instructions for the parts and ensure they are completely dry before reinstalling.

Product maintenance information

Regularly inspect the toy for damaged or loose parts. If any problems are found, repair or replace the parts promptly to ensure safe use of the toy.
Pay attention to the battery condition of the toy. If the toy is battery-powered, install and replace the batteries according to the instructions. Avoid using expired or damaged batteries to prevent leakage or explosion.
When the toy is not in use, store it in a dry, well-ventilated area away from direct sunlight and moisture. Store the toy in a box or bag to protect it from dust and damage.
Avoid subjecting the toy to severe impact or dropping to prevent damage to the internal electronic components or mechanical structure.
If the toy malfunctions or malfunctions, stop using it immediately and contact our customer service or a professional repair technician for inspection.

Battery use instruction and Cautions:

1. Non-rechargeable batteries are not to be recharged.
2. The rechargeable batteries should be charged under adult supervision.
3. Different types of batteries or new and used batteries are not to be mixed.
4. Batteries are to be inserted with the correct polarity (+ and -).
5. Exhausted batteries are to be removed from the toy.
6. The supply terminals are not to be short-circuited.
7. Do not mix old and new batteries.
8. Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
9. The charger used with the toy is to be regularly examined for damage.

to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toys must not be used with this charger until the damage has been repaired.
10. Warning: For the purposes of recharging the battery, only use the detachable supply unit provided with this toy.
11. The toy shall only be used with a transformer for toys or a power supply for toys.
12. The transformer or power supply is not a toy.
13. This toy is only to be connected to equipment bearing either of the following symbols.



The manual must be retained since it contains important information.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.