 


KARAOKE SPEAKER with MICROPHONES

User manual

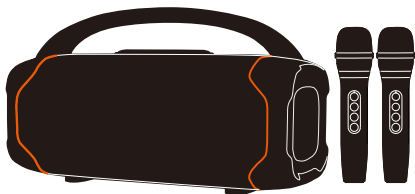


v8.01



Button Functions


- | | |
|-------------------------|-----------------------------|
| 1. Pause | 2. Volume- / Previous track |
| 3. Volume+ / Next track | 4. Mode / Bluetooth |
| 5. Vocal cut | 6. LED |

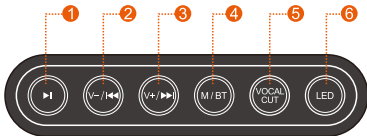 

Note: A short press activates the function on the left of the slash, and a long press activates the function on the right.


Rear Panel

- | | |
|-----------------------|---------------------------|
| 1. Power switch | 2. Charging port |
| 3. Charging indicator | 4. AUX-IN port |
| 5. USB drive port | 6. MicroSD (TF) card slot |

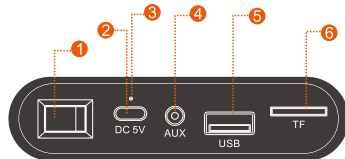 

Bluetooth name: YSD Speaker

 Microphone Functions

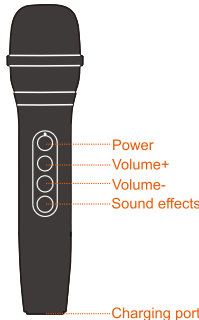

Charging

1. When the battery is low. The speaker will shut down automatically.
2. Connect a DC 5V or DC 9V charger to charge the speaker. Connect a DC 5V charger to charge the microphone. The charging indicator will turn on when charging and turn off when fully charged.
3. It will take about 5-7 hours to fully charge the speaker and 3 hours to fully charge the microphone. After a full charge, the speaker can work for 4-8 hours, and the microphone can work for 12 hours.

Button Function Details

Pause: **Short press** to pause or play music.

Volume- / Previous track: **Short press** to reduce the volume. **Press and hold** to play the previous track.

Volume+ / Next track: **Short press** to increase the volume. **Press and hold** to play the next track.

Mode/ Bluetooth: **Short press** to switch between Bluetooth mode, USB drive mode, MicroSD(TF) card mode and AUX mode. **Press and hold** to disconnect the current Bluetooth connection, **press and hold again** to reconnect.

Vocal cut: **Short press** to remove the vocals from a song and keep the background music.

LED: **Short press** to change the status of the LED light or turn the LED light off.

Power (Microphone): **Press and hold** to turn on/off the microphone.

Sound effects (Microphone): **Short press** to switch between multiple reverb modes and special sound effects.

Volume+ (Microphone): **Short press** to increase the volume of microphone.

Volume- (Microphone): **Short press** to reduce the volume of microphone.

Play by Bluetooth

1. Turn on the speaker: Turn on the switch to power on the speaker.

2. Bluetooth connection: Turn on the Bluetooth on your smart phone. In the Bluetooth setting, find the device name "YSD Speaker" and pair. The speaker will make a tone if the pairing is complete.

3. Turn on the microphone: Press and hold the power button on the microphone to turn it on. The microphone will automatically connect to the speaker.

4. Adjust sound effects: Adjust the volume of the speaker and microphones and choose appropriate sound effects.

5. Play music: Open a music app on your smart phone and play any music you like. The volume of the music can also be adjusted on your phone. Pressing the Vocal Cut button can remove vocals from the song.

Note: Once the speaker and phone have connected via Bluetooth, they will automatically connect the next time they are used.

The Bluetooth connection can be disconnected in the Bluetooth settings on your phone, or by long-pressing the Bluetooth button on the speaker.

Tech Spec

Frequency response: 20Hz-20kHz

Battery: Built-in rechargeable Li-ion battery

Speaker charging voltage: DC 5V, DC 9V

Microphone charging voltage: DC 5V

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.