

Model 2

[Tecdesk Model 2/TD/MODEL2BKUS](#)



User Manual

Contents

1	Introduction
2	Precautions
3	Important Information
4	Keyboard Introduction
5	Installation
5.1	SIM Card and SD Card Installation
6	Getting Started
6.1	Turn On the Phone
6.2	Make a Call
6.3	Receive a Call
6.4	Rejecting an Incoming Call
7	Menu Functions
7.1	Contacts
7.2	Messages
7.3	Call Logs
7.4	Call Settings
7.5	Calendar
7.6	FM Radio
7.7	Settings
7.7.1	Phone Settings
7.7.2	Display
7.7.3	Security
7.7.4	Profiles
7.7.5	Calculator
7.7.6	Bluetooth
7.7.7	Alarm
7.7.8	Do Not Disturb Mode
7.7.9	Check for Updates
7.7.10	STK
7.7.11	About Phone
7.8	Recorder
7.9	Audio Player
	Appendix A: Accessories List
	Appendix B: Technical Specifications



1. Introduction

Thank you for purchasing the Tecdesk Model 2 SIM Desk Phone. This manual explains how to install, operate and maintain the device safely and correctly.

2. Precautions

Battery Precautions

- Charge the battery for 4 to 6 hours to ensure it is fully charged.
- Do not expose the battery to high temperatures, fire or heated areas, as this may cause an explosion.
- Stop using the battery immediately if it leaks, smokes or gives off an unusual smell. Keep it away from heat and open flames.
- Dispose of used batteries in accordance with local regulations.
- Remove the battery if the device is not used for a long period. Recharge it every three months during storage. Do not store lithium-ion batteries for more than one year.

Safety Warnings and Precautions

- Switch off the device where wireless transmitters are prohibited, including petrol stations, oil depots, chemical plants and areas containing flammable or explosive materials.
- Clean the phone with a slightly damp anti-static cloth. Do not use dry cloths, chemical cleaners or products that may cause static.
- Keep the phone away from strong sunlight and high temperatures.
- Do not connect the phone to incompatible external devices.
- Only use the original power adapter and battery supplied with the device. Using other equipment may create safety risks.
- This device is designed for long-term use with the power adapter connected. The battery is intended for emergency backup only.
- Do not disassemble the device unless you are a qualified technician.

3. Important Information

Please read this user guide carefully before using the SIM Desk Phone to ensure correct operation and avoid damage. Check the contents of the box against the packing list and report any missing items to the retailer immediately.

4. Keyboard Introduction

Status Icons



Icon	Description
	Network signal strength
	Unread message
	Battery level
	Alarm enabled
	Unconditional call forwarding enabled

Key Functions

No.	Key	Icon	Function
1	Left Soft Key		Press to open the Main Menu from the idle screen.
2	Right Soft Key		Press to return to the previous menu or use it as a shortcut to open Contacts from the idle screen.
3	Up Key		Use to navigate upwards through the menu.
4	Down Key		Use to navigate downwards through the menu.
5	Left Key		Use to navigate left through the menu.
6	Right Key		Use to navigate right through the menu.
7	Dial Key		To make a call, enter the phone number and press the Dial key.
8	Power / End Key		Press and hold for 3 seconds to power the phone on or off. Press during a call to end the call and return to the idle screen.
9	0-9 Numeric Keys		Enter numbers and characters.
10	* Key		From the idle screen, press this key to enter lock screen.
11	# Key		From the message screen, press this key to switch the input method.
12	Speaker Key		Press to use the loudspeaker for hands-free calls.
13	M1-M4 Speed Dial Keys		Press a Speed Dial key to call the preset phone number.

删除[Xenia 王雪喵]: From the idle screen, press this key to enter *. While editing a message, press it to access special symbols.

删除[Xenia 王雪喵]: From the idle screen, press this key to enter #. While editing a message, press it to switch the input method.

5. Installation

5.1 SIM Card and SD Card Installation

On the underside of the phone, open the battery cover and remove the battery to access the SIM and SD card slots. Insert the SIM card and SD card into the correct slots, then replace the battery and battery cover.



6. Getting Started

6.1 Turn ON the Phone

Install the SIM card and battery, then press and hold the End key for 3 seconds to turn the phone on.

6.2 Make a Call

- Enter the phone number. The number will appear on the screen. If the number is incorrect, press the Right key to delete it.
- After entering the phone number, press the Dial key to make the call.
- During a call, press the Up or Down key to adjust the volume.

6.3 Receive a Call

- When there is an incoming call, the phone will ring and display the caller ID. Pick up the handset or press the Hands-Free key to answer.
- During a call, press the Up or Down key to adjust the volume.

6.4 Reject an Incoming Call

When a call comes in, press the End key to reject it.

7. Menu Functions

- All menus can be accessed from the idle screen.
- Press the Left Soft Key to open the sub-menu list and press the Right Soft Key to return to the previous menu.

7.1 Contacts

- Contacts can store phone numbers, allowing users to view, add, search, delete and copy contacts.
- Speed dial numbers can be assigned to keys 2 to 9. Once set, hold the relevant number key from the idle screen to make a call.
- You can view your own number and check the phone and SIM card storage status in the Settings menu.

7.2 Messages

In the Messages menu, you can write and send messages, view the Inbox, Drafts, Outbox and Sent folder, set SMS templates, [view](#), message capacity, configure the voicemail server and manage SMS settings.

删除[Xenia 王雪喵]: adjust

7.3 Call Logs

In Call Logs, press the Up or Down key to view missed, received and dialled calls. You can also delete records using the Clear Call Log menu.



7.4 Call Settings

In Call Settings, you can configure call divert, call waiting, network selection, network type, IP prefix, post-dial delay, VoLTE and automatic voice call recording.

7.5 Calendar

The calendar supports a simple date view and allows you to jump to a specific date.

7.6 FM Radio

The FM radio supports automatic channel search, radio list view. Press the Up or Down key to adjust the volume.

删除[Xenia 王雪喙]: and recording when an SD card is inserted

7.7 Settings

7.7.1 Phone Settings

- Set the time and date, language, shortcuts, M1 to M4 speed dial keys, auto power on/off and restore factory settings.
- In Shortcut Settings, you can assign functions to the Right, Left, Up, Down and Right Soft keys, such as Call Logs, Messages or Write SMS.
- In Speed Dial Settings, you can assign phone numbers to M1 to M4. From the idle screen, press the relevant key to call directly.
- To restore factory settings, enter the default password: 1234.

7.7.2 Display

Use this menu to set the screen brightness and contrast.

7.7.3 Security

- Use this menu to set the PIN, auto keypad lock, power-on password, blacklist and whitelist.
- When the power-on password is enabled, a password is required each time the phone is switched on. The default password is 1234.
- The blacklist displays all blocked numbers. You can block incoming calls, SMS messages, or both calls and messages from selected contacts.
- The whitelist displays all allowed numbers. You can allow audio calls, messages, or both calls and messages for selected contacts.

7.7.4 Profiles

- Use this menu to set ring settings, volume levels and other alert tones.
- In Adjust Volume, you can set the caller ringtone, message ringtone, call volume, alarm and calendar ringtone, and power ringtone.
- In Other Alert Tones, you can set the key tone, low battery alert and power tone.

7.7.5 Calculator

In the Calculator menu, use the Up key for addition (+), Down key for subtraction (-), Left key for multiplication (*) and Right key for division (/).



7.7.6 Bluetooth

- Use the Bluetooth menu to turn Bluetooth on or off. Once enabled, Bluetooth functions can be used.
- You can set Bluetooth visibility. When visibility is enabled, other Bluetooth devices can search for and find your phone.
- The paired devices list shows all paired devices. You can add new devices or delete existing paired devices.
- In Bluetooth File Storage, you can choose whether files are saved to the SD card or phone storage.
- The default device's name is TDModel2. You can rename the device, and the new name will be shown on other devices.

7.7.7 Alarm

In the Alarm menu, you can view and set alarms.

7.7.8 Do Not Disturb Mode

In Do Not Disturb Mode, you can set a period during which incoming calls and SMS messages are muted.

7.7.9 Check for Updates

Use this menu to check the status of system software updates.

7.7.10 STK

In the STK (SIM Toolkit) menu, you can access services provided by your network operator.

7.7.11 About Phone

In the About Phone menu, you can view the manufacturer and device model.

7.8 Recorder

To use the recording function, insert a memory card first. All recordings will be saved to the memory card. You can play the latest recording, view and play the recording list, and set the recording format.

7.9 Audio Player

The Audio Player plays files stored on the memory card.

Appendix A: Accessories List

Item	Quantity
Fixed Wireless Phone	1
Handset	1
Handset Cable	1
User Manual	1
Power Adapter	1
Battery	1
Antenna	1

Appendix B: Technical Specifications

Specification	Value
Operating Temperature	-10°C to +40°C
Atmospheric Pressure	86 to 106 kPa
Relative Humidity	10% to 95%
Environmental Noise	≤ 60 dB(A)
Transmit Power	2 W
Receiver Sensitivity	-102 dBm

The information in this manual may be updated without notice. Always follow local safety and disposal regulations when using or disposing of the device and battery.

For more information, please visit www.tecdesk.com.



FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.