

REMINGTON®
EST. NEW YORK 1937

ADJUSTABLE WAVER



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au
www.remington.co.nz

5 YEAR WARRANTY

C119A1AU



IMPORTANT SAFEGUARDS

Warning: When the styling tool is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the styling tool is switched off.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately.

Do not reach into the water.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, and FIRE, OR INJURY TO PERSONS.

- Do not use on wet hair.
- Your styling tool should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 
- Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, or been dropped or damaged in any manner.
- There are no user serviceable parts. If power cord is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid a hazard.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- The barrels will be very hot during use. Do not let bare skin touch heated surfaces.
- Do not place the heated styling tool on any soft surface such as a bed, carpet or a towel. Place only on a hard, flat, heat resistant surface.
- Please check the voltage ratings on the product prior to use to ensure it matches the voltage of the local area.
- Burn Hazard. Keep the appliance out of reach from young children, particularly during use and cool down.
- Never leave the appliance unattended when it is connected to a wall power outlet.
- Always place the appliance, with the stand if any, on a heat-resistant, stable flat surface.

SAVE THESE INSTRUCTIONS

CI19A1AU ADJUSTABLE WAVER

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Adjustable Waver. It features the unique adjustable barrel to allow you to easily create 4 different wave looks. Creating everyday tousled waves or deep defined styles is no longer a dream.

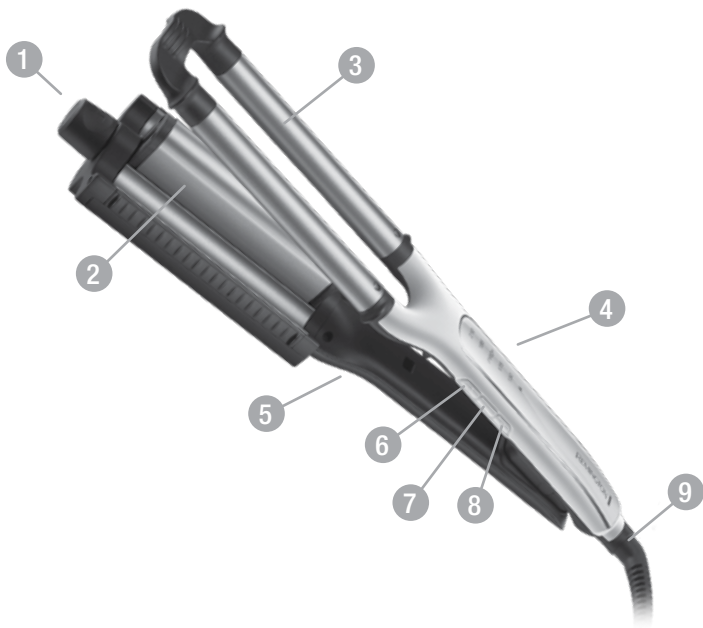

KEY PARTS

- | | |
|---------------------------------|----------------------------------|
| 1. Adjustable barrel dial | 6. + Temperature increase button |
| 2. Adjustable barrel | 7. - Temperature decrease button |
| 3. Fixed barrel | 8. On/off button |
| 4. Temperature indicator lights | 9. Swivel cord |
| 5. Barrel hinge lock | |

BASIC HAIR CARE INSTRUCTIONS

For optimal results, shampoo and condition your hair, then dry your hair thoroughly and make sure that it is tangle free prior to styling.

Note: This Adjustable Waver is not suitable for use on synthetic wigs or hair extensions.

GRIP TECH CERAMIC COATING

A slipless coating for frustration free styling, prevents hair from sliding down the barrel.









PRO+ SETTING AT 185°C


Gently styles hair at a lower temperature of 185°C for healthier styling.

HOW TO USE YOUR REMINGTON® ADJUSTABLE WAVER

You can achieve 4 different looks with the Adjustable Waver by adjusting the barrel height to achieve the wave styles.

1. Choose the suitable barrel height to achieve style 1 to 4.

| Style | | Adjustable Barrel Position |
|-----------------------------------|---|---|
| Style 1 Undone, tousled waves |  |  |
| Style 2 Flowing, mermaid waves |  |  |
| Style 3 Loose, beach waves |  |  |
| Style 4 Deep, defined waves |  |  |

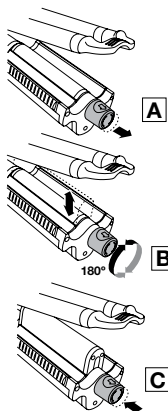 



2. Pull the dial outwards (fig. A)
3. While holding the dial out, rotate it clockwise to lower, or counter clockwise to raise the adjustable barrel (fig. B). The dial moves one half turn (180°) between each setting.

Note: that if the barrel is at it's lowest position (style 1), you won't be able to turn the dial clockwise. Also if the barrel is at its highest position (style 4), you won't be able to turn the dial anti clockwise.

4. Once the desired barrel setting is selected, release the dial and it will return to its rest position (fig. C).

 5. Plug the product into the mains power supply.
6. Press and hold the On/off (C) button to switch the styler on.

NOTE: When switching on the Adjustable Waver - after 5 seconds of inactivity, the temperature will automatically lock on PRO+ heat setting. The padlock icon “” will glow. To unlock, press and hold the “-” temperature decrease button for 2 seconds. The padlock icon “” will disappear, indicating the desired heat setting can be set.

7. Select the appropriate temperature for your hair type using the “+” to increase the temperature and “-” to decrease the temperature. Start styling on lower temperatures first.

Recommended Temperatures

| Temperature | Hair type |
|--------------------|---------------------------------------|
| 150°C - 175°C | Thin / fine, damaged or bleached hair |
| PRO+ 185°C – 195°C | Normal, healthy hair |
| 210°C | Thick and difficult to style hair |



Caution: the hottest temperatures should only be used by experienced stylists.



8. The temperature display LED will flash until the selected temperature is reached.
9. Take a section of hair and place it between the barrels at the point of where you want the wave to start.

10. Clamp the section of hair by closing the barrels together and hold in place for 5-8 seconds
11. Open the barrel and move your waver down the section of hair, positioning it where you want the next wave to start.
12. Repeat this around the head to create as many waves as desired. After use, press and hold the on/off (C) button to turn off then unplug the appliance.

Tip: let the waves cool before styling or brushing; this will help to prolong the style.

TEMPERATURE LOCK

NOTE: When switching on the Adjustable Waver - after 5 seconds of inactivity, the temperature will automatically lock on PRO+ heat setting. The padlock icon “” will glow. To unlock, press and hold the “-” temperature decrease button for 2 seconds. The padlock icon “” will disappear, indicating the desired heat setting can be set.

The Adjustable Waver has a temperature lock to prevent the selected temperature from being accidentally altered during use. When the selected temperature has been reached, simply press and hold the “-” temperature decrease button for 2 seconds. This will lock the current heat setting and a padlock icon “” will appear on the display. To unlock the temperature lock, simply press and hold the “-” temperature button for 2 seconds and the padlock icon “” will disappear.

AUTOMATIC SAFETY SHUT OFF

If the styler is not used for a period of 60 minutes (temperature is constant) it will automatically shut off.

HINGE LOCK

Safely store your styler with the barrels locked together.

To lock, push the hinge lock in towards the barrel. To unlock, pull the hinge lock towards the cord.

Note: Do not heat the styler in the locked position.

MAINTENANCE

This styling tool is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the unit from the power outlet, allow it to cool, and then wipe the exterior surface and the barrels with a soft damp cloth. Do not immerse the unit in any liquid. Do not use an abrasive cleaning fluid or material to clean the ceramic coated barrels as this will scratch the surface.

STORAGE

When not in use, always unplug the styling tool from the power outlet. Allow the styling tool to cool and store out of the reach of children in a safe dry place. Never wrap the power cord around the styling tool since this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections. If the cord becomes twisted in use, periodically straighten it.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.

This product conforms to radio frequency interference requirements.
Any product purchased and used commercially carries a limited 90 Day Warranty.
We suggest you use local waste management centres to recycle this product at end of life.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of five (5) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON[®]
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2020 Spectrum Brands Inc.

Rev. 05/20

Part No. T22-0005672

Type: C119A

