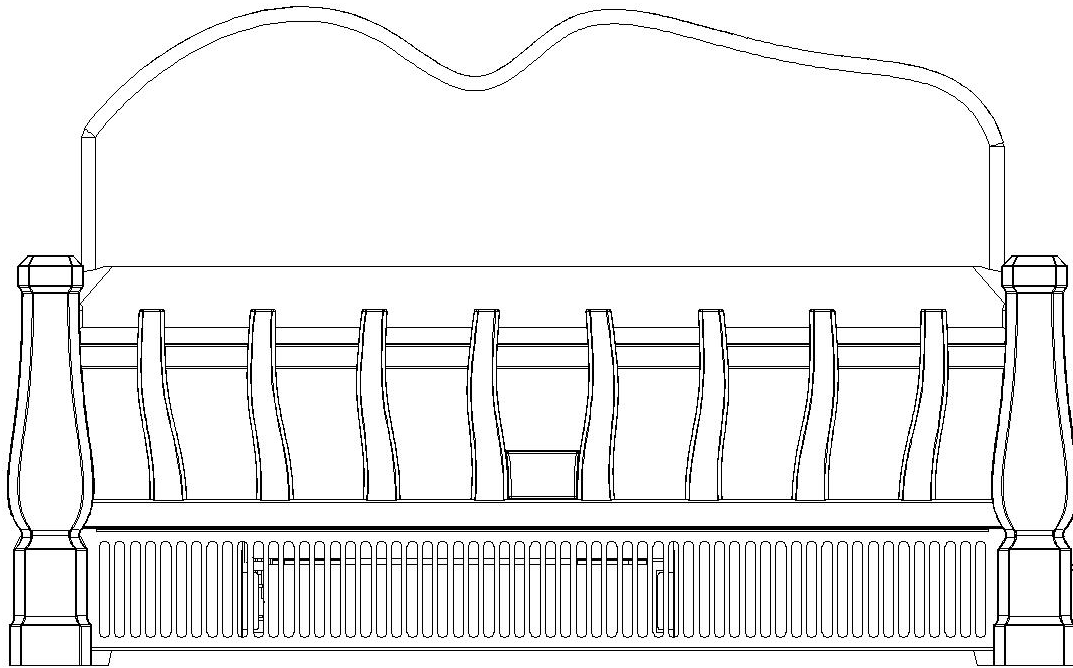 


Electrical Fireplace Stove with Heater

OWNER'S MANUAL

Model No. FP201RW



PLEASE SAVE THESE INSTRUCTIONS

WARNING: READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE.

Thank you for choosing our Electric Fireplace. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.

IMPORTANT INSTRUCTIONS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read ALL instructions before using this unit.
2. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Always plug heaters directly into a wall outlet / receptacle Never use with an extension cord or relocatable power tap(outlet/power strip)
14. To avoid fire or shock hazard, plug the unit directly into a 120 V AC electrical outlet.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
18. Always use on a dry, level surface. Use on floor only.
19. DO NOT use outdoors.
20. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
21. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.

SAVE THESE INSTRUCTIONS

SPECIFICATIONS

Voltage Rating	120 V (60Hz)
Power Consumption	1500W
Unit Size	20.5 in. (W) x 8.7 in. (D) x 12.2 in. (H)
Unit Weight	5.5KG

SAFETY FEATURES

Overheat Safety Feature

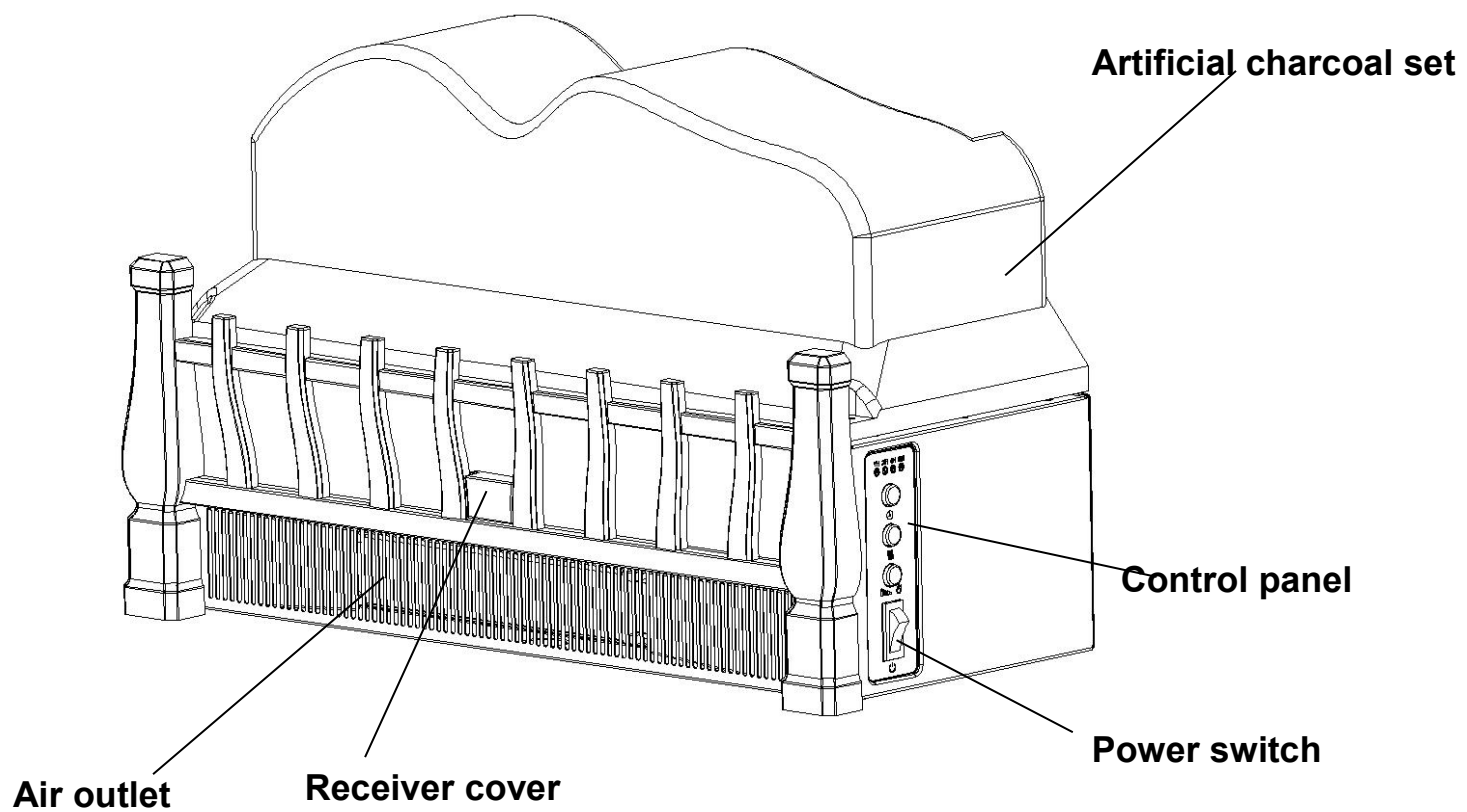 
This heater is equipped with a overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheat or possible fire, the heater will automatically shut off.

WARNING: It is normal for the power cord to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.

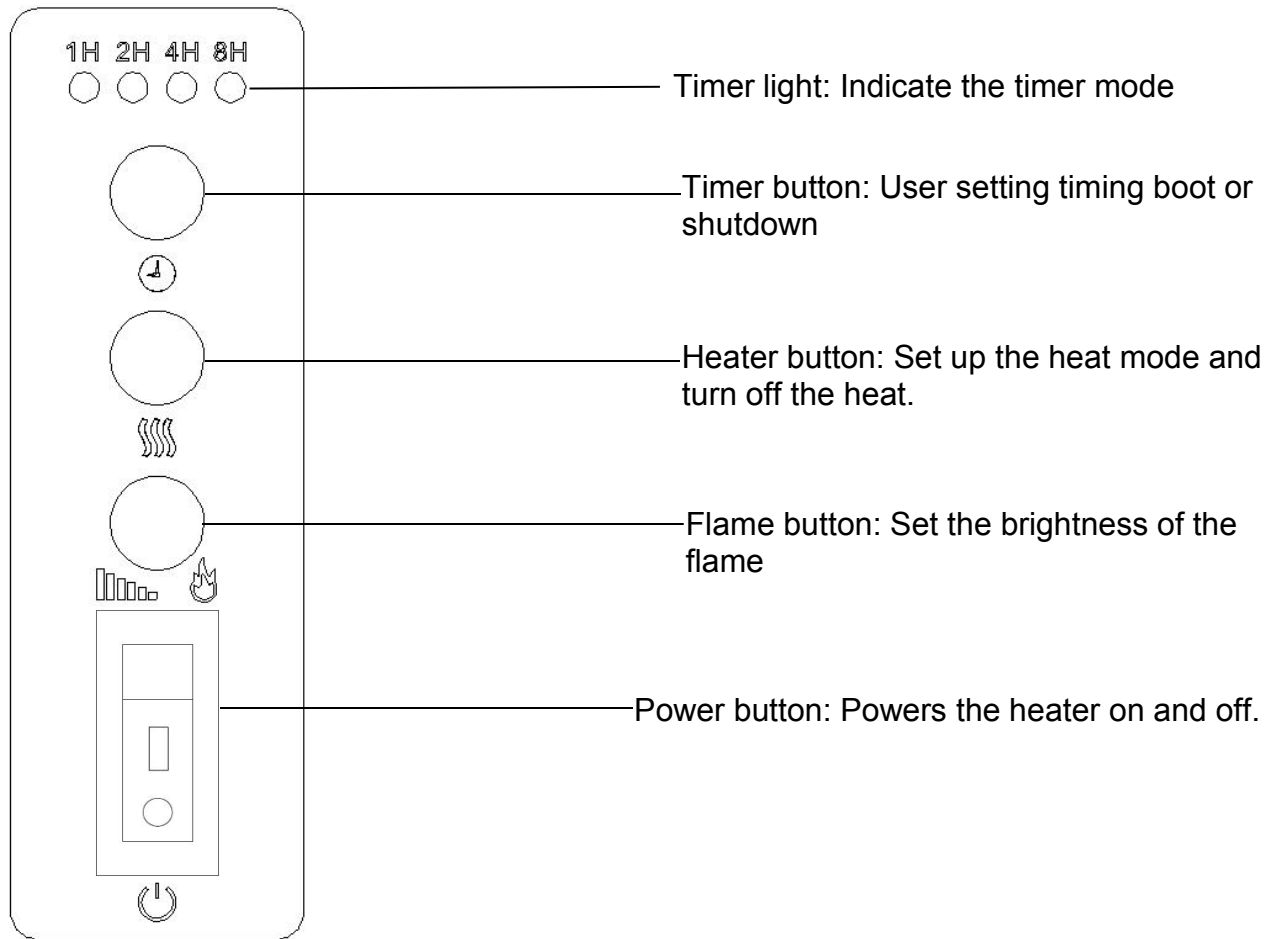 
IN THE BOX

Electrical fireplace stove with heater
Remote control (with batteries)
Instruction manual

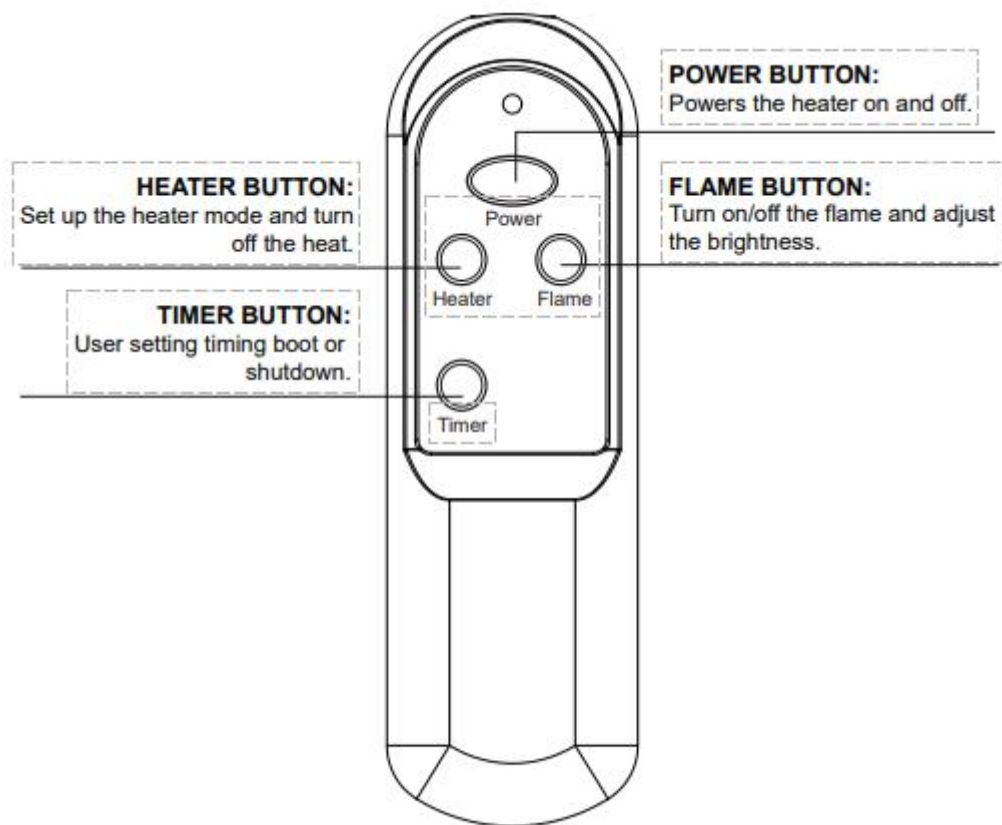 
PRODUCT DIAGRAM



Control Panel



Remote control



PREPARATION

Place the heater on a firm, level surface and plug into a 120V 60Hz power outlet.
Caution: The rear of the heater should be at least 4 inch away from the wall.

AUTOMATIC CUT-OFF

A cut-off switch is fitted to the heating element to prevent damage due to overheating. If it cuts-off due to an obstruction in the airflow, the heater must be allowed to cool for 5 minutes and the obstruction must be removed before restarting.

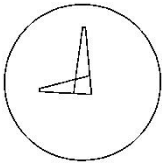 
 
OPERATING INSTRUCTIONS

1. First turn on the Power switch on the right side of the heater. The Power switch supplies power to all the function of the fireplace. This switch must be in " I " position for any functions including the remote control to work.

 Power	Press the Power button on the remote control, the heat and flame effect will be on. Press the Power button again, heat and flame effect will be off immediately (but the fan will prolong working for 30 seconds), and then the heater goes into a standby mode.
---	---

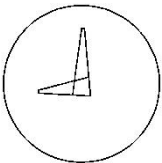 
 
2.Setting timer-power-off

Caution! ONLY under power-on mode can you set timer-power-off function.

 Or  Timer	When the unit is power on, press the Timer button to set timer-power-off function (through control panel or remote control).
	Under power-on, the timer light demonstrates the timer-power-off mode. Press the Timer button more than once, the time value will vary through the path 0-1h-2h-4h-8h-0 in circulation.
	The corresponding light is on when timer –power-off is set.

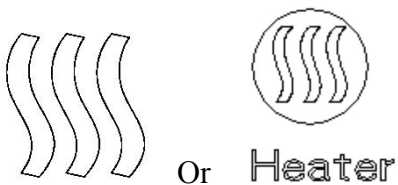 
2.Setting timer-power-on

Caution! ONLY under standby mode can you set timer-power-on function.

 Or  Timer	Under standby mode, press the Timer button to set timer-power-on function (through control panel or remote control).
	Under standby, timer light demonstrates the timer-power-on mode. Press the Timer button more than once, the time value will vary through the path 0-1h-2h-4h-8h-0 in circulation.
	The corresponding light is on when timer –power-on is set.

3.Setting heat

Under standby mode, press Heater button to start heater.

	Under standby mode, press the Heater button on the control panel or remote control, the heater will start (The heater indicator is under the artificial charcoal set. When heat is on, the charcoal set will be lit up and flicker automatically at a slow pace). Press the Heater button again. Heat and heater indicator will be off while fan will prolong working for 30 seconds to emit plenty of heat inside. Caution: When the flame is on, the heater indicator will keep lit-up if you turn off the heat.
---	---

4.Setting flame

Under standby, press the Flame button to watch the flame effect.

	Under standby, press Flame button, the flame will be on at brightest. The charcoal set will be lit up and flicker automatically at a slow pace. Each time this button is pressed, the intensity of the flame decreases. There are five brightness levels you can cycle through including the OFF setting. Caution: When the heat is on, the charcoal set will keep lit-up if you turn off the flame.
--	---

MAINTENANCE

1. Turn off the heater of the power switch.
2. Unplug the unit and let it cool completely.
3. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. **CAUTION: DO NOT** let liquid enter the heater.
4. **DO NOT** use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
5. **DO NOT** immerse the heater in water.
6. Wait until the unit is completely dry before use.

STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

TROUBLE SHOOTING

If the heater will not operate, please check the following before seeking repair advice:

1. Check if the power cord is plugged into an electrical outlet, if not, plug in.
2. Check if electricity to the main power switch (in the back) is working.
3. Check the power switch is on

WIFI CONTROL SETUP

To use the WiFi features of this device, please download and install the Tuya Smart app before proceeding with setup. Make sure your device and phone are connected to the same Wi-Fi network.

To enable Wi-Fi connectivity, press and hold the FLAME button for 3 seconds. This will initiate the connection process with your mobile phone's Wi-Fi network. Repeating this process will allow you to reconnect to a different Wi-Fi network if needed.

SCAN TO DOWNLOAD TUYA APP



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.