



HD7

Wireless speaker


User's Manual

Please read this
manual before
using the product

Thank you for choosing TREBLAB HD7!


This speaker provides superior sound quality and mobility combined with rugged construction and the convenience of hands-free wireless technology.

WHAT'S IN THE BOX

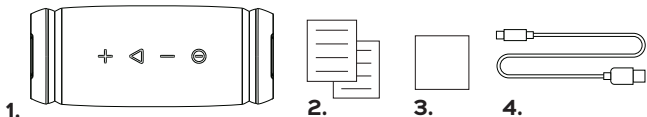

HD7

 1. TREBLAB HD7 speaker
2. User's manual
3. Insert card
4. Charging cable
5. Round Treblab logo sticker
6. Carrying strap
7. Carabiner
8. 3.5 mm Audio cable

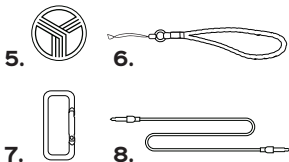

BUTTONS AND PARTS


POWER ON / OFF

LED

PREVIOUS /
VOLUME -

PLAY / PAUSE

NEXT /
VOLUME +

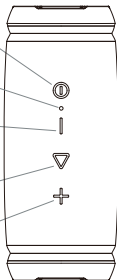


Place for the
carrying strap

Microphone (Mic)

Bike mounting -
1/4-20 UNC

AUX LINE-IN

Micro USB
port

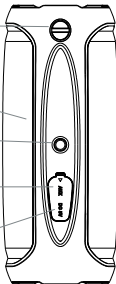

Function

Operation

Power ON	Press and hold the POWER button for 3 seconds.
Power OFF	Press and hold the POWER button for 2 seconds.
Play / Pause	Press the PLAY / PAUSE button.
Volume +	Press the VOLUME + button.
Volume -	Press the VOLUME - button.
Answer a phone call	Press the PLAY / PAUSE button.
Reject a phone call	Press and hold the PLAY / PAUSE button for 2 seconds.
End a phone call (hang up)	Press the PLAY / PAUSE button.
Redial	Press and hold the PLAY / PAUSE button for 3 seconds.
Next track	Press and hold the VOLUME + button for 1 second.
Previous track	Press and hold the VOLUME - button for 1 second.
Switch between the Bluetooth mode / AUX LINE-IN mode	Press the POWER button.
TWS ON (need two speakers)	Place two speakers near each other. Turn them on simultaneously. Click twice the POWER button on one of the speakers. Once paired, you will hear the "Stereo Mode" voice prompt.

TWS OFF	Press and hold the VOLUME + and VOLUME - buttons simultaneously on one of the speakers until you hear "Disconnected".
Factory reset	Press and hold the VOLUME + and VOLUME - buttons simultaneously for 3 seconds.

SETTING UP YOUR HD7

Turn ON

Press and hold the **POWER** button for 3 seconds. You will hear the sound cue, and the BLUE LED light will start flashing.

Turn OFF

Press and hold the **POWER** button for 2 seconds. You will hear the sound cue, and the flashing BLUE LED light will go off.

WIRELESS PAIRING

Make sure **TREBLAB HD7** is fully charged and that the 3.5 mm Audio cable is not plugged in.

1. Turn on your speaker by pressing and holding the **POWER** button for 3 seconds. You will hear the sound cue, and the LED will start flashing BLUE indicating that the speaker is in pairing mode.
2. Activate the Bluetooth mode on your device (smartphone, tablet, laptop).
3. Select **TREBLAB HD7** from the Bluetooth devices list. Keep it within 3 feet / 1 meter from the speaker while pairing.
4. If necessary, enter the passcode 0000.
5. Once **HD7** is successfully paired and connected, the LED will stop flashing and stay BLUE.

REPAIRING

After the initial pairing, the speaker will automatically connect to the previously paired device when turned on again. If the reconnection does not happen automatically, the speaker will start looking for any other previously paired device within the effective distance range. **TREBLAB HD7** can save up to 8 recently paired devices.

TRUE WIRELESS STEREO (TWS) - PAIRING TWO SPEAKERS

The TWS technology allows you to pair wirelessly two speakers to create a dual-channel system for true stereo sound.

- ✔ Turn **OFF** the Bluetooth mode on your smart device
- ✔ Place two speakers near each other (the distance should not be over 3 feet / 1 meter)
- ✔ Power **ON** both speakers simultaneously. You will hear the "Power on" voice prompt, and the LED indicators will flash BLUE
- ✔ Click twice the **POWER** button on one of the speakers. The LED indicator on this speaker will start flashing BLUE and GREEN indicating the pairing of the speakers
- ✔ Once paired, you will hear the "Stereo Mode" voice prompt, and one of the speakers' LED indicators will slowly flash BLUE. The other speaker's LED will turn BLUE
- ✔ Turn on the Bluetooth mode on your smart device
- ✔ Choose **TREBLAB HD7** from the list of paired devices and click "Connect"
- ✔ You should hear "Connected," and both speakers' LED indicators will stay BLUE

- ✔ Now you can use the speakers in stereo mode. Kindly note that the maximum distance between speakers should not exceed 33 feet / 10 meters

NOTE: If the speakers were already paired with each other, you would skip the TWS pairing steps, as they will switch to a stereo mode automatically. After turning on both speakers simultaneously, wait for the “Stereo mode” voice prompt. Then turn on the Bluetooth mode on your smart device, and the speakers will connect to it seamlessly.

To disable the TWS function:

While both speakers are on, press and hold the **VOLUME +** and **VOLUME -** buttons simultaneously on one of the speakers until you hear the “Disconnected” voice prompt indicating that the connection is lost.

AUDIO PLAYBACK

To pause and resume the playback when connected wirelessly, press the **PLAY** button.

To adjust the volume, press the **VOLUME +** or the **VOLUME -** button while listening to music.

To change the track on **HD7**, press and hold the **VOLUME +** or the **VOLUME -** button for 2 seconds.

AUX LINE-IN MODE. 3.5 MM AUDIO CABLE CONNECTION

You can connect **TREBLAB HD7** to compatible devices using the supplied 3.5 mm Audio cable.

Plug one end of the 3.5 mm Audio cable into the AUX LINE-IN port on the bottom side of the speaker (under the cover). Plug the other end into the 3.5 mm jack on your device.

Turn on the speaker. You will hear the sound cue and the LED light will turn GREEN. Now you can play music and audio.

NOTE: On-device control is not supported for the VOLUME, NEXT, PREVIOUS and PAUSE functions when using the 3.5 mm Audio cable. Phone calls management by using the PLAY/PAUSE button is not supported as well. To make adjustments, you will need to use your smart device.

PHONE CALLS

TREBLAB HD7 can be used to make and receive phone calls when connected wirelessly. Audio playback will be paused during the calls.

To answer / end a call:	Press the PLAY / PAUSE button.
To reject a call:	Press and hold the PLAY / PAUSE button for 2 seconds.
To redial:	Press and hold the PLAY / PAUSE button for 3 seconds.

NOTE: For the better call quality, speak into the microphone.

TROUBLESHOOTING

Problem	Solution
Not powering on	Make sure the speaker is fully charged. Charge for 3 hours for a full charge, if necessary. Press and hold the POWER button for 3 seconds.

Not pairing

Make sure the 3.5 mm Audio cable is not plugged in.

Make sure the speaker is not paired with any other device, as it can only pair with one device at a time.

Press the **VOLUME +** and **VOLUME -** buttons simultaneously and hold for 3-5 seconds. This will make the speaker forget previously paired devices. Repeat the steps for pairing as previously described.

Alternatively, disconnect the device from your speaker and remove **HD7** from your device's pairing list. Try to pair again.

Not finding a wireless driver on your laptop

Make sure your laptop supports a Bluetooth connection. If it doesn't, you will need an external wireless USB adapter compatible with your laptop. For further details, consult with your laptop manufacturer.

Frequent disconnection and noise

Make sure that the distance between your device and the speaker is less than 33 feet / 10 meters.

Make sure that nothing is blocking the signal between your device and **HD7**.

Check if the music is on pause.

Check if the volume level is set on both the source device and the speaker.

Check if the speaker is running out of power.

CHARGING

One full battery charge provides up to 6 hours of playtime at maximum volume and up to 25 hours at moderate volume. When the battery is running low, you will hear a voice signal.

TREBLAB HD7 may be used while charging in both Bluetooth mode and AUX LINE-IN mode.

To charge the speaker, plug one end of the cable into the Micro USB charging port under the rubber cover at the side of the speaker. Plug the other end of the charging cable into a standard USB port. Regarding the adaptor's power, it takes from 2 to 4 hours to fully charge the speaker's battery.

If the speaker is turned off, the LED light will turn RED. If the speaker is turned on, it will start flashing RED and BLUE. The RED light will go off when the speaker is charged.

Be sure to use a 5V DC, 0.5-1.5 A adaptor or charger. Using the power source

with lower power will increase the overall charging time.

Unplug **HD7** from the charging cable and the cable - from the power source when not in use.

If the speaker is left unused, make sure that it is charged, as this may lead to the reduction of battery capacity. Even the fully charged battery will lose its charge over time. We recommend fully charging the **HD7** speaker at least twice a month to maintain the sufficient battery life.

RECYCLING

The speakers can be recycled, and they should be in order to keep our planet clean. Where should you bring them?

In the **US**, there are a couple of options:

1. Best Buy has a recycling program. Just take the broken earbuds with you next time you visit a Best Buy store.

This link will help you find the best location: <https://www.bestbuy.com/site/store-locator/>

2. Check for other possible locations next to you on these websites (just enter your ZIP to find a location):

<https://www.call2recycle.org>

<https://search.earth911.com>

<https://recyclenation.com/find>

<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In **Canada**, please visit the links below:

<https://thinkreuse.net>

<https://www.call2recycle.ca>

In the **UK**, please visit the links below:

<https://www.recycle-more.co.uk/>

<https://www.recyclenow.com/local-recycling>

SAFETY RULES

- ✔ Don't disassemble or modify your speaker for any reason. Doing this may cause the speaker to malfunction or explosion. The damage to your device can void the manufacturer's warranty.
- ✔ Do not let your device get wet by liquids – liquids can cause severe damage. The damage caused by water can void the manufacturer's warranty.
- ✔ Make sure the speaker is completely dry before charging.
- ✔ Clean only with a dry cloth.
- ✔ Avoid exposing **TREBLAB HD7** to extreme temperatures (below 37°F / 3°C or above 112°F / 45°C). Extreme temperatures can cause the deformation of the **HD7** components and reduce the battery life and the lifespan of your new speaker.
- ✔ Don't put the device's LED lights close to humans' or animals' eyes.
- ✔ Do not use **HD7** during a thunderstorm. Thunderstorms can cause serious malfunction and increase the risk of electric shock.

SPECIFICATIONS

Battery:	Up to 25 hours playtime, Rechargeable Li-Ion 2500 mAh 3.6 V, Input 5 V / 0.5 A - 1.5 A
Charging time:	3 hours
Wireless connection version:	4.2 HFP, A2DP, AVRCP, GAVDP, AVDTP, SPP, AVCTP
Signal range:	33 ft / 10 m
Output power:	2x 6 W
Water resistance:	IPX6
Charging port:	Micro USB
Audio port:	3.5 mm jack
Dimensions:	3 x 3 x 7.3 inches / 158.5 x 65 x 62.5 mm
Weight:	13 oz / 365 g

THANK YOU

We truly appreciate that you chose **TREBLAB** as your trusted brand of wireless speakers and sincerely hope you enjoy the great sound and seamless usability **TREBLAB HD7** provides. We love making our customers happy by providing true value with our products. If for any reason you are not completely satisfied with your purchase or have any questions, please visit https://treblab.com/contact_us. We care about our customers most of all and are always here to help you.



TREBLAB

1 YEAR WARRANTY

Parts and Labor Warranty

Please visit www.treblab.com
to register YOUR product.

Manufactured by Productech

HD7

WIRELESS SPEAKER

Made in China

RoHS **CE** **FC**  



WARNING: Cancer and Reproductive
Harm - www.P65Warnings.ca.gov

