

Product Care & Maintenance Guide

To ensure safe operation and extend the life of your product, please follow these care instructions:

1. Always unplug the appliance and allow it to cool completely before cleaning;
2. Clean the exterior with a soft, damp cloth. Do not use abrasive cleaners or metal pads;
3. Wash accessories such as the tray, basket, and rack after each use and dry thoroughly;
4. Clean the crumb tray regularly to prevent grease and food residue buildup;
5. Do not immerse the appliance or power cord in water;
6. If not in use for a long period, store the appliance in a clean, dry, and well-ventilated place.

Proper care and maintenance will help ensure optimal performance and longer product life.