

## Doorbell Operation Instruction

### About The Product

The doorbell consists of receiver and transmitter, receiver that is the indoor machine, transmitter that is the outdoor machine, must works in pair, wireless, simple and flexible installation, this product is mainly suitable for homes, companies, hospitals, hotels, and factories.

### Product Features


1. Remote setting of bell ring, volume mode and other functions through Tuya APP.
2. The doorbell information can be checked through Tuya APP. When the bell rings, the APP will inform by message.
3. The DND(Do Not Disturb) mode can be set through Tuya APP.
4. 38 ringtones optional, users can set any music as the doorbell ringtone.
5. Users can add or subtract receivers and transmitters flexibly according to your needs, simple and easy to operate.

6. Memory function: the ringtone has been memorized after setting even when power off the ringtone will not reset.
7. 5 level adjustable volume from 0dB to 110dB, and the DND(Do Not Disturb) mute mode, provide a better experience for user.
8. When pressing the transmitter button, the transmitter sends a signal to the receiver, and the receiver rings when receiving the signal.
9. Transmitter distance can reach 150-300 meters in open area, transmitter signal is stable and does not interfere with each other.

### Product Details



Tuya Receiver

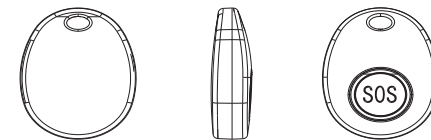

Transmitter

### Operation Instruction

Setting without Tuya APP

#### 1、 Connection

- 1) Plug in the receiver.
- 2) Holding the Volume/Coding button more than 5 seconds, when heard the prompt "DING" and the indicator blink, it enters the connection mode.
- 3) Press the button on the transmitter, when the "DING DING" ring and LED light flashing, the connection succeed.

4) Press the button on the transmitter again, and the ringtone you hear is the selected one.  
Notice: If the transmitter is not connected within 30 seconds after entering the connection mode, the system automatically exits after the prompt ringtone "Ding".

#### 2、 Select ringtone and adjust the volume

- 1) Shortly press the Backward/Pairing network to choose ringtone;
- 2) Shortly press the Volume/Coding button to adjust the volume.
- 3) Shortly press the Forward/Clear code button to choose ringtone;

#### 3、 Recovery mode

- 1) Holding the Forward/Clear code button more than 5 seconds, then heard the prompt "DING" and the indicator light blink, that means the recovery finished.

2) When recovery finished the transmitter originally setting all cleared, ringtone turn to the default "DingDong" automatically.

3) Press the transmitter again to reconnect.

Notice: In recovery mode, the transmitter can be reconnected within 30 seconds. If no transmitter connected, the system automatically exits after 30 seconds.

### Setting with Tuya APP

1. Download Tuya APP on your phone (Supported by Android or Apple)
2. Plug in the receiver.
3. Connect the phone to WIFI.
4. Open "TUYA" APP.
5. Click the "+" in the upper right corner and select device on Tuya App
6. Holding the Backward/Pairing network button on receiver more than 5 seconds to enter the network configuration status.

7. Notice: If the network has been configured successfully before, the device will automatically configure the network, there is no need to holding the Backward/Pairing network button.
8. Click the device that automatically found in the APP and connect.
9. When connect successfully, turn to the device page and click the "+" to add transmitter.
10. Shortly press the transmitter button, when heard "DING DING" from the receiver, the connection is successful.
11. Set the volume, change the ringtone through the APP.
12. Add/delete device through the APP.

### Technical Specification

Working Temperature	-30°C to +70°C
Receiving Frequency	433.92MHz±280KHz
WIFI Frequency	2.4G
Transmitter Battery	23A 12V Battery
Receiver Volts	110-260 Volts (wide voltage)

### Notice

- \* Please test the working distance between receiver and transmitter before installing!
- \* Do not install the transmitter on the security door, metal will weaken the signal, affect the transmitter distance!
- \* Do not install the receiver next to the TV, induction cooker, microwave oven and other electromagnetic wave electrical appliances!
- \* Do not set the receiver and transmitter on fire or in the water to avoid unnecessary accidents!
- \* Please regularly clean the surface of the touch transmitter, the dirty surface will lead to abnormal touch!