





Scan for Amazon Support



Scan to View Full User Guide

After-sales Contact: 1-833-833-2013

E-mail: ussupport@dbsono.com

DB A53

Package List



Magnetic Speaker x1



USB-C Charging Cable x1



 
Magnetic Sheet x2



User Manual x1

Magnetic Sheet Installation Steps


(Phone models that support magnetic wireless charging natively may not require such a magnetic sheet. If needed, please follow the steps below to install the magnetic sheet.)



1. Remove the magnetic sheet sticker.



 2. Stick the magnetic sheet on the back of the mobile phone.



3. Finally, place the speaker on the magnetic sheet to use it as a phone stand.

NOTE: Because each mobile phone model's corresponding wireless charging position that supports wireless charging(non-native magnetic charging support) may differ, please consult the corresponding mobile phone brand to obtain such information.

Power Button



Power Button

	What to do	Function
	Short Press	Change The Lighting Mode
	Long Press 2-3s	Turn On/Off The Speaker
	Double-Tap	Enter/Exit Tws
	Triple-Tap	Clear The Bluetooth Record

Bluetooth Pairing

- Long press the  power button 2-3S to turn on the speaker,the blue indicator light flashes quickly
- Turn on the Bluetooth of your smart device, and then choose the Bluetooth named "DB A53". The speaker will pair your device successfully when you hear the prompt sound.




After Pairing: Long press the speaker button to power on. Once powered on, the speaker will automatically connect to your device.

Note: Because the speaker automatically connects to the last paired device, for this reason, if you want the speaker to connect to the other device, please clear the Bluetooth record on the speaker(Triple-tap the power button).

How to connect two speakers (TWS)

You can pair two speakers to create wireless stereo sound.

Primary Speaker Long Press Secondary Speaker Long Press

Step 1: Long-press the Power Button to turn on one speaker and label it as the Primary Speaker. And then turn on another speaker and label it as the Secondary Speaker.

< Settings

Bluetooth ☒

MY DEVICES

DB A53 Connected

Step 2: Connect Primary speaker to your phone's Bluetooth(DB A53), and do not connect the Secondary Speaker to any device.

Primary Speaker x2

Step 3: Double-tap the Power Button of the Primary speaker, the blue light of both speakers flashes quickly, and after you hear two prompt tones, indicating the two speakers are paired successfully, at that time, the blue light of one speaker stays on, and the other speaker flashes slowly.

Specification

1. Bluetooth Name.....	DB A53
2. Bluetooth Version.....	BT 5.3
3. Waterproof Rating.....	IPX5
4. Bluetooth Range.....	>15m/49ft
5. Speaker Battery Capacity.....	700mAh
6. TWS Range.....	>12m/40ft
7. Charging Input.....	Type-C 5V/0.6A
8. Charging Time.....	1.5H

Indicator Light

Low Battery Warning: The red LED indicator light will flash slowly when the battery is low. Low power alarm three times, once alarm every minute, and shut down directly after the third alarm.

Indicator Light

	Blue Light	Red Light
Bluetooth Connected	Stays on	
Play Audio	Flashes slowly	
Bluetooth Search Pairing	Flashes quickly	
TWS Search Pairing	Flashes quickly	
Charging		Stays on
Low Battery		Flashes slowly

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to

radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Information

- Environment and temperature
Operating temperature should be between 0°C to 40 °C/ 32°F To 104°F.
Keep away from extreme temperature environments (such as high temperature fire, direct sunlight or extremely cold environment) to avoid battery damage.
Do not approach heat sources (such as stoves, engines and other heating equipment).
- Use and maintenance
Do not drop, disassemble or replace the battery (wrong model may cause explosion risk).
Do not use corrosive detergents/oils to wipe the product.
Keep away from water or humid environments (such as rainy days) when charging to prevent electric shock.

Charging

Fully dry off the speaker and the USB port before charging.

The battery may go to sleep or die if it doesn't charge/discharge for a long time. Please charge and discharge it at least one time per month.

Notice

This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.

400*65mm
三折 正反面彩色印 105g 书纸

