

XTREME® DIGITAL LIFESTYLE ACCESSORIES PRINTER SLUG FOR TECH PACK	
BRAND: XTREME CATEGORY: SOUND FILE NAME: XBE9-0144_UserManual ITEM NUMBER: XBE9-0144	ADDITIONAL PRINTING PROCESSES: UV SPOT: GLOSS METALLIC FOIL: DEBOSS: EMBOSS: VARNISHING TECHNIQUE: MATTE LAMINATION
PRESS WORK: PRINT 1/1. TRIM TO SIZE, SCORE, FOLD WHEN SPECIFIED SCALE: 100% ASSEMBLED PACKAGE DIMENSIONS (in Inches) WIDTH: 3" HEIGHT: 4.9" DEPTH: DIELINE OVERALL DIMENSIONS (in Millimeters) WIDTH: 78.065mm HEIGHT: 124.873mm	PRESS SPEC COLOR REFERENCES DIELINE GLOSS UV SPOT EMBOSSING (RELIEF) DEBOSSING (SUNKEN) FOLDING LINE PRODUCT PLACEMENT FOILING GLUE FOLD Ø20mm SECURITY STICKERS PLACEMENT BLISTER OR INNER TRAY PLACEMENT CLOTH LIFT TAG
MANUAL MATERIAL, THICKNESS & SIZE SUBSTRATE TYPE: MATTE ART PAPER C2S, 100gsm WINDOW: INNER TRAY: BLISTER: PLASTIC BAG: MAGNET: VELCRO: SECURITY STICKERS: HANG TAB COLOR/ MATERIAL/SIZE: FOAM CORRUGATED BOARD: PAPERBOARD: USER MANUAL: PRINT 1/1 IN BLACK ONLY	ADDITIONAL PANTONE COLORS (NOT CMYK) SOLID COLOR NAME: NEON COLOR NAME: METALLIC COLORS: VENDOR'S FOIL NAME/NUMBER:
PACKAGING TYPES FOLDING CARTON: FOLDING CARTON WITH DOOR PANEL: RIGIT GIFT BOX: CLAMSHELL: SLIDING/SLIPCASE: TRAPPED BLISTER CARD BLISTER CARD: OTHER:	FILE SAVED AS: .ai = FULLY EDITABLE -OUT.ai = OUTLINED .pdf = Acrobat .jpg = Flat image .png = DIGITAL (transparent background) APPROVAL CHECKLIST: PRIMARY DESIGNER: Rita Manukyan DATE: 12/31/25 SECONDARY DESIGNER: DATE: PROOF READ: DATE: APPROVED BY: DATE: AUTHORIZATION SIGNATURES:

Press Ready Artwork.
DO NOT PRINT THIS LAYER:
Printer Slug

PRINTABLE LAYER:
Manual Artwork



FRONT PAGE

SAFETY AND CARE INSTRUCTIONS Read all the instructions before using the product and them store them for future reference. Failure to follow these safety instructions, could lead to fire, electrical shock, personal injury, property damage, or damage to the product. • This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local / state guidelines. • Do not expose to rain, moisture, or other liquid. Do use near water such as swimming pools, bathtubs, or sinks. If it becomes wet, immediately unplug the product from a power source. Do not handle the unit, USB cord or wall charger with wet hands. • Do not charge, or use, the product if it has been submerged in water, or if water has got inside the product. • Do not expose to heat sources, the sun, or leave in a hot vehicle. Do not dispose of in a fire. • Do not expose the product to extremely high or low temperatures. Use this product in a location with a temperature of 32°F - 95°F. Prolonged exposure to extreme heat or cold reduces battery longevity. Exposure to fire or temperatures above 170°F could cause serious damage and explosion. • Do not disassemble, there are no serviceable parts inside. Do not drop. Do not use if damaged or modified or if you see any bulging, swelling, leakage or other abnormality. Never insert objects other than the specified cables into the product. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury. • Charge using the correct wall charger, and make sure that the charger is inserted all the way into the electrical outlet. Disconnect the charger once the product is fully charged. • This product is not a toy. Keep out of reach of children or those that require supervision. • Do not use abrasive cleaning solvents to clean the unit. Note: Lithium-ion batteries will self-discharge over time, and it is normal for battery performance to decline after several years of usage. To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long a lithium-ion battery will no longer have the ability to be recharged. 5	FCC STATEMENT FCC STATEMENT Any changes or modifications not expressly approved by the party responsible for compliance could void this user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures: • Reorient or relocate the receiving antenna • Increase the separation between the equipment and receiver • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected • Consult the dealer or an experienced radio/TV technician for help FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. 6	ONE YEAR LIMITED WARRANTY Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt. *Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied. Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property. For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com Scan the QR code below, or on the front of this manual to extend your warranty from 1 Year to 2 Year Limited. Scan to Extend Your Warranty 7	TRUE WIRELESS STEREO OPEN-EAR CLIP-ON BUDS WITH CHARGING CASE XBE9-0144-BLK User Manual V1.0 0126 855.999.8041 WWW.GOGETXTREME.COM FCC ID: 2AHAS-XBE90144E Scan to Extend Your Warranty
---	---	---	--

When folded, please make sure that this title page is visible and not folded inside.

BACK PAGE

PRODUCT DESCRIPTION Thank you for purchasing the TWS Open-Ear Clip-On Buds. Please read this manual carefully to understand how to use and maintain your earbuds effectively. FEATURES Designed for all-day comfort and awareness, these open-ear earbuds deliver clear audio while allowing you to stay connected to your surroundings. The lightweight clip-on design provides a secure, breathable fit ideal for everyday use, whether you're working, commuting, or on the move. With intuitive touch controls, hands-free calling, and seamless wireless connectivity, you can easily manage music, calls, and voice assistant functions. The compact charging case with LED display keeps your earbuds powered and lets you track battery status at a glance, so you're always ready to listen. • TWS Series, use earbuds individually or simultaneously • Up to 4.5 hours of playtime on a single charge • Charging case with LED display • Easy-to-use touch controls SPECIFICATIONS Material: ABS Earbuds Battery Capacity: 30mAh Charging Case: 300mAh Bluetooth Range: 33ft Playback Time: 4.5 hours (at 70% volume) Charging Time: 2 hours USB Charging Cable Length: 11.8in 1	GETTING TO KNOW YOUR PRODUCT Before operating your earbuds, carefully remove the components from the packaging and ensure your charging case is fully charged. How to Charge Your earbuds will automatically charge when placed correctly in the included charging case. The charging indicator icon will flash. When replacing your earbuds in the charging case, they must be positioned correctly so that the charging pins align with the connectors in the case. See the diagram for reference: Note that the charging case cannot deliver power to the earbuds if it is not charged. Follow these steps to charge the case: 1. Insert the USB-C end of the included charging cable into the USB-C port on the charging case. 2. Insert the other end into a USB port or USB power adapter (sold separately). 3. The charging indicator light will flash as it charges. 2	OPERATION NOTE: Before first use, charge the earbuds in the case for at least 1 hour. BLUETOOTH PAIRING Follow these steps to pair the earbuds to your Bluetooth device: 1.Take the earbuds out of the charging case to power them on automatically. The earbud indicator light will blink to indicate that they are in Pairing Mode. 2.Go to the Bluetooth section of your device settings and select "Xtreme XBE9-0144-BLK/WHT" to begin the pairing process. 3.When the earbuds are connected, the indicator light will off, and a voice prompt will say, "Connected." If you are unable to connect your earbuds to your Bluetooth device, please try the following: 1. Ensure the earbuds and your Bluetooth device are turned on and fully charged. 2. Make sure your device's Bluetooth setting is switched on. 3. Restart your Bluetooth device. To remove the earbuds from your Bluetooth device and pair to a new device, go to the Bluetooth option in your device settings and disconnect the "Xtreme XBE9-0144-BLK/WHT" earbuds. This will put the earbuds back into Pairing Mode, and you can follow the steps above to pair to a new Bluetooth device. HOW TO WEAR YOUR EARPHONES These earbuds feature an open-ear design with an ear cuff that hooks around your outer ear for security and comfort. Each earbud is labeled (L) or (R) to indicate which ear it fastens onto. Use the following diagrams to fit your earbuds correctly: Step 1 Identify the earbud you need using the inner L and R labels. Note which side is placed against the inner ear. Step 2 Position the correct side of the earbud against your inner ear and hook the cuff around your outer ear as shown. Step 3 Once the earbud is securely hooked around your outer ear, you can gently reposition the cuff and inner earbuds as needed for comfort and improved sound quality. Inner Ear 3	OPERATION Power On To turn on the earbuds, simply remove them from the charging case. They will power on automatically, enter Bluetooth search mode, and provide a voice prompt "Power On" with lights flashing. Alternatively, if the earbuds are off and outside the case, press and hold the touch control area for 5 seconds. The same voice prompt and LED indicator pattern will confirm they are powering on. Power Off The earbuds can be turned off in the following ways: Return to Case or Hold touch control area for 5s. Note: • Earbuds will automatically reconnect to the device if back within effective range within ~5 minutes. If not, manual connection is required. Earbuds auto power off after 5 minutes of disconnection. • The earbuds will enter the disconnected state if they move out of Bluetooth range or if Bluetooth is manually turned off on the phone. In this state, the earbuds will go back into Bluetooth pairing mode. MUSIC MODE Play/Pause: Double-press left or right touch control area. Previous Track: Triple-press left touch control area. Next Track: Triple-press right touch control area. CALL MODE Answer/End: Double-press left or right touch control area. Reject Call: Press and hold left or right touch control area for 2 seconds. Voice Assistant: Quadruple-press left or right touch control area. 4
--	--	---	---