



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

MRXSTICKPRO IntelliClean with Self Empty Cordless Stick Vacuum



Model No.
730005

User Manual

Please read and keep these instructions for future use



HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- **WARNING:** Whenever the cleaner is in use, due to the risk of entrapment in rotating parts, keep loose clothing, hair, fingers etc. away from the brush bar, nozzle and any hand-held accessories.
- **WARNING:** Disconnect from the mains supply before carrying out any routine maintenance, such as cleaning any blockages, changing any filters or accessing the floor nozzle.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.



HEALTH AND SAFETY

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be undertaken by children without supervision.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- The appliance is not intended to be operated on an extension cable or by means of an external timer or separate remote control.



HEALTH AND SAFETY

PERSONAL SAFETY

- **WARNING:** Only lift the product by the carry handle.
- Always disconnect the appliance from the mains supply after use.
- Never use in the presence of explosive liquid or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never pick up acids, asbestos or asbestos dust.
- Never touch the plug or cable with wet hands.
- Do not immerse cord, plug or cleaner in water or other liquid.
- The appliance must never be left running unsupervised.

LOCATION

- Do not use or keep this product outside.
- Do not store the appliance near hot surfaces e.g. ovens or heating appliances.

CHARGER

- If the charger is damaged, it must be replaced by the manufacturer.

PRODUCT SAFETY

- Never use the appliance without the filters being installed.
- Never use the appliance to vacuum hot ashes, broken glass,

sharp objects or liquids.

- Use only Morphy Richards spare parts and accessories.
- Never modify the cleaner in any way.
- Repairs to electrical appliances are only to be undertaken by trained professionals. Unprofessional repairs can be dangerous for users.

ELECTRICAL REQUIREMENTS


- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

BATTERY SAFETY & DISPOSAL

- Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C/265°F may cause an explosion.
- Recommended ambient charging and storage temperature:
 - 10°C–40°C (50°F–104°F).
 - Recommended operation temperature: 25°C+/- 5°C.
- Do not incinerate electrical appliances even if the appliance is severely damaged, as lithium-ion batteries may explode in fire.
- The lithium battery is not a serviceable item. Check with your Local Authority for recycling advice.





PRODUCT OVERVIEW

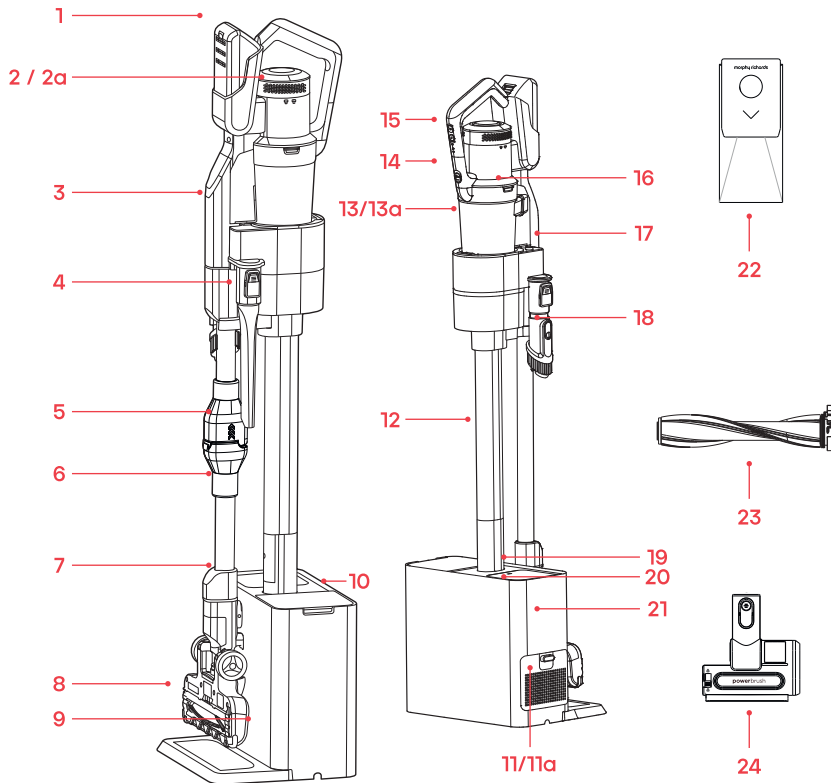

- | | |
|--|--|
| 1. Battery pack | 12. Dust canister |
| 2. Circular HEPA filter cover | 13. Dust canister release button |
| 2a. Circular HEPA filter (not shown) | 13a. Filter assembly (not shown) |
| 3. Main body | 14. Speed control button |
| 4. Crevice nozzle | 15. Power On/Off button |
| 5. Extension tube with flexi-clean joint | 16. Circular sponge filter (not shown) |
| 6. Upper extension tube connector | 17. Dust collection button |
| 7. Lower extension tube connector | 18. Dusting brush/multi-tool |
| 8. Motorised floor nozzle | 19. Dust bag full indicator |
| 9. Base station lid | 20. Base station sponge filter |
| 10. HEPA pleated filter cover | 21. Dust bag |
| 11a. HEPA pleated filter (not shown) | 22. Spare dust bag |
| 11. Dust collection pipe | 23. Bristle roller |
| | 24. Motorised pet nozzle |



ASSEMBLING YOUR VACUUM CLEANER

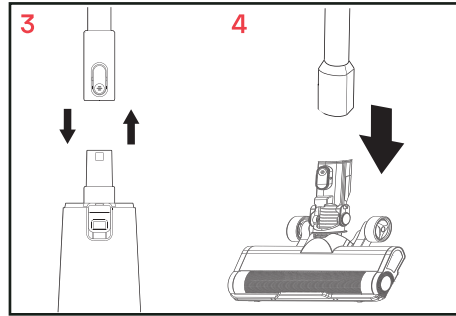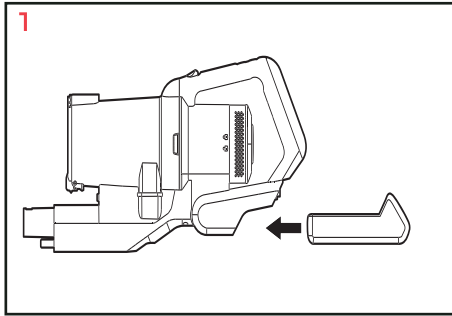

1. Slide the battery into the compartment in the handle until it clicks into place.
2. Fully charge the battery before first use.
3. Align the main body with upper extension tube connector, slide until it clicks into place.
4. Slide lower extension tube connector into the motorised floor nozzle until it clicks into place.



Note: The motorised floor nozzle can be used with the extension tube for upright vacuuming or without the extension tube for handheld use.

Caution: The vacuum cleaner MUST be switched off while attaching and detaching the accessories.



ASSEMBLING THE BASE STATION

1. Before assembling the base station, release the power cord to the length required.
2. Insert the bottom of the dust collection pipe into the connector on the base station assembly until you hear a 'click'.
3. Place the base station on a firm, flat surface, close to a mains outlet.
4. Align the bottom of the vacuum cleaner's dust canister with the suction inlet of the dust collector assembly until a "click" is heard.

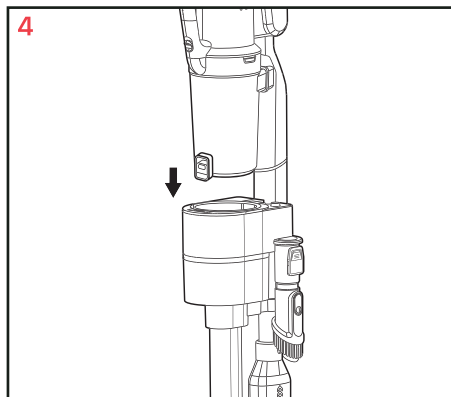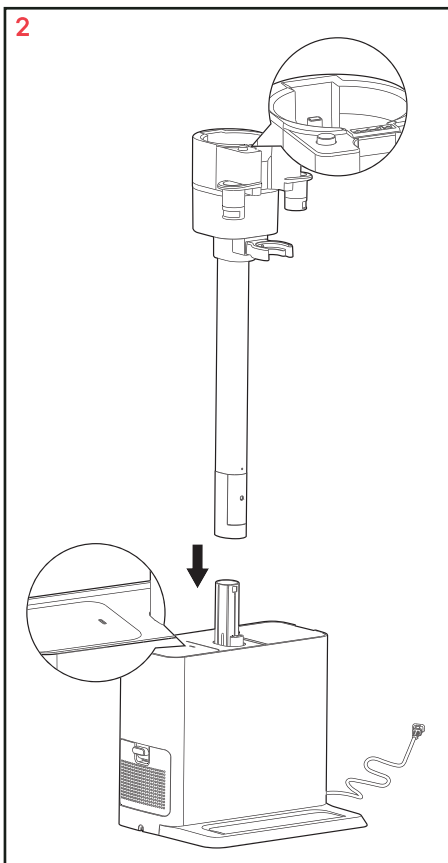




CHARGING

- Fully charge the battery before first use.
- Do not charge below 5°C or above 40°C.
- The battery indicator light on the handheld appliance will flash when the battery level is low during operation.

Note: Fully charge the appliance before using it for the first time. It takes approximately 4 to 6 hours to fully charge.




1. Place the handheld appliance on the charging body of the base station for charging, ensure that the contact springs align with the contact points.
2. When charging is complete, simply remove it for use.

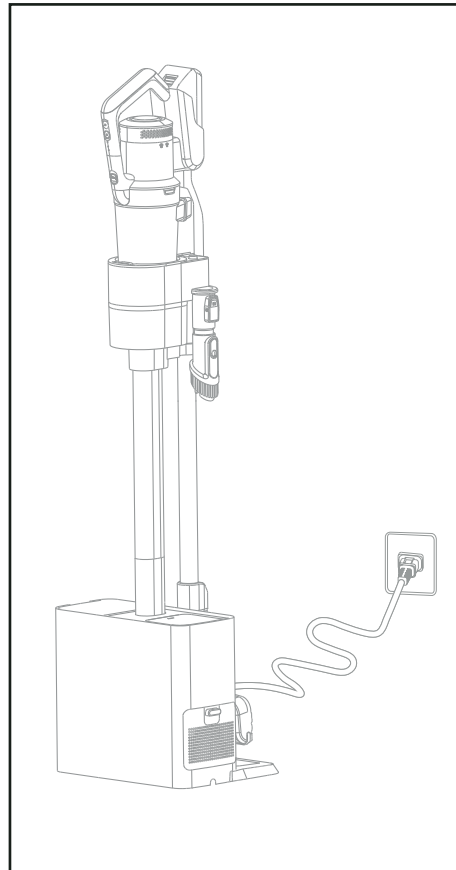



BATTERY INDICATORS

1. The low battery indicator LED is flashing, indicates low battery or incomplete charge.
2. Two battery indicator remain on for 10 minutes and then turn off indicates the battery is fully charged.
3. End of dust collection at the base station: Two battery indicators remain ON for 5 seconds.
4. The simultaneous flashing of three lights and the dust bag full indicator light flashing red indicates dust bag in the base station requires replacement.

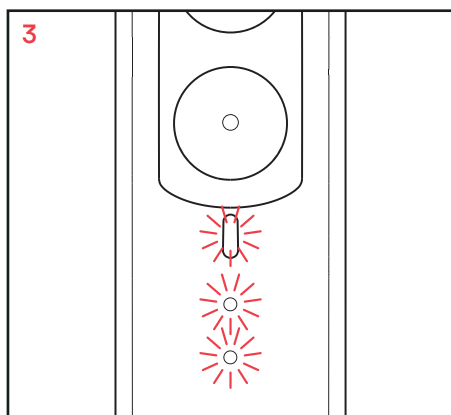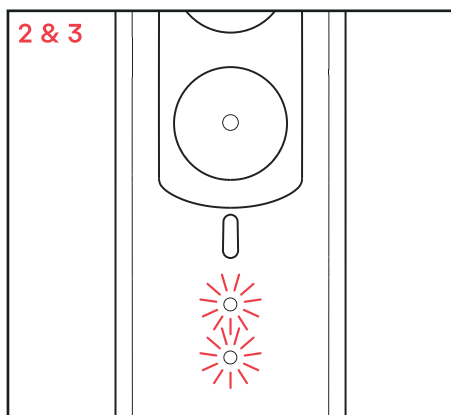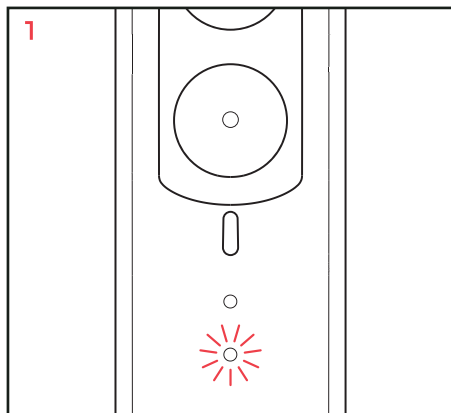





USING YOUR VACUUM CLEANER

Note: For optimum performance the vacuum cleaner must be fully charged before use.


1. Press the On/Off button on the handle to turn on the vacuum cleaner. Press again to turn it off.
2. Use the speed control button to switch between low, medium, and high speed modes.
 - **Low speed mode:** The speed indicator light does not illuminate.
 - **Medium speed mode:** The speed indicator light illuminates white.
 - **High speed mode:** The speed indicator light illuminates blue.

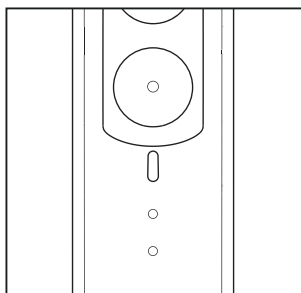

Low speed mode

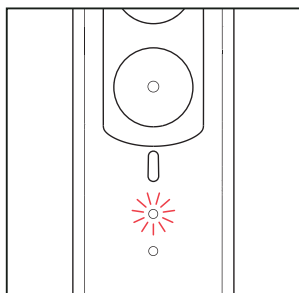

Medium speed mode

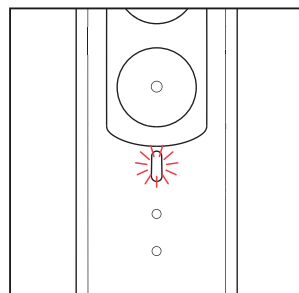


High speed mode



USING THE ATTACHMENTS


Caution: The vacuum cleaner **MUST** be switched off while attaching and detaching the accessories.

Remove accessories from the base station by pressing the latch release button and pulling them off.

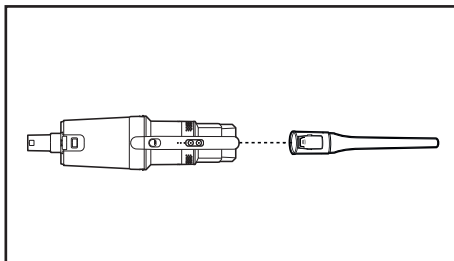


Crevice Tool

The crevice tool can be attached on the extension tube or the main unit's air inlet. It is perfect for vacuuming tight corners and small spaces, used with the extension tube it gives you an extra reach to vacuum cobwebs or hard-to-reach areas.

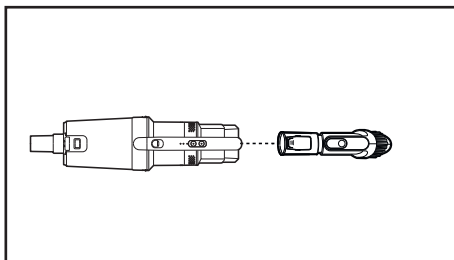

2-in-1 Brush Tool

The 2-in-1 brush tool can be attached on the extension tube or the main unit's air inlet. The brush is retractable. Use the flat side to vacuum beds, sofas, rugs or any other flat surfaces. Use the brush for general dusting tasks, such as dusting furniture and shelves, etc.

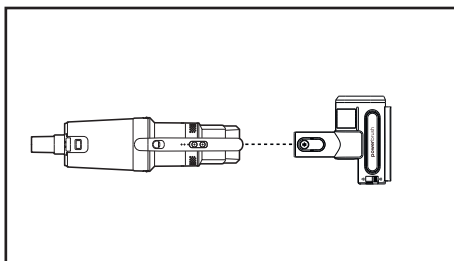

Motorised Pet Nozzle

The motorised pet nozzle can be attached on the extension tube or the main unit's air inlet to remove pet hair from stairs, carpet and upholstery.



USING THE ATTACHMENTS


Detaching the tools

Press the release button on the extension tube/motorised floor brush/ crevice tool/2-in-1 brush and then pull to detach the tool from the main unit.


Changing the roller brush/ plush anti-tangle roller.

Press the roller release button on the side of the motorised floor nozzle and slide out the roller, replace with your preferred roller brush or anti-tangle roller.

1

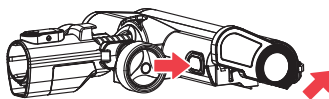

2

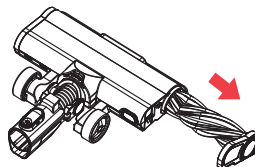



USING THE BASE STATION

Note: The dust canister capacity should not exceed the Max line to maintain optimal dust.

Do not use the base station without the dust bag, pleated filter and pleated filter cover installed.

Without a dust bag installed, the base station lid cannot be closed.

The charging mode and dust collection function cannot be used simultaneously.

1. Place the base station vertically on a firm, level surface and connect the power supply plug. Place the main body on top of the base station, the indicator light will start flashing and the battery will begin charging.

2. Press the dust collection button on the base station to automatically open the bottom of the dust canister bottom, dust/dirt will automatically be sucked into the base stations dust bag. Dust collection action will stop automatically after approximately 20 seconds. If you want to manually stop the operation, press the dust collection button again.




- When the handset is removed from the base station, it stops collecting dust. Before completely detaching from the base station dust chamber, the bottom of the dust canister will be closed.
- The dust bag should be replaced promptly when the dust bag full indicator flashes.
- The filters should be cleaned every three months and must be completely dried before refitting.


Warning: When cleaning base station filters and/or removing the dust bag, turn off the vacuum cleaner and the base station and disconnect from the mains outlet.




REPLACING THE DUSTBAG

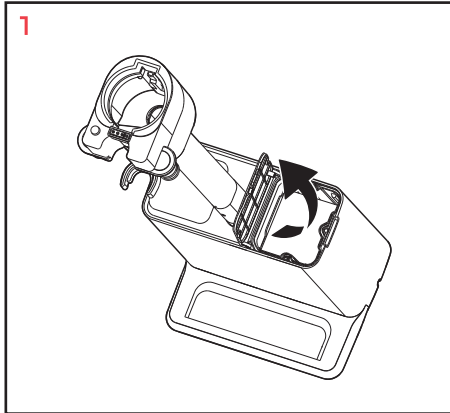

1. Open the top cover of the base station.

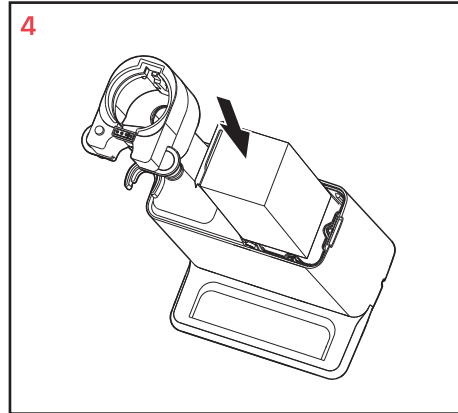


4. Align the new dustbag and push down into place.

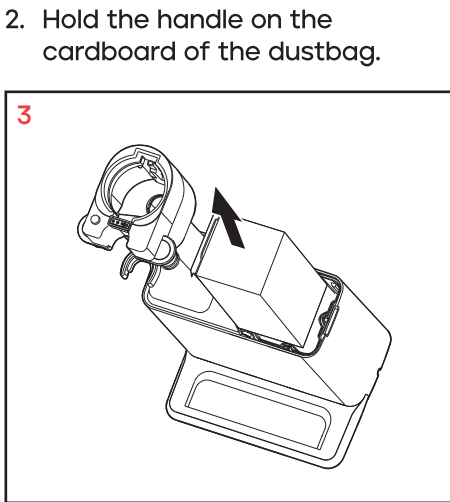


3. Remove the dustbag using the cardboard handle.




CLEANING THE DUST CANISTER

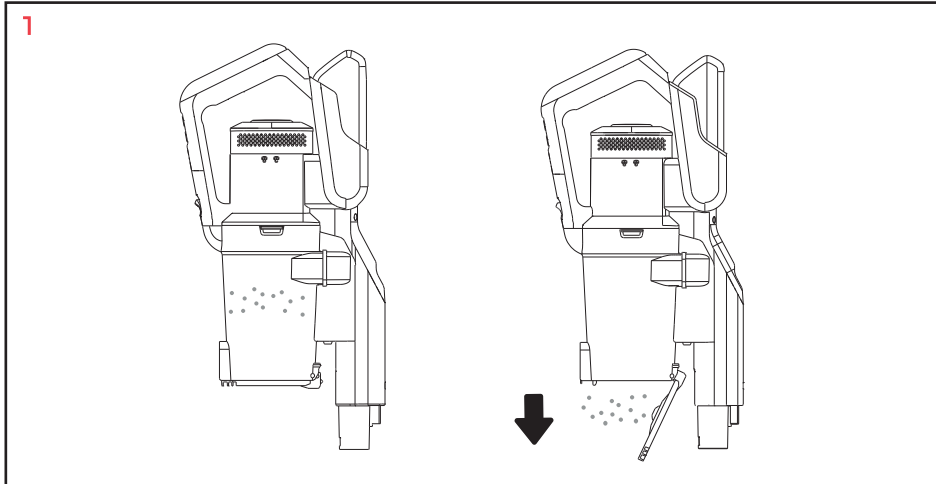

1. Either empty the dust canister automatically using the base station, following the instructions provided or by holding the main unit over a waste bin, pull down the latch on the bottom of the dust canister to empty the dust.

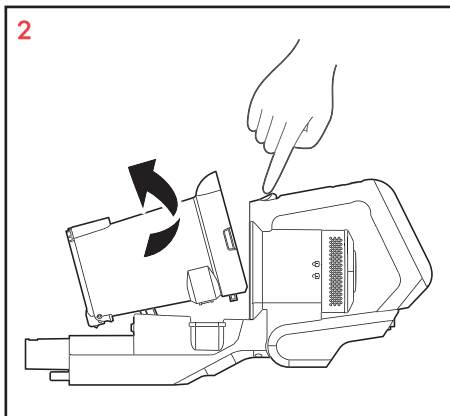

2. Lay the main unit flat, press the dust canister release button to remove the dust canister assembly. Remove the filter assembly and circular sponge filter.

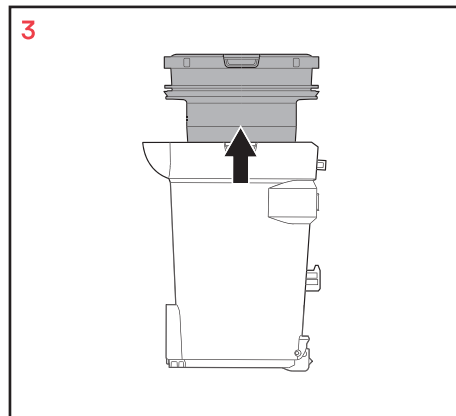







3. Wash the dust canister with clean water and dry thoroughly.



CLEANING THE DUST CANISTER FILTERS



Note: When the suction power of the hand vacuum decreases, wash and thoroughly dry ALL the filters.

1. Rinse the circular sponge filter and filter assembly under running water.
2. Dry thoroughly before refitting.

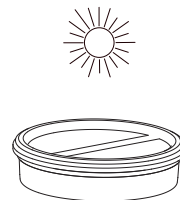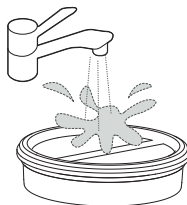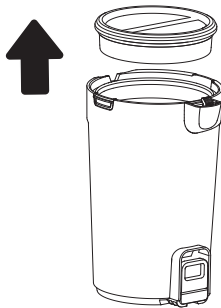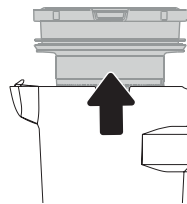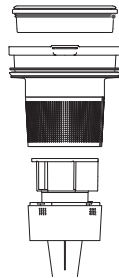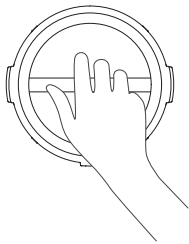



CLEANING THE CIRCULAR HEPA FILTER


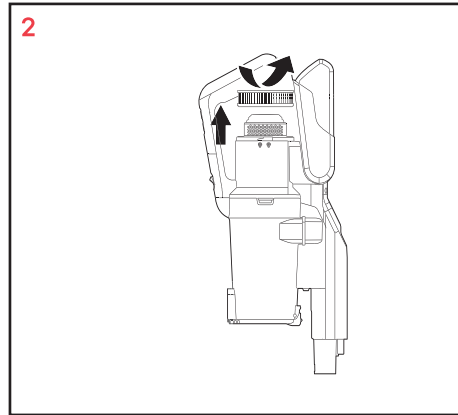
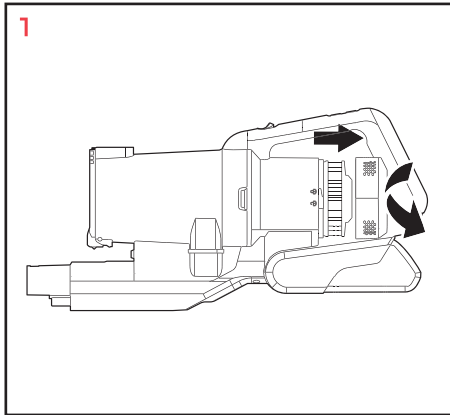


1. Lay the main unit flat, hold the appliance with one hand and with the other turn the lid of the main unit counter clockwise to remove.
2. Take out the HEPA filter, tap to remove dust from the pleats, ensure any dust sticking to the sponge around the outer of the filter is also removed.
3. Rinse under running water and dry thoroughly before re-fitting.

Note: All parts **MUST** be thoroughly dried before re-assembling the filters in the dust canister and main unit.



CLEANING THE BASE STATION FILTERS

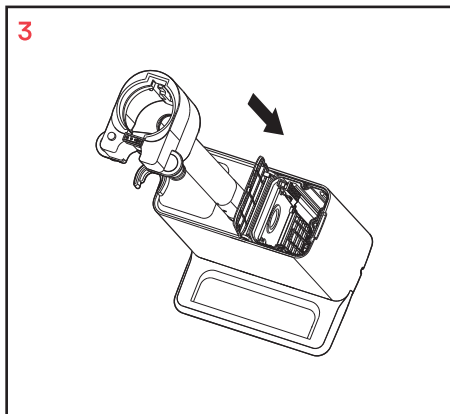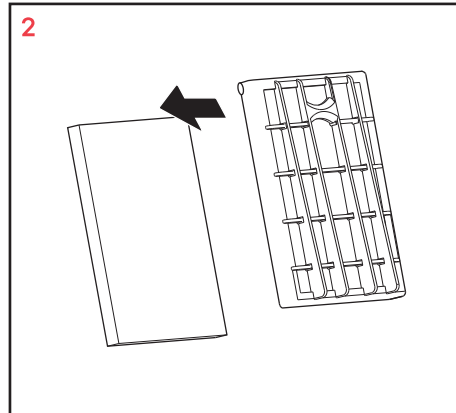
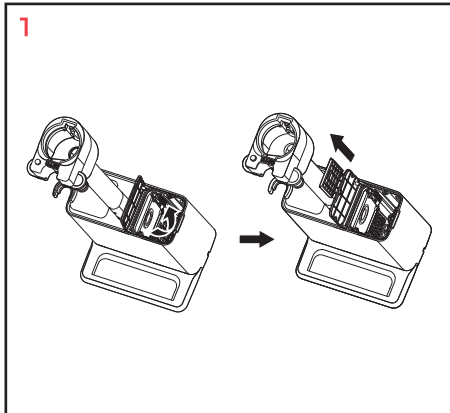


Note: The dustbag has to be removed to access the black/white filter.

1. Hold the handle on the upper part of the filter holder and lift to remove.
2. Remove the black/white filter from the filter holder. Tap the filter to remove any dust, then rinse under a running tap. Dry thoroughly before re-fitting.
3. Refit the filter and holder before locating the dust bag.



CLEANING THE BASE STATION HEPA FILTER

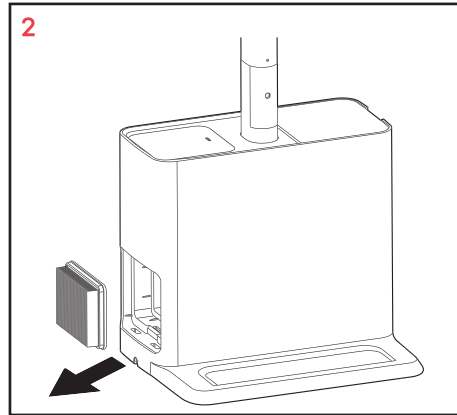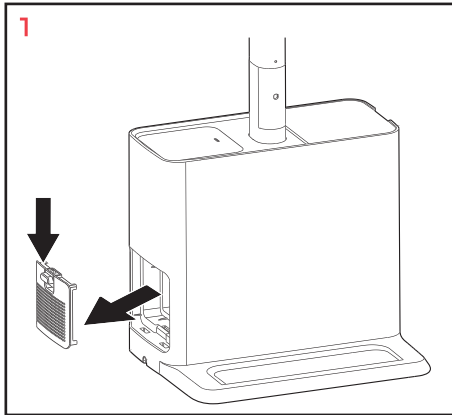

1. Press down on the release button of the filter cover and remove.
2. Remove the HEPA filter.
3. Hold the HEPA filter over a waste bin and tap to remove any dust and debris.
4. Rinse under a running tap.
5. Dry the HEPA filter thoroughly before re-fitting.

Warning: Never operate the appliance without a dust bag, filters and filter covers in position. The guarantee may be invalidated if the motor is damaged due to: using the appliance without the filter(s) installed; not cleaning the filter(s); not replacing a damaged filter; not clearing any blockages.



CLEANING THE MOTORISED FLOOR NOZZLE

1. To remove the roller follow the instructions for changing the roller brush/plush anti-tangle roller.
2. Any build-up of hair etc, can now be removed from the roller brush.
3. Once the roller brush is cleaned, replace it by sliding back into the floor nozzle ensuring that it is securely fitted.

STORAGE

Place on firm, level surface. Align the vacuum cleaner's dust canister with the suction inlet of the dust collector assembly and slot into position.

ENERGY CONSUMPTION

Information for power consumption and maximum time to reach applicable low power condition:

Standby mode / low power consumption condition:	<0.5W
Setting:	After being fully charged, the appliance will automatically enter a low power consumption mode.
The maximum time needed to reach the applicable low power condition:	10 minutes



TROUBLESHOOTING

Problem	Solution
The vacuum cleaner doesn't switch on	The battery is low. Charge the vacuum cleaner with the charger supplied.
	The vacuum cleaner does not operate when it is being charged. Disconnect the appliance from the charger
Battery isn't charging	Ambient room temperature is too low or too high. (5°C-40°C)
	Battery has come to the end of life. Replace battery.
The vacuum cleaner cuts out.	The vacuum cleaner has overheated. 1. Clear any blockages from the accessories/ attachments. 2. Clean the dust canister and the filters. 3. Allow the appliance to cool down for at least 30 minutes before switching it on. 4. Replace the dust bag
	Check for dirt on the main unit connectors and motorised accessories and clean if required.
	The battery is low. Charge the vacuum cleaner with the charger supplied.
Poor suction.	Switch off the vacuum cleaner and clear any blockages from the accessories/attachments.
	Clean the dust canister and the filters.
	Replace the dustbag in the base station.
Motorised brush doesn't rotate.	Remove hair from around the roller brush.
	Check for blockages and clean if required.
	Check for dirt on the main unit connectors and motorised accessories and clean if required.
Vacuum cleaner is noisy.	Switch off the vacuum cleaner and check for blockages
	Empty and clean the dust canister.
	Clean/wash the filters.
	Replace the dustbag in the base station.
Dust comes from the main unit.	Ensure filters are fitted correctly.
	Clean/wash the filters if required.



TROUBLESHOOTING

Problem	Solution
The battery indicators are flashing.	The battery or the motor has overheated, turn off the appliance, clear any blockages and allow it to cool down for at least 30 minutes.
	When charging ensure the ambient temperature is between 5°C and 40°C.



SPARE PARTS

Part Number	Description	Qty per Product	Key Number
07119	Motorised Floor Nozzle Complete (Including Roller Brush, Retaining Clip And Silkscreen)	1	8
07110	Floor Nozzle Roller Brush	1	N/A
07120	Extension Tube with Flexi Clean Joint	1	6
07072	Crevice Nozzle	1	5
07073	Dusting Brush / Multi-Tool	1	18
07121	Circular Sponge Filter	1	16
07122	HEPA Pleated Circular Filter	1	2a
07123	Filter Assembly	1	12a
07124	Dust Canister including Release Clip	1	12
07125	HEPA Circular Filter Cover	1	2
07126	Battery Pack (Lithium-Ion)	1	1
07128	Motorised Pet Nozzle Complete	1	22
07130	HEPA Pleated Filter for Base Station	1	10a
07131	Pleated Filter Cover for Base Station	1	10
07144	Plush Anti-Tangle Roller	1	N/A
07145	Base Station Sponge Filter (Black/White)	1	N/A
790006	Pack of 5 Dustbags	5	N/A



CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



VC730005MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

morphyrichards.co.uk

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

