 


USER MANUAL

Model: HCD-12

 
Please read this manual carefully before using
and keep it for future reference.

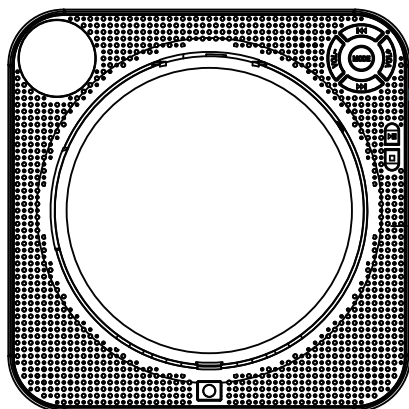

WALL-MOUNTABLE CD PLAYER

Installation Instanctious

1. Fix the wall-mounted plate on the wall with 4 screws(included in package).
- 2.Hang the CD player on the wall-mounted plate.

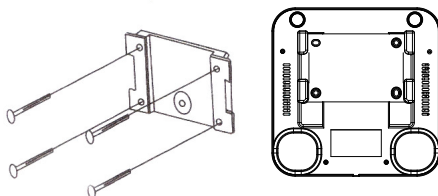

Product Features

Model	HCD-12
Frequency response	20-22KHz
Power output of earphone	16mW+16mW/16-32Ohm
Impedance of earphone	32Ohm/16mW
Compatible Disc	CD/CDR/HDCD/MP3/WMA
Bluetooth	Bluetooth Speaker, Version: 4.2
HIFI Speaker	Support EQ functon 3Wx2
USB	Support MAX 32G/ FAT 32 Format
Battery	Rechargeable battery 3.7V 2000mAh , Support about 3 hours
Power source	Micro USB 2.0 Standard
Power consumption	about 10W
Dimensions (L*W*H)	165x165x45mm
Weight	502.4g

Accessories



Remote control



Pack of screws



USB to micro
USB charging cable



Wall-m
ounted plate



User
Manual

 
 


USB
adaptor




Desk
stand

Buttons Instruction

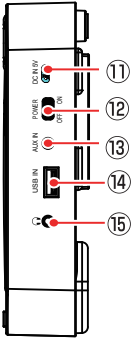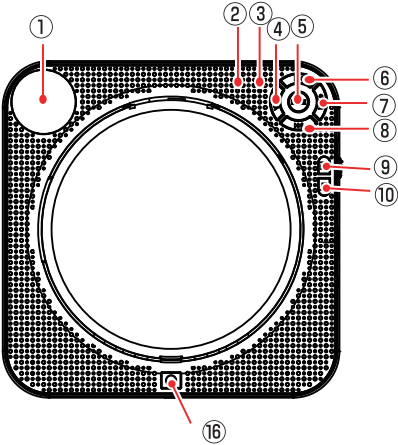

- 1.Status display
- 2.Remote control light sensor
- 3.Light charging LED
- 4.VOL-
- 5.Mode
- 6.Previous
- 7.VOL+
- 8.Next
- 9.Pause/Play
- 10.Stop
- 11.DC IN 5V
- 12.Power ON/OFF switch
(Push the cable)
- 13.AUX IN
- 14.USB IN
- 15.Earphone
- 16.CD cover Open button

 Remote Control

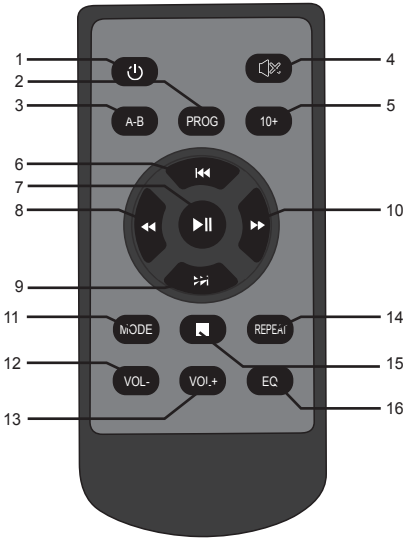

Item	Function	Item	Function
1	Standby	9	Next
2	PROG	10	Fast Forward
3	A-B	11	MODE
4	Mute	12	VOLUME -
5	Number 10+	13	VOLUME +
6	Previous	14	Repeat
7	Pause/Play	15	Stop
8	Fast Rewind	16	EQ

Button Operation

1. STANDBY

When the power on, turn the unit on/off.

2. Number Pad (10+)

Press this button to enter the 10+ songs suchas 10,20,30,etc.

3. PLAY/PAUSE

Press PAUSE button to pause playback;Press it again to continue playing from where it was paused.

4. STOP

Press STOP button to stop playback.

Press PLAY Button to play from the beginning.

5. MUTE

Press to mutes the audio output on the player.

6. VOL+/VOL-

Press to increase or decrease the volume output.

7. MODE

Press to change the playing mode.

8. PROGRAM

PROGRAM button apply for CD/USB/AUX/Bluetooth/FM Radio/MP3/WMA/HD-CD this function allow you randomly assign 20 songs(max) and play them in order.

9. AUX IN

Connect it with the AUX output device(such as DVD player, CD player or Mobile phone etc) via AUX cable.

Basic Operation

 
1. How to turn on/turn off the player

- A.the power switch is located on the side. Please toggle it to ON position to play normally.
- B.the power switch is located on the side. Please toggle it to OFF position to turn it off.

2. How to charge for the player

Connect the supplied USB charging cable with the power adapter, then plug it into a power source to charge the player. OR Connect the supplied USB Charging cable to a computer/desktop/car charger/power bank to charge it.

Charging Time: It will take about 4 hours for a full charge. When charging, the charging indicator on the player will be RED; Once the player is fully charged, the indicator will turn to GREEN.

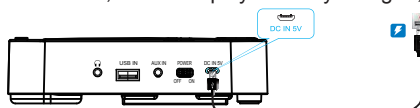

NOTE: When the player is in low battery, the LCD screen will be flashing. Please charge it.

3.How to setup the circle mode

Each time the REPEAT button on there mote control is pressed, the order of the tracks played will be as follws:Repeat1(REP1),Repeat all(ALL), random play(SHUF).



 
4. How to program the play

Press the PROG button to enter the programming mode when the play stops, press the PREVIOUS or NEXT button to select the track you want to program, press PROG again to confirm the programming. Up to 20 tracks can be programmed in this mode. After that, press the PLAY button to enter the programming play mode. Press the STOP button directly to enter the stop mode to cancel or reprogram.



5.. How to setup EQ effect

Press the EQ button to changes the different sound effects. There are a total of 5 sound effects: BBS, POP, JAZZ, ROCK, and CLASSIC,FLAT.

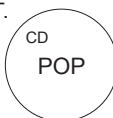


6. A-B Repeat


- A. During playback press a first time “A-B” to set the Starting Point A.
- B. Press “A-B” a second time to set the Ending Point B and player will repeatedly play the part between Point A and Point B.
- C. Press “A-B” a third time to cancel “A-B” repeat and resume normal playback.



 A-B Repeat Starting Point

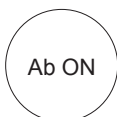

A-B Repeat Ending Point

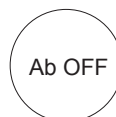 

A-B Repeat Cancelled

Bluetooth Mode Instructions

1. Press the "MODE" button to switch to Bluetooth mode, the "bt" will shown on the LED display, then the unit will be ready to pair other Bluetooth devices such as mobile phone, pads etc.
2. Activate the Bluetooth in your mobile phone and it will automatically search nearby Bluetooth device to pair.
3. Choose the name " HCD-12 " device in your mobile phone Bluetooth device list to pair.
4. Your mobile phone will be paired/connected to the CD player in a few seconds.
5. Playing music on your mobile phone and the audio will be transmitted to the CD player speaker through bluetooth.

Note:

This Player doesn't compatible with Bluetooth headsets, Bluetooth speakers and Car's Bluetooth.

USB Mode Instructions

1. Plug in a U-dick to the CD player USB port.
2. Press the "MODE" button to switch to USB mode.
3. the CD player will read and play the music in the U-disk automatically.

Note:

1. supports a maximum 32GB USB flash drive, which must be FAT32 format.
2. If can't read the U-dick, please check the format and capacity. If not FAT32 format, please format it to FAT32.

FM Mode Instructions

1. press the "MODE" button to switch to FM radio mode.
2. press the "◀" or "▶" button to skip the frequency, the channels will be automatically stored when seaching channels.

Troubleshooting

Problems	Reasons	Solutions
Cannot be turned on.	Power Switch is not turned on.	Please turn the OFF/ON button on the side to ON.
	The battery is exhausted.	Charge the player.
	The player is damaged.	Please contact us or ask a professional for repairs.
Cannot read discs.	The disc is installed incorrectly.	1. Make sure the label side of the disc is facing up; 2. Ensure the disc is inserted fully into the place.
	The disc cannot be recognized.	The player is only compatible with CD, CDR, MP3, HDCD formats.
	The disc is dirty or damaged.	1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radially out to the edge with a clean & soft cloth; 3. Try another new disc to check if the disc is faulty.
	The loader is dirty.	Wipe the lens gently with a degreasing cotton swab. NOTE: DO NOT TOUCH THE LENS WITH YOUR HANDS.
Cannot charge battery.	There is no current at power outlet.	Make sure the power outlet is working.
	The plug is not plugged in correctly.	Make sure that the two plugs of the power cords are connected properly.
	The charger is damaged.	Replace the charger with another one matching the specification (DC 5V/1A).
	The player is damaged.	Please contact us or ask a professional for repairs. NOTE: While charging, please make sure that the Power source and the Charging voltage are DC 5V/1A. Excessive voltage input may cause machine overload damage.
Automatically skips part of the contents of disc.	The player has MODE function (Repeat, Repeat all, Random play, Preview play), Preview play means that only 10 s per track will be played.	Please ensure the Preview play MODE is off
Noisy and screaming when it plays.	Usage time of the disk may be too long, so the disk is not smooth.	1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radically out to the edge with a clean & soft cloth; 3. Try another new disc to check if the disc is faulty.
	If there is a "Jiji" sound inside the earphone, it may be caused by scratching of the disc.	Please change to another disc, and do not use the old one again to prevent the player from damage.

Warning

1. Never play a cracked DVD or CD, that would damage the laser.
2. Please remove the protection card from the laser before using it.

Please contact us at any time if you meet any inquires while using this CD player.
Our Customer Service Email: support@monodeal.net