



## DECIBEL 20 16W Wireless Soundbar



Thank you for Buying Decibel 20 Stereo Sound Bar.  
To experience safe and seamless music listening,  
we suggest you to please read this  
user manual carefully.

USER MANUAL

### Package Consists :

1. Decibel 20 Soundbar
2. Charging cable
3. User Manual

### Direction for Use

- 1. Device to Connect :** Turn "on" the device by ON/OFF Switch on the rear side DEVICE set at default wireless mode (BT). Turn on wireless device, search name Decibel 20 and connect, start playing music after connection successfully.
- 2. Suitable** for all kinds of mobile phones equipped with wireless technology
- 3. Mode Switching :** Enter into wireless by default when starting-up. switching sequence is as follows : Wireless mode, and TF card /USB / AUX Mode : set Postinsertion priority.
- 4. Indicator :** Wireless search status ;- blue light flashes quickly about 0.5 sec. time, wireless pairing, blue light always on , blue light flashes slowly for 1.5 sec. time during play time AND red light flashes during battery charging ( CHARGER CONNECTED) and OFF when battery fully charged..

**5. Volume Key + - :** Intial volume level set at 60% and to change volume + or - press respective volume key for long time and for next or prev. song /prog. quick press Volume key + & vol - .

**6. Charging to use :** The device is built-in with charge protection circuit, and can be connect to (Type-C) charger 5V DC for about 2.5Hrs to fully charge during low battery charge beep sound.

**7. Calling Facility :** During wireless connectivity can make or receive call (through mobile phone paired with hand free calling)

**8. USB/MMC & AUX MODE :** Insert appropriate device to connect and set tonal level for your desired music listening.

### Troubleshooting

Auto power off: The battery protection is automatically activated when the battery is low with a beep indication, please use it after charging 2.5 hours.

Connect the device no sound: Device interface connection error, please select the correct audio output port.

No function or function keys wrong, not work, try again after switch "Off"- "ON".

Charging LED not glow, try again to charge after use for some time ( battery fully charge).

### Features

- Wireless connect
- LED Indicators
- Stereo (R+L) Musical Sound for wide spectrum listening.
- Support U-disk / TF card/ USB/AUX Play mode
- Mobile phone connectivity.
- Built-in-lithium polymer battery
- Support MP3/WAV/WMA/FLAC/APE music format decoding

### Technical Specifications

Bluetooth	: V5.3
Transmission Distance	: 10m
Speaker Output	: 16W
Frequency Range	: 40Hz - 20Hz
Channel separation	: 35 dB
Play Time	: 2 Hours
Battery Capacity	: 1800mAh
Battery Type	: Li-ion Polymer

### Key Function

- **Turn "on"** the device set the desire sound level by volume key +-.
- **Mode Selection :** Short press on the mode button to select the desire mode.
- USB/TF card & AUX in - interface when inserted default setting.
- DC 5V interface when charger inserted into the type-C for charging
- Prev, Next and PI/Pa function to enjoy selected music.



www.portronics.com

For Support

Visit : [www.portronics.com](http://www.portronics.com)

Email : [help@portronics.com](mailto:help@portronics.com)

Contact No. : +91 9555245245 , 011-42413131

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management  
E: [info@3recycler.com](mailto:info@3recycler.com)

For E-Waste & ROHS compliance  
refer to [www.portronics.com/ewaste](http://www.portronics.com/ewaste)