




Operator's Manual

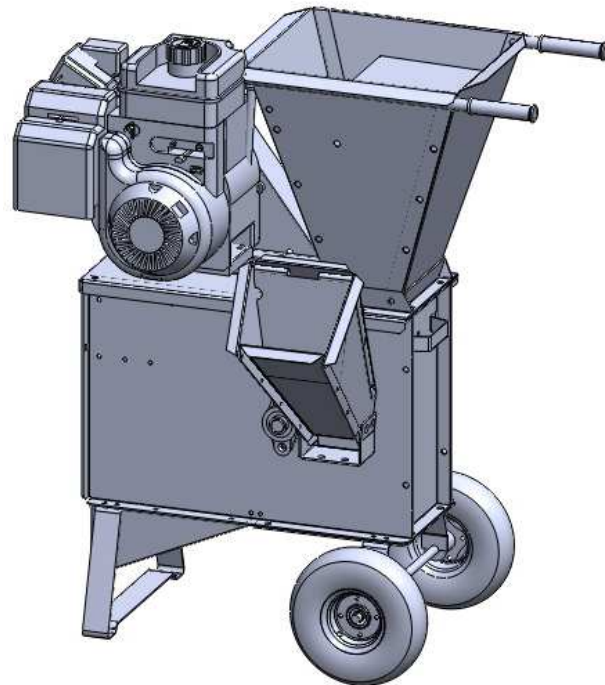

Wood Chipper Shredder

3"

YB2050



WARNING

Read and follow all instructions in this manual before attempting to operate this machine. Please keep this manual available for consultation at any time. Read it thoroughly and become familiar with the operating instructions, maintenance and security indications. Failure to follow these instructions can result in serious injury to yourself and others.

Rederick Metal Industries Corp.
1925 NW21st Terrace
Miami, FL 33142

www.yardbeast.com | (305) 396-3396

THANK YOU!

We greatly appreciate that you have purchased a wood chipper manufactured by us. The same has been designed and carefully fabricated to give you excellent performance and reliability. We truly hope it exceeds your expectations.

Please read carefully and follow all the instructions in this manual before operating this wood chipper. This document tells you how to set up, operate and maintain this machine safely and easily. Make sure to follow all recommended safety measures, and instruct any other person that will be operating this chipper. Failure to comply, could result in personal serious injury to the operators and others. All information contained in this manual refers to the latest product information available at the time of printing. It is recommended that you review the manual frequently to familiarize yourself with the unit, operation and its features.

We are developing and improving our equipment continuously (Kaizen); if you have a problem, doubt, or if any information in this manual does not match what is on your wood chipper, don't hesitate to contact your dealer or authorized service representative, or any case please contact us directly. The phone numbers, web site and mailing address of Rederick Metal Industries Corp. are located on the next page. In the case that your wood chipper is equipped with an engine; the engine manufacturer is responsible for all matters related to the performance, power output, specifications, warranty and maintenance of it. For more information see the Owner's Manual/ Operator delivered by the engine manufacturer. This is shipped in a separate packaging, together with its unit.

INDEX

Important Safety Measures.....	3
Assembly and Setup.....	6
Controls and Features.....	9
Operation.....	10
Maintenance and Adjustment.....	12
Service.....	13
Troubleshooting.....	15
Parts Replacement.....	16
Warranty.....	17
Spare Parts List.....	18

PRODUCT REGISTRATION

Before you assemble and use your new wood chipper, please locate the information plate on the unit and record the information in the boxes located at the bottom of this page. The plate is located in the lower left part of the machine on the feed hopper side. If you have to request technical support via our web site, phone customer support, or a dealer/servicing dealer, you will need this information.

MODEL NUMBER

--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--

CUSTOMER SERVICE

In case you have problems to assemble this wood chipper or have questions with regard to the controls, operation or maintenance of the same, you can request assistance from us. You can choose the options that are presented below: 1925 NW 21 ST TERRACE, Miami, FL 33142 /Phones: (305)-396-3396/ web site: www.yardbeast.com/ email: customer.service@yardbeast.com

IMPORTANT SAFETY MEASURES

This machine is designed to be used in compliance with safety regulations contained in this manual. As with any type of motorized equipment, an error or negligence on the part of the operator can cause serious injury.

This machine is capable of amputating fingers and hands; it also expel foreign objects with great force, that can cause damage to a person by facial and body exposure.

In case of any emergency, attempt to shut off engine and seek immediate help.

 The presence of this symbol indicates that these are important safety instructions that must be followed in order to avoid putting at risk your personal safety and other's. Read and follow all the instructions in this manual before operating this machine

When you see this symbol:



KEEP WARNINGS IN MIND

SYMBOL IDENTIFICATION

It is important that the operator understands the safety symbols that are located in different places of this wood chipper. Below are the list of symbols and the information expressed within.



Wear Ear Protection



Wear Eye Protection



Wear Safety Gloves



Do not place your hand beyond this point



Warning

Protective equipment required for the operation of this equipment..

- Safety goggles
- Safety gloves
- Ear Protection (muffs or plugs)
- Appropriate outdoor (preferably long-sleeved shirts and jeans for work)

Train Yourself

1. Read, understand and comply with all instructions included in this manual and in the machine before assembling and putting it into operation. Keep this manual in a safe place for future reference, as well as for ordering spare parts.
2. Familiarize yourself with all of the controls. Please know how to stop the chipper when it is operating and how to manipulate the controls quickly.
3. Persons older than 16 years of age, must read and understand the operating instructions as well as the safety rules contained in this manual. No persons below 16 years of age should operate this equipment.
4. Without receiving appropriate instructions, do not allow anyone to operate this machine.
5. Do not turn ON the chipper in closed spaces or in an area with little ventilation. The gases from the engine exhaust contain carbon monoxide, a lethal gas which is odorless.
6. Use appropriate protective equipment in each operation.
7. Don't put your hands close to the parts that are in motion or inside the feed hopper -as indicated in the prints - when in operation. Be careful not to touch any surface which is heated during the operation and remains as such for a long time after the wood chipper is shut down.
8. Stay away from the discharge, wood debris is expelled with great speed that can produce facial or body damage.
9. Do not operate the chipper if its belt guard is removed.
10. Keep the passersby away from the chipper while it is running. Do not allow the presence of minors in the work area. Stop the machine if anyone enters the area.
11. Turn off the engine and disconnect the spark plug before servicing the equipment.

Preparations before chipping

1. Carefully inspect the area where the equipment will be used.

2. Protect your eyes, always use safety glasses while operating this machine. Otherwise, objects thrown that bounce can seriously injure your sight.

3. Use ear protection. This will protect you from the engine noise and noise produced by the chipper when you feed the material into the hopper.

4. Use work gloves with palm of leather or industrial grade cotton/rubber when you feed the material into the hopper. Before you turn on the machine, check all bolts and accessories to ensure that the machine is in safe operating condition.

5. Perform a visual inspection of the machine in frequent intervals to check whether the chipper has suffered any important damage resulting from operation.

6. Maintain and replace the safety labels and instructions as necessary.

Safe Handling of Fuel

To avoid personal injury or property damage, be very careful when handling fuel. The fuel that is used, whether Diesel or gasoline is highly flammable and the vapors are explosive. You can be seriously injured if fuel is spilled on yourself or your clothes which can ignite. Wash your skin and change clothes immediately.

1. Use only containers approved for Gasoline or Diesel .

2. Never fill containers inside a vehicle or truck. Always place containers on the ground away from your vehicle before refilling.

- 3 . Keep the nozzle in contact with the lip of the inlet to the engine's fuel tank or container at all times until it is full at recommended engine manufacturer specifications.

4 . No smoking should take place. Turn off all cigarettes, cigars, pipes and other sources of ignition.

5. Never refuel the machine indoors.

6. Never remove gas cap or add fuel while the engine is hot or running . Allow engine to cool at least two minutes before re- fueling .

7. Never overfill the fuel tank . Fill tank to no more than 1/ 2 inch below the base of the neck of the thread to allow room for fuel expansion.

8. Place the fuel cap back on and tighten securely .

9. Clean up spilled fuel on the engine and equipment. Move machine to another area. Wait 5 minutes before starting the engine.

Operation of the Wood Chipper

1.Check the oil and fuel level before starting the engine.

2 . Do not put hands near rotating parts or power inputs . Contact with the chipper and rotating parts –while in operation- can seriously damage fingers, hands .

3. Before operating the machine , open it. Check and clean the rotor of foreign debris objects , make sure the cutting chamber is empty and free of any foreign material.

4 . Thoroughly inspect all material to to be chipped and remove any foreign objects - such as nails, glass, steel wire, etc- that could cause injury to you or damage the machine.

5 . Do not attempt to chop material larger than specified in this manual. Puts you at risk of injury or damaging the chipper.

6. Keep all guards and safety elements in place and in good condition.

7. Do not operate this machine while under the influence of alcohol or drugs.

8. Never operate this machine without good visibility or light .

9. If the engine is hot, do not touch as it may cause severe burns.

10. Do not attempt to move the chipper while the engine is running .

11. While feeding material into the machine, keep your face and body behind the discharge zone .

12. Never attempt to unclog the outlet or discharge opening while the engine is running. Turn off the engine and wait until all moving parts are at a complete stop.

13 . If any situations occur which are not covered in this manual, be careful and use common sense. Swiftly turn off the chipper and then contact us for further advise on your situation.

Maintenance and Storage

1.Never tamper with the safety components. Check periodically that they are functioning properly.

2 . Make sure all screws, bolts , pins and cotter pins are in good condition to make sure the machine is in safe operating condition . Also , visually inspect the chipper to control if it is damaged and determine if repair is necessary.

3. Lubricate the bearing often as maintenance chart indicates(found below) to avoid wear ; it also protects from corrosion and reduces heat , prolonging its life.

4. Before cleaning, repairing or inspecting the chipper, stop the engine and check all moving parts have stopped.

5 . Do not change the engine governor settings or over speed the same. The governor controls the maximum safe operating speed of the engine.

6. Maintain or replace safety and instruction labels as necessary.

7. Follow the instructions in this manual safely storing this machine off season.

8. Never store the chipper or fuel container in an enclosed space where there is presence of flame, spark or pilot light such as water heaters, furnaces, clothes dryers, etc.

9. Allow machine to cool at least 10 minutes before storing after shutting it down.

10. Always refer to the operator manual for proper instructions for off-season storage.

11. If you need to empty the fuel tank, do it outdoors.

12. Observe the rules of proper disposal laws and regulations for gas, fuel, oil, etc. to protect the environment.



DO NOT MODIFY ENGINE

To avoid serious injury, do not modify the engine in any way. If you change the engine governor settings, it can get out of control and operate at unsafe speeds and off-spec. **Never change the factory settings of the engine**

ASSEMBLY AND SETUP

Installation and Setup:


- 1 Wood Chipper Shredder YB2050
- 1 Discharge Hopper.
- 1 Chipping Hopper.
- 1 Pouch that includes:
 - Fasteners, Safety pins, Safety accessories
- 1 Wheel Steel Frame
- 1 Triangle type steel base
- 2 Pneumatic Wheels
- 1 Operating Manual and Engine Manual

Assembly of the YARDBEAST 2050


Note: This unit is shipped without fuel and without oil in the engine. Fill with either diesel fuel or gasoline (**depending on the engine type**) and oil as indicated in the instructions in the engine manual BEFORE operating your wood chipper

❖ Taking Shipping Cage off


1. Remove plastic wrapping.
2. Unscrew each leg of the cage as shown in next Figure.

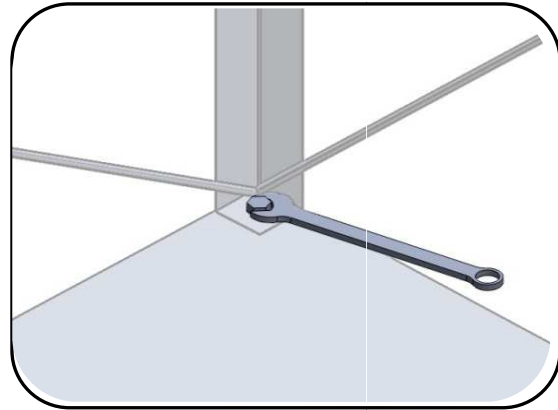

3. Lift cage (done better by 2 persons)

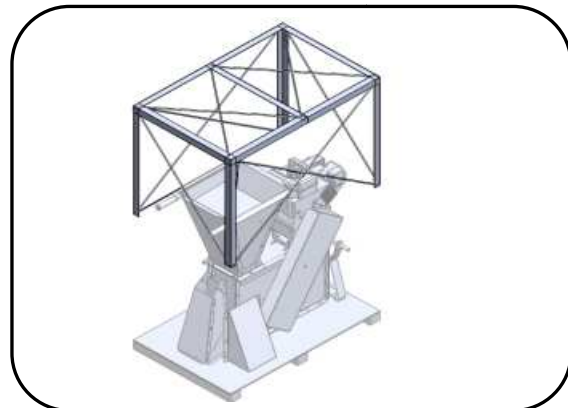

4. Remove the chipper by unscrewing the shipping fasteners. See figure below.

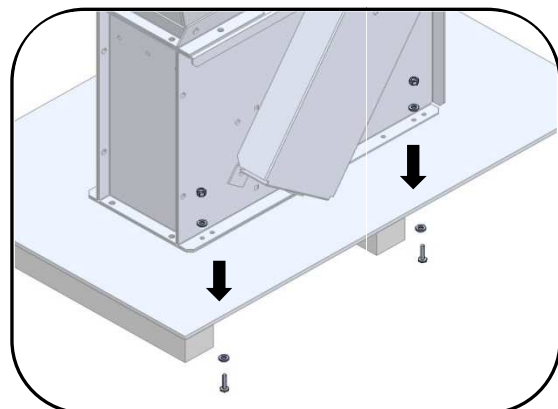


❖ Discharge Hopper Assembly

1. Assemble discharge hopper into chipper as shown on figure below.

2. Fasteners used:


- a. 4 Hex Bolts 1/4" x 1"
- b. 4 Hex Nuts 1/4"
- c. 4 Pressure Washers 1/4"
- d. 4 Flat Washers 1/4"

Note: Do not yet assemble where triangle base goes.

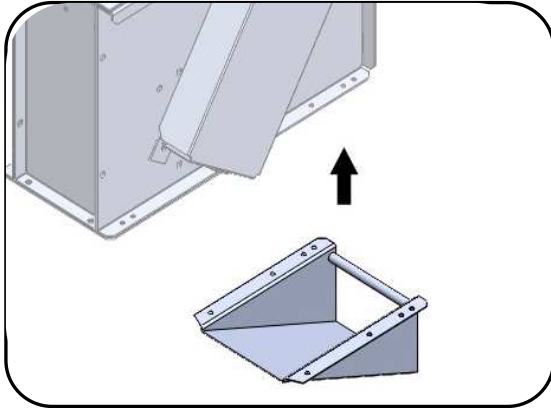


❖ Triangle back support assembly

1. Assemble triangle base as shown on the figure below.
2. Fasteners used:
 - a. Same fasteners used on discharge hopper.

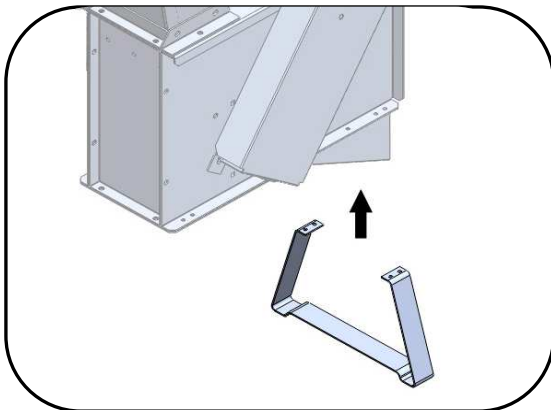


❖ Front Axle Assembly

1. Insert front axle as shown on figure below.
2. Fasteners used:
 - a. 4 Hex Bolts 1/4" x 1"
 - b. 4 Hex Nuts 1/4"
 - c. 4 Pressure Washers 1/4"
 - d. 4 Flat Washers 1/4"

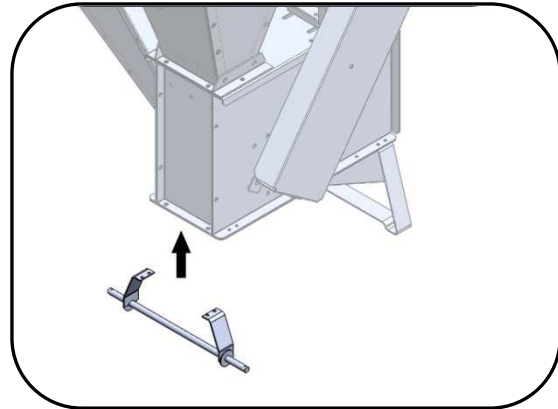


1. Insert wheel on each shaft.

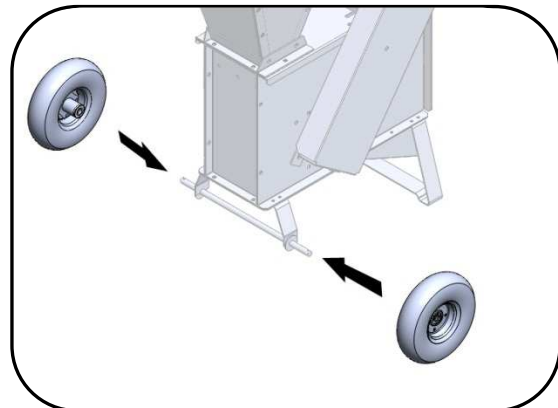

2. Insert 5/8" flat washer before inserting safety cotter pin as shown on figure below. Twist the ends of the cotter pin with some pliers to avoid losing the pins.

Fasteners used


- i. 2 Flat Washer 5/8"
- ii. 2 Cotter Pins 3/16" x 1"

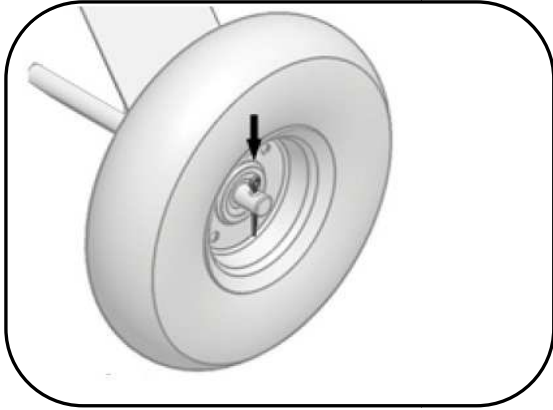

❖ Handle Assembly

1. Disassemble handle on shipping position and assemble as shown on Figure below.

Fasteners used: Same as provided for handles on shipping position.

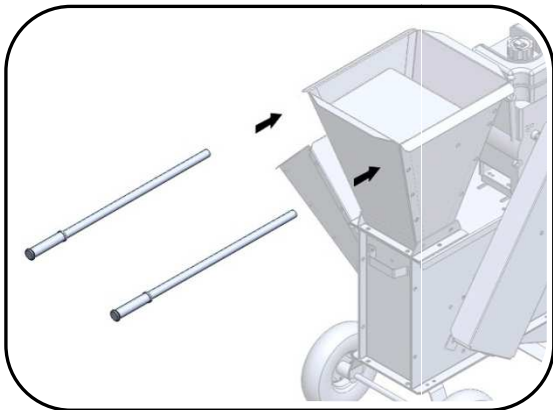


❖ Chipping Hopper Assembly

1. Assemble Hopper as shown on Figure below.

Fasteners used:


- a. 4 Carriage Bolts 3/8" x 1"
- b. 4 Pressure Washers 3/8"
- c. 4 Flat Washers 3/8"
- d. 4 Hex Nuts 3/8"

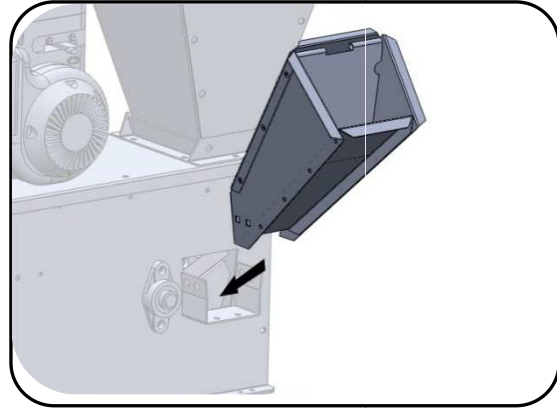

Preparing your Wood Chipper Shredder for Operation.

Fuel & Oil Fill up

Read and follow all instructions in the engine manual for more information on this matter. Once you have finished assembling your wood chipper, you must prepare your engine for the first start. Locate the fuel cap in the top of the engine and remove it. You should fill the tank engine with approximately 3 quarts of clean, fresh fuel.

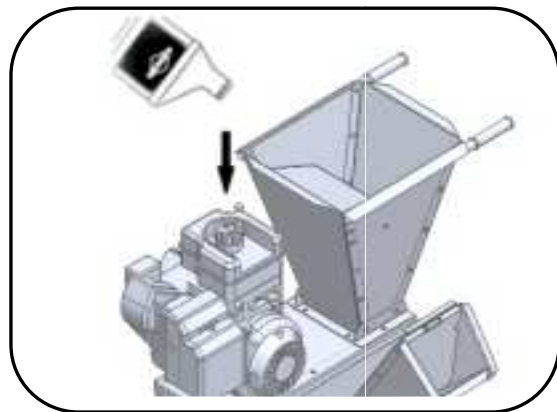


WARNING



Use extreme caution when handling fuel. Fuel is highly flammable and the vapors are explosive. Never fuel the machine indoors or while the engine is running or hot. Extinguish cigarettes, cigars, pipes and other sources of ignition.

CONTROLS & FEATURES

These are some of the wood chipper features and controls you should be aware of to familiarize yourself with the chipper. It is very important you understand its components for a safe operation of the machine and further instruct someone else on the operation of this chipper if needed.

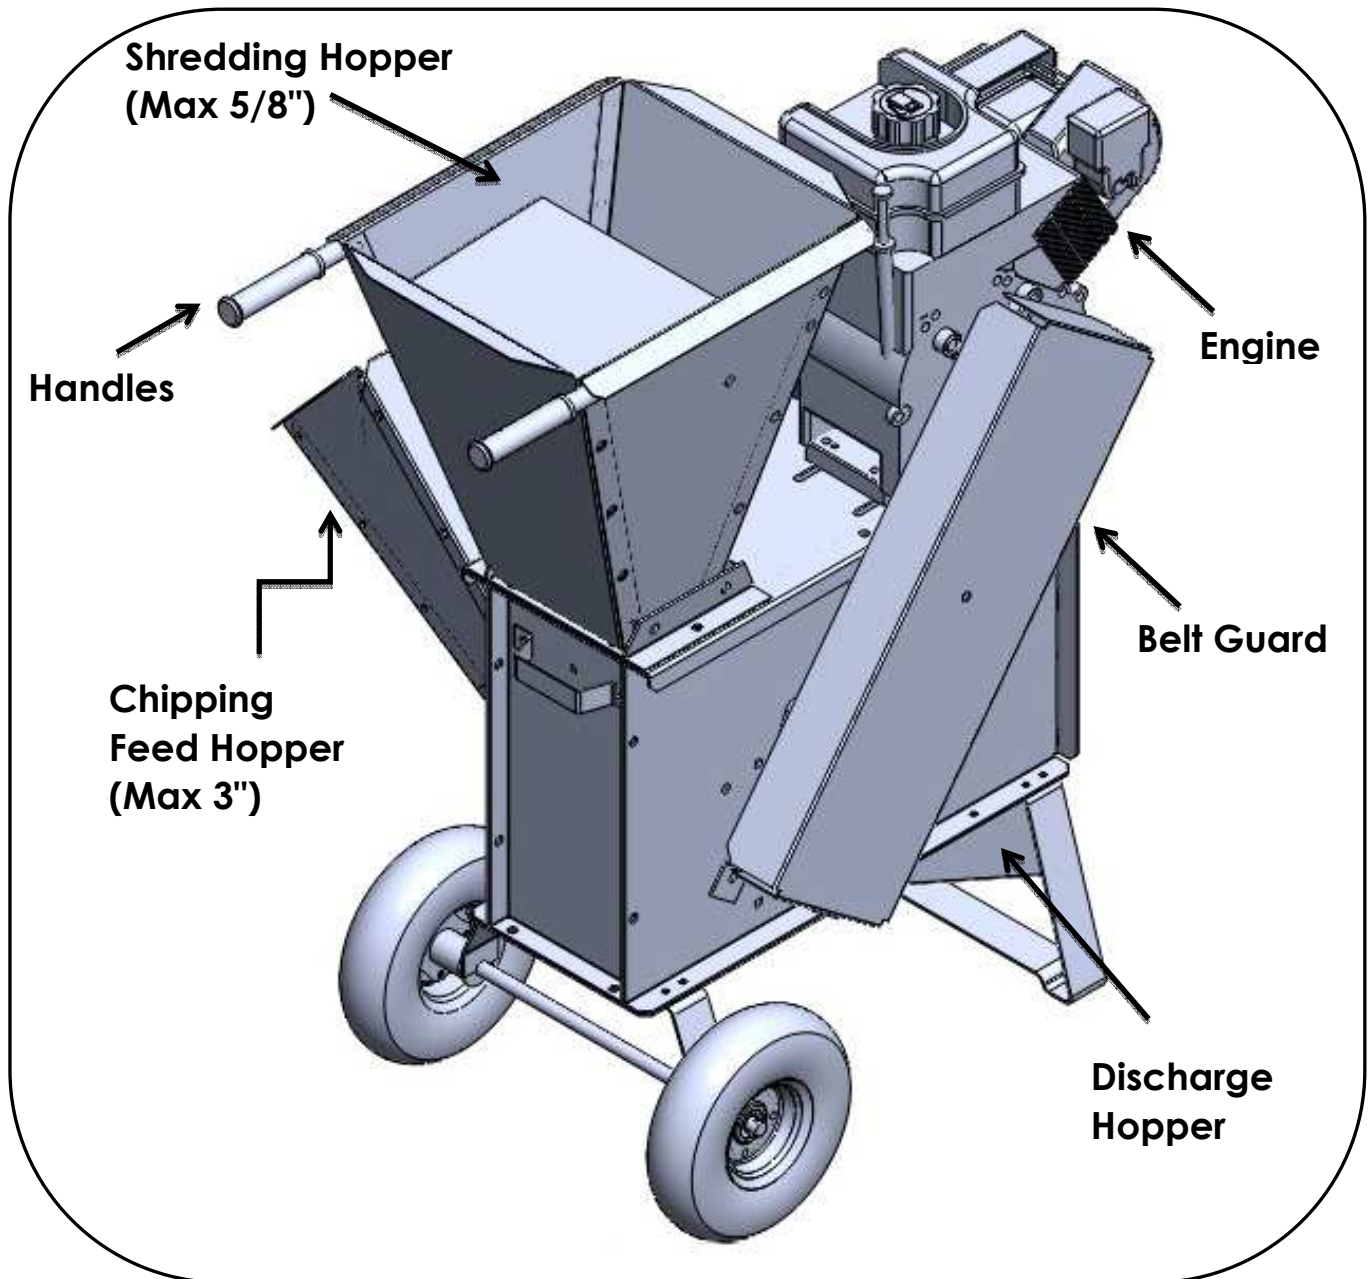

Chipping Feed Hopper:

Maximum diameter of branch allowed to be chopped is 3". Comes with spring steel guard to prevent sudden branch hiccups that can reach the operator. **Never reach beyond the spring guard**; if you need to push branches into the hopper, use another branch or twig to push further.

WARNING



When utilizing this wood chipper shredder, please use safety protection, as wood being chipped may splinter back into the operators body and face.

IMPORTANT: Do not attempt to chip branches with diameter greater than 3" as it causes excessive stress on the power transmission and chipper steel frame.

Shredding Hopper:

The shredding hopper is used to shred all green and dry material from trees and plants. You may shred branches and twigs with diameter no greater than 5/8". Best practice is to learn not to stall the engine when shredding, the material inside the chipper sticks around for a while before it is reduced to a size equal or less to the size holes on the screen at the back of the chipper.

Discharge Hopper:

Please pay attention when chipping to not overload the hopper exit. You may control this easily by swiping the excess wood chips with your feet to a side of the chute.



WARNING

Never open and look past the deflector guard when the chipper is in operation. You may get seriously injured by debris and other objects that may eject from the chipper at great velocity.

HANDLES: Handles are used to pull the machine around places. To pull, pivot the chipper towards your body by placing the foot on the front axle as anchor.

ENGINE: Always read the engine manual provided by the manufacturer to further instruct yourself on the operation and maintenance of the engine.

BELT GUARD: The guard houses the transmission of the chipper, comprised of a Heavy Duty centrifugal clutch mounted on the engine shaft, a belt, and a single groove pulley.

OPERATION

Working with your Wood Chipper Shredder

The material to be chipped enters the cutting area through the feed hopper where this is impacted by a sharp blade, which together with the anvil, produces a scissor cutting effect. Once cut and disintegrated by the flails, the material is radially ejected through the size screen into the discharge hopper where it slides out the chipper by gravity.

Engine Start

WARNING




Never run an engine indoors or in a poorly ventilated area. Engine exhaust contains carbon monoxide, an odorless and deadly gas.


To start the engine, please follow these steps:

1. Turn the fuel valve to the ON position and the switch in the ON position. (If equipped) See Fig. below.


PART INTENTIONALLY LEFT BLANK

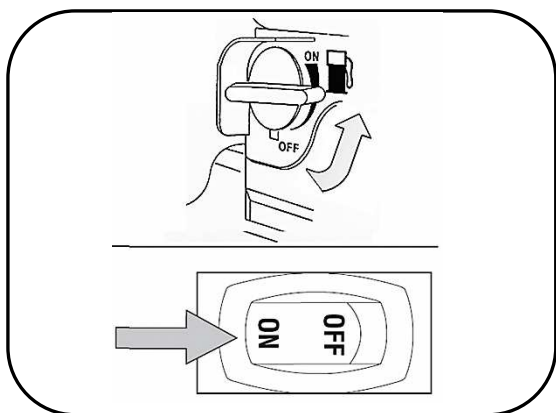


2. Move the choke control lever to the choke position. See Figure below.

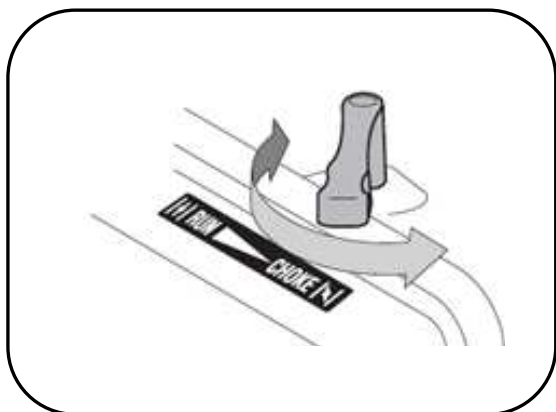

3. Move the lever throttle control to the fast position. See the Figure below.

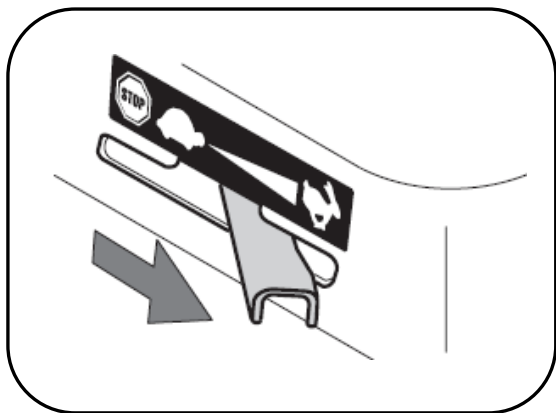

4. Firmly hold the handle of the recoil rope; pull the starter cord slowly until resistance is felt, then pull rapidly as shown in Fig. below.

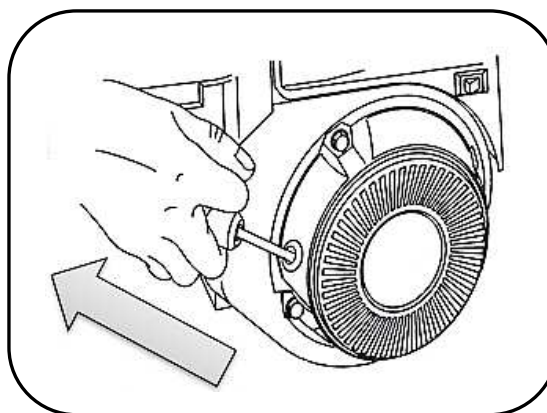


5. If the engine does not start, repeat again the previous three steps until engine fires up.

6. Once the engine starts to run, quickly turn the throttle lever (choke) to the RUN position.

7. If for some reason the rotor stops spinning, the engine loses power but it doesn't shut down, reason behind this is because this chipper is equipped with a centrifugal clutch that only engages when it passes a certain amount of RPMs. Turn off the engine (as directed below) and check what is blocking the rotor from spinning normally.

Stopping your engine

1. Move the throttle lever to the start position, where it was in the beginning (slow position).

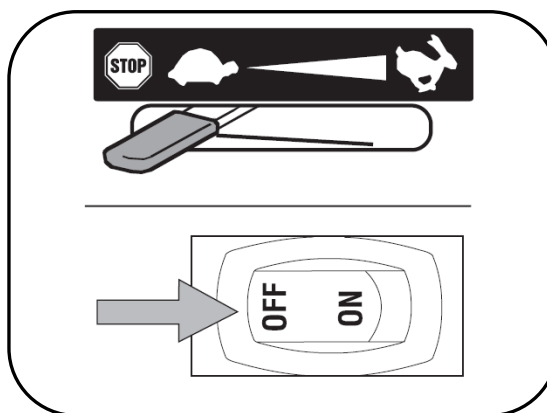

2. Shut the fuel valve and turn the engine switch OFF.

MAINTENANCE

Recommendations

1. Always observe safety rules when performing maintenance procedures.
2. The warranty on this wood chipper, does not cover items that have been subjected to wear, misuse or negligence from the operator. To receive any warranty benefits; the operator must have maintained the equipment as indicated in this manual.
3. All settings (blade, anvil, etc.) should be checked at least once before each use.
4. Periodically check all bolts, nuts, safety pins, etc.



WARNING

Stop the engine and disconnect the spark plug before servicing equipment.

Lubrication

1. Lubricate the rotating elements such as rotor, bearings once a season
2. Follow engine manual for engine lubrication instructions.

Wood Chipper Maintenance Schedule Chart.

Before each use
•Check the belt
Every 25 hours
•Grease bearings
• Regrind blade
• Regrind anvil

Engine Maintenance

Use only original spare parts for the engine. Other parts may not perform as well damaging the unit; and may cause injury. Moreover, the use of other parts may void your warranty.

Exhaust Gases Control

Maintenance, replacement or repair of devices and emission control systems may be performed by any manufacturer authorized establishment for these engines. Refer to engine manual for more information or contact us. We will be glad to help.



WARNING

Unintentional sparking can result in fire or electric shock.

Before making adjustments or repair into the unit:

- Disconnect the spark plug.
- Use only correct tools.
- Replacement parts must be the same and installed in the same position as the original parts.
- Do not strike the flywheel with a hammer or hard metal object; bearings suffer the load.

When checking for sparks

- Use an approved tester.
- Do not check for spark with spark arrestor removed

Engine Maintenance Chart.

First 5 hours
•Change oil.
Every 8 hours of use
•Check Oil Level
•Clean area around exhaust, controls and air intake.
•Clean recoil grille
Every 25 hours of use
•Clean air filter
•Clean pre-filter (if fitted with one)
Every 50 hours of use
•Change engine oil
•Replace oil filter
•Check muffler and spark arrestor

Annually

- Change air filter**
- Replace pre-filter (if fitted)
- Replace spark plug.
- Clean air cooling components.
- Replace fuel filter (if equipped)
- Check valve tolerance*.

**Clean filters and air intakes more often in dusty conditions or when there is high density of airborne particles.

*Not required unless engine performance problems are detected.

Replacing Power Belt

1. Stop the engine, disconnect the spark plug and check that the engine and transmission has stopped completely.
2. Unscrew the bolts holding the belt guard and remove.
3. Loosen the bolts holding the engine at its base.
4. Reduce belt tension by loosening the tension bolt (at back of the chipper), use a 9/16" hex wrench.
5. Proceed to replace and adjust tension again until it is felt tight by pressing down with at least four fingers.
6. Re assemble the belt guard.

Cleaning your chipper

Carefully clean the cutting chamber after each use.

WARNING



The rotor blade is sharp. Wear leather gloves to protect your hands when cleaning the cutting chamber.

NOTE: Blasting pressurized water to clean inside the chipper is not recommended.

Taking care of your engine

NOTE: Review the sections of maintenance and operation of the engine manual for detailed instructions.

1. Check the oil level.
2. Clean the engine regularly with a cloth or brush. Keep the air intake system clean to allow proper air circulation. Remove all grass, dirt and combustible debris from muffler area.

SERVICE

Rotor blade.


WARNING



The rotor blade and shredding flails are sharpened. Wear leather gloves to protect your hands when cleaning the cutting chamber

Blade re-sharpening


1. Stop the engine, disconnect the spark plug and check that the rotor of the chipper has stopped completely.
2. Disassemble chipper hopper.
3. Remove the bolts securing the blade to the rotor using a 5mm Allen key and a 9/16" hex wrench through the shredding hopper.
4. Remove the blade and proceed to change or blade sharpening.
5. Blade must be sharpened at a 30deg. angle and must not overheat to lose its heat treatment properties.
6. Reassemble.

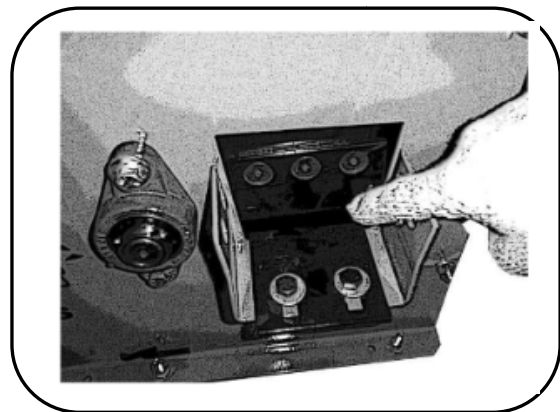

NOTE: It is recommended to place a wood stick in between the blade and the anvil to prevent the rotor from gyrating once you attempt to exert torque on the nuts.

Anvil sharpening or adjustment

1. Loosen the bolts from under the anvil bed. Use 2 - 9/16 "Hex Wrenches .
2. Between the blade and the anvil, you must leave a space of approximately 3/32" (2.38mm). This clearance is important to ensure best chipping performance
3. Make sure that the bolts are tightened.
4. When regrounding the anvil, do not overheat it, to prevent damaging the heat treatment properties of the steel.

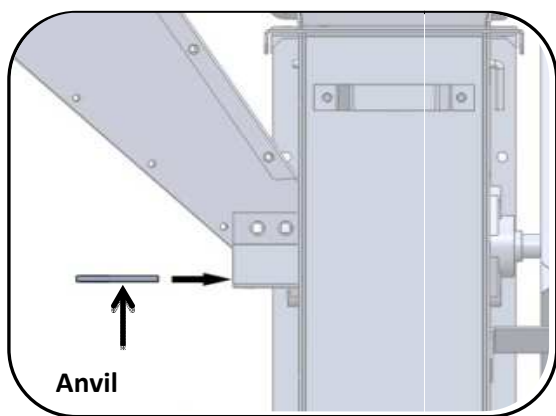


Storage of your unit.

1. Care must be taken to prevent oxidation on the surfaces. Cover all equipment with a light coat of oil and use an oil-soaked cloth for cleaning all equipment. Then, cover the chipper with a big plastic bag to prevent the environmental conditions from harming the equipment.
2. Follow the lubrication recommendations engine for off-season storage.
3. Store the chipper in a clean, dry area. Never store the machine or fuel container where there is an enclosed space, fire presence, spark or pilot light such as water heaters, furnaces, clothes dryers, etc.

¿What to do with the shipping steel cage?

You may modify the box as storage purposes, or you can cut it with a hand saw

into little pieces and dispose of them after. Be careful with sharp edges.

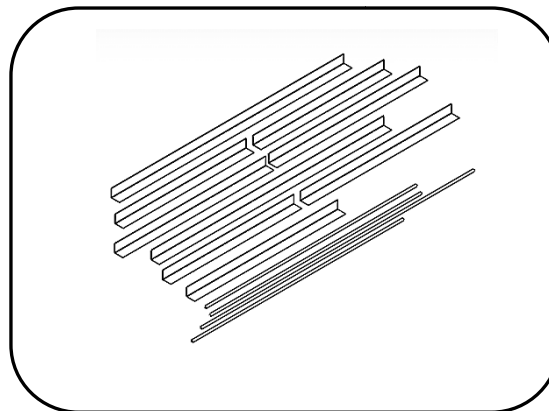

WARNING



Wear leather gloves to protect your hands when cutting the corners.

Do you have any questions?

Please contact us at:

www.yardbeast.com

(Customer Contact Form)

Or you may call us at:

(305) 396-3396




If you want to drop us an email you may do so at:

customer.service@yardbeast.com

TROUBLESHOOTING

Problem	Cause	Solution
Engine does not start	<ol style="list-style-type: none"> 1. The spark plug is disconnected 2. The fuel tank is empty. 3. Shut-off valve is closed. 4. Dirty air filter. 5. The carburetor is dirty 	<ol style="list-style-type: none"> 1. Connect the cable to spark plug. 2. Fill tank with clean, fresh fuel. 3. Turn the fuel valve ON 4. Clean or replace the air filter 5. Take it to the engine manufacturer authorized workshop
Low blade performance	<ol style="list-style-type: none"> 1. The blade is not in correct position. 2. The blade has dull edge. 3. Blade has cracks 	<ol style="list-style-type: none"> 1. Check and correct the position. 2. Sharpen the blade. 3. Regrind until cracks disappear or replace blade.
Low engine performance	<ol style="list-style-type: none"> 1. Lack of fuel. 2. The carburetor is dirty 3. Obstructed air filter 4. Loose spark plug cable 	<ol style="list-style-type: none"> 1. Fill the fuel tank. 2. Take engine to an authorized workshop. 3. Clean or replace the air filter. 4. Connect and tighten spark plug wire.
Engine overheats	<ol style="list-style-type: none"> 1. The engine oil level is low. 2. Restricted air flow. 	<ol style="list-style-type: none"> 1. Fill crankcase with proper oil. 2. Remove blower housing and clean.
Engine is erratic	<ol style="list-style-type: none"> 1. The spark plug wire is loose. 2. Fuel is old. 3. Water or dirt in fuel system. 4. The air filter is dirty. 5. Valve tolerance out of specification. 	<ol style="list-style-type: none"> 1. Connect and tighten spark plug wire. 2. Fill tank with clean, fresh fuel. 3. Drain the fuel tank. Refill with fresh fuel. 4. Clean air filter 5. Take the engine to authorized workshop.

PARTS REPLACEMENT

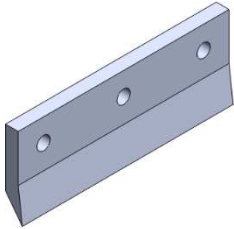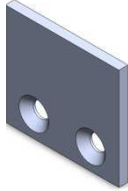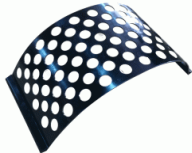Component	Part No. & Description
	# PART: 2050001 BLADES (2x)
	# PART: 2050002 ANVIL
	# PART: 2050003 SCREEN 7/8" STD
	# PART: 2050004 BELT
	# PART: 2050005 HEAVY DUTY CLUTCH
	# PART: 2050006 10 INCH-WHEEL

Manufacturer's Warranty

The limited warranty set forth below is given by Roderick Metal Industries Corp. – towards the YARDBEAST Chippers Outdoor Power Equipment line, with respect to new merchandise purchased and used in the continental United States.

Roderick Metal Industries Corp. warrants this product against defects for a period of two (2) year commencing on the date of original purchase and will, at its option, repair or replace, free of charge, any part found to be defective in materials or workmanship. This limited warranty shall only apply if this product has been operated and maintained in accordance with the Operator's Manual furnished with the product, and has not been subject to misuse, abuse, commercial use, neglect, accident, improper maintenance, alteration, vandalism, theft, fire, water, or damage because of peril, natural disaster or by acts of God.

Normal wear parts or components thereof are subject to separate terms as follows: All normal wear parts or component failures will be covered on the product for a period of 90 days regardless of cause. After 90 days, but within the two year period, normal wear parts failures will be covered ONLY IF caused by defects in materials or workmanship of OTHER component parts. Normal wear parts and components include, but are not limited to: belts, tires, knives, counter knives, knives adapters, flails, centrifugal clutch and bearings.

How to obtain service: Please contact Roderick MI Corp, Miami FL 33142. For info on how to service your machine contact us at (305)-396-3396 or write to customer.service@yardbeast.com or log on to our website at www.yardbeast.com.

This limited warranty does not provide coverage in the following cases:

- a. The engine or components parts thereof. These items carry a separate manufacturer's warranty. Refer to applicable manufacturer's warranty for terms and conditions.
- b. Centrifugal damage or components thereof. These items carry a separate manufacturer's warranty. Refer to applicable manufacturer's warranty for terms and conditions.
- c. Routine maintenance items such as lubricants, filters, blade sharpening, tune-ups, clutch adjustments, and normal deterioration of the exterior finish due to use or exposure.
- d. Roderick MI Corp. Does not extend any warranty for products sold or exported outside the continental United States; except those sold through authorized Roderick MI Corp. Dealers and/or channels of export distribution.
- e. Parts that are not genuine to the Yardbeast Chipper line will not be covered by this or any other warranty expressed by Roderick MI Corp.
- f. Transportation charges and service calls are not covered.

No implied warranty, including any implied warranty of merchantability of fitness for a particular purpose, applies after the applicable period of express written warranty above as to the parts as identified. No other express warranty, whether written or oral, except as mentioned above, given by any person or entity, including a dealer or a retailer, with respect to any product manufactured by us shall bind Roderick Metal Industries Corporation. During the period of the warranty, the remedy is repair or replacement of the product as set forth above.

The provisions as set forth in this warranty provide the sole and exclusive remedy arising from the sale. Roderick Metal Industries Corp. shall not be liable for incidental or consequential loss or damage including, without limitation, expenses incurred for substitute or replacement lawn care services or for rental expenses to temporarily replace a warranted product.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.


In no event shall recovery of any kind be greater than the amount of the purchase price of the product sold. Alteration of safety features of the product shall void this warranty. You assume the risk and liability for loss, damage or injury to you and your property and/or others and their property arising out of the misuse or inability to use this product.

This limited warranty shall not extend to anyone other than the original purchaser or to the person for whom it was purchased as a gift.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.


SPARE PART LIST

CHIPPING HOPPER

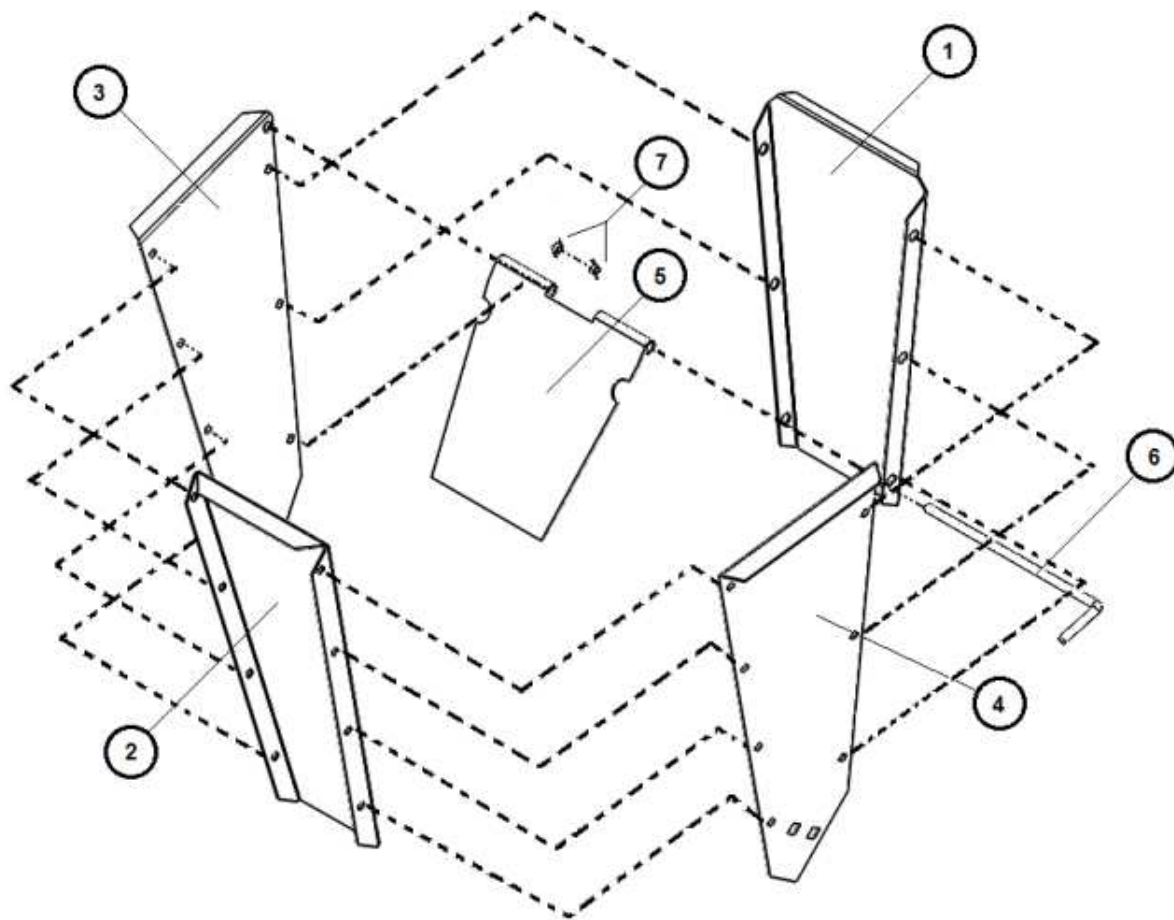


No	Component	Part No.
1	Top Cover	2050101
2	Bottom Cover	2050102
3	Left Side Cover	2050103
4	Right Side Cover	2050104
5	Safety Guard	2050105
6	Safety Pin	2050106
7	Spring MC 9271K51	2050107

DISCHARGE HOPPER

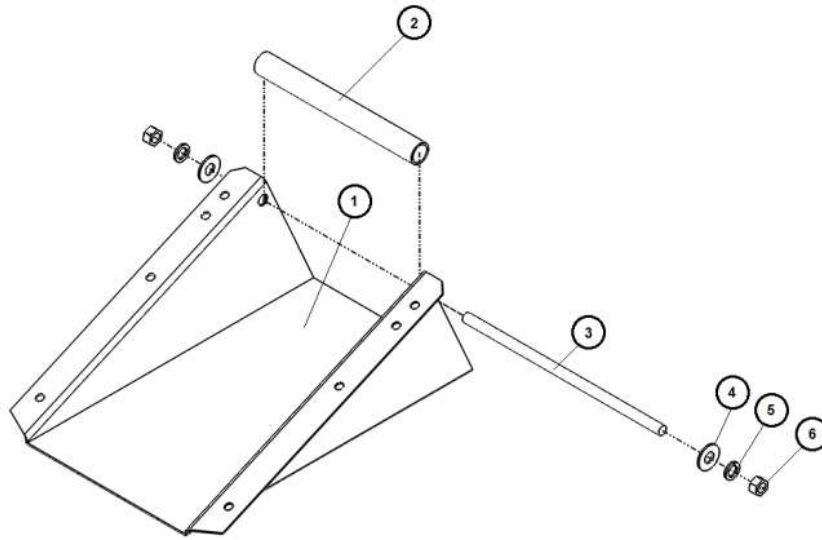


No	Component	Part No.
1	Discharge Hopper	2050201
2	Spacer	2050202
3	Thread rod	2050203
4	Flat Washer	2050204
5	Spring Washer	2050205
6	Hex Nut	2050206

BELT GUARD

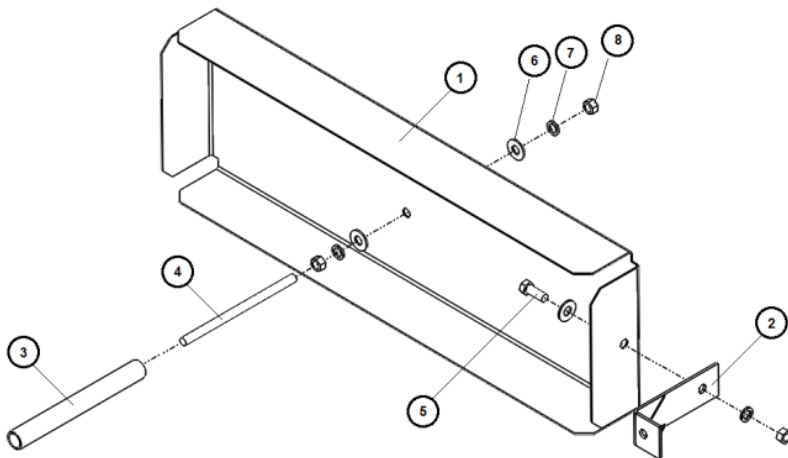

No	Component	Part No.
1	Belt Guard	2050301
2	Belt Guard Support	2050302
3	Tube Spacer	2050303
4	Thread rod	2050304
5	3/8" Hex Nut	2050305
6	3/8" Flat Washer	2050306
7	3/8" Spring Washer	2050307
8	3/8" Hex Locknut	2050308


ROTOR

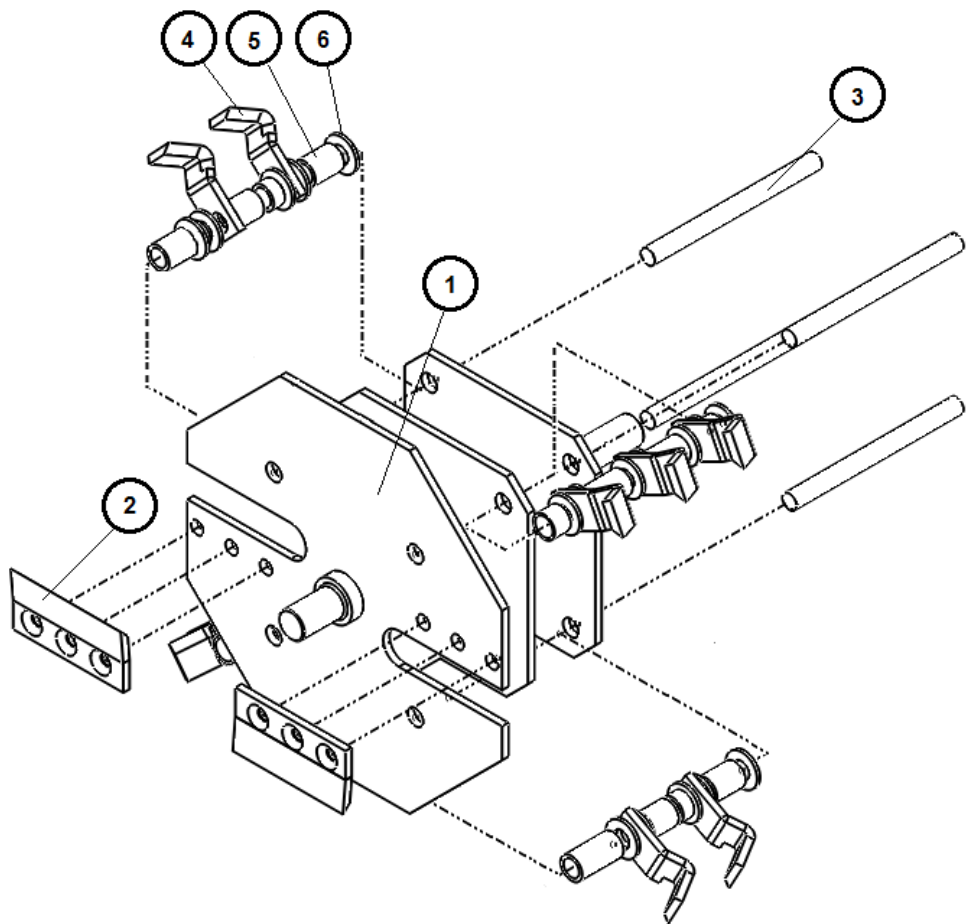

No	Component	Part No.
1	Rotor	2050401
2	Blade	2050402
3	Flail Pin	2050403
4	Flail	2050404
5	Spacer Kit	Contact Us
6	Flat Washer	2050406




CHIPPER

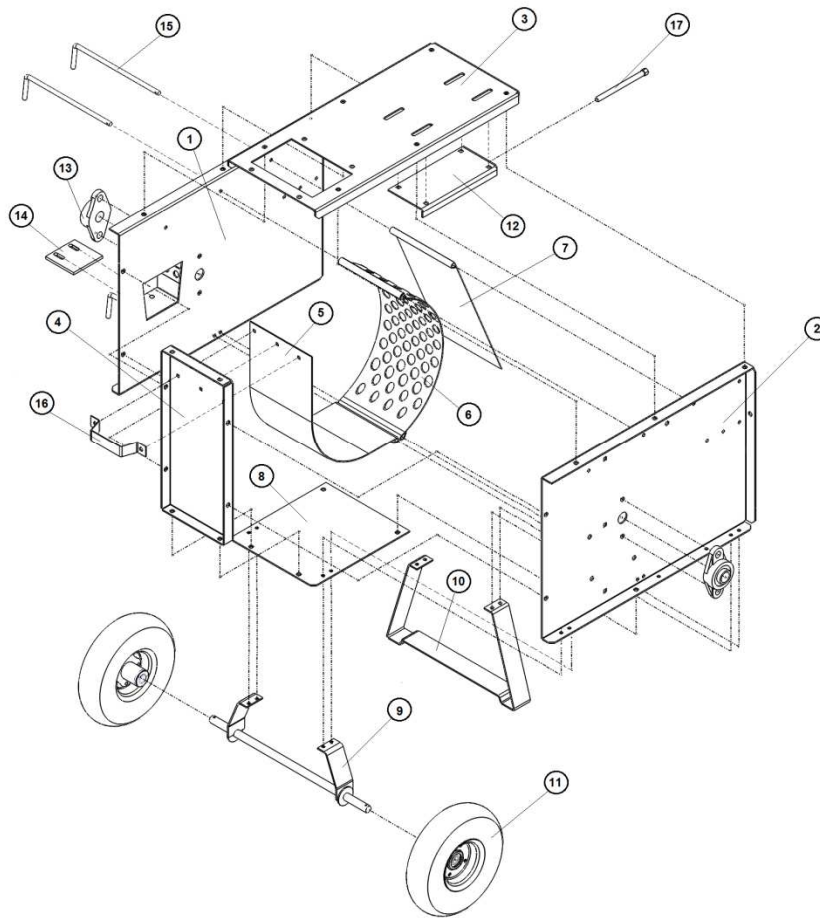

No	Component	Part No.
1	Left Cover	2050501
2	Right Cover	2050502
3	Top Cover	2050503
4	Front Cover	2050504
5	Blind Screen	2050505
6	Size Screen	2050506
7	Product Deflector	2050507
8	Bottom Cover	2050508
9	Wheel Support	2050509
10	Triangle Base	2050510
11	Pneumatic Wheels	2050511
12	Engine Tensioner	2050512
13	Bearing Unit	2050513
14	Anvil	2050514
15	Safety Pins	2050515
16	Front cover pull handle	2050516
17	Tension bar (thread rod)	2050517

TOP HOPPER

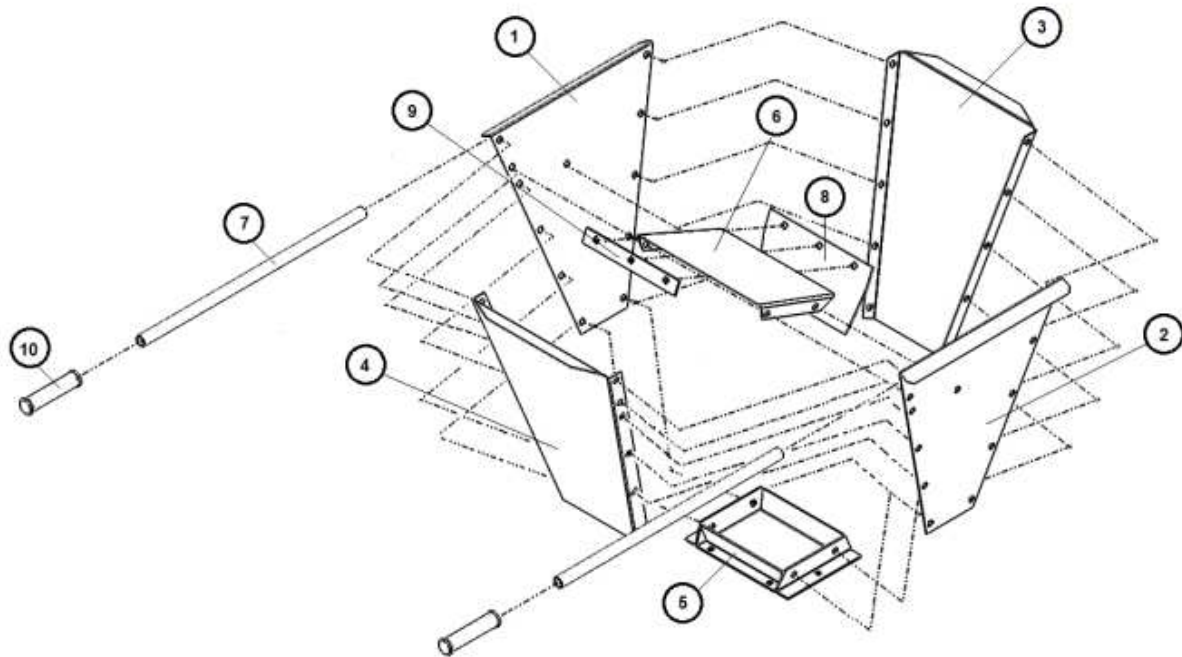

No	Component	Part No.
1	Right lid	2050601
2	Left lid	2050602
3	Front lid	2050603
4	Top lid	2050604
5	Top hopper support	2050605
6	Blowback cover	2050606
7	Pulling handle	2050607
8	Rubber deflector	2050608
9	Rubber holder	2050609
10	Handle grip	2050610

NOTES: