

尺寸:200*150mm
装订方式:打骑马钉
材质: 超感纸，封面封底180G/内页125G
印刷:四色印刷

备注：
第一页，左侧为封底，右侧封面
第二页，左侧为封面反面，右侧为内1页



www.offnova.com
support@offnova.com



User Manual

Interactive Flat Panel

● Welcome & Safety Information

Welcome to Your OFFNOVA Interactive Flat Panel! For the best experience and latest features, we recommend connecting to the internet and checking for software updates after setup. For the latest user manual, visit www.offnova.com to download the digital manual.

Unlock a new world of collaboration and creativity. Whether you're leading a dynamic meeting in the office, teaching an engaging lesson in the classroom, or brainstorming with family in the comfort of your home, your Interactive Flat Panel is designed to bring ideas to life. Get ready to connect, create, and inspire—wherever you are.

Safety Instructions

 **WARNING:** To reduce the risk of fire, electric shock, or personal injury, observe the following instructions and precautions whether you are using this product in the office, school, or at home. Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

Environmental Specifications

For optimal performance and extended product life, operate and store the Interactive Flat Panel within the following environmental ranges:

- Temperature: 0°C to 40°C (32°F to 104°F)
- Humidity: 20% to 80% RH (Non-condensing)
- Altitude: Up to 5000 meters

Safety & Operational Precautions

1. Ventilation & Placement: Keep the unit away from heat sources and ensure ventilation openings are not blocked to prevent overheating.
2. Power: Use only the approved power cord and ensure the power outlet is easily accessible.
3. Installation & Handling: Mount the unit using a UL Listed or equivalent bracket. Avoid physical impact, vibration, and excessive pressure on the screen. The forward tilt of the product will affect the touch effect. The suggested installation angle is 0°~5°.



Welcome & Safety Information

Cleaning

1. Safety Precautions

- Disconnect the power plug from the wall outlet before cleaning.
- Avoid contact with ventilation holes, as they may be extremely hot and cause burns.
- Do not move the display with cables attached.

2. Cleaning Instructions

- Gently wipe the panel surfaces with a soft, lint-free cloth.
- For stubborn dirt, lightly dampen the cloth with a mild detergent solution, wring it out thoroughly, and then wipe the surface. Finish by drying with a clean, dry cloth.
- Prevent any moisture from entering the unit or ventilation holes.
- Do not scratch the surfaces or use abrasive materials, solvents, or chemical sprays.
- Do not place rubber or PVC materials against the cabinet for long periods.

Important

To prevent permanent image retention (also known as "burn-in," "after-imaging," or "ghost imaging"), please observe the following precautions. This is a known characteristic of LCD technology.

- Always enable a moving screen saver when the display is unattended.
- Always use a periodic screen refresh feature when displaying static content for extended periods.

WARNING: While mild symptoms may fade after power-off, severe burn-in is permanent and irreversible. Such damage is not covered by the product warranty.

Welcome & Safety Information

Service

The casing cover should only be removed by qualified service personnel. If your monitor still does not function properly after following the instructions in this document, please contact official after-sales service. **Support@offnova.com.**

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions for future reference.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with a dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power cord from being walked on or pinched, particularly at plugs, power outlets, and the point where they exit from the apparatus.
9. Only use attachments and accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel.



● Directory

- 1. What's in the Box05
- 2. Product Overview06
- 3. Quick Start Guide07
- 4. Home Screen & Navigation.....10
 - 4.1 Status bar12
 - 4.2 Side toolbar13
 - 4.3 Desktop application17
 - 4.4 OPS Computer 18
 - 4.5 All Apps19
 - 4.6 Source20
- 5. Key Functions & Apps.....21
 - 5.1 Note21
 - 5.1.1 Writing & Editing21
 - 5.1.2 Content Creation & Management.....23
 - 5.1.3 File Handling & Sharing24
 - 5.2 File Browser25
 - 5.3 Welcome Page26

● Directory

- 5.4 Browser27
- 5.5 Screen Share27
- 5.6 Keeper29
- 5.7 Cloud Driver30
- 5.8 Theme30
- 5.9 Palette31
- 6. Settings32
- 7. Specifications33
- 8. Troubleshooting.....34
- 9. Warranty & Contact Us.....35
- 10. FCC Warning36



1. What's in the Box

 
- The package includes standard accessories.
- Due to the large size and weight of this machine, it is recommended that two or more people carry it.
- After opening the box, please confirm that all the following parts are included and intact.




Interactive Flat Panel x 1



Camera x 1



Power Cable x 1

 

Wall Mount Kit x 1
(Installation Screws included)

 


Stylus Pen x 1




User Manual x 1

2. Product Overview

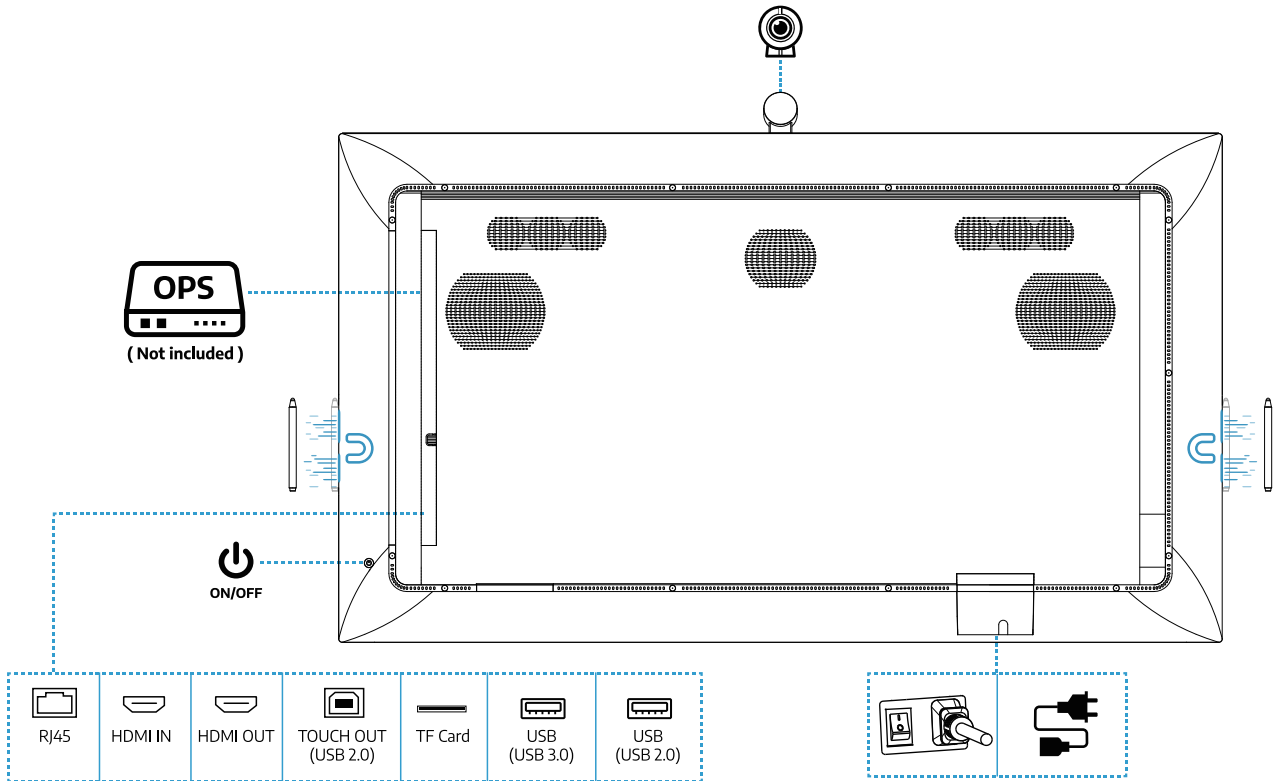


3. Quick Start Guide

 
How to Install the Wall Mount

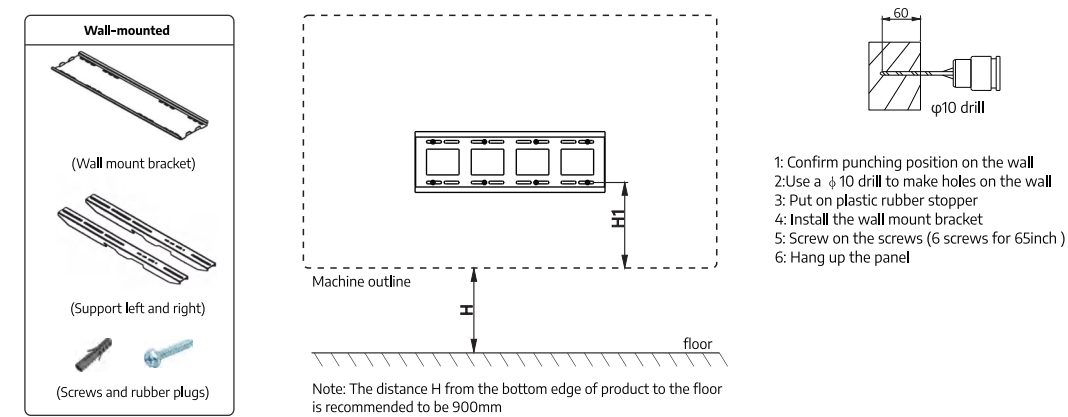

How to Install the Camera

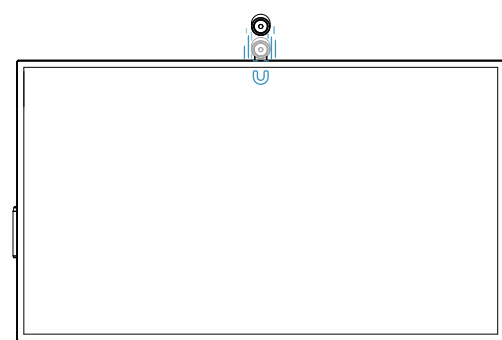 

How to Turn On the Power

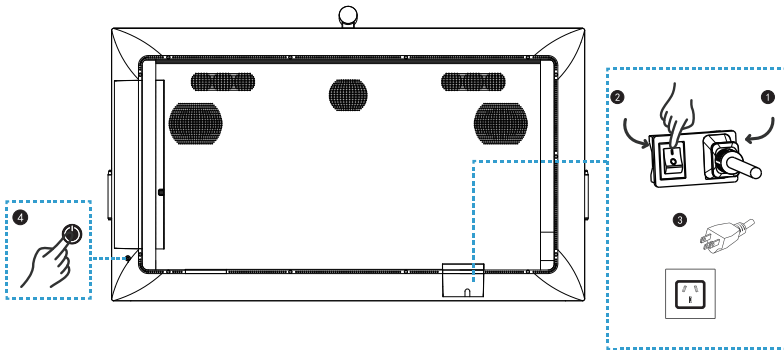 


08

3. Quick Start Guide

How to Set Up the Network

Go to Settings  → Wireless & Network and connect via Wi-Fi or Ethernet.

 Recommended: Check for Software Updates.

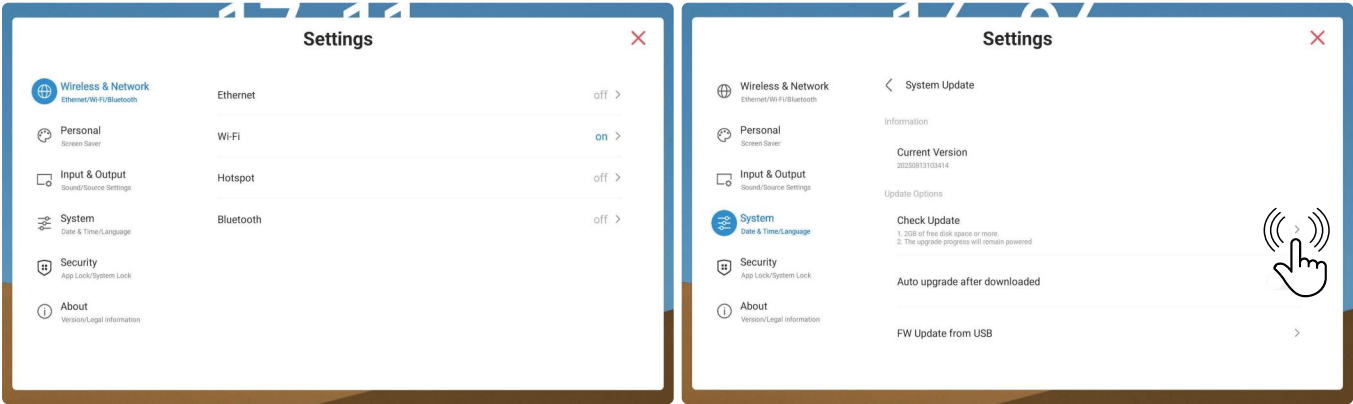

09

● 4. Home Screen & Navigation


After powering on and turning on, you will see the following home screen.



No.	Description
1	Status bar
2/3	Side toolbar
4	Desktop application
5	OPS Computer
6	All apps
7	Source

● 4. Home Screen & Navigation

Desktop editing function introduction: Hold down a home screen empty area for 5 seconds to enter Edit Mode—switch wallpapers or templates, drag widgets, pull up for categories, pull down to preview, then tap "Done" to save or "Cancel" to exit.

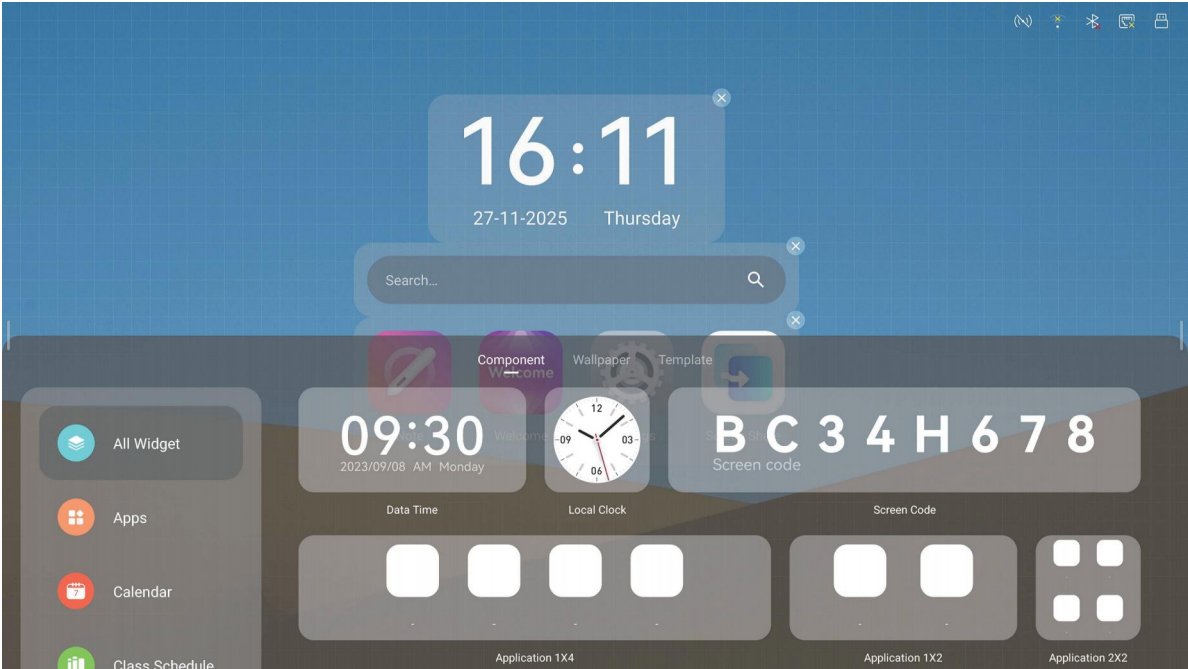

● 4. Home Screen & Navigation

4.1 Status bar


The Status Bar displays the current network status, tap the icon for quick access to Hotspot, Ethernet, and Wi-Fi settings, and shows the screen sharing code.

Icon	Function	Description
	Hotspot Settings	On / Off
	Ethernet Settings	Connected / Disconnected
	Wi-Fi Settings	Connection Status
	Bluetooth Settings	Connection Status
	USB is plugged in	USB status

● 4. Home Screen & Navigation

4.2 Side toolbar

The Side Toolbar can be opened by tapping the floating icons “” on either side of the screen.

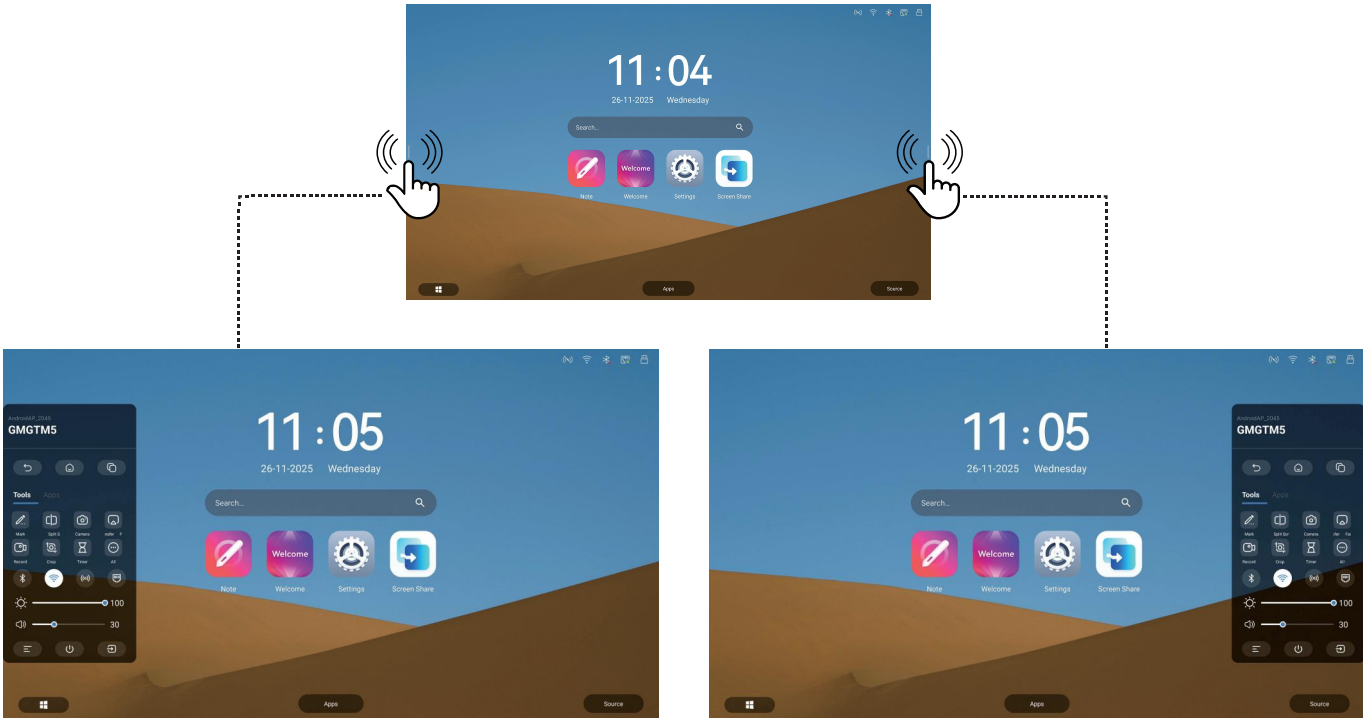

● 4. Home Screen & Navigation

4.2 Side toolbar

Note: Tap “All” to pop up more tools.

Icon	Function	Description
	Home	Enter the home page interface.
	Back	Return or exit the current application.
	Tasks	Open the task, then tap an app to switch to it or tap X to close the app.
	Menu	Enter the main menu interface to complete quick setting and advanced setting.
	Power	Enter the shutdown, pause screen, and restart selection.
	Source list	Enter the source list interface.
	Mark	Open annotation mode and choose to write, erase, share, etc.
	Split screen	Enter the Split screen. Two applications can be displayed at the same time.
	Camera	Enter camera mode and open the camera interface.
	Fast File Transfer	Open the file transfer tool, and a QR code will be generated for users to scan and upload files.
	Record	Turn on the screen recording mode, you can choose to set the screen recording and save.

● 4. Home Screen & Navigation

4.2 Side toolbar

Icon	Function	Description
	Calculator	Open the calculator.
	Mini Player	Enter the media player.
	Weather	Check your local weather.
	Pip	Open the picture-in-picture mode.
	Spotlight	Turn on the spotlight function.
	Prompter	Open the prompter function.
	Random Pick	Open the Random Pick.
	Scoreboard	Open the Scoreboard function.
	Curtain	Open the screen function, and set the screen color.



● 4. Home Screen & Navigation


4.2 Side toolbar

Icon	Function	Description
	Crop	Enter screenshot mode. Drag to adjust the capture area.
	Timer	Start a countdown timer.
	Screen Lock	Set a password to lock the screen.
	Stopwatch	Open the stopwatch tool.
	Freeze	Freeze the current screen for zooming and panning.
	Poll Kit	Voting settings and QR code generation.
	Calender	Open the calendar.
	Touch Overlay	Enable or disable the touchscreen.
	Half Screen	Enable split-screen mode, split-screen between Android and HDMI.

● 4. Home Screen & Navigation

4.3 Desktop application

Long-press any application to open the management interface, where you can add or change home screen applications.

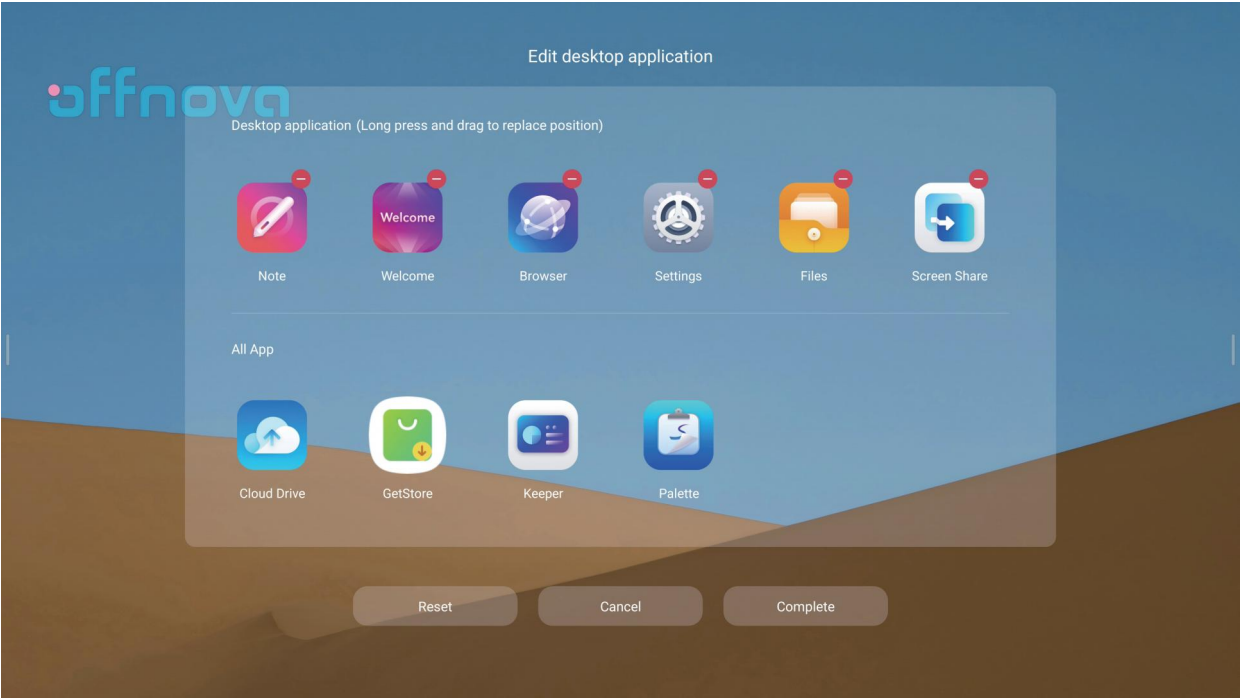

● 4. Home Screen & Navigation

4.4 OPS Computer


This interactive flat panel features a dual-OS architecture. Tap the icon to switch to the OPS system.



● 4. Home Screen & Navigation

4.5 All Apps


Tap on All Apps, you can see all the apps in interactive flat panel.

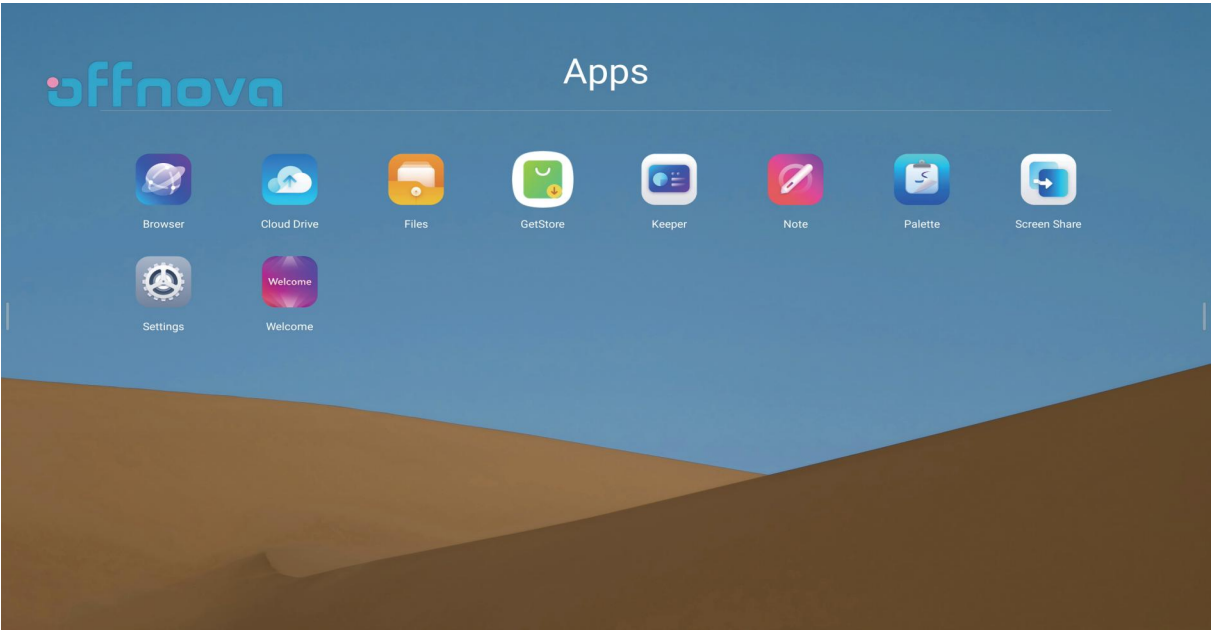

4. Home Screen & Navigation

4.6 Source

Tap to select the source you want to enter.

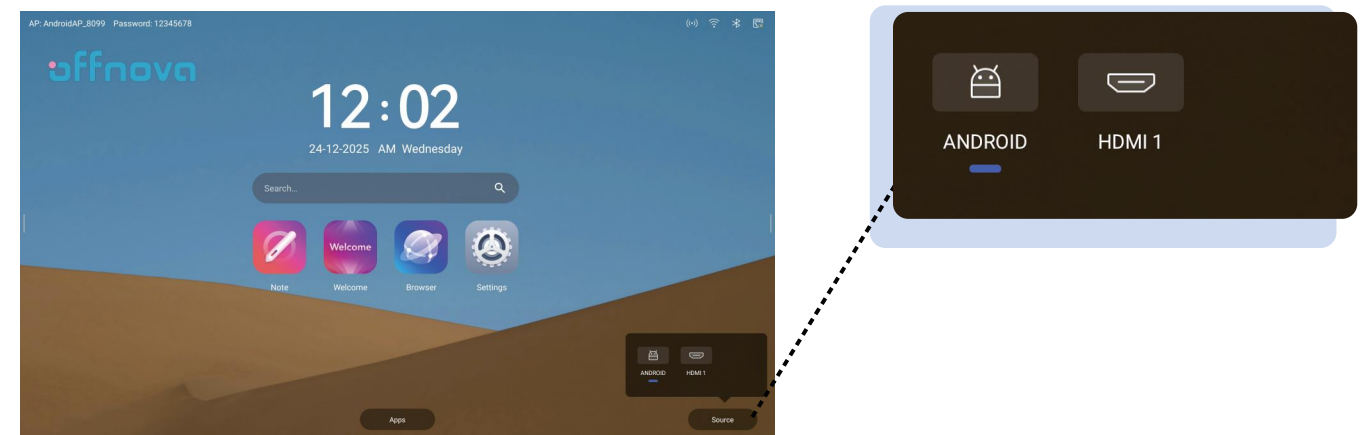

5. Key Functions & Apps

You will have access to the following software features on this device:
Note/Whiteboard, File Browser, Welcome Page, Keeper Manager, Screen Share, Settings, Palette, Browser, GetStore, Cloud Drive.


5.1 Note

There are two ways to open the Note App:

- 1. Tap the Note icon  on the home screen.
- 2. Tap Apps at the bottom of the home screen, then select the Note app.

5.1.1 Writing & Editing

Write and edit with various tools, undo/redo actions, and customize your background.

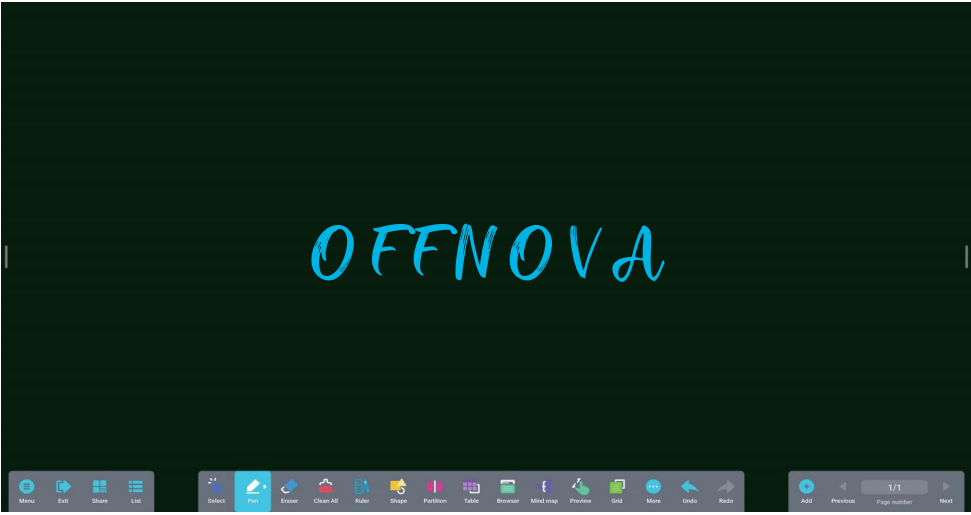

● 5. Key Functions & Apps

Draw & Erase with Stylus Pen

Write or draw

Tap the icon pen, then write or draw with the stylus Pen.



Erase

Tap the icon eraser, then touch the stylus to anything you want to erase.



Canvas Operation by Fingertips

 
Pan the canvas

Press one finger on a blank area and slide to move the canvas.



Pinch to zoom

Pinch two fingers together or spread them apart to zoom out or in.

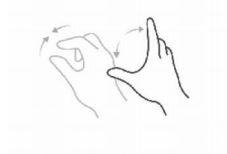

Other Operations

The actions below work with either your finger or the stylus.

Choose a tool or select an option

Just tap it on the screen.

Select an object

Tap and hold an object (like an image or a note).


Note:

Avoid scratching with sharp objects on the touch display. Only use fingertips and the stylus pen for touch control.

● 5. Key Functions & Apps

5.1.2 Content Creation & Management


Insert tables, images, and other elements, use interactive tools, and manage multiple pages.

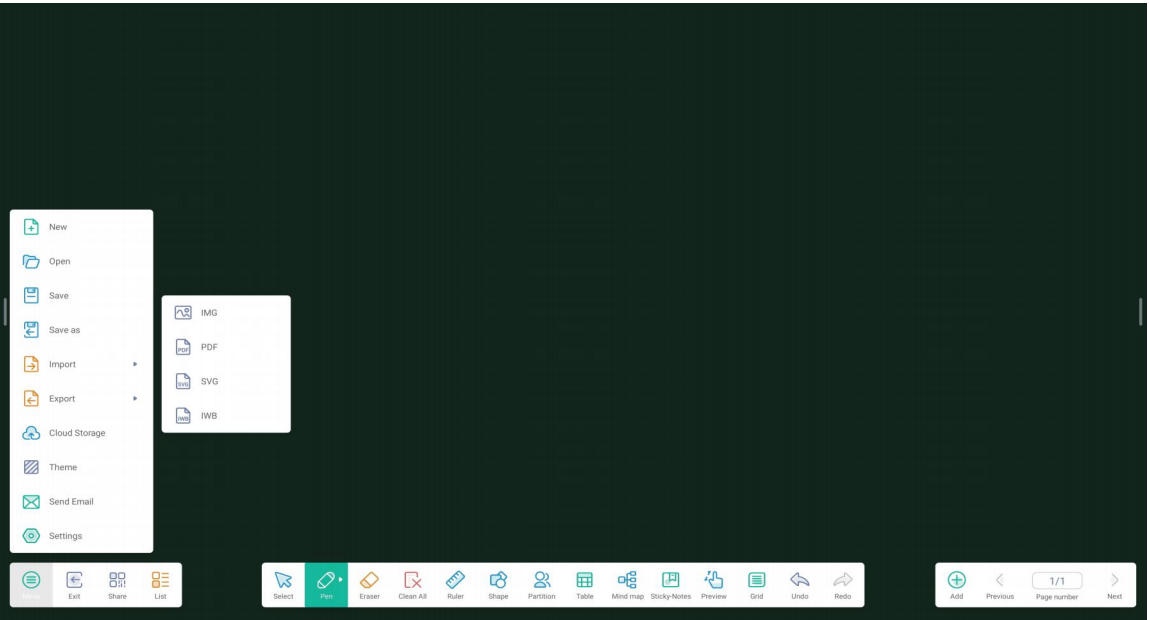

● 5. Key Functions & Apps

5.1.3 File Handling & Sharing

Save, open, and share your work via QR codes, with prompts to save any unsaved changes.

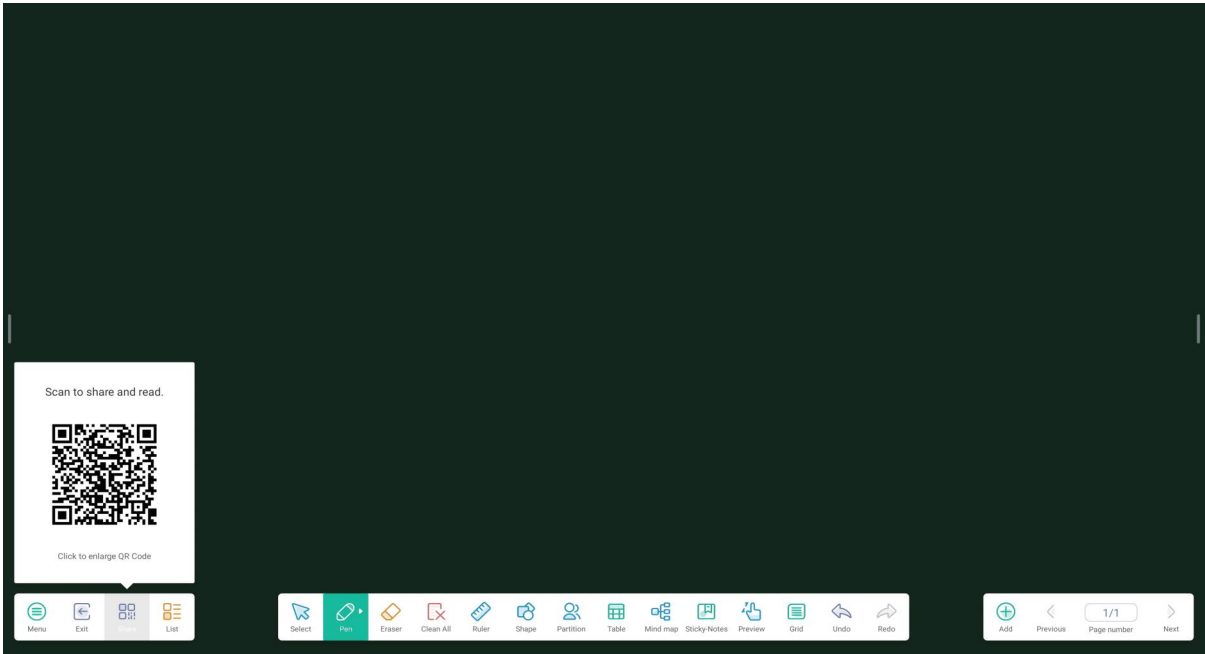


● 5. Key Functions & Apps

5.2 File Browser

Tap the icon  to open the app. This app enables you to browse and manage local and cloud drive files. You can filter by file type, sort, search, and perform basic operations like copy, move, rename, and delete.

Note: Cloud file access requires an internet connection.

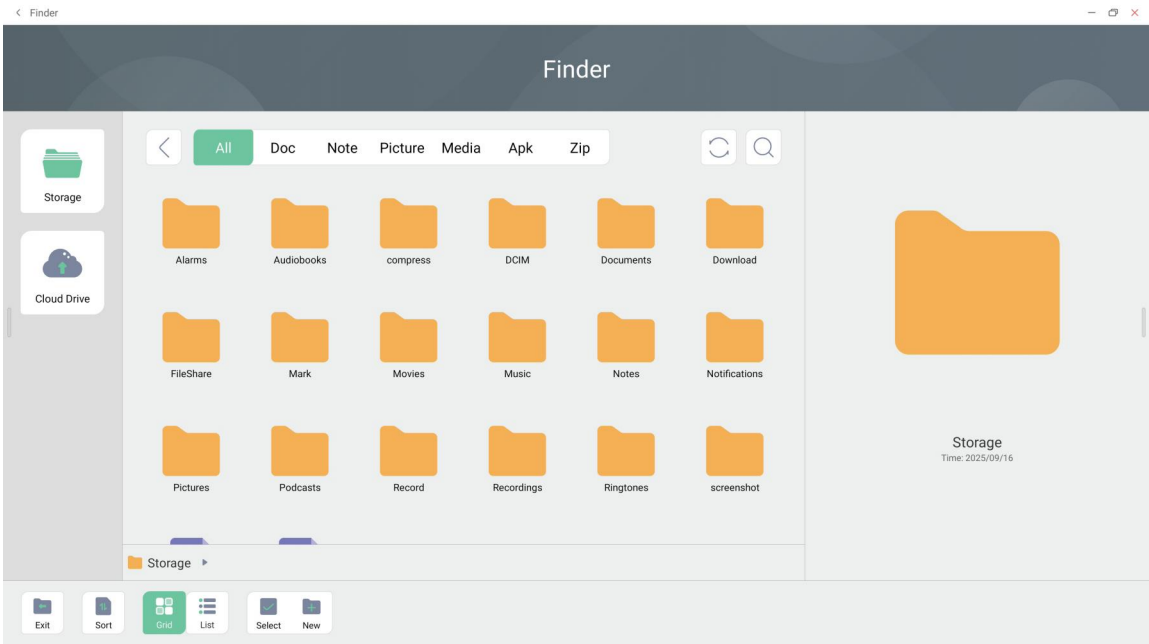


● 5. Key Functions & Apps

5.3 Welcome Page

Tap the icon  to open the app. It provides pre-designed templates for creating welcome screens, and allows you to customize backgrounds, add and format text, take photos, play slideshows, and add background music (up to 3 local songs).

 Note: The photo function requires an available camera.

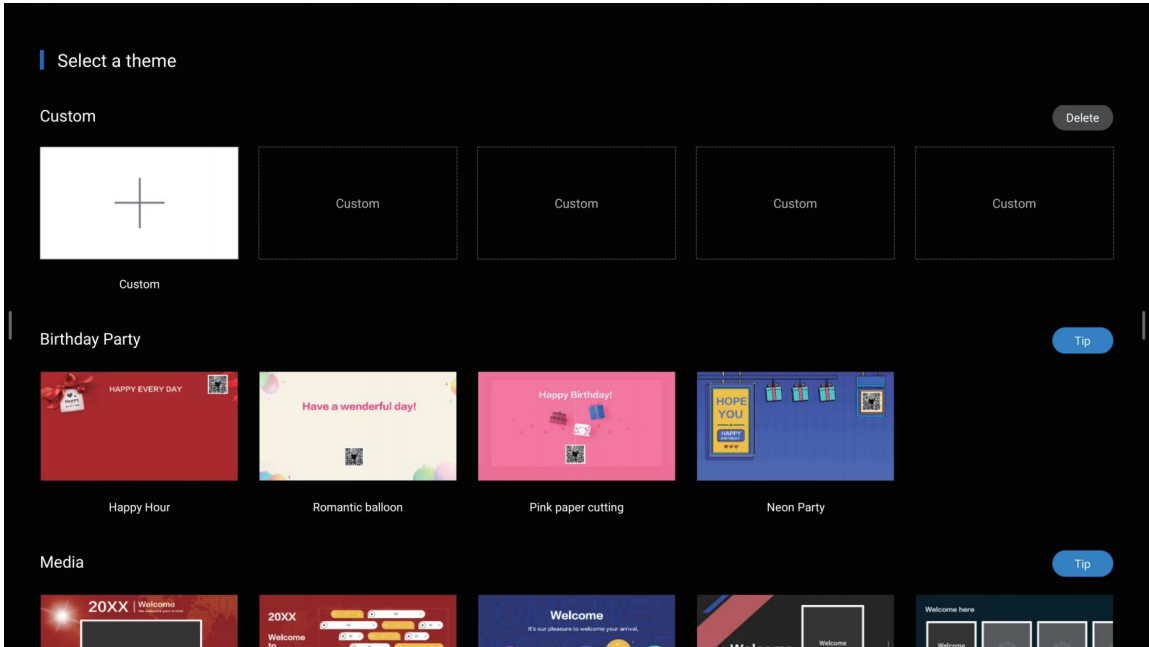

● 5. Key Functions & Apps

5.4 Browser

Tap the icon  to open the app
Note: The device needs to be connected to the Internet.

5.5 Screen Share

Tap the icon  to open the app.
Note the following:
1. Apple products can mirror their screens via AirPlay. Other mobile devices and computers will need to download the ScreenShare app and follow the instructions.
2. Your phone, tablet, or computer must be connected to the same network as the Interactive Flat Panel device.
3. Tap the icon  to access the file sharing interface. You can share files to connected devices and upload local files by tapping the icon .



● 5. Key Functions & Apps

Use software to transfer screens

Support MacOS10, Windows10, Android10, IOS10 and above

1 Computer: Open <https://www.meeting-vip.com/share> and download ScreenShare

Mobile: Scan the QR code above to download.

2 Connect your computer/phone to the network below

Please turn on the equipment hotspot [Go to settings>](#)

3 Open the SrenShare and enter the connection code *****

Or scan the QR code above Screen mirroring is available.

Use Screen Sharing Device to Share Screen

Support MacOS10, Windows10 and above

1 Insert the Wireless Screenshare Dongle into the tablet pairing

2 Insert Wireless Screenshare Dongle into the computer

3 Run the screen sharing application on your computer. When the Screen Sharing light turns on, tap it to share the screen.

BYOD function of screen sharing device

[Know the details](#)

Apple products can be cast by AirPlay by connecting hot spots

File sharing interface

Settings

28

● 5. Key Functions & Apps

5.6 Keeper

Tap the icon to open the app. This system management tool allows you to optimize device performance by cleaning junk files and freeing up memory, check network status and run speed tests, and monitor connected sensor devices (requires external sensors to be connected). It also provides access to application information.

Keeper

Metric	Value
CPU Usage	33%
Memory Usage	46% (4GBuse/8GB)
Garbage Usage	0 B

Storage space: 18.85GBuse/128.00GB

Category	Value
System	15.61 GB
Application	3.24 GB
Other	374 MB

One-click optimization


Navigation: Home, Apps, Network, Sensor

29

● 5. Key Functions & Apps

5.7 Cloud Driver

Tap the icon  to open the app.
This app allows you to link and access your cloud drives directly on the device. A valid cloud account is required to use this feature.

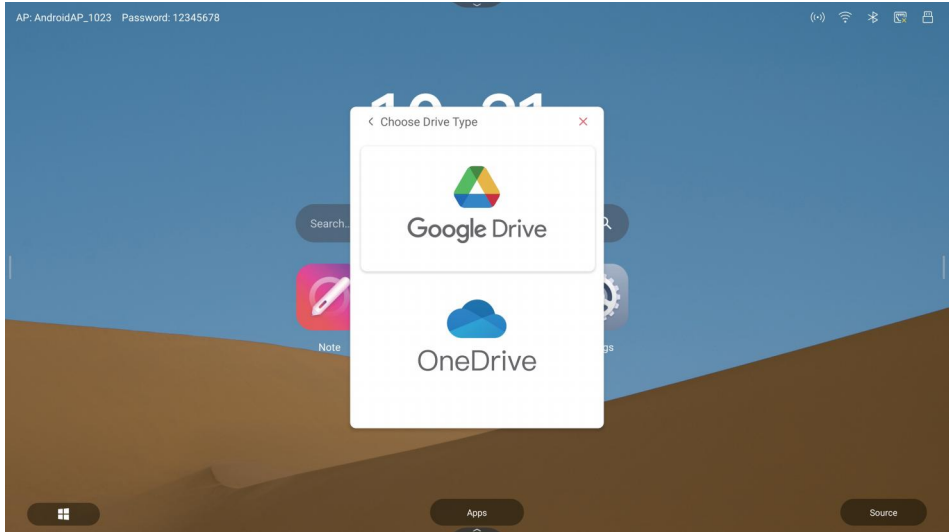


5.8 Get Store

Tap the  to open the app.
You can download and update the apps you need here.

● 5. Key Functions & Apps


5.9 Palette

Tap the icon  to open the app. This APP can meet any of your painting needs.

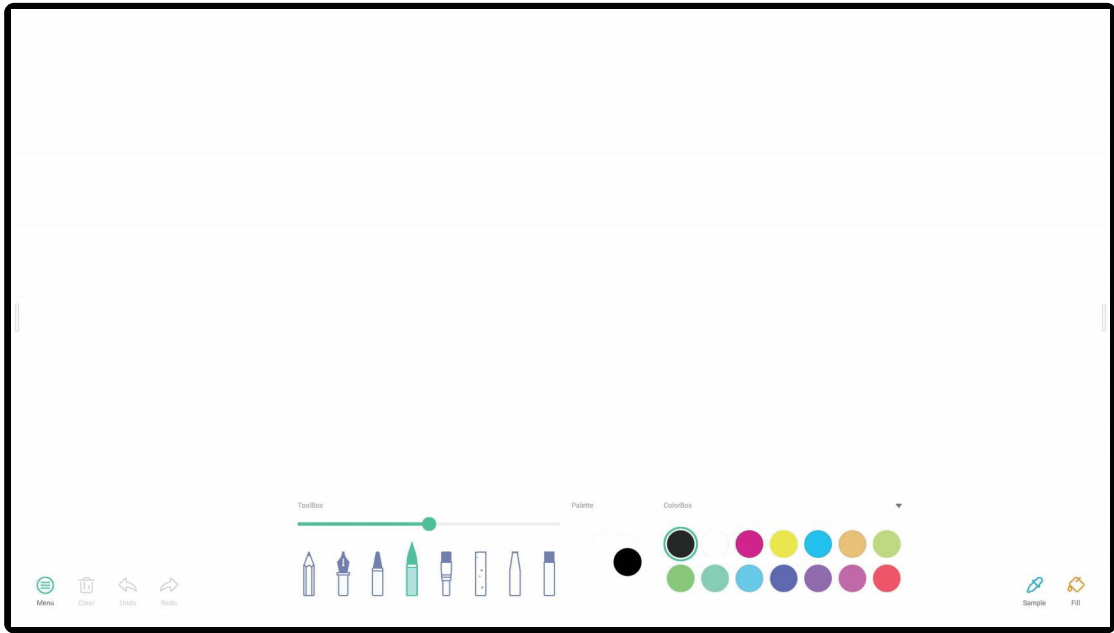

6. Settings

 Tap the icon  to open the settings. This section allows you to configure all essential device functions, including network connections (Wi-Fi, Ethernet, Bluetooth, Hotspot), personalization (wallpaper, screensavers, shortcuts), input/output settings (sound, USB, external display), system management (language, time, updates), and security options (screen lock, app lock).

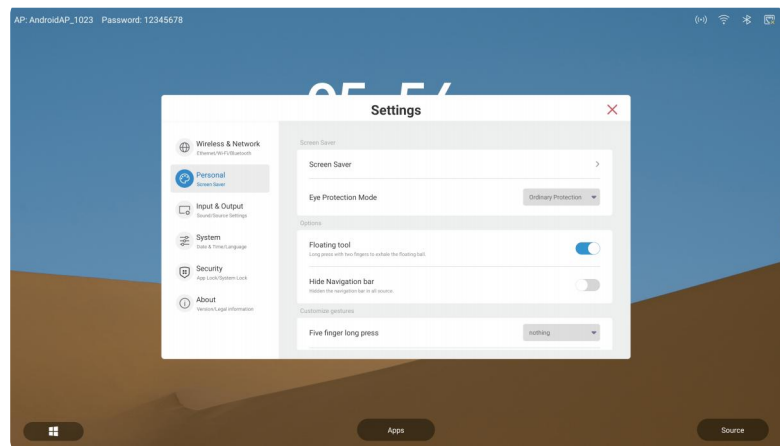

Key functions:

1. Floating tool
Long-press with two fingers to reveal the hidden floating ball. Drag it to the bottom to turn it into a rectangular toolbar.

2. You can customize the functions of the five-finger long press gesture.

7. Specifications

Display Parameter	Screen Size	65"	System	CPU	A73 x4_2.28G+A53 x4_2.0
	Backlight Type	DLED		GPU	G52_MP8
	Resolution	3840 (H) X 2160 (V) 4K		Version	Android 14.0
	Contrast Ratio	4000:1		Memory	8GB DDR
	Brightness	500cd/m²		FLASH	128GB EMMC
	Uniformity	90%		WIFI 6	2.4G+5G (with BT 5.4)
	Design	Zero Bonding	Ports	Camera Port	1
	Viewing Angle	178°(V)/178°(H)		USB2.0	1
	Display color	1.07 billion		USB3.0	1
	Fresh rate	4K 60Hz		TOUCH OUT	1
Touch Parameter	Surface	7H Mohs 3MM tempered Anti-glare glass		HDMI IN	1
	Screen Lifetime	≥50000 Hours		HDMI Out	1
	Speaker	15W*2		RJ45 In	1
	Touch Type	Capacitive 20 Points		TF Card	1
	Touch way	Finger, Capacitor active pen, Capacitor passive pen	Other Parameter	Power Consumption	≤240W
	Frame rate	≥125HZ		Standby Consumption	≤0.5W
	Touch Accuracy	≤2mm		Lifetime	50000 Hours
				Power supply	100-240V, 50/60Hz
				Product Dimension	1474*849*67.5MM
				Net weight	35.5Kg
				Gross weight	45.5Kg
				Packing size	1582*1020*185mm



● 8. Troubleshooting

Category	Symptom	Solution
Power	Won't turn on.	1. Check the power cable is securely connected. 2. Check the power outlet. 3. Ensure the power switch is ON.
Display	The screen is on, but no image.	1. Tap the [Source] button and select the correct input. 2. Check that the input cable is securely connected. 3. Ensure the connected source device is powered on.
	Image retention (burn-in)	Static image displayed for too long. Try displaying moving images or a screen saver to help reduce temporary retention.
System	Slow response; apps crash.	1. Restart the device. 2. Close background apps. 3. Free up internal storage by removing unnecessary files. 4. Check for and install system updates.
Touch	Touch doesn't work.	Check whether Touch Lock (or touch protection) is enabled.
	Touch is inaccurate/stuttering.	1. Clean the screen and avoid direct strong light/reflections. 2. Check for system updates.
Audio	No sound.	1. Increase the volume and ensure the device is not muted. 2. Ensure external audio device (if used) is connected and cables are secure.
	Low volume or distorted sound.	1. Test with a different audio file. 2. Clean the speaker grills if dusty. 3. Reconnect audio cables to ensure solid contact.
Camera	Camera not working.	Ensure the camera is securely connected and powered.
Network	No internet connection.	1. Ensure the Ethernet cable is securely connected to the [RJ45 In] port. 2. Restart the whiteboard and/or router. 3. Try reconnecting to Wi-Fi or re-enter Wi-Fi credentials.

● 9. Warranty & Contact Us

Warranty

Our warranty is 12 months from the date of purchase. This warranty becomes invalid if the factory-supplied serial number sticker has been removed or altered, or if the product is marked "warranty void".

This warranty does not cover:

- 1) Cosmetic damage or damage caused intentionally.
- 2) Damage resulting from accident, misuse, abuse, negligence, or modification of any part of the product.
- 3) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone else, not from us.

Contact Us

For inquiries, after-sales service requests, or product feedback, please contact us at Support@offnova.com. The QR code of the OFFNOVA official website is as follows:



● 10. FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

