



INSTRUCTION MANUAL

PCM-8L
30" Popcorn Machine

This manual contains important information regarding your Adcraft unit. Please read this manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty.

WARNINGS

- Do not touch any hot surfaces
- Plug only into a 3-hole grounded electrical outlet of the appropriate voltage
- Do not immerse unit, cord or plug in liquid at any time
- Unplug cord from outlet when not in use and before cleaning
- Do not operate unattended
- Do not use this unit for anything other than intended use
- Do not use outdoors
- Always use on a firm, dry and level surface
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Keep children and animals away from unit
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals only.

TO INSTALL:

1. Take unit out of the box and remove all packing material.
2. Place unit on a solid and level table that is the appropriate height for use.
3. Before first use, please wash all of the glass surfaces and wipe down the interior with a clean, damp sponge.

TO USE

1. Hang the kettle pot on the popper so that its roller bar is on the door side of the unit.
2. Plug the power cord into the electrical outlet of the appropriate voltage.
3. Turn the light and heater to the ON setting before adding butter or oil to the kettle. Please don't use more than .5 oz of oil or butter in the kettle. NOTE: Only use butter or oil with this unit. Liquid sugar or any other sweetener can cause damage to the pot and potential injury to the user
4. Allow the kettle to pre-heat for 3-4 minutes or until steam is visible.
5. Open the lid to the kettle and add the kernels into the pre-heated pot. Once popcorn is in the kettle, close the lid. Please use caution as the lid to the kettle will be very hot.
6. Turn ON the stirrer button and close the main units door. The popcorn inside the kettle will begin popping after 2-3 minutes.
7. When the popping has finished, turn the stirrer and heat to OFF.
8. To empty the contents of the kettle completely, gently turn the roll bar.
9. Leave on warming light to keep the popcorn inside the unit warm and ready to serve. Turn off the heat and stir buttons to prevent motor burnout.

CLEANING & MAINTENANCE

NOTE: To maintain cleanliness and increase service life, this item should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the electrical compartment it may cause a short circuit or electrical shock.

1. Turn off all switches on the unit and unplug the unit to let cool down.
2. Add a kettle cleaner directly into the kettle and follow cleaning directions on the bottle
3. Turn on the heater and stirrer and allow for the water to boil for 2 minutes.
4. Turn off the heater and stirrer after 2 minutes of boiling and then dump out water into a pan and discard.
5. Wipe the kettle with a damp cloth.
6. For the cabinet, use a degreaser and damp cloth to wipe the interior and exterior.


NOTE: Once you finish popping, unplug the unit from the power supply and allow for the unit to cool down completely. When removing the pot, please use caution near the heat lamp bulb.

NOTE: It is recommended to clean the kettle pot after every 3 to 4 uses or before it goes into storage for an extended period of time.

TROUBLESHOOTING:

Problem	Cause	Solution
Light is not going on	Unit is not plugged into outlet	Check the power cord and plug in
Unit does not heat	Wire for heating tube is loose	Tighten wire
	Heating tube is burnt	Replace the heating tube
	Thermostat	Replace the thermostat

Wiring Diagram for the Popcorn Machine

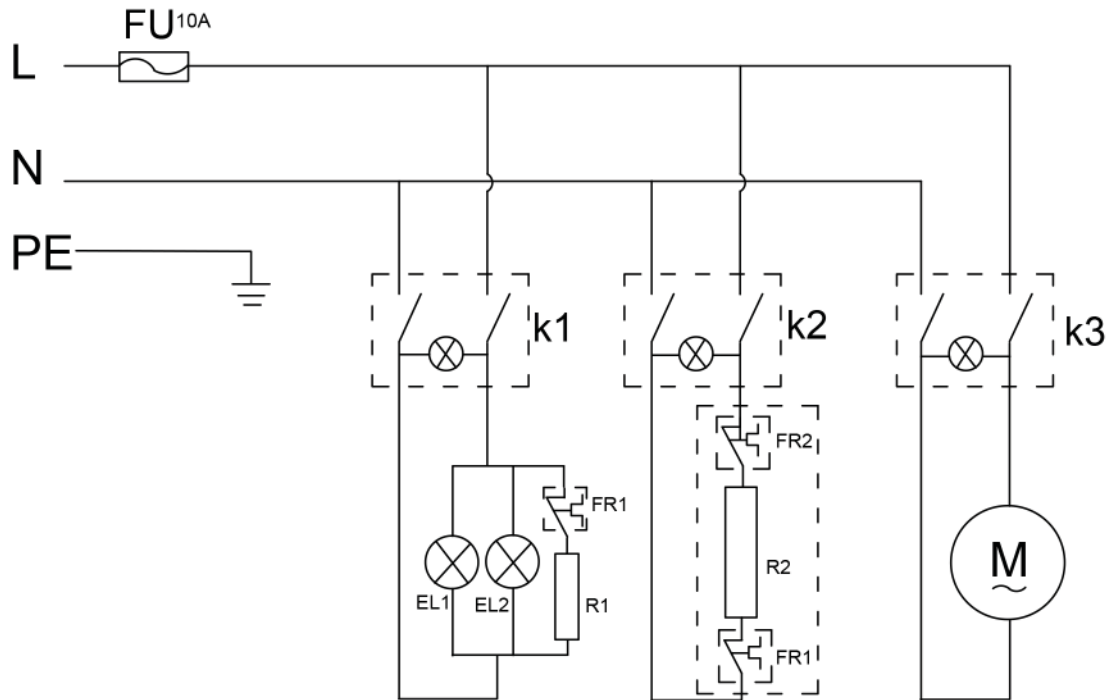

- R2 - Heat tube 115V/1000W
- FR1 - Temperature Limiter
- R1 - Insulating Tube 115V/300W
- FR2 - Temperature Limiter
- T - Light 60W
- D - Stir Motor 115V/14W
- K1 - Warm & Light Switch
- K2 - Heating Switch
- K3 -Stiring Motor Switch
- FR3 - Thermostat
- FU - Protective Tube 20A

ACE Equipment 6-Month Limited Warranty

Admiral Craft Equipment Corp. (ACE) warrants its equipment against defects in materials and workmanship, subject to the following conditions:

ACE Equipment is warranted for one year, effective from the date of purchase by the original owner. A copy of the original receipt or other proof of purchase is required to obtain warranty coverage. This warranty applies to the original owner only, and is not assignable.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at ACE's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by ACE, after defective unit has been inspected and defect has been confirmed. ACE does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts that may need to be replaced due to normal usage, wear or lack of preventative maintenance.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary. Contact ACE for details at 1-800-223-7750

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage from improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from ACE, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only and this warranty is void if equipment is used in other than a commercial application.

For warranty and non-warranty related issues, technical support, purchase replacement parts and warranty registration visit www.admiralcraft.com. Please have your model number, serial number and proof of purchase ready. It is not necessary to contact the place where you originally purchased your product from.

“THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN.”

VER1212