

157g铜版纸 正反面印刷 风琴折 90x145mm

90mm

145mm



Nimo MME2S series
User Manual



NIMO Support

CAUTION

Your Mini PC is designed and tested to meet the latest standards of safety for information technology equipment. However, to ensure your safety, it is important for you to read the following safety instructions.

Setting up your machine

- Read and follow all instructions in the documentation before you operate your machine.
- Do not use this product near water or heat sources.
- Set up the machine on a stable surface.
- Openings on the chassis are for ventilation. Do not block or cover these openings. Make sure to leave plenty of space around the machine for ventilation. Never insert objects of any kind into the ventilation openings.
- Use this product in environments with ambient temperatures between 0 C and 40 C.
- If you use an extension cord, make sure that the total ampere rating of the devices plugged into the extension cord does not exceed its ampere rating.
- This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill water or any other liquids on your machine.
- When the machine is turned off, a small amount of electrical current still flows.
or A small amount of electrical current continues to flow when the machine is turned off.
Always unplug the power cord from the power outlets before cleaning the machine.
- If you encounter the following technical problems with the product, unplug the power cord and contact a qualified service technician or your retailer.
 - The power cord or plug is damaged.
 - Liquid has been spilled into the machine.
 - The machine does not function properly even if you follow the operating instructions.
 - The machine was dropped or the chassis was damaged.
 - The machine performance changes.

RTC Battery Warning

CAUTION: Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Package Contents



Mini Computer



HDMI Cable




Power cord



User Manual

Know Your Mini PC

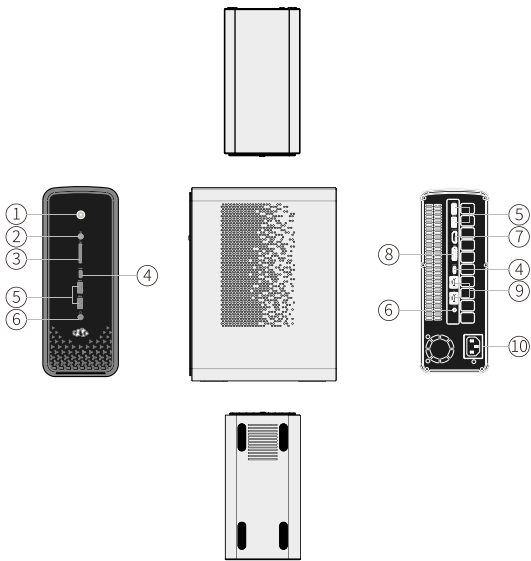

①	Power Button	⑥	Audio Jack
②	Performance Button	⑦	HDMI
③	SD Carsd	⑧	DP
④	TypeC	⑨	LAN
⑤	USB	⑩	Power connector

Getting Started

Connect a display monitor to your Mini PC:
Connect one end of an HDMI cable to an external display, and the other end of the cable to your Mini PC'S HDMI port.

Connect a keyboard and mouse to your Mini PC:
You can connect most of the USB keyboard and mouse to your Mini PC.

Turn on your Mini PC
Press the power button to turn on your Mini PC.

Turning off your Mini PC
If your Mini PC is unresponsive, press and hold the power button for at least four seconds until your Mini PC turns off.

Enter the Bios Setup

WARNING!
Bios (Basic input and output system) stores system hardware settings that are needed for system startup in the Mini PC.

In normal circumstances, the default BIOS settings apply to most conditions to ensure optimal performance.
Do not change the default BIOS setting except in the following circumstances:

- An error message appears on the screen during the system boot-up and requests you to run the BIOS Setup.
- You have installed a new system component that requires further BIOS settings or updates.

Improper BIOS settings may result in instability or boot failure. We strongly recommend that you change the BIOS settings only with the help of trained service technician.

Load default BIOS settings
Enter the BIOS by long pressing <F2> on the POST screen
Enter Fast Boot by long pressing <F12> on the POST screen

WARNING!

This equipment is not suitable for use in locations where children are likely to be present.

The warranty does not apply to the products that have been disassembled by users.

Each Mini PC has its unique SN code on its bottom.
Please provide us the SN code for quick and accurate service when contacting our customer service.

FCC Conformity Statement

FCC Caution:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference
(2)This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

Warranty Information

The MME2S series are covered for two years from the initial retail purchase date, as confirmed by the provided proof of purchase from the first retailer Nimo or a Nimo-authorized service center will repair. Repairs or replacements will be conducted in a commercially reasonable time, at the discretion of Nimo. If Nimo replaces the product, the replacement will be subject to the terms outlined in this warranty for the remaining duration of the original product's warranty period. The replacement product may be refurbished. The Warranty becomes invalid if the product has been disassembled, modified or repaired without Nimo's authorization. Additionally, damage resulting from neglect, whether intentional or accidental, is not covered under warranty. Examples not covered by warranty include but are not limited to use outside operating specifications, a cracked or broken screen, damaged housing or cover, missing or damaged buttons, impaired ports or connectors, damage from power surge or incorrect power supply usage and water damage (as Indicated by inspection of the internal liquid contact indicator).

For warranty support or repair, please contact Customer Care:
Phone Number:(302) 501-7208
Email: service@nimopc.com
Website: www.nimopc.com