



EWX004

RESETTING YOUR WIRELESS
SNOWPLOW REMOTE

USER GUIDE



DK2 USA WEST

3311 MEADE AVENUE STE
E DOCK 13, LAS VEGAS, NEVADA
89102 USA

DK2 CORPORATE HEAD OFFICE

5330 MAINWAY
BURLINGTON, ONTARIO
L7L6A4 CANADA

DK2 USA EAST

3750 SOUTH AVENUE
NORTH UNIT, TOLEDO, OHIO
43615 USA

CUSTOMER SERVICE 1 (888) 277-6960 | WWW.DK2.COM



TROUBLESHOOTING

HAS YOUR WIRELESS SNOWPLOW REMOTE STOPPED WORKING?


Not to worry, there are several different troubleshooting techniques to get you controlling your snowplow from the comfort of your vehicle.

IF THE LIGHT ON YOUR WIRELESS REMOTE IS FLASHING RED, MAKE SURE THAT:

1. The ground wiring coming from your transmitter box is going back to the negative terminal on your battery.
2. You have tried changing the battery on your remote.
3. You have tried resetting your wireless remote.

RESETTING YOUR WIRELESS REMOTE

1. Take off one of your leads from the battery (positive or negative).
2. Turn on the remote's wireless emitter and press the **IN** and **OUT** buttons simultaneously for 3 seconds. After 3 seconds, the wireless remote light will turn a solid green.
3. Reconnect your lead back to the battery.

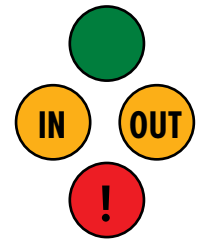

If you have attempted all techniques and are still not getting a functional remote, you may need to replace your wireless remote.

IS YOUR REMOTE WITHIN THE WARRANTY PERIOD?

Please visit <https://detailk2.com/warranty> to fill out our product warranty form so we can send you a replacement covered by your included 1-year limited warranty.

IS YOUR REMOTE OUTSIDE ITS WARRANTY PERIOD?

Please visit the DK2 parts store at <https://detailk2.com/parts/snowplow-parts> (US Customers) or <https://detailk2.ca/parts/snowplow-parts> (Canadian Customers) to purchase a brand new wireless remote kit for your DK2 Snowplow.