



# Installation GUIDE



Viking Range Corporation  
111 Front Street  
Greenwood, Mississippi 38930 USA  
(662) 455-1200

For product information, call 1-888-VIKING1 (845-4641)  
or visit the Viking Website at [vikingrange.com](http://vikingrange.com)

**VIKING | D3**  
RDHK24 D3 Handle Kit  
For Use With FDB Dishwashers

# IMPORTANT—Please Read and Follow!

- Before beginning, please read these instructions completely and carefully.
- Use caution during assembly to minimize scratches.
- Do not remove permanently affixed labels, warnings or plates from the product. This may void the warranty.
- Please refer to the product Installation Instructions for more information on installing the door panel.
- **The installer should leave instructions with the customer who should retain for local inspector's use and future reference.**

## Installation with Wooden Full Overlay Custom Door Front

### Parts Included

Part	Quantity
D3 Handles	(1)
End Caps	(2)
#10 x 3/4" Hex Head Screws	(4)
Installation Instructions	(1)

### Required Tools

Electric Drill  
 3/16" (0.5 cm) Drill Bit  
 7/16" (1.1 cm) Spade or Forstner Bit (Counterbore)  
 Tape Measure  
 Hex Head Screw Driver  
 Masking Tape and Pencil

### To Install:

1. Locate the wooden custom panel.
2. Using the illustrations on the next page, layout the handle location on the panels. It is recommended that masking tape be placed where the four holes will be drilled to help mark the hole placement and to prevent any damage to the door when drilling the holes.
3. The D3 handle will be mounted using (4) of the #10 x 3/4" Hex head screws provided. Using the 3/16"(0.5 cm) drill bit, drill completely through the door in the hole locations. Using the 7/16" (1.1 cm) bit, counter-bore four holes 1/2" (1.2 cm) deep max. on the **BACKSIDE** of the custom door panel.
4. Attach the D3 handle to the panel using (4) #10 x 3/4" screws provided.

# Handle Installation

## FDB - DISHWASHER CUSTOM FRONT DIMENSIONS

