 


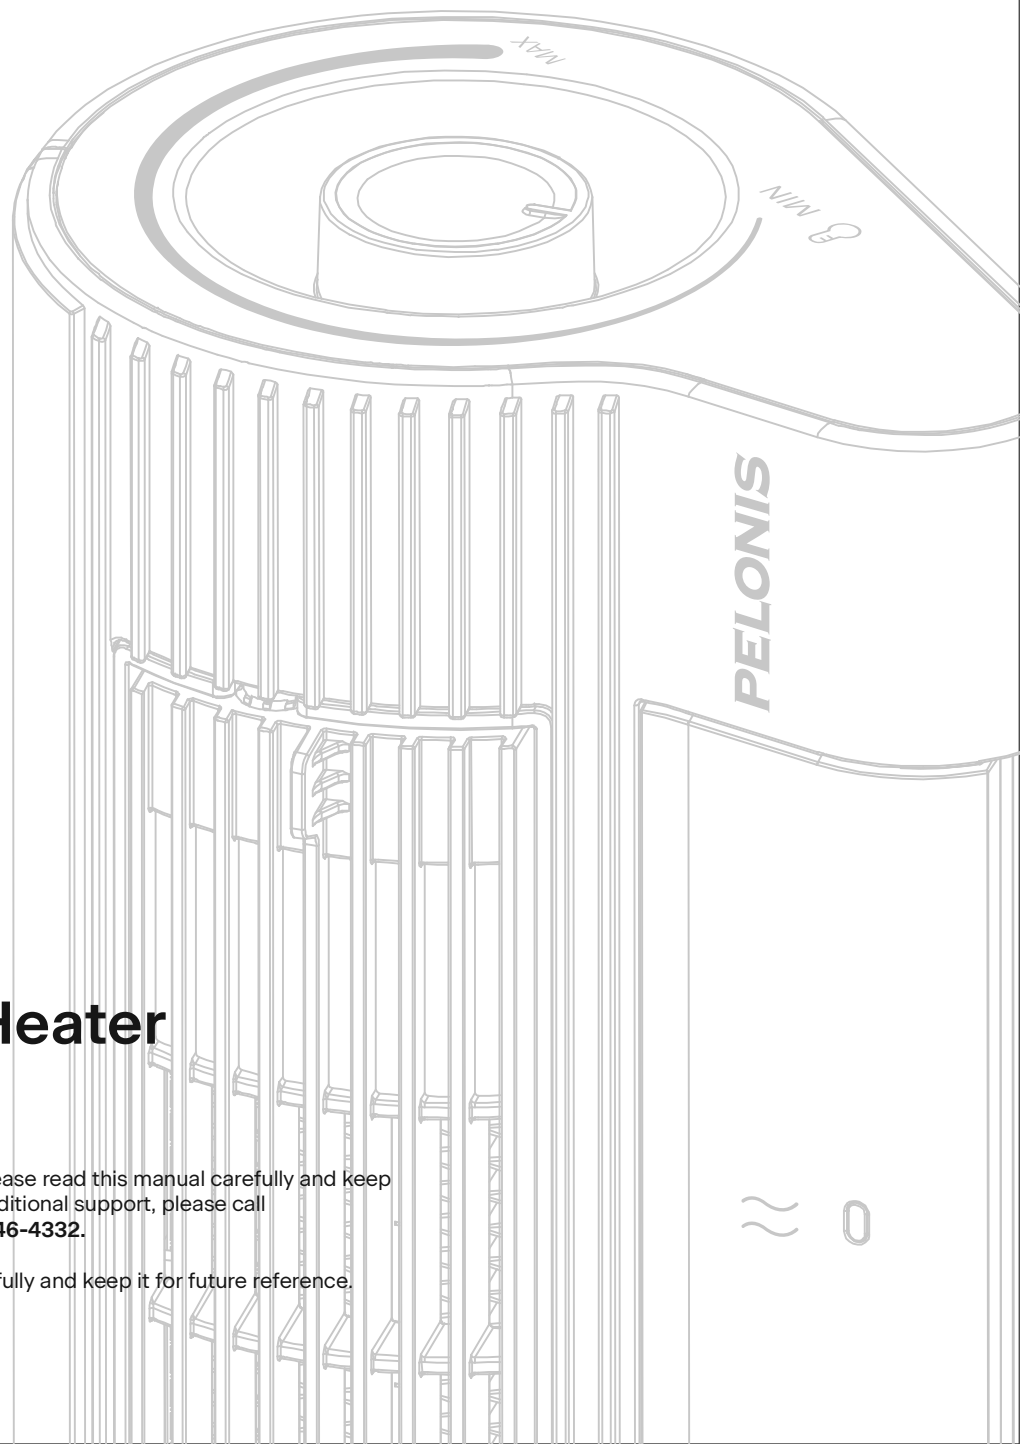

User Manual



PTC Fan Heater

PSHCD12M4BV

⚠ WARNING NOTICE:

Before using this product, please read this manual carefully and keep it for future reference. For additional support, please call customer service at **1-866-646-4332**.

Please read this manual carefully and keep it for future reference.

Thanks for Choosing PELONIS!

Your support means the world to us.
We hope you enjoy our product as
much as we did creating it.



Contents

Important Instructions	01
Product Overview	03
Operating Instructions	04
Specifications	06
Troubleshooting	07
Cleaning And Maintenance	07
Service and Support	08
One (1) Year Limited Warranty	09

IMPORTANT INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THE HEATER.

When using electrical heaters, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

CAUTION

1. Read all instructions before using heater.
2. Extreme caution is necessary when any heater is used by or near children or invalids, and whenever the heater is left operating and unattended.
3. **CAUTION:** This unit has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. To do so could result in an electric shock hazard.
4. **CAUTION:** It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace a loose or worn outlet.
5. **CAUTION:** Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or reloadable power tap (outlet/power strip).
6. **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

WARNING

 
1. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, always use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
2. Always unplug the heater when not in use.

3. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater or return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
4. Do not use the heater outdoors.
5. This heater is not intended for use in bathroom, laundry areas and similar moist indoor locations. Never locate heater where it may fall into a bathtub or other water container.
6. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
7. This heater draws 10 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances plugged in.
8. To disconnect the heater, first turn controls to off, then remove plug from outlet. Never pull by the cord.
9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage to the heater.
10. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
11. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
12. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
13. The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.
14. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.

15. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS

Product Overview

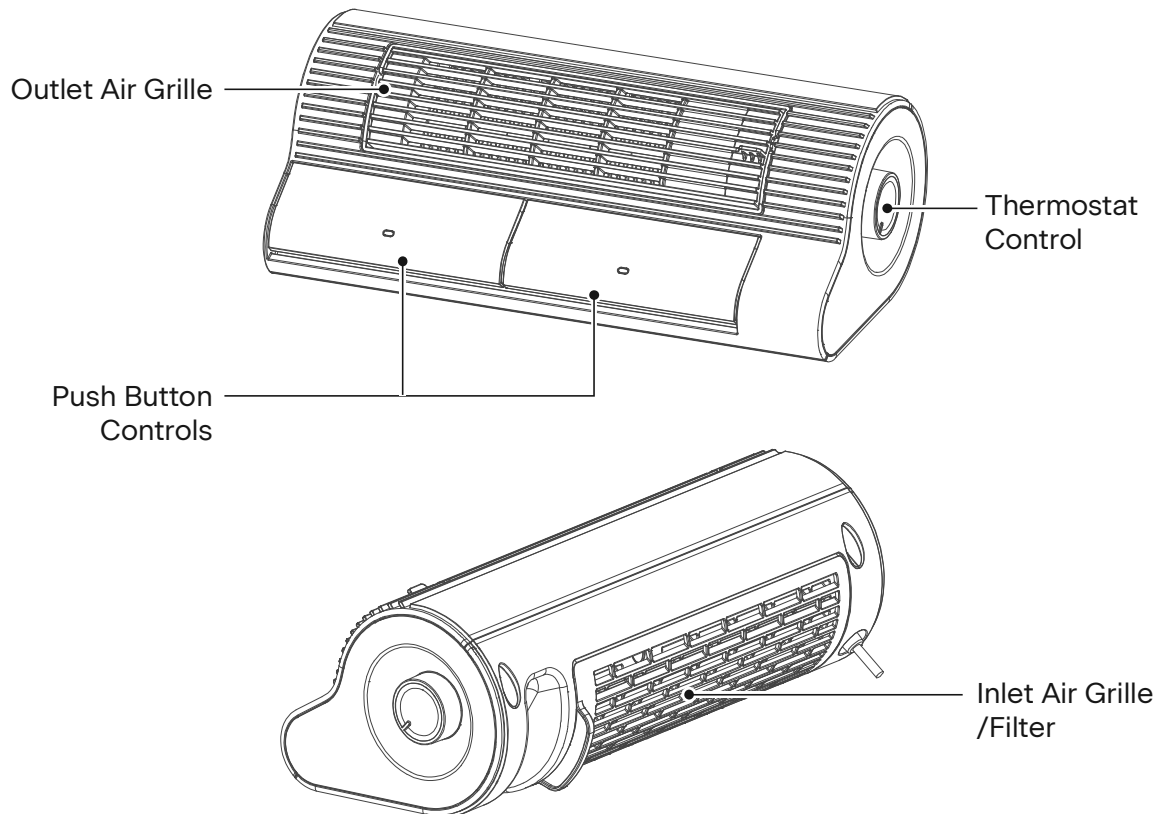

[Note]

All the pictures in this manual are for explanation purposes only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real model.

Operating Instructions

 
Check Before Turning on the Machine

1. Check for any damage to the power cord.
2. Before connecting the heater to the power source, ensure the heater is positioned on a stable, flat, and even surface, clear of any obstacles.
3. The product uses a 120V AC power supply. Before use, please confirm if the rated current of the receptacle meets the local requirements as a safe grounding device, otherwise, please replace it with the qualified receptacle.


Place the Unit on a Flat, Stable Surface

1. This heater is equipped with tip-over protection and uneven placement may cause the unit to not function. Always ensure the unit is placed on a stable, flat surface and orientated either vertically or horizontally as depicted below.
2. This product can operate normally in either of the following two orientations. If the unit is knocked over and stops functioning, please return to one of these orientations and power back on.

Vertical


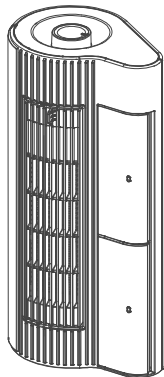


Horizontal

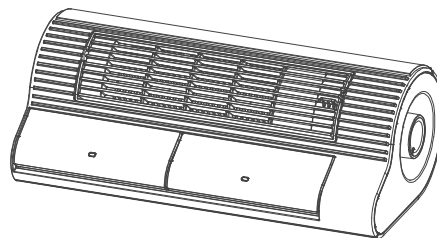 


⚠ WARNING

  In order to avoid overheating, do not cover the heater.

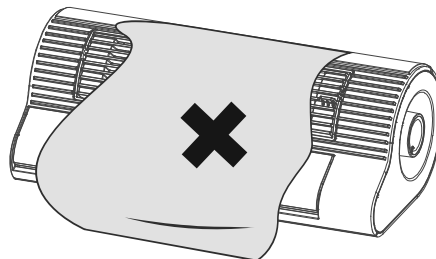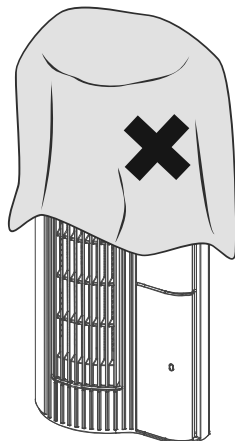


Control Panel

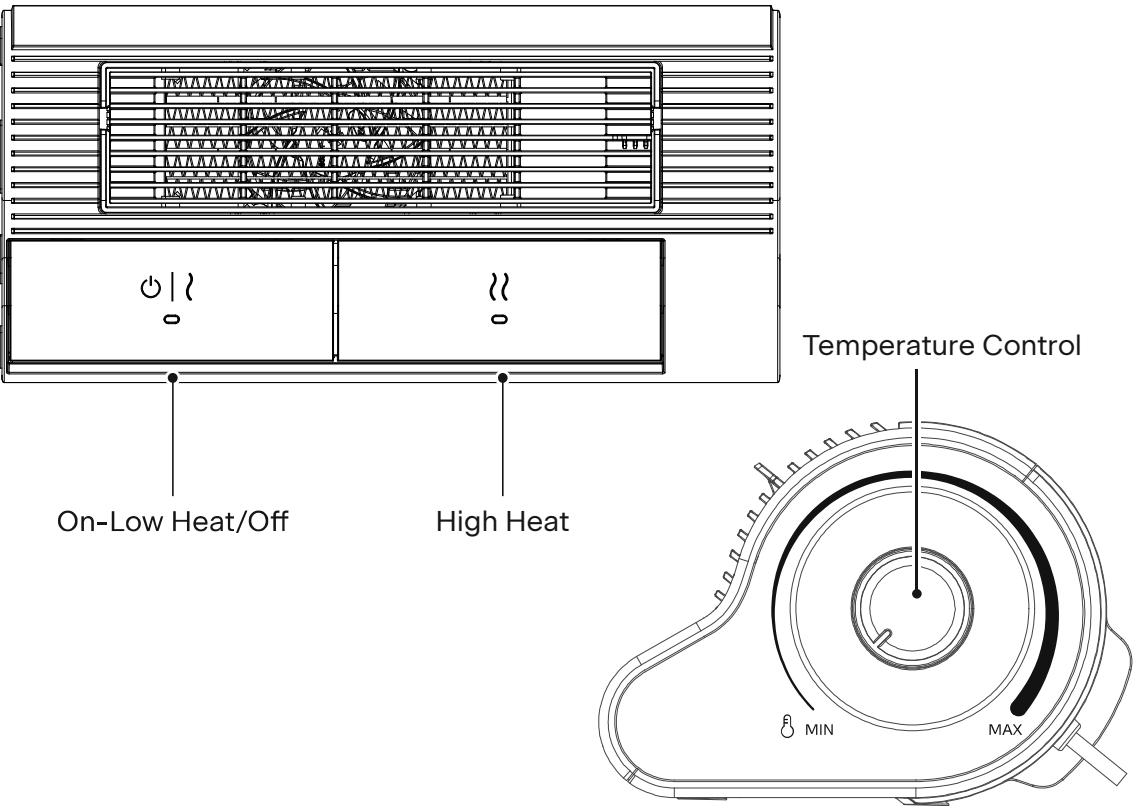 

Push-Button	Description
 On-Low Heat/Off	Depress the On-Low Heat/Off switch. The On-Low Heat/Off switch will illuminate amber, and the unit will provide low heat output at 700W. Depress the switch again to turn off the heater.
 High Heat	To increase the heat output, depress the High Heat switch after the unit has been powered On. The High Heat switch light will illuminate amber, and the unit will provide high heat output at 1200 W. Press the High Heat switch again to cycle back to low heat output.

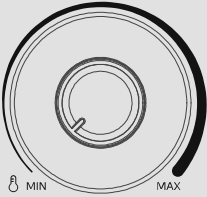 

Knob	Description
	Temperature Control Knob (Thermostat) - Adjust the thermostat control knob clockwise to the highest position (MAX) before turning on the heater. Allow the heater to operate and warm up the room. - When the desired temperature/comfort level is reached, lower the temperature setting by turning the thermostat control knob counterclockwise until the heater stops operating (and an audible "click" is heard). - The thermostat will automatically maintain the pre-set temperature level by turning the heat on and off. NOTE: It is normal for the heater to cycle on and off as it maintains the preset temperature. To prevent the unit from cycling on/off, adjust the temperature setting clockwise towards MAX.

Safety Protection

A. Overheating Protection:

If the heater overheats due to abnormal conditions or incorrect operation, the temperature control system will automatically cut off the power to ensure safety. After the heater cools down, you must unplug it and then plug it back in to restart and resume normal use.

B. Tip-over Protection:

The heater is equipped with a tip-over safety switch. If the heater tips over, it will automatically shut off. If this happens, simply place the heater back in its upright position, and it will resume normal operation.

Specifications

Model PSHCD12M4BV	Power Supply 120 V~, 60 Hz	Rated Power (High Heat) 1200 W
Rated Power Range		
Low 700 W	High 1200 W	

Troubleshooting

If the product does not operate or does not operate properly, first check according to the following list. If the reason the product does not operate or does not operate properly is not included in the following list, the product may have failed. At this time, it is recommended to send the product to the dealer for treatment.

Problem	Cause	Solution
After the power is engaged, the machine does not work.	• The plug may not be properly inserted into the receptacle.	Check whether the plug is properly inserted into the receptacle.
The machine suddenly stops during heating.	• The temperature exceeds the threshold of the thermal cut-off.	Make sure the appliance is powered-off and unplug. After the product has cooled, reinsert the plug into the receptacle and power-on.

Cleaning And Maintenance

It is recommended that the heater be cleaned at least one time during the operating season in order to provide the optimum level of performance. ALWAYS TURN THE POWER SWITCH OFF AND UNPLUG THE HEATER BEFORE CLEANING. Be sure to save the box for off-season storage.

- Turn the heater “OFF”, unplug it and wait for the heater to cool down.
- Use a dry cloth to clean only external surfaces of the heater.
- Do not use any cleaning agents or detergents.
- Never immerse the heater in water.
- Pack the heater in the original carton and store it in a cool and dry place.
- Any other maintenance shall be performed by an authorized service agent.

WARNING

This heater cannot achieve accurate temperature control of the environment, and thus cannot be used as an insulation device for storage environment, items, animals and plants.

Service and Support

In the event of a warranty claim, questions, comments or if service is required for this product, please contact us at the following:

Toll Free: 1-866-646-4332

Email: customersupport@pelonis.com

For questions or comments, please write to:

Midea America Corp.

300 Kimball Drive
Parsippany, NJ 07054

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

(STAPLE SALES RECEIPT HERE)


**NOTE: PROOF OF PURCHASE
IS REQUIRED FOR ALL WARRANTY CLAIMS
PRINTED IN VIETNAM**



Product Registration Card

Step 1

Take a photo of purchase receipt

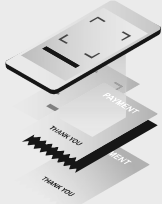 

Step 2

Text to 1-866-646-4332

_____ OR _____

Email to
register@registrationplace.com

_____ OR _____

Register on PELONIS US
website by scanning the QR code



Notice: Product registration is not mandatory. Failure to complete and return this card/form does not affect the consumer's warranty rights.

One (1) Year Limited Warranty

- Please read all instructions before attempting to use this product.

Midea America Corp. warrants as limited herein to the original purchaser of retail that each new product, shall be free of defects in material and workmanship for a period of one (1) year from the date of delivery. This one (1) year warranty is limited to the heating elements, motor and electric control circuit board. The date of delivery establishes the warranty period, should service be required.

If the product fails or malfunctions due to a defect in materials or workmanship within one (1) year from the date of original retail purchase, the consumer shall return the product, postage prepaid, along with proof of purchase, to Midea America Corp. for repair or replacement. Midea America Corp. reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. Midea America Corp. shall, within sixty (60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage. Midea America Corp. assumes no responsibility whatsoever if the product should fail during the warranty period by reason of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see instructions for proper maintenance).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specification label on your product).

Midea America Corp. makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the product. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. Midea America Corp. shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

