



Soda Gun Jetter Smart controller setup guide

Contents

Menu navigation – Devices

Menu navigation - Templates

Menu navigation - Settings

Update firmware


Taste
Symbol

The logo for Taste Symbol features the word "Taste" in a serif font above the word "Symbol" in a similar font. To the right of the text is a stylized graphic consisting of two curved, overlapping lines in shades of blue and teal, resembling a swoosh or a stylized 'S'.

Say Soda Gun Jetter and Be Sure

Menu navigation- Device

Search for new devices

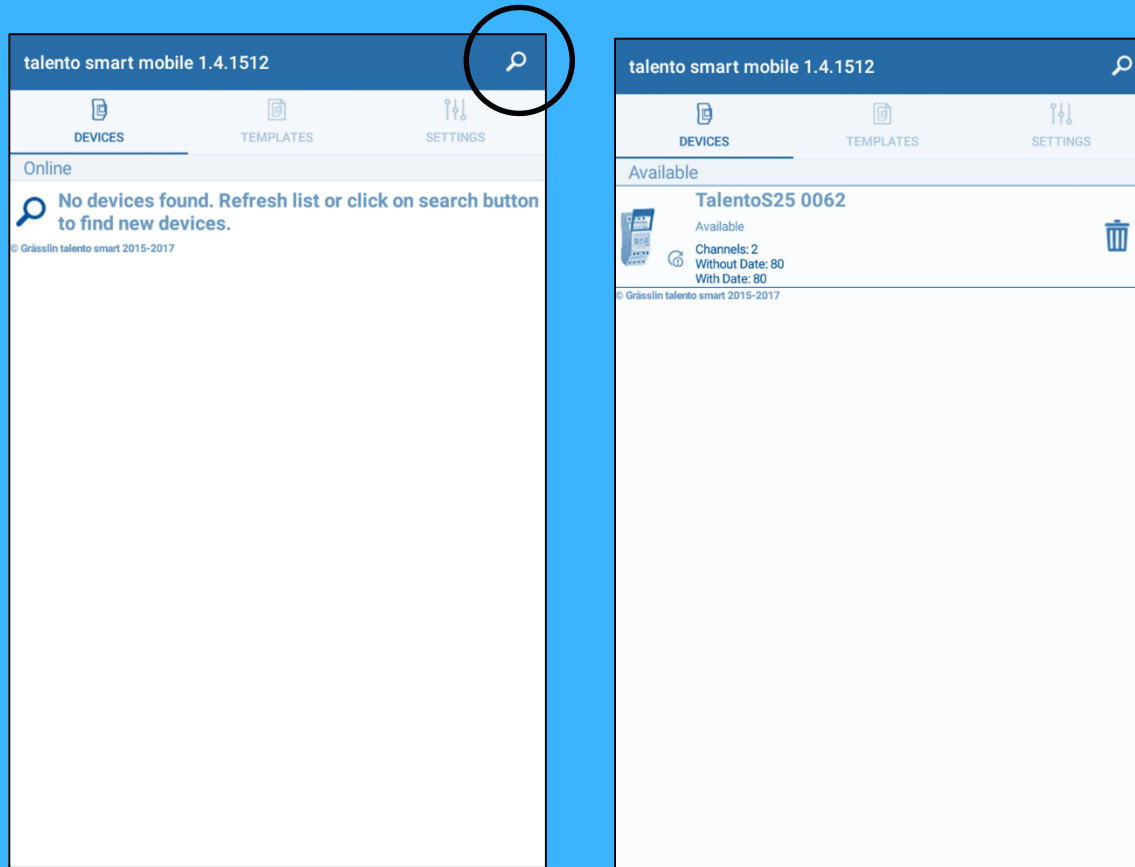

Search for available devices by tapping the magnifying glass



Search for Devices



Timer synchronized




Timer needs to be synchronized



Erase device

Devices

Overview of the symbols

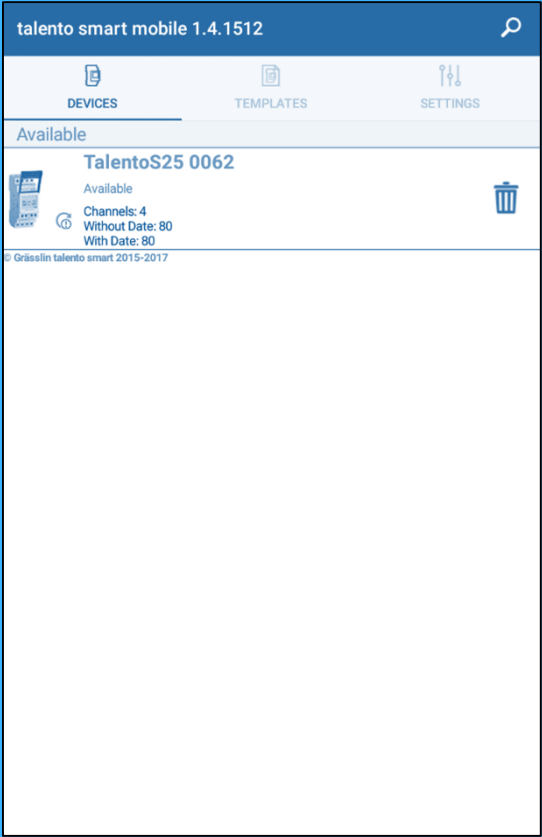

Select an available timer to get to the manual control.



Device is connected



Device is disconnected



Settings



Timer needs to be synchronized



Timer synchronized



Schedule



Table



Auto mode



Override




Fix on



Fix off

Devices

Overview of programs and functions

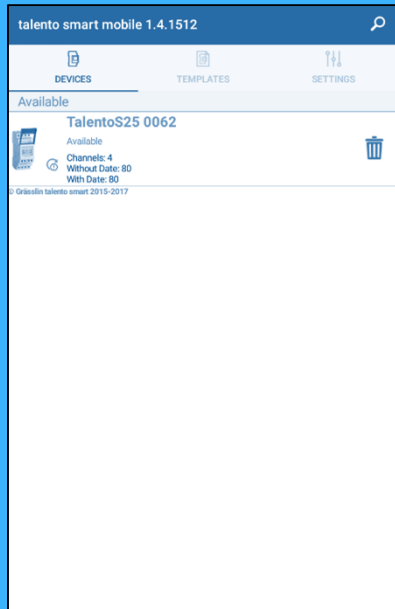


Here you will see all the information regarding the timer.

Tap here to see and adjust timer programs.


Buttons for manual control / override of timer circuits.

Devices


Change of settings

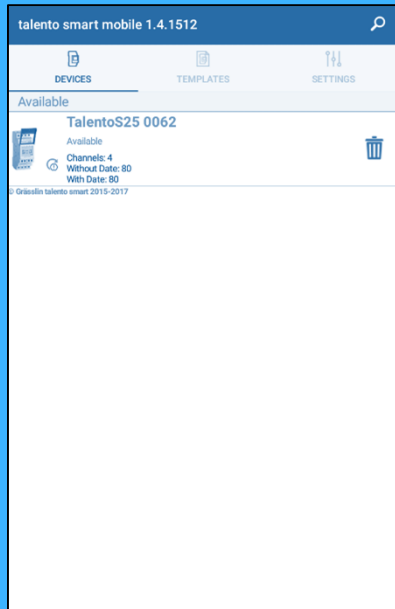

Tap the gear symbol to access timer settings.

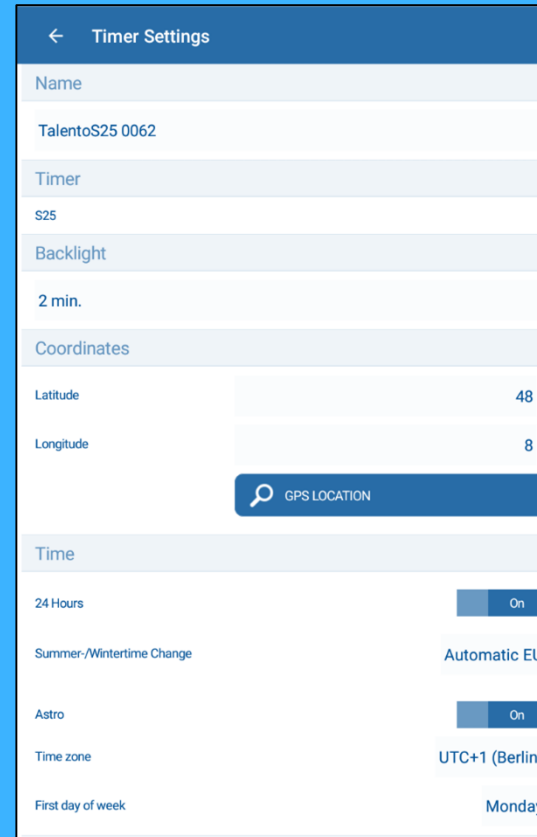


This gives you access to name / rename timers and channels, set latitude / longitude coordinates, time tone, etc..

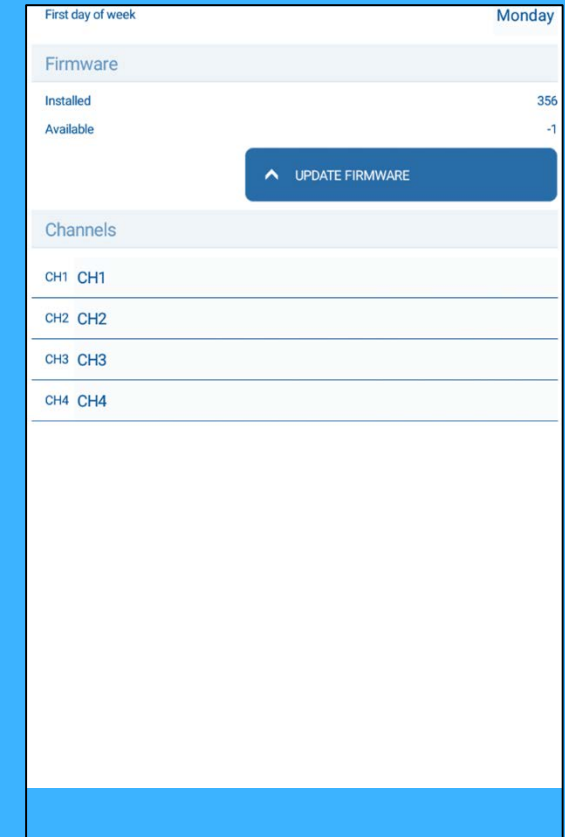


Devices

Synchronization

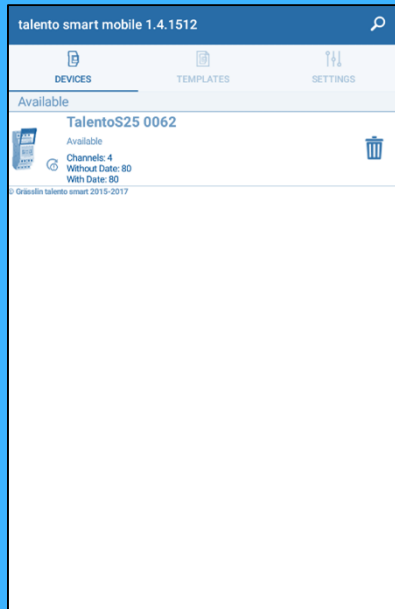

Tap the connection button to access the synchronization menu.

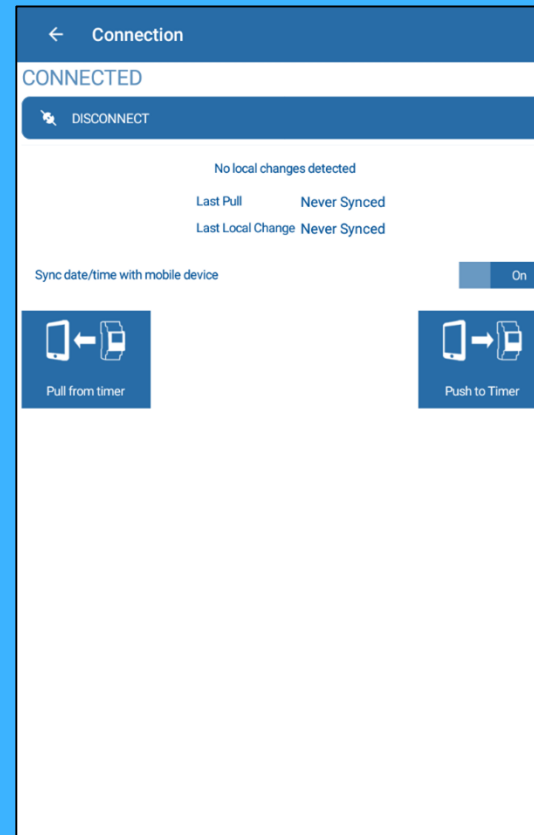

Tap on Pull From Timer to load the schedule from the timer.



Device is connected



Device is disconnected





Pull program from the time switch




Send program to the time switch

Devices


Schedule

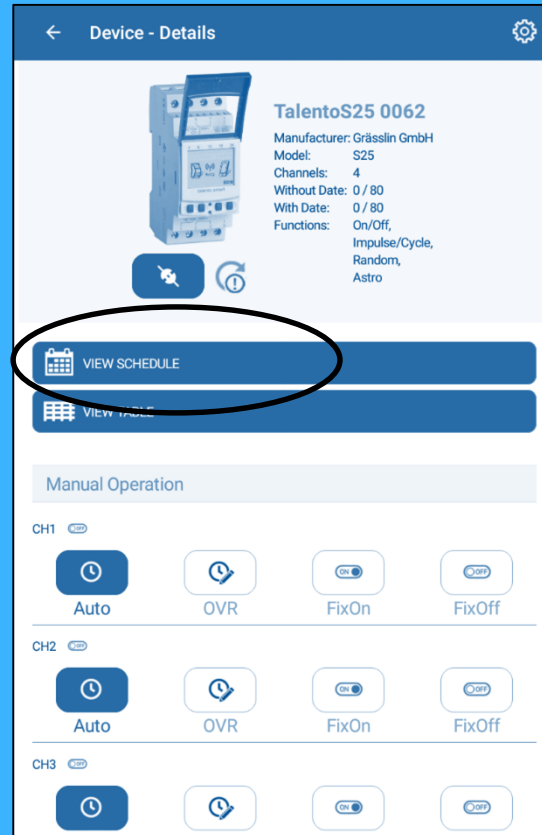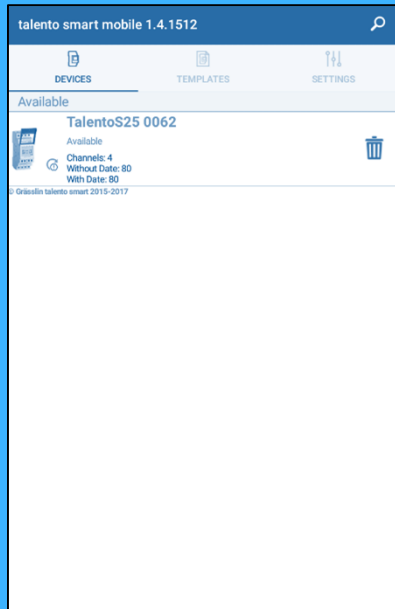

Tap the View Schedule bar to see the timer schedule.

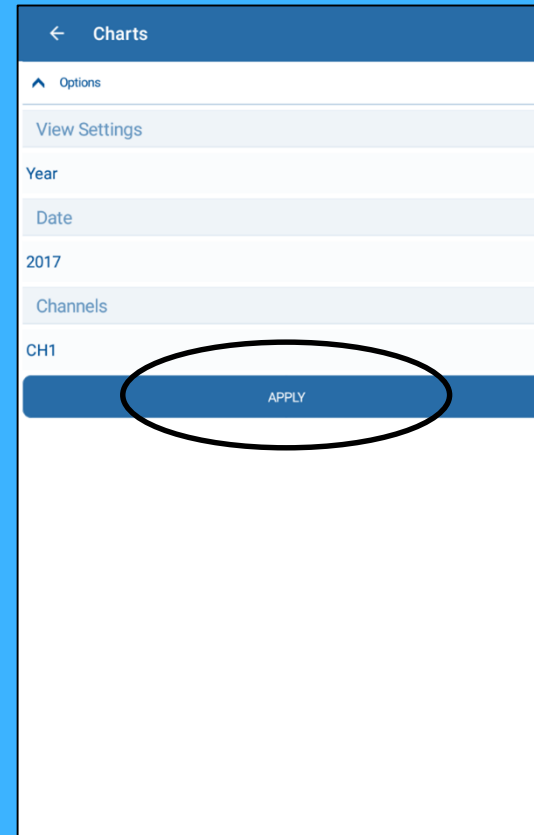



Tap on the parameter you want to see, then tap on Apply to confirm your choice.

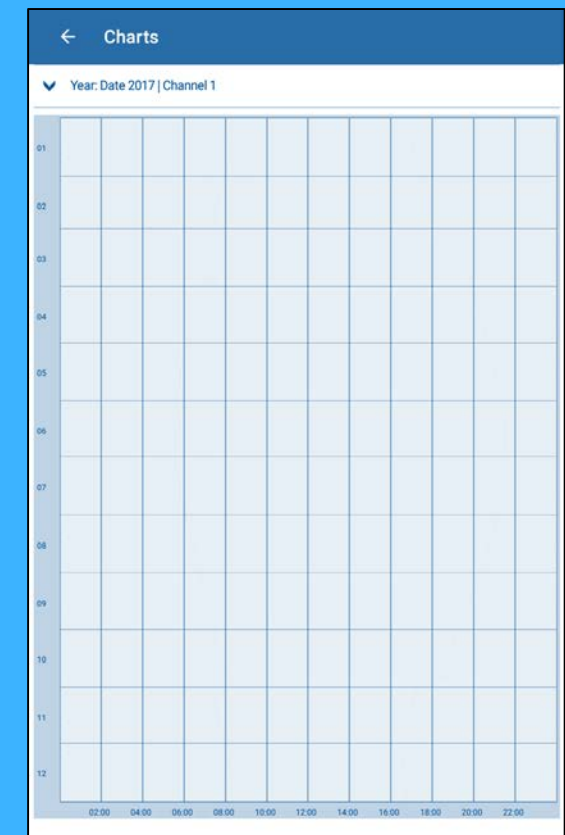


A graph of selected information will be displayed.

Devices


Time table – create new program

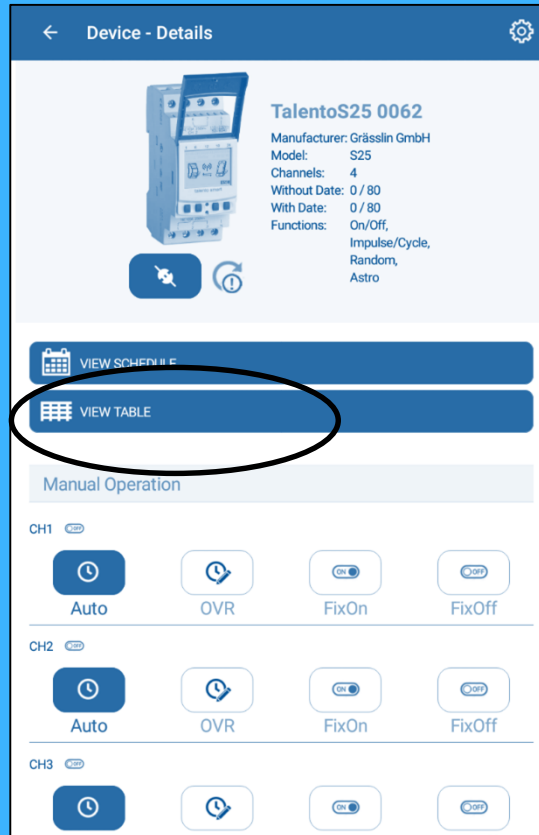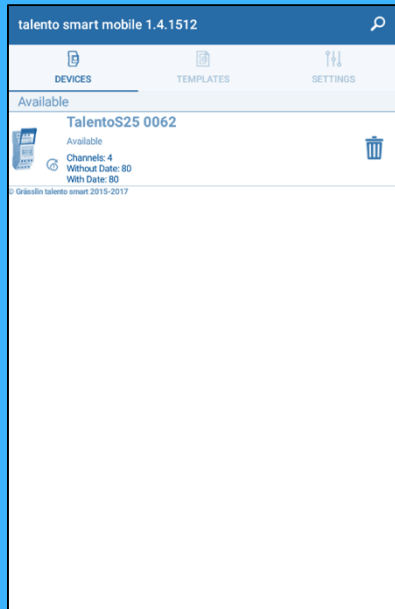

Tap on View Table to access the program schedule. Here you can add programs and events.

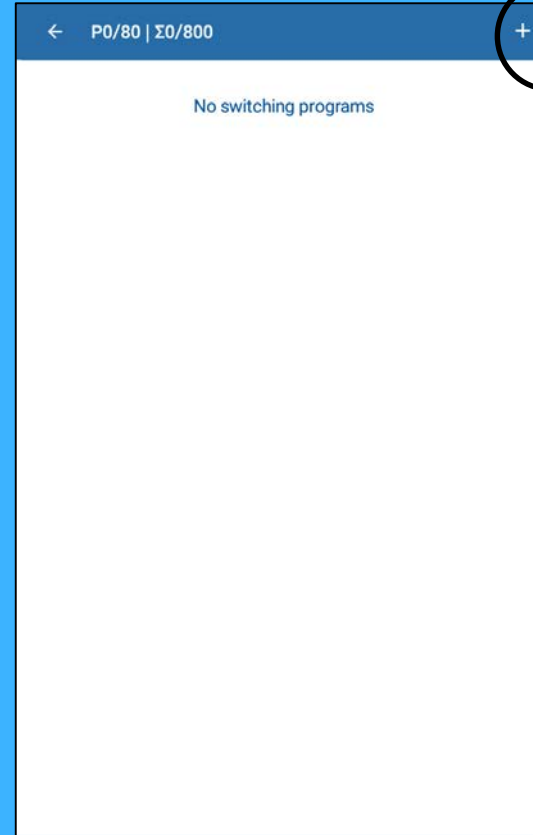


To create a new program tap on +.

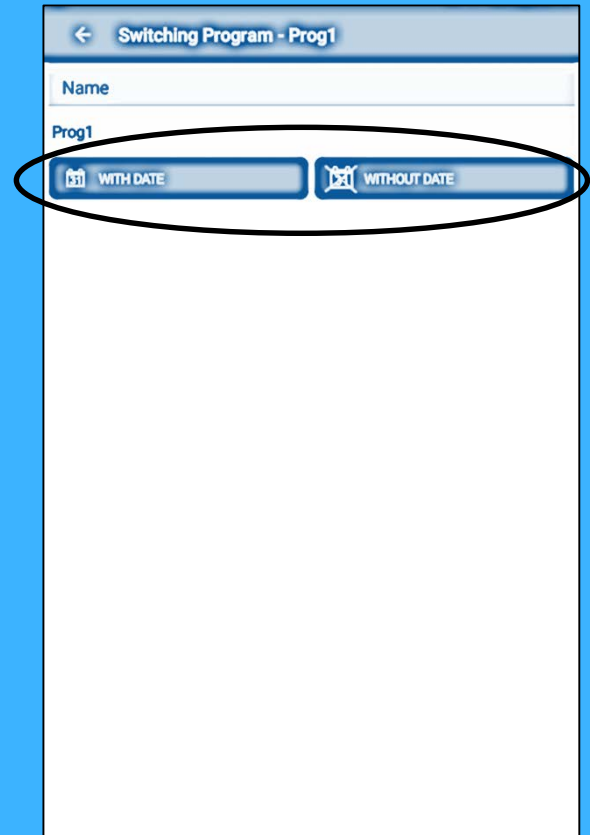


Program can be named / renamed. The select with date for holiday settings or without date for regular schedule event.

Holiday function is not used but included if needed


Time table – create new program

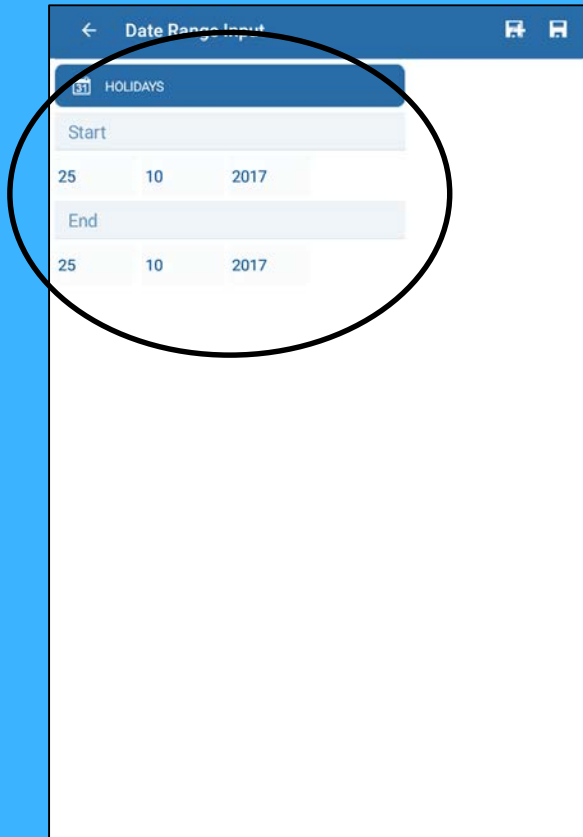

Enter your holiday date range.

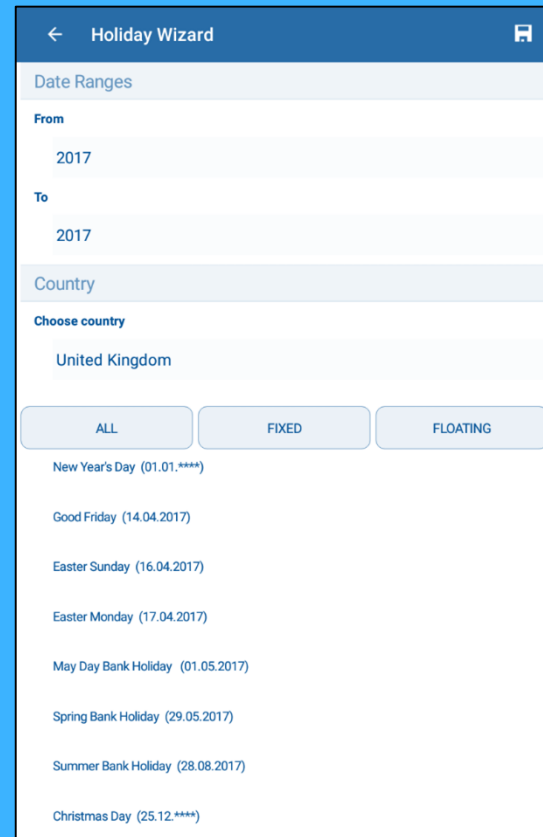

Select Holidays to choose from preset holiday dates. Tap the disk icon to save and exit or the icon with the plus symbol to save and add another holiday. Notification at the top of the screen will indicate when the holiday is saved.

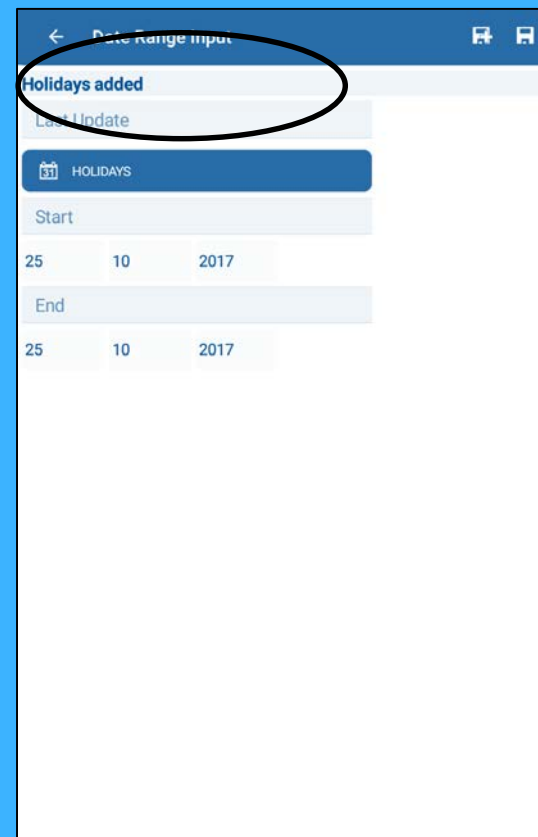

-  Save + add more data
-  Save + end
-  Select holidays

Devices

Time table - overview



← Date Range Input

Holidays added

Last Update

HOLIDAYS

Start

25 10 2017

End

25 10 2017

← P1/80 | Σ9/800

Prog1

Date Ranges

01.01.*	01.01.*
14.04.2017	14.04.2017
16.04.2017	16.04.2017
17.04.2017	17.04.2017
01.05.2017	01.05.2017
29.05.2017	29.05.2017
28.08.2017	28.08.2017
25.12.*	25.12.*
26.12.*	26.12.*

Time Commands

Func.	Time	Days	Ch.
-------	------	------	-----

Overview of
Dates + date range

Overview of
Time commands

← Go back

⬆ Close detailed view

⬇ Open detailed view

+ Add program, date
range or time
command


📄 Change settings

🗑 Erase data


Tapping the back arrow will take
you back to the time table.

Devices

Time table – Adjust program priority / rename program

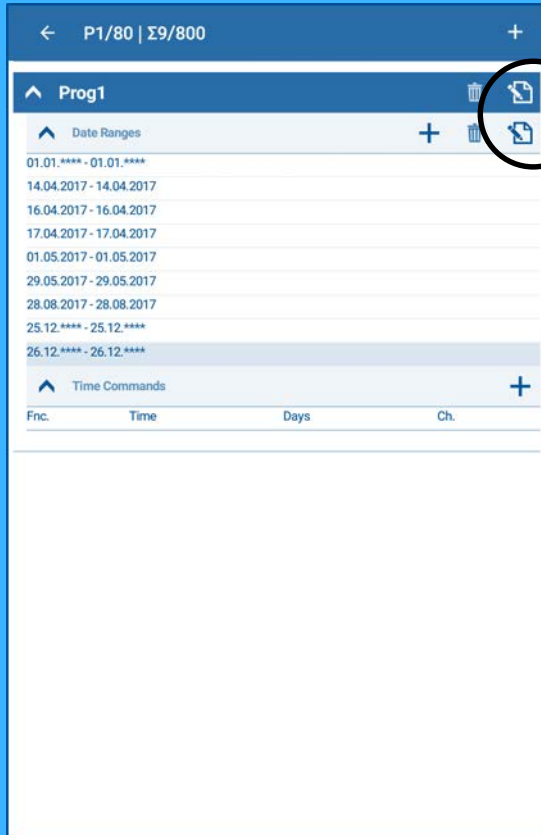


Tap on the change setting icon to edit program information.

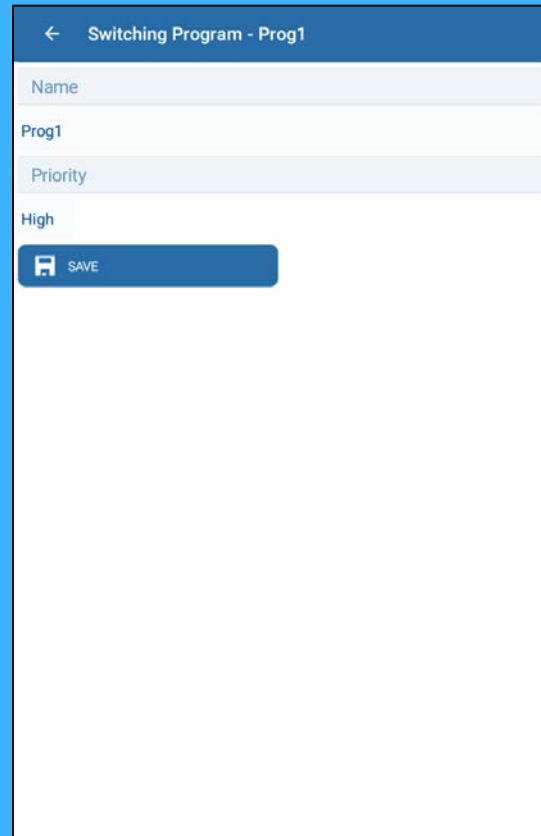


You can change the program name or adjust the priority. Tap the save icon to save your change.

Devices

Time table – add time command - functions

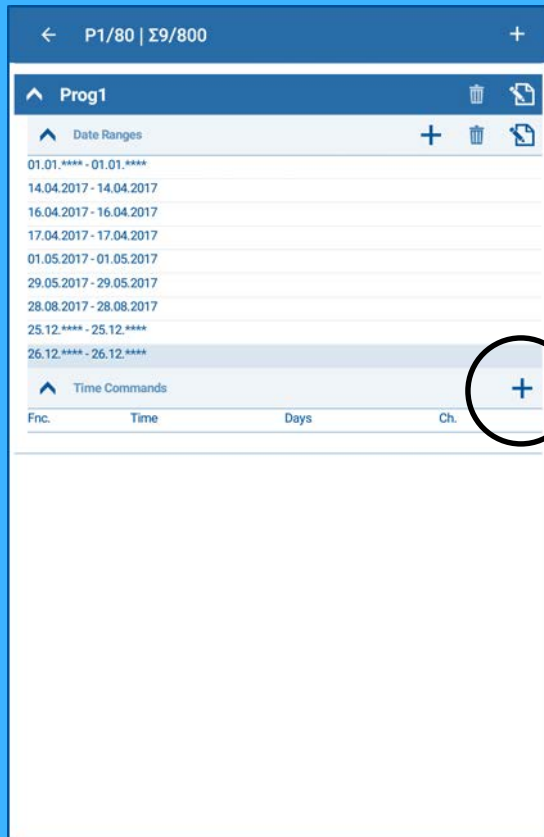

Tap on the (+) button to add an event.

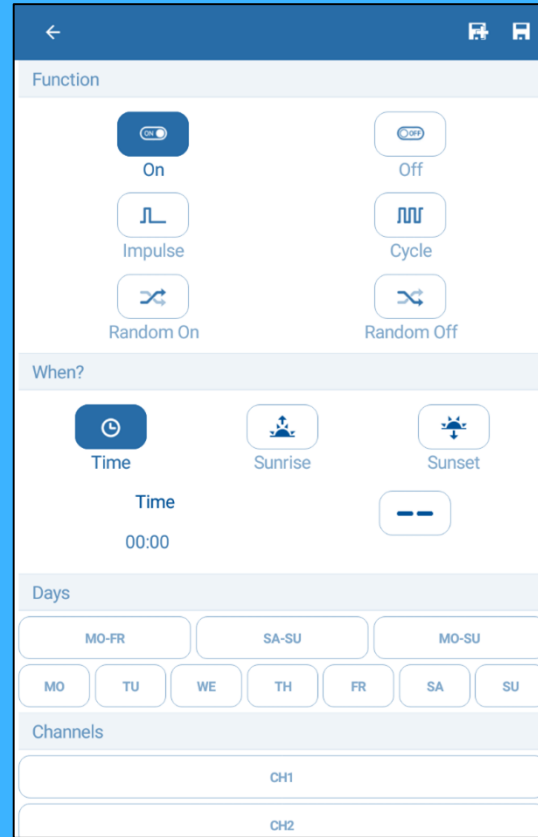


Tap on the appropriate function for this event.

Functions


-  On command
-  Off command
-  Pulse command
-  Cycle command (multiple pulse)
-  Random on command
-  Random off command

Devices

Time table – add time command – times / astro

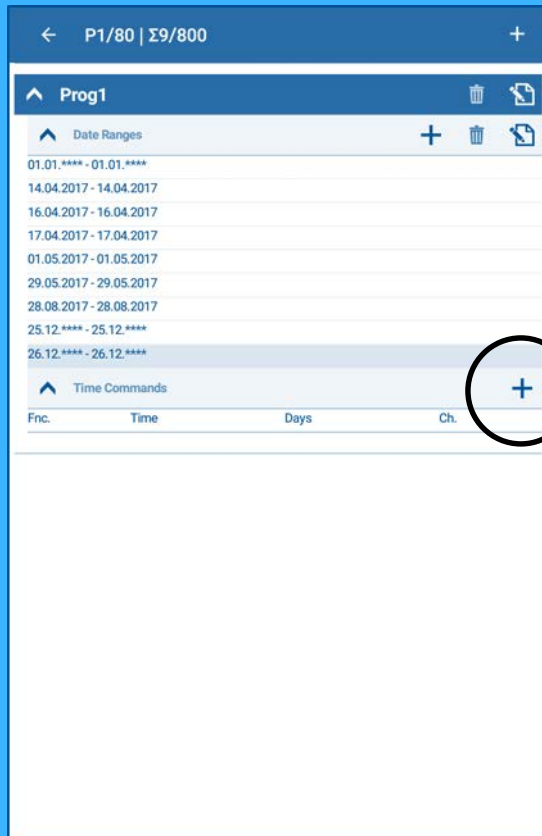

Tap on the (+) button to add an event time.

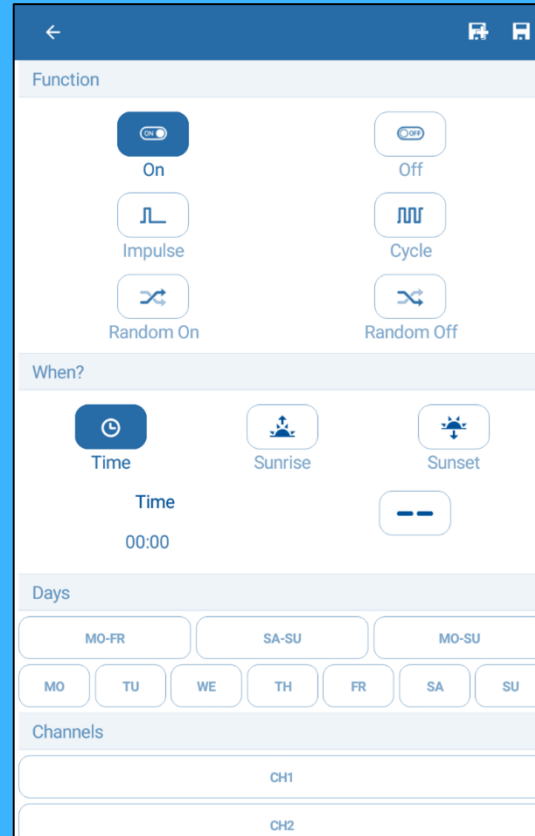

Tap Time (specific time), Sunrise or Sunset to set the timing of the event.

Time selection
+ astro



Sunrise



Sunset



Open Nightbreak-menu



If set time is BEFORE
SUNRISE



If set time is AFTER
SUNRISE



If set time is BEFORE
SUNSET



If set time is AFTER
SUNSET

Devices

Time table – add time command – days



Function

On Off

Impulse Cycle

Random On Random Off

When?

Time Sunrise Sunset

Time
00:00

Days

MO-FR SA-SU MO-SU

MO TU WE TH FR SA SU

Channels

CH1

CH2

Day selection

Tap on a predefined day grouping or the individual days that this event should happen.

Devices

Time table – add time command – channels



Channel selection

Tap on each channel that this event applies to. Tap the Save icon to save settings.



Save + add more data



Save + end

Menu navigation- Template


New template



From the main screen, tap on the Template icon to see the templates overview



Tap on the add button to create a new template.

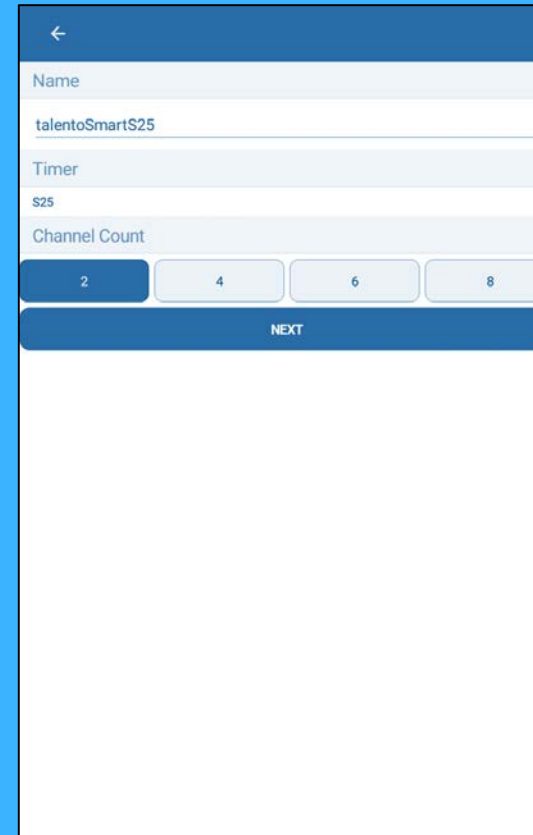

Timer and template can be renamed here. Tap on the Next button to save.

Template

New template



Timer Settings

Name
talentoSmartS25

Timer
S25

Backlight
2 min.

Coordinates

Latitude 48
Longitude 8

GPS LOCATION

Time

24 Hours ☒ On

Summer/Wintertime Change Automatic EU

Astro ☒ Off

Time zone UTC+1 (Berlin)

First day of week Monday

Prepared - Details

talentoSmartS25

Manufacturer: Grässlin GmbH
Model: S25
Channels: 2
Without Date: 0 / 80
With Date: 0 / 80
Functions: On/Off, Impulse/Cycle, Random, Astro

VIEW SCHEDULE

VIEW TABLE


APPLY TEMPLATE

-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

Timer settings can be changed,
then tap the back arrow to
confirm and save.

Template

New template

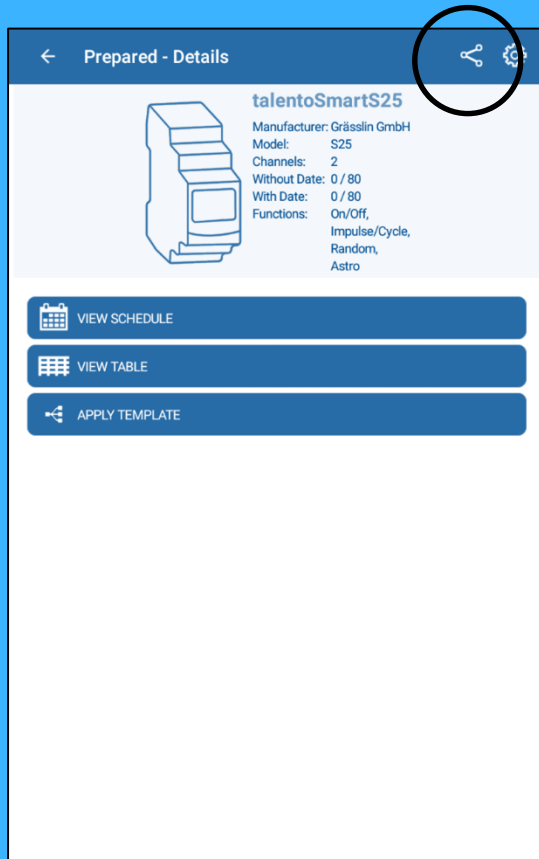


Tap on the share button to send the template e.g. via E-Mail.

-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

Template

New template

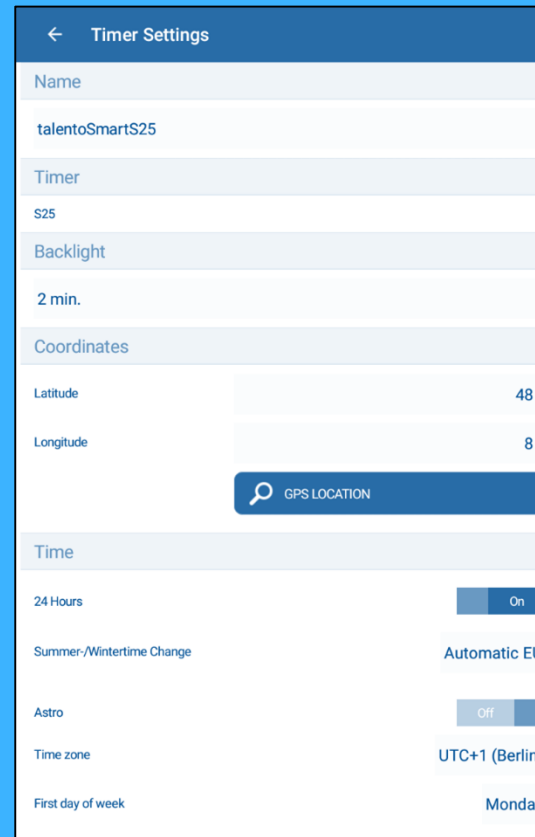

Tap on the gear symbol to access timer settings.


-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

Template


New template



Tap on View Schedule to create a chart.

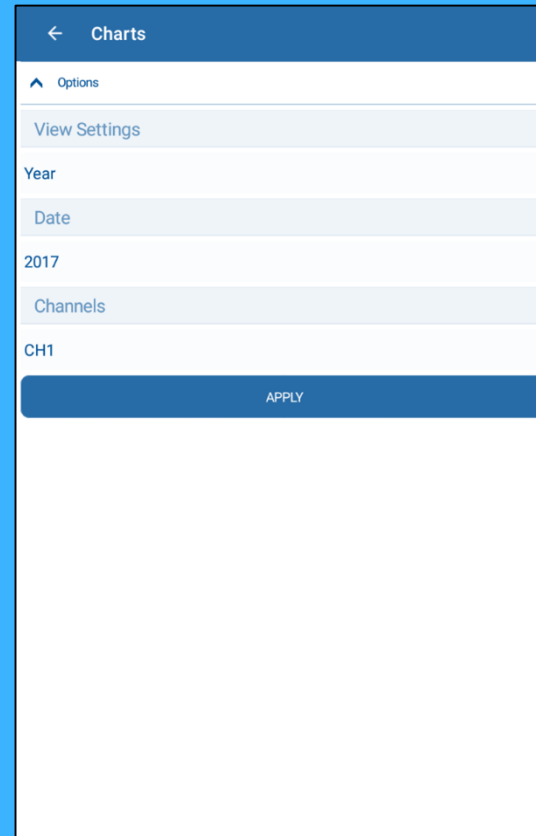

Set parameters and tap APPLY to confirm.

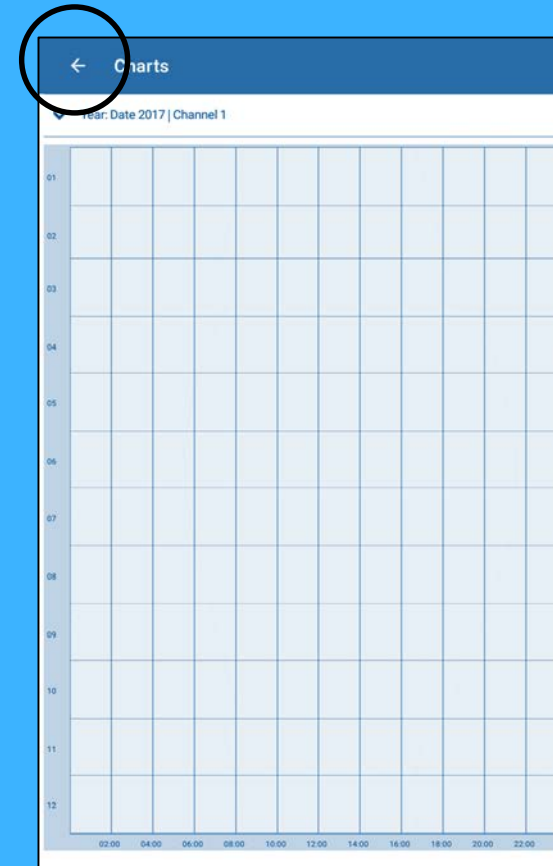


Tap the back arrow to return to the main screen.

-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

Template

New template

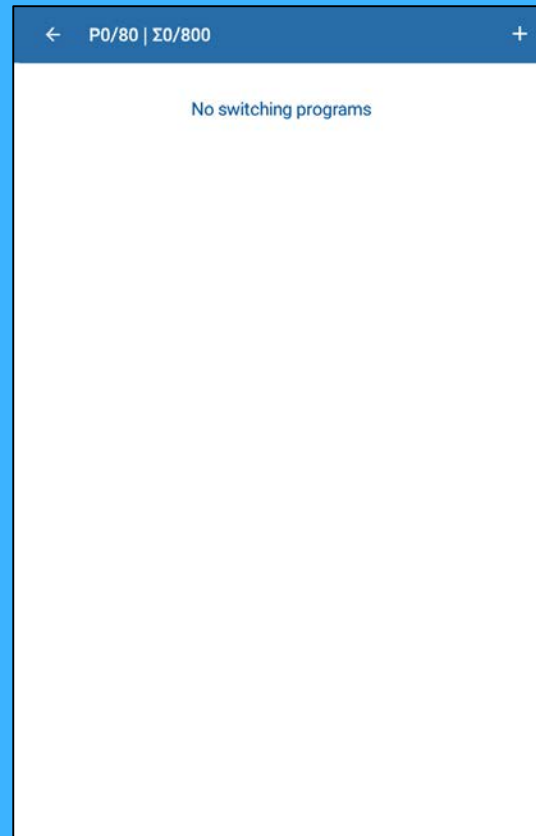


Tap on the table symbol to get to the time table


-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template
-  Add data

Template

New template

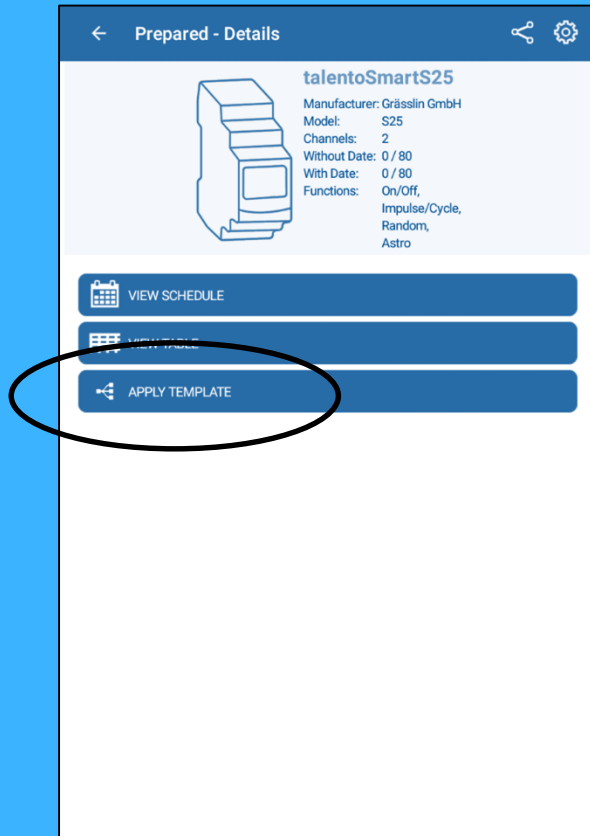

Tap Apply Template to send template to a device.

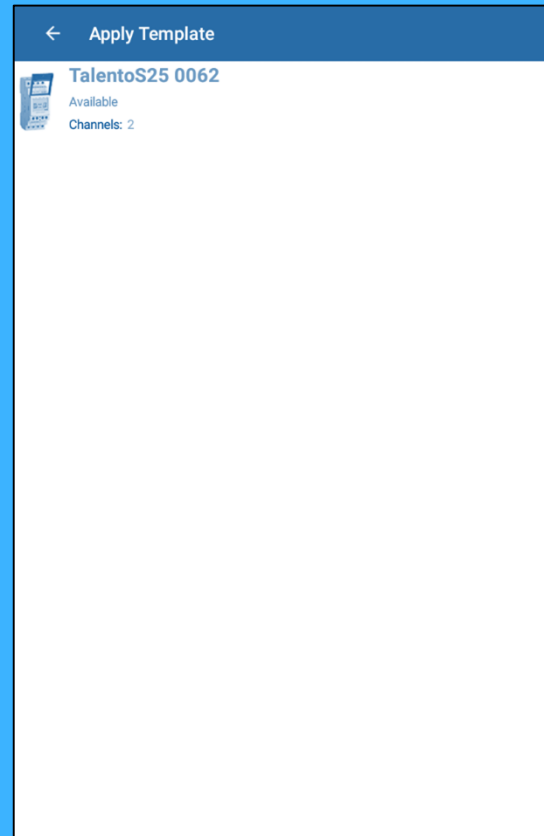

Select device to upload template.



Go back



Share template



Timer settings



View schedule



View time table



Apply template

Menu navigation- Settings

Settings



DEVICES TEMPLATES **SETTINGS**

Language

English (United States)

Bluetooth-Connection

Synchronize time when connect to timer ☒ On

Backlight

2 min.

Coordinates

Latitude 48°

Longitude 8°

 GPS LOCATION

Time

24 Hours ☒ On

Summer-/Wintertime Change Automatic EU



Time zone UTC+1 (Berlin)

First day of week Monday

Colors

Color On

Color Off

Color Random


Background Color

Astro lines


Update Firmware

Current schedule should be saved to the app prior to firmware update. Updating will erase all existing programming in timer.

Update Firmware

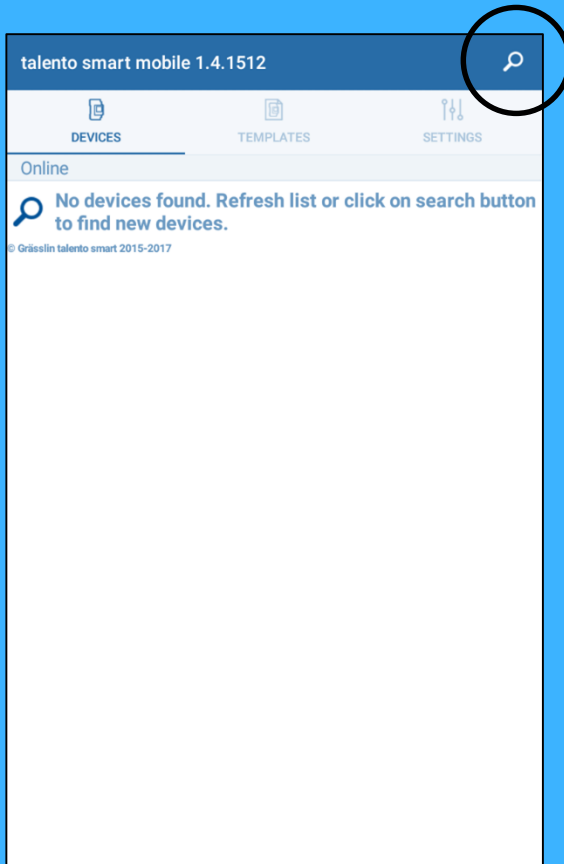

Tap on the magnifying glass to search for available devices.

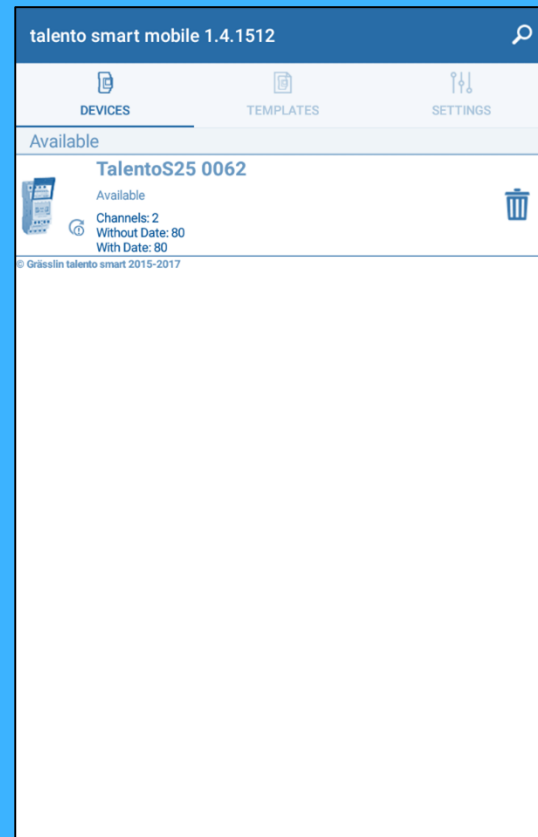

Select time switch to be updated.



Tap the gear symbol to access timer settings.

Update Firmware



← Timer Settings

Name

TalentoS25 0062

Timer

s25

Backlight

2 min.

Coordinates

Latitude 48

Longitude 8

GPS LOCATION

Time

24 Hours On

Summer/Wintertime Change Automatic EU

Astro On

Time zone UTC+1 (Berlin)

Scroll down to update firmware.



First day of week Monday

Firmware

Installed 356

Available -1

UPDATE FIRMWARE

Channels

CH1 CH1

CH2 CH2

CH3 CH3

CH4 CH4

Select Update firmware.

← Firmware Update

Please switch device to bootloader before starting the update

Update File:

Selection

FILE SELECT

Switch device to bootloader mode.

Update firmware

Bootload



1. Step: Press and hold reset button.



2. Step: Press menu button and hold it .



3. Step: Release reset button.



4. Step: Release menu button.



The display should start to flash

Update Firmware



Firmware Update

Please switch device to bootloader before starting the update

Update File:

Selection

FILE SELECT

Select update from displayed files.



In case of questions please do not hesitate to contact your technical support (856) 396-7900 ext.3

