

Electric Kettle

Instruction manual

EN



SENCOR[®]

SWK 2000

Warning

Extreme precaution should be exercised when using any type of domestic appliances, especially the followings:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they will not play with the appliance.
- Before you plug the electric kettle in, check if the voltage specified on the label of the electric kettle corresponds to the mains voltage in your home.
- The base can be connected to the earthed wall socket only.
- Do not use the kettle in the immediate surroundings of a bath, a shower or a swimming pool.
- Only use the kettle in combination with original accessories.
- Do not place the kettle on windowsills. Always place the kettle on flat, dry surface.
- Make sure that the electrical cable and plug cannot come in contact with water or humidity.
- Do not spray the kettle with any liquid. Never immerse any part of the kettle in water or any other liquid.
- This kettle is for domestic use only and should not be used industrially. Do not use the kettle outdoors.
- Exercise extreme care whenever the kettle is to be used near the children.
- Disconnect the kettle from the power supply if it is to be moved, cleaned or if it is not used.
- Do not place the kettle on or near a hot gas or electric burner, or in a heated oven.
- Do not use the kettle if the electrical cable is damaged or whenever any possible internal failure or incorrect operation has been detected.
- Do not attempt to make any repairs yourself. Always contact the official repair services for either mechanical or electrical repairs.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Unplug the kettle by holding the plug; do not pull on the electrical cable.
- Do not use the kettle for other than intended use.
- Only use the kettle in combination with its original base.
- Before the kettle is used for making hot drinks, fill the kettle with clean water, boil the water and empty the kettle. The kettle is ready for common use after repeating this procedure for 5-6 times.
- This kettle should be used for boiling water only. Do not touch the lid while the kettle is boiling.
- Be careful, the body of metal kettle becomes hot while the water is boiling!





Description

- A – Scale filter inside
- B – Locking lid
- C – Switch on/off
- D – Water-level indication window
- E – Indication light
- F – 360° Rotational base

Instructions for use

- Remove all packaging from the kettle. Set the required length of the electrical cable.
- Place the base on flat, clean surface.
- Fill the kettle with required volume of clean water. Warning! If the kettle has been overfilled, there is a risk that boiling water will be ejected from the spout.
- Put the kettle on the base.
- Connect the plug to the wall socket.
- Push the switch button to the position „I“.
- The kettle switches off automatically when the water has reached boiling point.
- Before removing the kettle from the base, make sure that the kettle switched off automatically, or switch it off by hand. The position „0“ means the kettle is switched off, the position „I“ means the kettle is switched on.
- Remove the plug from the wall socket and let the kettle cool down.
- The heating element of this kettle is protected by a safety cut-out device. This device will automatically switch the kettle off if it is accidentally switched on without any water or with insufficient water. Once the heating element is cooled down the kettle can be used again.
- You can fill the kettle with water either through the spout or through the open lid.
- Never fill the kettle below the minimum level.
- Do not fill the kettle when it is placed on the base.
- Never fill the kettle beyond the maximum level indication.
- Do not switch on the kettle without water.
- Make sure that the lid is properly closed before you switch the kettle on.

Cleaning and descaling the kettle

In case of normal use, the following descaling frequency is recommended: once a month.

- 8% white vinegar. Fill the kettle with 1/2 l of 8% white vinegar and let it stand for two hours. Empty the kettle, fill it with clean water, boil the water and empty the kettle. It is recommended to boil pure water in the kettle 4-5 times before the kettle is used for preparing hot drinks again.
- citric acid. Boil 1/2 l water in the kettle, add 30 g of citric acid and let it stand for a half an hour. Empty the kettle, fill it with clean water, boil the water and empty the kettle. It is recommended to boil pure water in the kettle 4-5 times before the kettle is used for preparing hot drinks again.

Clean the outside of the kettle with a soft, damp cloth moistened with warm water and some mild cleaning agent. For cleaning the base use a dry cloth only. Do not use any abrasive cleaning agents, solvents etc. to clean the kettle.

Technical features

220-240V~50Hz, 1850-2200W
capacity 2,0 l

Handling instructions for the disposal of used packaging material

Dispose of the packaging material in the designated place for waste disposal.

Electronic and electric appliance disposal instructions



Information for users for the disposal of electric and electronic devices

This symbol on products or original documents means that used electric or electronic products must not be added to standard communal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product.

Through the correct disposal of this product you will help retain valuable natural resources and prevent potential negative effects on the environment, which could result from its incorrect disposal of waste. Ask about other details at the local council or at the nearest collection point.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic EU regulation requirements that relate to it.

Changes in the text, design and technical specifications may change without prior notice and we reserve the right to make these changes.