

材质：80g书纸+单面单黑印刷+哑油+对折，成品尺寸：105\*105mm，展开尺寸：420\*105mm，公差：±1mm



SWITCH CONTROLLER

SPECIFICATION&INSTRUCTIONS

SWITCH 1 & 2 CONTROLLER SPECIFICATION

| NO | SPECIFICATION ITEM   | SPECIFICATION DESCRIPTION                                                                                                                                            |
|----|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | PRODUCT TYPE         | SWITCH 2 Controller                                                                                                                                                  |
| 2  | COMPATIBLE PLATFORMS | Switch 1, Switch 2                                                                                                                                                   |
| 3  | CONNECTION METHOD    | Bluetooth Wireless Connection                                                                                                                                        |
| 4  | BATTERY CAPACITY     | 850mAh                                                                                                                                                               |
| 5  | INTERFACE            | TYPE-C Port                                                                                                                                                          |
| 6  | ACTION BUTTONS       | A, B, X, Y buttons; D-pad ( Up, Down, Left, Right ); L, R, ZL, ZR buttons; Left 3D joystick, L3, Right 3D joystick, R3; Left back button = L; Right back button = R. |
| 7  | FUNCTION BUTTONS     | Pairing button, Home button, Screenshot button, + button, - button, Chat menu button.                                                                                |
| 8  | 3D JOYSTICK          | TMR joystick                                                                                                                                                         |
| 9  | INDICATOR LIGHTS     | 4 green LED lights                                                                                                                                                   |
| 10 | CHARGING INDICATOR   | Red, White                                                                                                                                                           |
| 11 | VIBRATION MOTORS     | Dual vibration motors in left and right grips                                                                                                                        |
| 12 | GYROSCOPE            | Six-axis gyroscope                                                                                                                                                   |

FUNCTION INTRODUCTION

- 1.Controller Power On:  
Short press the Home button for 1 second to power on the controller.
- 2.Controller Power Off:  
· Long press the Home button for 8 seconds to power off.  
· If no operation is performed, the controller will automatically shut down after 5–6 minutes.
- 3.Controller Pairing with Console:  
In either power-on or power-off state, long press the Pairing button for 3 seconds to enter pairing mode. The channel LEDs will flash in sequence. After successful pairing, the corresponding channel LED will remain on.  
( If wireless pairing is unsuccessful, connect the controller to the console using a USB cable to register it with the console. After registration, wireless connection will be available. )
- 4.Disconnect Controller from Console:  
While connected to the console, short press the Pairing button for about 1 second to disconnect. After disconnection, the controller will enter power-off state.
- 5.Reconnect Controller to Console:  
After pairing once, in power-off state, short press the Home button for 1 second to power on and automatically reconnect.
- 6.Vibration Function
  - Vibration intensity adjustment – 4 levels  
Level 0 : 0 % (off)  
Level 1 : 30%  
Level 2 : 70%  
Level 3 : 100% (default)




- Change intensity of vibration
    - Press D-pad Right + C button together = Increase vibration
    - Press D-pad Left + C button together = Decrease vibration
  - Each adjustment triggers a vibration prompt indicating the current level.
  - Adjustments support cyclic switching and are saved after shutdown.
  - Default vibration set at 100%
- 7.Charging
  - Use the NS console or a 5V adapter to charge via a TYPE-C cable.
  - During charging, the C button LED lights red. When fully charged, it lights white.

- 8.Chat Menu Button  
In-game, quickly press the Chat Menu button to bring up the chat menu. Press A to enter.

- 9.Back Buttons  
Mapped to mirror L (M2) and R (M1) keys.

CALIBRATION FUNCTIONS

- 1.Gyroscope Calibration  
When not connected to the NS console, place the controller on a flat surface. Hold “-” button + A button + Home button” for about 3 seconds. The four channel LEDs will flash alternately. Then press the “+ button”. After 2 seconds, the channel LEDs will turn off, indicating successful calibration and automatic exit.  
*Note: Do not move the controller during calibration.*
- 2.3D Joystick Calibration  
When not connected to the NS console, hold “B button + - button + Home button” for 1 second. Rotate the joystick twice in full circles, then press the B button again to complete calibration.

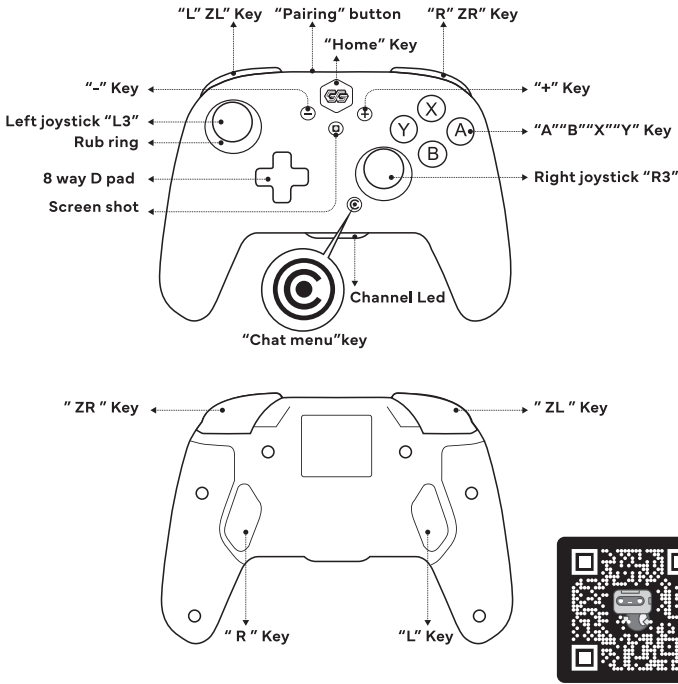

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.