

User Manual

PORTABLE CD PLAYER WITH CASSETTE RECORDER

CD-X2C




Thank you for purchasing our personal audio products. High-quality CD player is an electronic acoustic technology product carefully designed by our company. To obtain the perfect use effect and prolong the service life of this product, correct use and maintenance are very important, please read this manual carefully before use it.

CONTENTS


- VERY IMPORTANT TIPS
- FUNCTION DESCRIPTION
- CD DISC OPERATION
- AUX OPERATION
- TAPE OPERATION
- RADIO OPERATION
- SLEEP MODE
- SPECIFICATIONS
- SAFETY INSTRUCTIONS
- WARRANTY
- PACKING LIST

VERY IMPORTANT TIPS

- ▲ When using this product, please follow the prescribed steps, otherwise you may be exposed to harmful radiation. This CD player is a CLASS 1 LASER product.
- ▲ When the CD cover is opened or carelessly closed, an invisible laser will be generated.
- ▲ Please do not touch the bald head at will, otherwise it will affect the playback performance.
- ▲ The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “hazardous voltage” within product's enclosure, which may be sufficient to induce a risk of electric shock to persons.

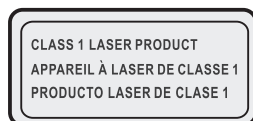

FUNCTION DESCRIPTION

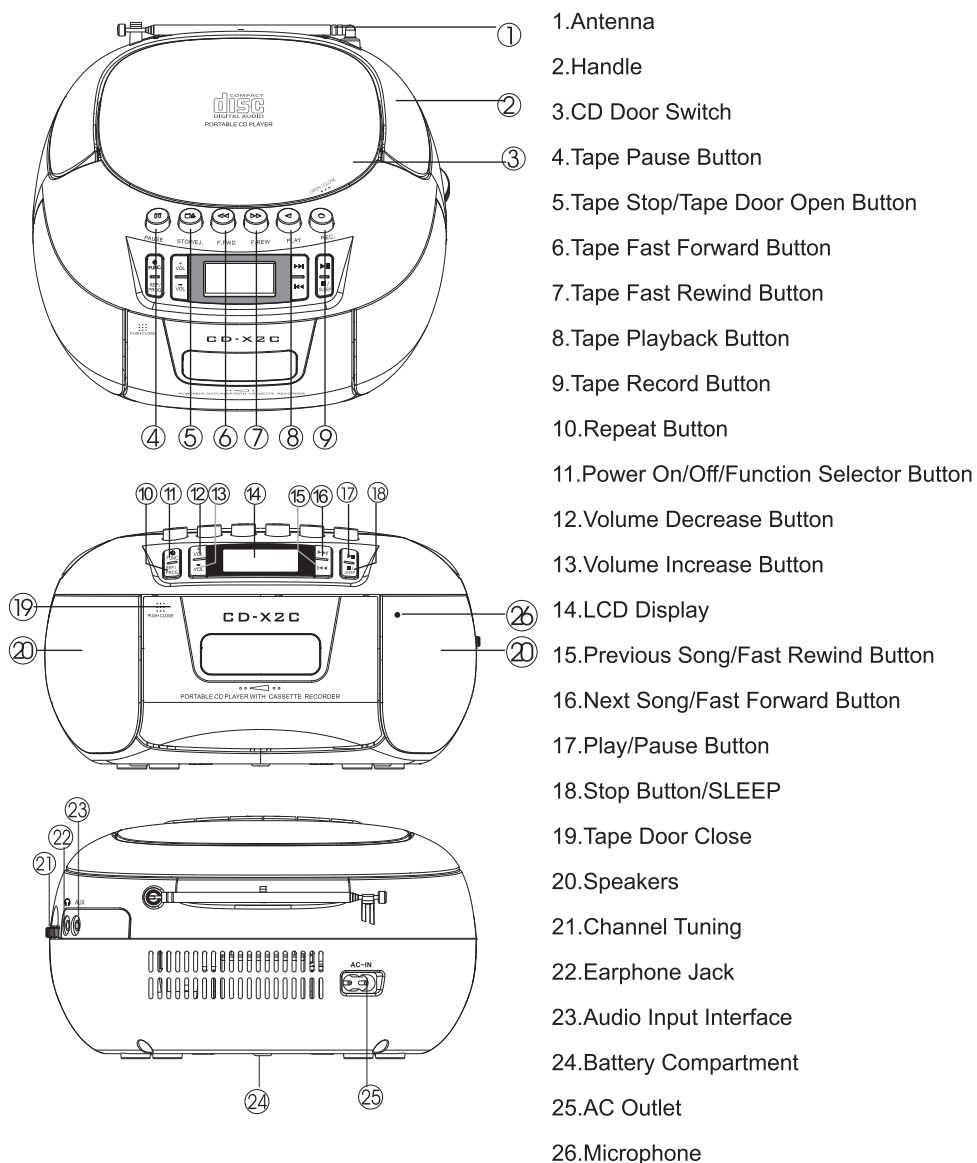

POWER SUPPLY

1. **Using Battery:** open the battery compartment door at the bottom, correctly install 6 (1.5V “C” Size) batteries according to the direction shown in the battery room, then cover the cell door.
2. **AC Power:** plug one end of the AC power cord into the AC power jack of this product, and plug the other end into the 110-120V household power outlet.

NOTE: This product can only use the AC power supply voltage indicated on the manual or the casing.

NOTE:

1. When unplugging the AC power cord, hold the plug by hand instead of pulling the power cord.
2. Never touch the AC power plug when your hands are wet, otherwise it may cause electric shock.
3. The power cord should be fixed to avoid twisting or trampling.
4. Do not use power sockets with too thin and extended wires. If the Outlet is overloaded, it will cause fire or electric shock.
5. If the product is not used for a long time, Please unplug the AC power plug from the socket and take out the dry battery to prevent the battery from leaking and damaging the parts.

CD DISC OPERATION

1. After power on, press the function selector button(**(FUNC.)**) to select CD mode.LCD shown as “ **(CD)** ”
2. Press to open the CD compartment door, and place the disc printing surface upward on the spindle of the CD movement. Then close the CD compartment door, the disc total track will show in LCD , press play button (**(▶II)**)to start playing music , and the LCD will display the serial number of your current song.
3. Short press the Vol + button (**(VOL+)**) or Vol - button (**(VOL-)**) to adjust the volume appropriately.
4. Press the play / pause button (**(▶II)**) once to temporarily stop playing, and press this button again to resume playing.
5. If you need to stop playing halfway, press the stop button (**(■)**) to stop playing.
6. During playback, short press the previous/next button (**(◀◀)/ (▶▶)**) to jump to the previous/next song; long press the previous/next button (**(◀◀)/ (▶▶)**) to fast rewind or fast forward.
- 7.Repeat function:
 - In the process of playing CD, press the repeat button (**(REP.)**) once, the current song you listen to will entre into single cycle, and Flashing displayed on the LCD as shown in figure 1;
 - Press the repeat button two times, the whole disc will be played repeatedly, and displayed on the LCD as shown in figure 2;
 - Press the repeat button three times, the whole disc will be played randomly. Displayed on the LCD as shown in figure 3; Press the repeat button four times to resume normal playback.



Figure 1
Single Cycle



Figure 2
Whole Disc Repeat



Figure 3
Random Play

8. In the stop state (), press the repeat button () on the machine to program songs. Press previous/next button ( / ) to select the song you want to program, then press repeat button () to confirm after programming. Press the play/pause button () to play in the sequence of the programmed songs.

AUX OPERATION

1. Short press the function selector button (), select the AUX function, then connect the external sound source to this machine with AUX cord, the song will be played after the machine detects it. (LCD shown as "  ")
2. The machine has the function of amplifying and outputting all external sound sources (such as mobile phone, MP3 player, tape Walkman, CD player, radio, etc.).

TAPE OPERATION

1. Press the function selector button () to select the TAPE function. (LCD shown as "  ") .
2. Press the tape stop / open button () to open the tape door, place the tape correctly and close the tape door.
3. Press the tape playback button () to play, and press Vol + button () or Vol - button () to adjust the volume appropriately.
4. Press the tape pause button () once to temporarily stop playing, and press the tape pause button () again to resume playing.

5. To fast forward or fast rewind the tape, just press the tape fast forward button () or the tape fast rewind button (), then press tape playback () button again to play.
6. When the magnetic stripe in the tape reaches the end, the tape playback will stop automatically.
7. If you want to stop playback halfway and take out the tape, press the Tape Stop/Tape Door Open Button once to stop, and press twice to open the tape door.

TAPE RECORDING

1.This product has function of built-in microphone input tape. It can record sound under CD/AUX/FM/AM/Radio mode.

Note:In TAPE mode your voice can be recorded.

2.Press to open the tape door and put in a tape on it. Then press to choose one of the CD/AUX/FM/AM mode you want to record. When it playing, press the tape playback button () and tape record button () at the same time to start record.

3.Press the tape stop / open button () to stop record, then press the function selector button () to select the TAPE function. (LCD shown as "  ").

4.Press the tape fast rewind button () to back to the sound you record, then press the tape playback() button to play.

Note:In order to prevent accidental erasure of audio, put the anti erasing side of the tape upward and remove the erasure protective film on the right with a screwdriver,so that the recording cannot be made on this side of the tape. If you need to restore the tape, please use tape to block the gap of erasure protection sheet.

RADIO OPERATION

- 1. Press the function selector button (**FUNC.**) to enter the radio state. (LCD shown as "  ")
- 2. Press the (**VOL+**)/(**VOL-**)button to adjust it to the appropriate volume.
- 3. Turn the channel selection button to select your favorite stations. The LCD will display the corresponding radio frequency.
- 4. Pull out the antenna to get a good FM reception.

SLEEP MODE

- 1. In the CD / tape / FM / AM mode, long press the SLEEP button, enter the sleep mode, the display shows 90, representing the machine 90 minutes after will shutdown, you can also press the next / previous button to set the need to shutdown sleep time (by minutes),
During Sleep status,short press the next button has the following options:
90>OFF>10>20>30>40>50>60>60>70>80>90>OFF
 - 2. Choose a sleep time the machine will automatically enter to the shutdown mode when the sleep time run finished.
- Note:** In sleep mode, long press the SLEEP button to see how much sleep time is left before the device turns off.

SPECIFICATIONS

Frequency range	FM: 87.5-108MHz AM: 520-1710KHz
Power source	AC110/120V~60Hz DC 9V(1.5V x 6"C")
CD playback sound	31.5Hz-16kHz±3dB
Maximum power consumption	15W
Size	217*213*122mm/ 6. 51*6. 39*3. 66in
Weight	3. 17lb (Not include batteries)



SAFETY INSTRUCTIONS

※USE ENVIRONMENT

1. Do not expose the machine to rain or damp places, and place and use the machine away from bathtubs, washing boxes, swimming pools, etc
2. Do not put any source of danger on the device (for example, objects filled with liquid, lighted candles).
3. Do not use the machine near heat sources, including radiator pipes, heaters or other appliances that generate heat.
4. Put the machine on a flat surface to use.
5. The machine should be placed in a location with sufficient ventilation space around it, and there should be 5-10 cm of space around the front and rear of the machine, so that the machine can have enough space for ventilation.
Do not place the machine on a bed, blanket or similar surface to prevent the vents of the machine from being blocked, and do not cover the machine with tablecloths, paper, etc.
6. Be careful not to let solids or liquids enter the body from the radio.
7. Water vapor may condense on the laser lens under the following conditions:
When the unit is moved from a cold place to a warm place;
When the heating system has just opened;
When the machine is used in a very humid room;
When the unit is cooled by the air conditioning system.
When condensation occurs in the unit, the system cannot operate normally.
If this happens, you can temporarily stop using the unit for a few hours before operating it again.
8. The machine should not be exposed to water droplets or splashes, and objects filled with liquids such as vases should not be placed on the equipment.

※PRECAUTIONS

1. In the event of a thunderstorm and you will not use the machine for a long time, you should unplug the AC power plug from the socket or take out the battery to prevent battery fluid from leaking and damaging the machine.
2. Different types of batteries, old and new batteries cannot be mixed, and the batteries must not be charged or heated. When removing the exhausted battery, if the battery leaks, remove the battery and wipe the liquid thoroughly. Waste batteries should be placed in officially designated recycling locations to avoid environmental pollution.
3. When playing, the battery life is limited, please use AC power as much as possible.
4. When using a battery to supply power, the AC power cord must be removed from the unit. When the volume is reduced or the sound is distorted, please replace the battery.
5. The battery (battery pack or battery pack) should not be used in an overheated environment (such as direct sunlight, open flames or similar environments) .

※MAINTENANCE

Please place the machine in a well-ventilated place, not in the sun or other places that generate high temperature and humidity. During maintenance, please use a soft cloth moistened with a thinner detergent to wipe the body. Do not use strong solvents such as alcohol, stupid or thinner.

WARRANTY

- This CD boombox has full 12-month warranty against manufacturing defects.
- The warranty period begins form the date of purchase.

PACKING LIST

CD Player	1
AC Power Cord	1
AUX Cable	1
User Manual	1



Made in china