

# KitchenAid

## HEAVY DUTY

GEBRUIKSAANWIJZING MIXERS

MIXER INSTRUCTIONS

ROBOTS DE CUISINE : MODE D'EMPLOI

GEBRAUCHSANLEITUNG - KÜCHENMASCHINE

ISTRUZIONI D'USO

INSTRUCCIONES PARA BATIDORA



9706978B

# Table of Contents

Important Safety Instructions.....2, 3

About Your Mixer

    Model 5K45SS Mixer Features.....4, 5

    Model 5K5SS/5KPM5 Mixer Features.....6, 7

    Using your KitchenAid® Attachments .....8

    Beater To Bowl Clearance.....8

    Care and Cleaning.....8

    Planetary Mixing Action.....9

    Mixer Use.....9

    Speed Control Guide .....9

Mixing Tips.....10

    Mixing and Kneading Yeast Dough .....10, 11

    Egg Whites.....11

    Whipped Cream.....11

When You Need Service .....12

Mixer Warranty.....12

## Important Safety Instructions

**When reading the Instructions Manual...**  
Pay special attention to sections marked by the following words:

**⚠ WARNING**

These help you avoid accidents that could lead to injury for someone using the product

**⚠ CAUTION**

These help you avoid damage to the product and/or other property.

**“NOTE:” or “IMPORTANT”**

These sections give you helpful tips on using the product.

## **WARNING**

### **TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, INJURY TO PERSONS, OR DAMAGE WHEN USING THE MIXER, FOLLOW BASIC PRECAUTIONS, INCLUDING THE FOLLOWING:**

1. Read all instructions.
2. To protect against risk of electrical shock, never immerse mixer in water or other liquid.
3. Be sure that the prongs on the plug of the unit mate with the electrical wall receptacle into which it will be plugged. Observation of proper grounding techniques and local electrical codes is required.
4. Do not let children operate or play with mixer.
5. Close supervision is necessary when any appliance is used by or near children. Do not leave mixer unattended while it is operating.
6. Unplug mixer from outlet when not in use, before inserting or removing parts, and before cleaning.
7. Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beater during operation to prevent injury, and/or damage to the mixer.
8. Do not operate mixer unattended or near edge of work surface. When used for heavy loads or at high speeds, mixer may move on work surface.
9. Remove flat beater, wire whip or dough hook from mixer before washing.
10. Do not operate any appliance with a damaged cord set or after the appliance has been dropped or damaged in any manner. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
11. The use of attachments not recommended by KitchenAid may cause fire, electrical shock or injury.
12. Do not use outdoors.
13. Do not let cord hang over edge of table or counter, or touch hot surfaces.
14. When using a mixer model with a tilt head, the head must be completely down before locking. Before mixing, make sure lock is in position by attempting to raise head.
15. Do not use an extension cord.
16. When making dough with the mixer, never use recipes calling for more than the following maximum measurements: Model 5K45SS – 1.12 kg (8 cups) of all-purpose flour or 840 g (6 cups) of whole wheat flour. Models 5K5SS, 5KPM5, and 5KSM5 – 1.4 kg (10 cups) of all-purpose flour or 1120 g (8 cups) of whole wheat flour.
17. When making dough with the mixer, never operate mixer continuously for more than 10 minutes.
18. Be careful when lifting mixer as it is heavy.
19. Use the mixer only for its intended function.
20. **ELECTRICAL REQUIREMENTS:** Your KitchenAid® Mixer operates on a regular 220-240 volt A.C., 50-60 hertz house current. The wattage rating for your KitchenAid® Mixer is printed on the trim band. This wattage is determined by using the attachment which draws the greatest power. Other recommended attachments may draw significantly less power.
21. Be certain the attachment hub is secure (tighten attachment knob) prior to using mixer to avoid any possibility of the attachment hub falling into the bowl during mixing.

 
This appliance is intended to be used in household and similar applications such as:

 
- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments

**SAVE THESE INSTRUCTIONS**

# 5K45SS Mixer Features

English

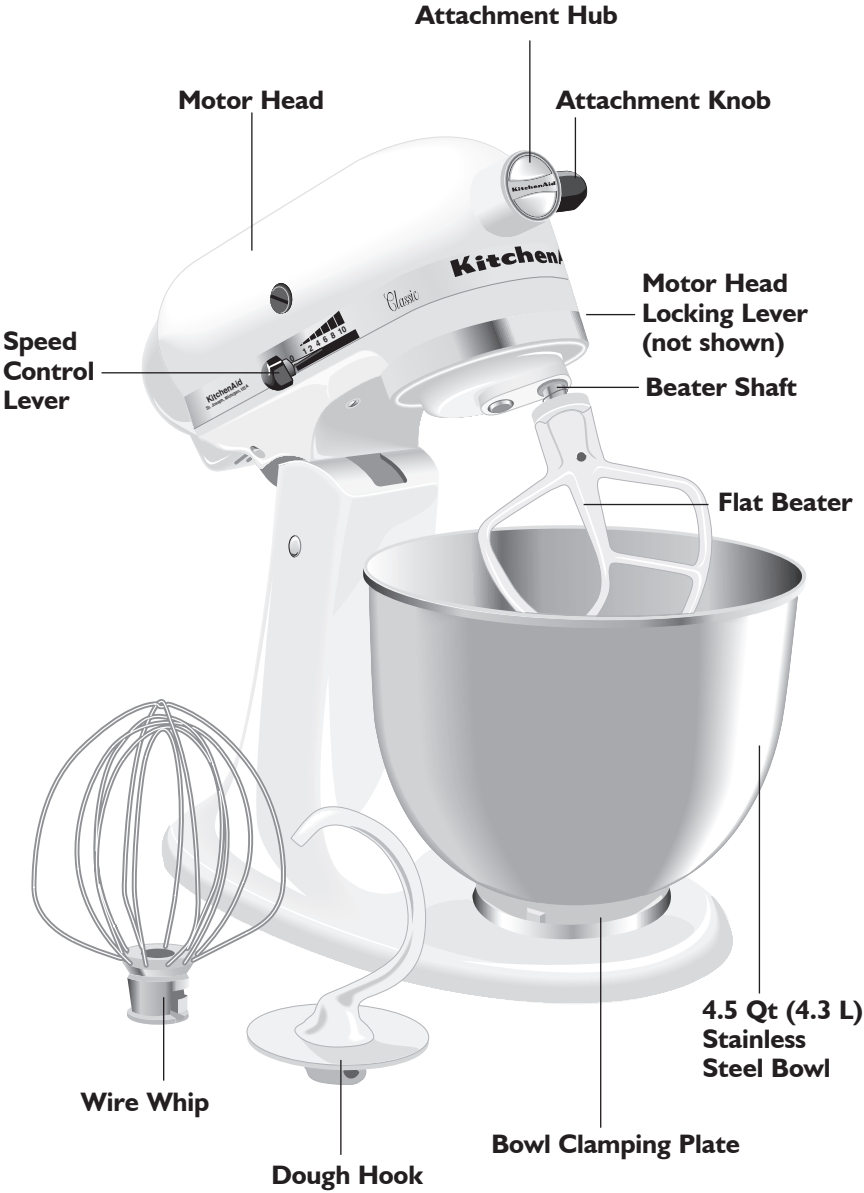

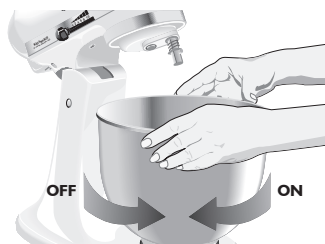

### TO ATTACH BOWL

- Be sure speed control is OFF.
- Tilt motor head back.
- Place bowl on bowl-clamping plate.
- Turn bowl gently in clockwise direction (see picture above).
- Sit pouring shield on bowl.

### TO REMOVE BOWL

- Turn speed control to OFF.
- Tilt motor head back.
- Turn bowl in counterclockwise direction.

 


### TO ATTACH FLAT BEATER, WIRE WHIP, OR DOUGH HOOK

- Turn speed control to OFF and unplug.
- Raise motor head.
- Slip beater onto beater shaft and press upward as far as possible.
- Turn beater to right, hooking beater over pin on shaft.

### TO REMOVE FLAT BEATER, WIRE WHIP OR DOUGH HOOK

- Turn speed control to OFF and unplug.
- Raise motor head.
- Press beater upward as far as possible and turn left.
- Pull beater from beater shaft.

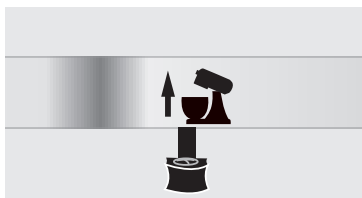


### TO LOCK MOTOR HEAD IN RAISED POSITION

- Push locking lever up into UNLOCK position and hold.
- Tilt motor head back.
- Move locking lever into LOCK position.

### TO LOCK MOTOR HEAD IN OPERATING POSITION

 - Push locking lever up into UNLOCK position and hold.
- Lower motor head until it is completely down into operating position.
- Move locking lever into LOCK position.
- Before mixing, test motor head lock by attempting to raise head.

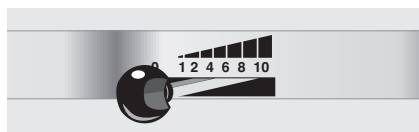


**NOTE:** Motor head should always be kept in LOCK position when using mixer.

### TO OPERATE CONTROL SPEED

 - Speed control lever should always be set on lowest speed for starting, then gradually moved to desired higher speed to avoid splashing ingredients out of bowl. See "Speed Control Guide."

## 5K5SS/5KPM5 Mixer Features

English

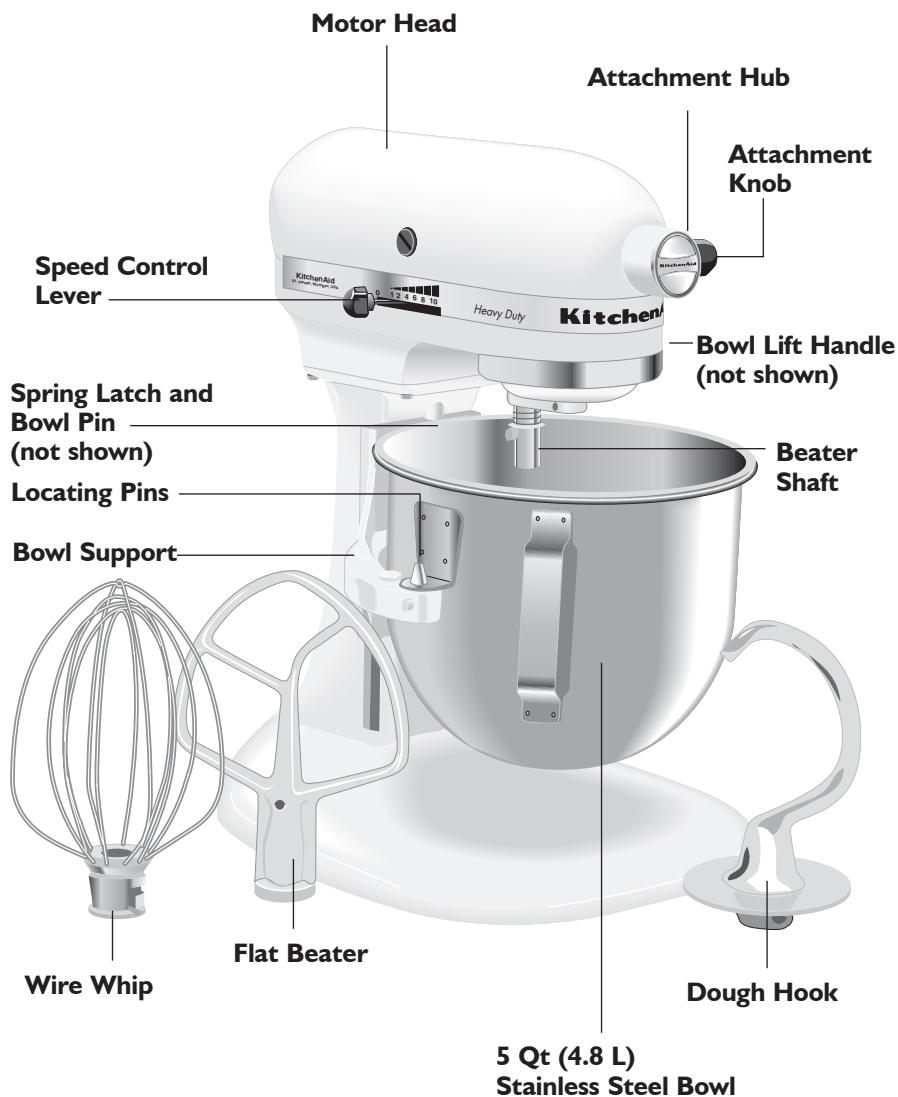

### TO ATTACH BOWL

- Be sure speed control is OFF.
- Place bowl lift handle in down position.
- Fit bowl supports over locating pins.
- Press down on back of bowl until bowl pin snaps into spring latch.
- Sit pouring shield on bowl.
- Raise bowl before mixing.

**NOTE:** Check that bowl and pouring shield are properly in place (5KPM5 models).

### TO REMOVE BOWL

- Place bowl lift handle in down position.
- Grasp bowl handle and lift straight up and off locating pins.



### TO RAISE BOWL

- Rotate handle back and up until it snaps into the locked vertical position.
- Bowl must always be in raised, locked position when mixing.

### TO LOWER BOWL

- Rotate handle back and down.

 


### TO ATTACH FLAT BEATER, WIRE WHIP, OR DOUGH HOOK

- Turn speed control to OFF and unplug.
- Lower bowl by rotating bowl lift handle downward.
- Slip flat beater on beater shaft and press upward as far as possible.
- Turn beater to right, hooking beater over the pin on shaft.

### TO REMOVE FLAT BEATER, WIRE WHIP, OR DOUGH HOOK

- Turn speed control to OFF and unplug.
- Lower bowl by rotating bowl lift handle downward.
- Press beater upward as far as possible and turn left.
- Pull beater from beater shaft.

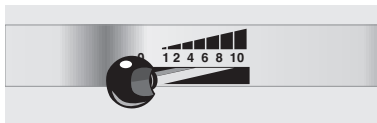

### TO OPERATE CONTROL SPEED

- Speed control lever should always be set on lowest speed for starting, then gradually moved to desired higher speed to avoid splashing ingredients out of bowl. See "Speed Control Guide."

### OVERLOAD RESET BUTTON (Model 5KPM50 only)

- If the mixer is overloaded, the Overload Reset Button will pop out and the mixer will shut off. Turn the Speed Control Lever to OFF. Wait a few minutes, then push in the Overload Reset Button. Turn the Speed Control Lever to the desired speed and continue mixing.

# Using Your KitchenAid® Attachments

See the Stand Mixer Attachments Use and Care Guide for speed settings and operating times.

Flat Beater, for normal to heavy mixtures, such as:

|                    |                 |
|--------------------|-----------------|
| cakes              | biscuits        |
| creamied frostings | crumpets        |
| candies            | meat loaf       |
| cookies            | mashed potatoes |
| pie pastry         |                 |

Wire Whip for mixtures which need to incorporate air, such as:

 
|                  |              |
|------------------|--------------|
| eggs             | sponge cakes |
| egg whites       | mayonnaise   |
| heavy cream      | some candies |
| boiled frostings |              |

Dough Hook for mixing and kneading yeast doughs, such as:

|       |              |
|-------|--------------|
| bread | coffee cakes |
| rolls | buns         |

## Beater To Bowl Clearance

Your mixer is adjusted at the factory so that the flat beater just clears the bottom of the bowl. If, for any reason, the flat beater strikes the bottom of the bowl, or is too far away from the bowl, clearance can be corrected as follows:

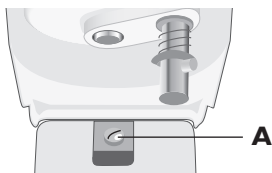


### Model 5K45SS:

- Lift motor head.
- Turn screw (A) slightly to the left to raise flat beater and to the right to lower flat beater.
- Make adjustment with flat beater, so it just clears surface of bowl.

### Model

#### 5K5SS/5KSM5/5KPM5

 - Place bowl lift handle in down position.
- Turn screw (B) slightly to the left to raise flat beater and to the right to lower flat beater.
- Make adjustments with flat beater, so it just clears surface of bowl.

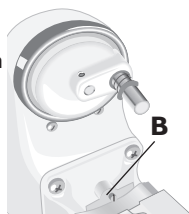

**NOTE:** Flat beater must not strike on bottom or side of bowl when properly adjusted. If beater or wire whip is adjusted too close so that it strikes bottom of bowl, coating may wear off of beaters or wires may wear through on wire whip. Scraping sides of bowl may be necessary under certain conditions regardless of beater adjustment. Mixer must be stopped to scrape bowl or damage to mixer may occur.

## Care and Cleaning of Your Mixer

### ⚠ WARNING

 
**ELECTRICAL SHOCK HAZARD**  
ALWAYS BE SURE TO UNPLUG  
MIXER BEFORE CLEANING TO AVOID  
POSSIBLE ELECTRICAL SHOCK.  
Wipe mixer with a damp cloth. DO  
NOT IMMERSE IN WATER. Wipe off  
beater shaft frequently, removing any  
residue that may accumulate.

Bowl, flat beater and dough hook may be washed in an automatic dishwasher. The wire whip and these other basic accessories can be cleaned thoroughly in hot sudsy water and rinsed completely before drying.

**Lubrication:** Motor bearings are self-lubricating and should require no further attention under normal use.

# Planetary Mixing Action

During operation, the flat beater moves around the stationary bowl, at the same time turning in the opposite direction on its own axis. The diagram shows the complete coverage of the bowl made by the path of the beater.

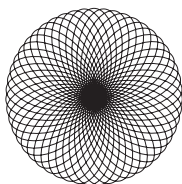

Your KitchenAid® Mixer will mix faster and more thoroughly than most other electric mixers. Therefore, the mixing time in most recipes must be adjusted to avoid overbeating.

## Mixer Use

The bowl and beater are designed to provide thorough mixing without frequent scraping. Scraping the bowl once or twice during mixing is usually sufficient.

The mixer may warm up during use. Under heavy loads with extended mixing time, you may not be able to comfortably touch the top of the unit. This is normal.

### **⚠ WARNING**

**PERSONAL INJURY HAZARD**  
To avoid personal injury and damage to the beater, do not attempt to scrape bowl while mixer is operating; turn mixer off. Should scraper or other object drop into bowl, turn motor OFF before removing.

## Speed Control Guide

### NUMBER OF SPEED

|    |                               |                                                                                                                                                                                                                                                        |
|----|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | <b>STIR</b>                   | For slow stirring, combining, mashing, starting all mixing procedures. Use to add flour and dry ingredients to batter, add liquids to dry ingredients, and combine heavy mixtures.                                                                     |
| 2  | <b>SLOW MIXING</b>            | For slow beating, mashing, faster stirring. Use to beat heavy batters and candies, start mashing potatoes or other vegetables, cut shortening into flour, beat thin or splashy batters, and mix and knead yeast dough. Use with Can Opener attachment. |
| 4  | <b>MIXING, BEATING</b>        | For mixing semi-heavy batters such as cookies. Use to cream sugar and shortening and add sugar to egg whites for meringues. Medium speed for cake mixes. Use with attachments: Food Grinder, Rotor Slicer/Shredder and Fruit/Vegetable Strainer.       |
| 6  | <b>BEATING, CREAMING</b>      | For beating or creaming, medium fast whipping. Use to finish mixing cakes, doughnut and other batters. High speed for cake mixes. Use with Citrus Juice attachment.                                                                                    |
| 8  | <b>FAST BEATING, WHIPPING</b> | For whipping cream, egg whites, and boiled frostings.                                                                                                                                                                                                  |
| 10 | <b>FAST WHIPPING</b>          | For whipping small amounts of cream and egg whites. Use with Pasta Maker and Grain Mill attachments.                                                                                                                                                   |

**NOTE:** The Speed Control Lever can be set between the above speeds if a finer adjustment is required.

# Mixing Tips

## Converting Your Recipe to the Mixer

The mixing instructions found in this book can be used to convert your favorite recipes for use with your KitchenAid® Mixer.

To help determine a mixing procedure, your own observations and experience will be needed. Watch the batter or dough and mix only until it has the desired appearance described in your recipe, such as “smooth and creamy.” Use the “Speed Control Guide” to help determine proper mixing speeds.

## Adding Ingredients

The standard procedure to follow when mixing most batters, especially cake and cookie batters, is to add:

- 1/3 dry ingredients
- 1/2 liquid ingredients
- 1/3 dry ingredients
- 1/2 liquid ingredients
- 1/3 dry ingredients

Use Stir Speed until ingredients have been blended. Then gradually increase to desired speed.

Always add ingredients as close to side of bowl as possible, not directly into moving

beater. The Pouring Shield can be used to simplify adding ingredients.

**NOTE:** If ingredients in very bottom of bowl are not thoroughly mixed, the beater is not far enough into the bowl. See “Beater to Bowl Clearance.”

## Cake Mixes

When preparing packaged cake mixes, use Speed 4 for medium speed and Speed 6 for high speed. For best results, mix for the time stated on the package directions.

## Adding Nuts, Raisins or Candied Fruits

Solid materials should be folded in the last few sections of mixing on Stir Speed. The batter should be thick enough to keep the fruits and nuts from sinking to the bottom of the pan during baking. Sticky fruits should be dusted with flour for better distribution in the batter.

## Liquid Mixture

Mixtures containing large amounts of liquid ingredients should be mixed at lower speeds to avoid splashing. Increase speed only after mixture has thickened.

# Mixing and Kneading Yeast Dough

1. Place all dry ingredients including yeast into bowl, except last 1 to 2 cups (250 mL to 500 mL) flour.
2. Attach bowl and dough hook. Lock 5K45SS head or raise 5K55S/5KPM5 bowl. Turn to Speed 2 and mix about 15 seconds or until ingredients are combined.



3. Continuing on Speed 2, gradually add liquid ingredients to flour mixture, about 30 seconds to 1 minute. Mix 1 minute longer.

**NOTE:** If liquid ingredients are added too quickly, they will form a pool around the dough hook and slow down mixing process.



4. Continuing on speed 2, gently tap remaining flour around sides of bowl, 1/2 cup (125 mL) at a time, as needed. Mix until dough clings to hook and cleans sides of bowl, about 2 minutes.



5. When dough clings to hook, knead on Speed 2 for 2 minutes or until dough is smooth and elastic.

6. Unlock and raise head on 5K45SS or lower bowl on 5K55S/5KSM5 and remove dough from hook.

**NOTE:** These instructions illustrate bread making with the Rapid Mix method. When using the conventional method, dissolve yeast in warm water in warmed bowl. Add remaining liquids and dry ingredients – except last 1 to 2 cups (250 mL to 500 mL) flour. Turn to Speed 2 for about 1 minute, or until ingredients are thoroughly mixed. Proceed with steps 4 through 6.

## Egg Whites

Place room temperature egg whites in clean, dry bowl. Attach bowl and wire whip. To avoid splashing, gradually turn to designated speed and whip to desired stage. See chart below.

| <u>Amount</u>        | <u>Speed</u>    |
|----------------------|-----------------|
| 1 egg white          | Gradually to 10 |
| 2-4 egg whites       | Gradually to 8  |
| 6 or more egg whites | Gradually to 6  |

### WHIPPING STAGES

#### Frothy:

Large, uneven air bubbles.

#### Begin to hold shape:

Air bubbles are fine and compact; product is white.

#### Soft peak:

Tips of peaks fall over when wire whip is removed.

#### Almost stiff:

Sharp peaks form when wire whip is removed, but whites are actually soft.

#### Stiff but not dry:

Sharp, stiff peaks form when wire whip is removed. Whites are uniform in color and glisten.

#### Stiff and dry:

Sharp, stiff peaks form when wire whip is removed. Whites are speckled and dull in appearance.

## Whipped Cream

Pour cream into chilled bowl. Attach bowl and wire whip. To avoid splashing, gradually turn to designated speed and whip to desired stage. See chart below.

| <u>Amount</u>    | <u>Speed</u>    |
|------------------|-----------------|
| 59 mL (1/4 cup)  | Gradually to 10 |
| 118 mL (1/2 cup) | Gradually to 10 |
| 236 mL (1 cup)   | Gradually to 8  |
| 472 mL (2 cups)  | Gradually to 8  |

### WHIPPING STAGES

#### Begins to thicken:

Cream is thick and custard-like.

#### Holds its shape:

Cream forms soft peaks when wire whip is removed. Can be folded into other ingredients when making deserts and sauces.

#### Stiff:

Cream stands in stiff, sharp peaks when wire whip is removed. Use for topping on cakes or desserts, or filling for cream puffs.

**NOTE:** Watch cream closely during whipping; there are just a few seconds between whipping stages. **DO NOT OVERWHIP.**

# When You Need Service

**Please read the following before calling your service center.**

- 1. The mixer may warm up during use. Under heavy loads with extended mixing time periods, you may not be able to comfortably touch the top of the unit. This is normal.
- 2. The mixer may emit a pungent odor, especially when new. This is common with electric motors.
- 3. If flat beater strikes bowl, stop the mixer. See "Beater to Bowl Clearance."

**If your mixer should malfunction or fail to operate, please check the following:**

- 1. Is your mixer plugged in?

- 2. Is the fuse in the circuit to the mixer in working order? If you have a circuit breaker box, be sure the circuit is closed.
- 3. Are the bowl and pouring shield properly in place (5KPM5 models)?
- 4. If the problem is not due to one of the above items, see "How to Obtain Service."

**HOW TO OBTAIN SERVICE:**

All service should be handled locally by an authorized KitchenAid Service Center. Contact the dealer from whom the unit was purchased to obtain the name of the nearest authorized KitchenAid service facility.

# Heavy Duty Mixer Warranty

| LENGTH OF WARRANTY:                           | KITCHENAID WILL PAY FOR:                                                                                                                                      | KITCHENAID WILL NOT PAY FOR:                                                                                                                                                                                                     |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ONE YEAR FULL WARRANTY FROM date of purchase. | Replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center. | A. Repairs when mixer is used for operations other than normal food preparation.<br><br>B. Damage resulting from accidents, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes. |

**KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

Specifications subject to change without notice.

KitchenAid Europa, Inc.  
Nijverheidslaan 3 Box 5  
Strombeek-Bever (Brussels)  
1853 BELGIUM

© 2014. All rights reserved.  
Specifications subject to change without notice.



KitchenAid Europa, Inc.  
Nijverheidslaan 3 Box 5  
Strombeek-Bever (Brussels)  
1853 BELGIUM

Form No. 9706978 Rev. B